


THIS FAUCET IS DESIGNED FOR RIGID AND SWING SPOUT APPLICATIONS

FOR "RIGID SPOUT" APPLICATIONS PLACE FIBER WASHER INTO BODY AND THEN ASSEMBLE SPOUT AND TIGHTEN NUT.

FOR "SWING SPOUT" APPLICATIONS REMOVE FIBER WASHER FROM BODY AND THEN ASSEMBLE SPOUT AND TIGHTEN NUT.

MAKE CERTAIN CARTRIDGE CAP NUTS AND SPOUT NUT ARE PROPERLY TIGHTENED.

AFTER INSTALLATION, REMOVE AERATOR AND FLUSH UNIT WITH WATER FOR ONE MINUTE TO REMOVE ALL LINE TRASH.

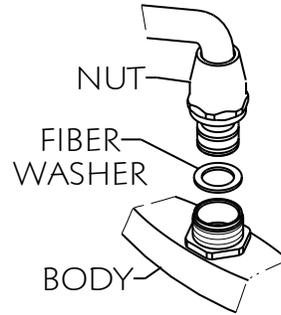

0078123