a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

750-324/326

TOOLS REQUIRED:

Allen Wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach the stretcher and Headboard panel to the two posts, using the Bolt (A), Lock Washer (B) and Flat Washer (C). Tighten with Wrench (D). See Figure 1 and Figure 2 Important: Do not over-tighten.

2. Tighten all bolts.

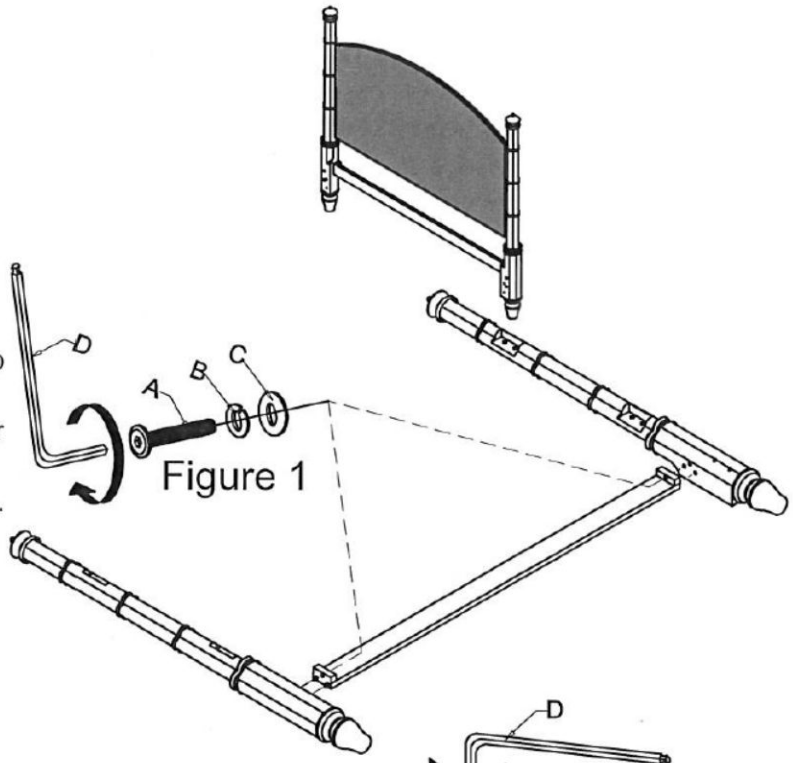


Figure 1


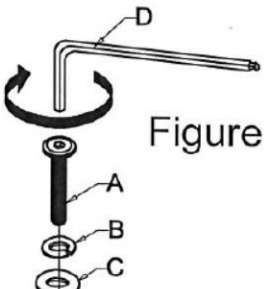


Figure 2

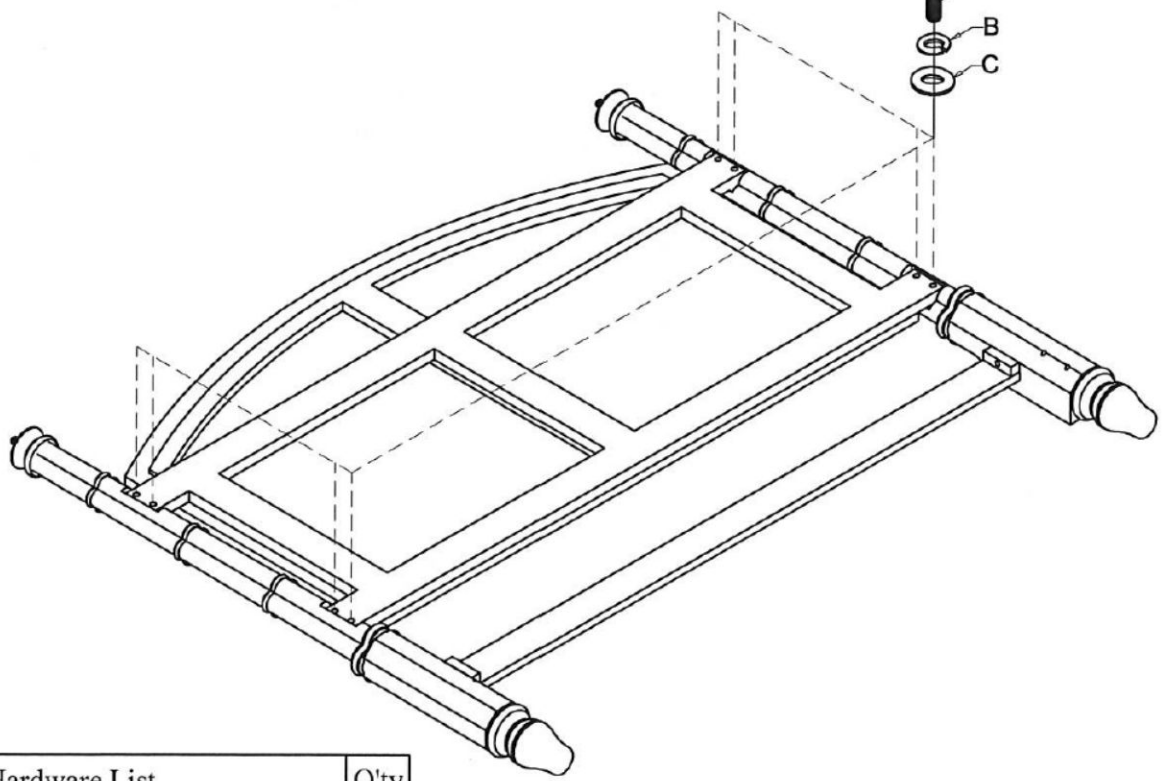

No.	Hardware List		Q'ty
A		Bolt Ø5/16"x1-3/4"	10
B		Lock Washer Ø5/16"	10
C		Flat Washer Ø5/16"	10
D		Allen Wrench 5mm	1

Thank you for purchasing furniture from american drew!