



ASSEMBLY INSTRUCTION

2 Drawer Nightstand Chest


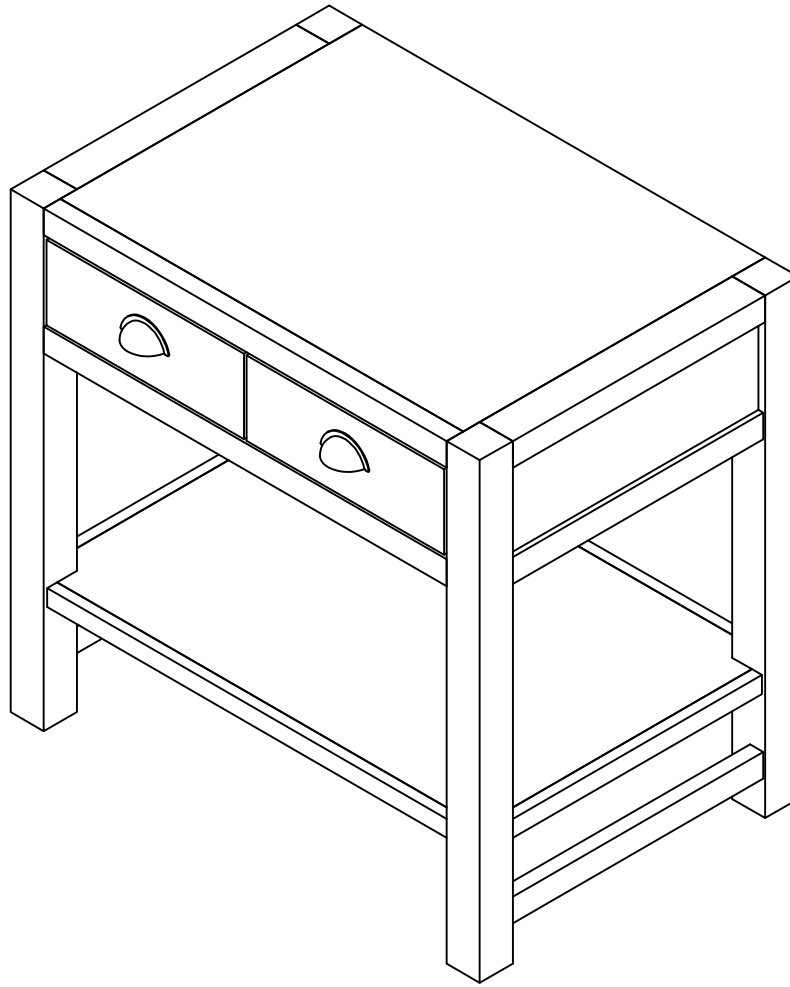


REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "


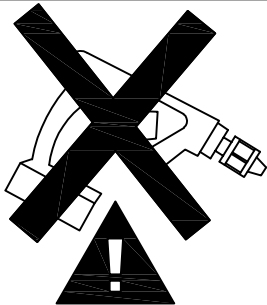


. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

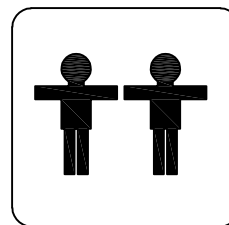


60 minutes

Tools Required

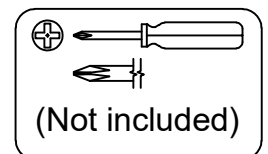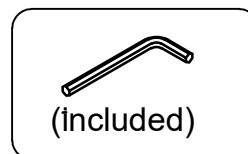





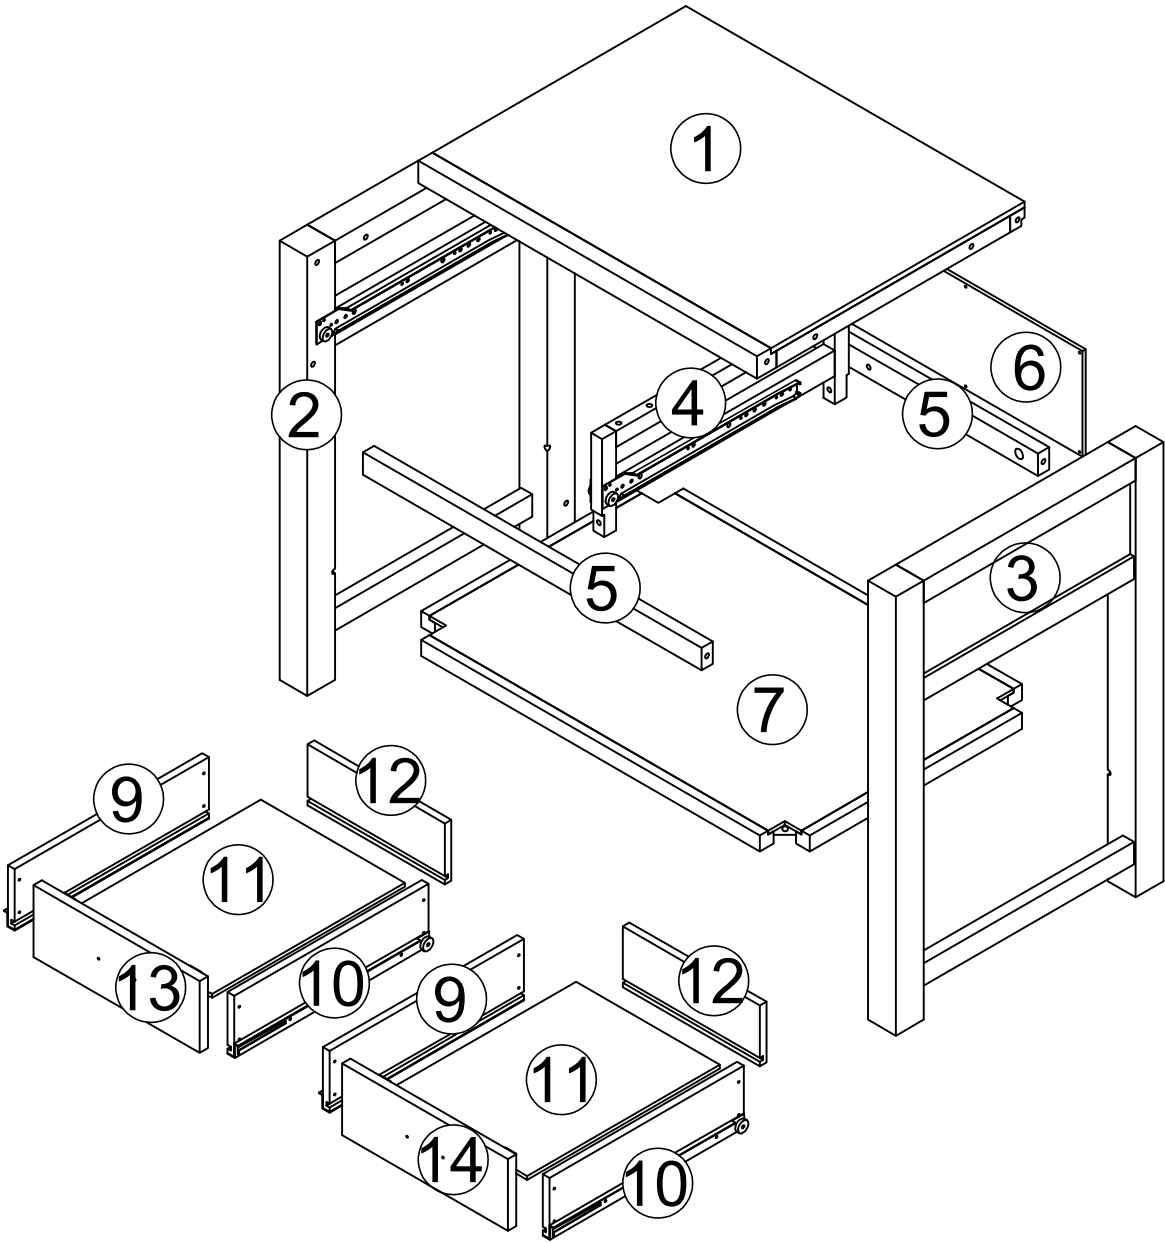




www.boltonfurniture.com


Part list - 2 Drawer Nightstand Chest




Identifying the hardware-Identify the hardware using the illustrations below


A  Ø10x35 06	B  M6x35mm Bolt 12	C  M4 x 25mm Screw 16
D  M4 x 13mm Screw 04	E  02	F  M3 x 15mm Screw 08
G  01	H  04	I  04


Step 01


A  Ø10x35 06

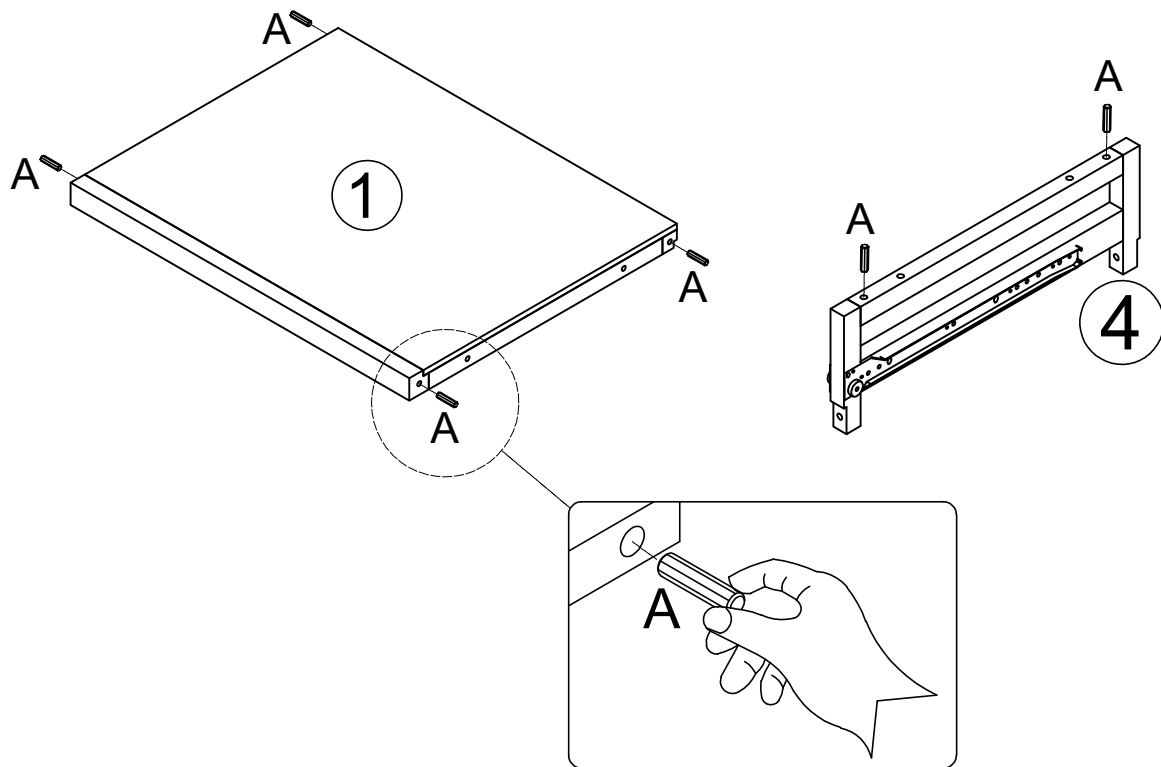

Step 02


B  M6x35mm Bolt 02


G  01

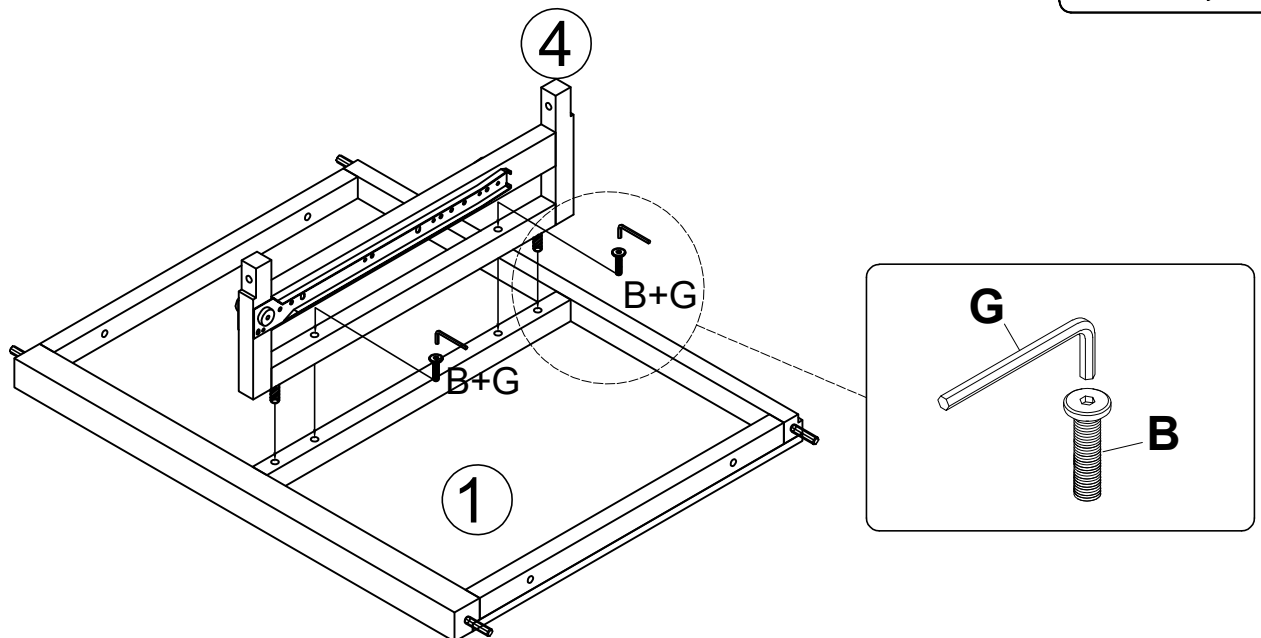

Step 03

H  04


 01
(Not included)

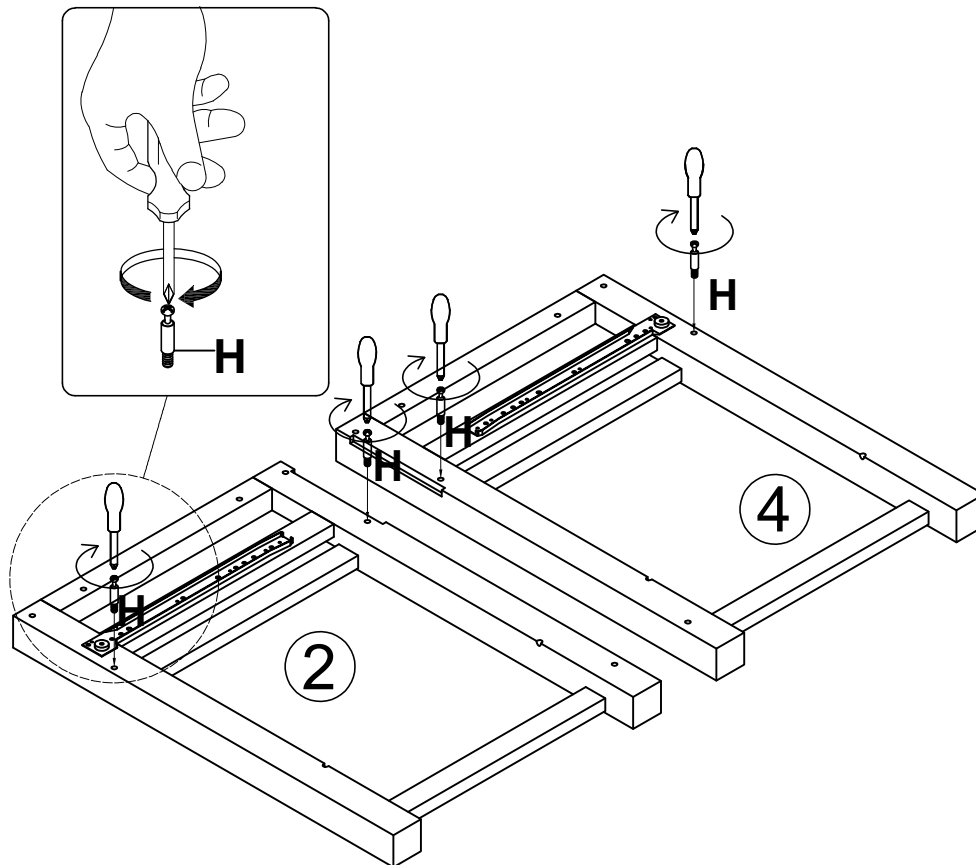


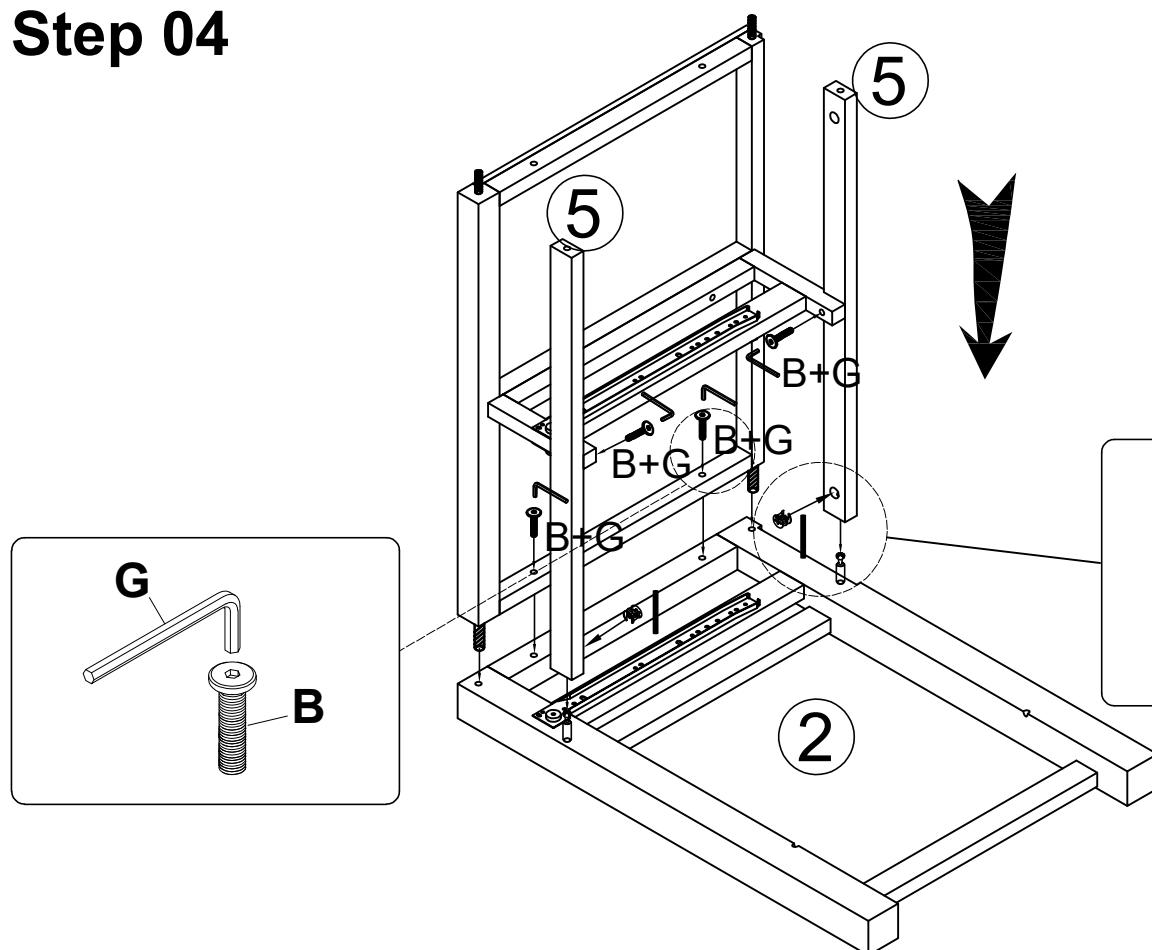
Step 04

I  02



B  04
M6 x 35mm Bolt



G  01

 01
(Not included)









Step 05

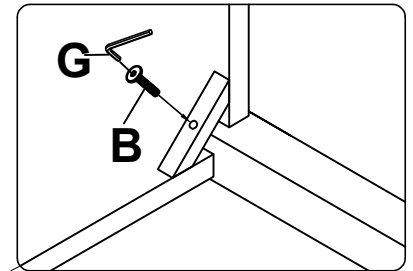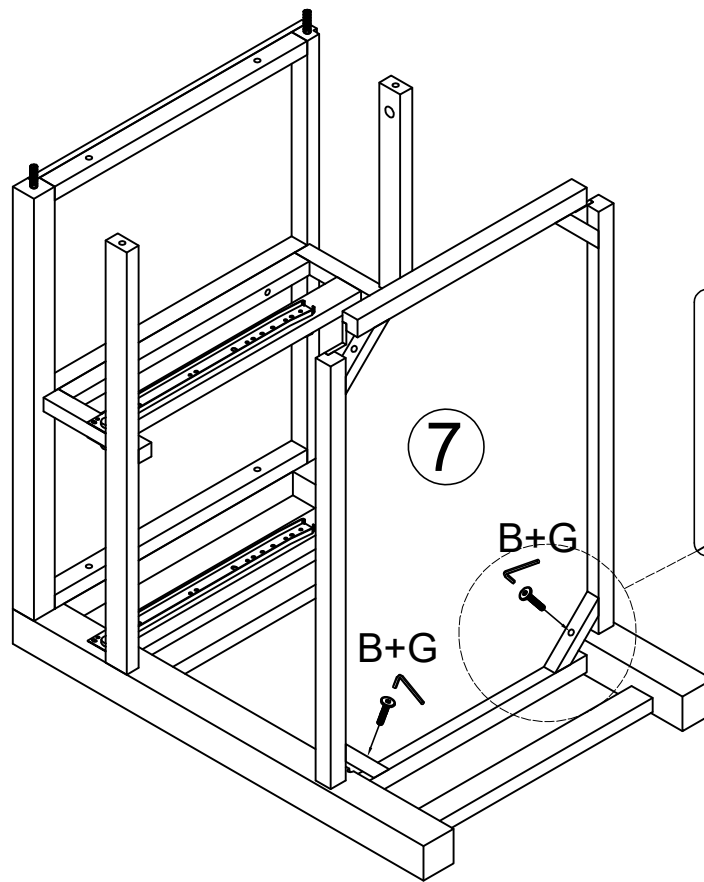B		M6x35mm Bolt	02
G			01




Step 06

I			02
B		M6 x 35mm Bolt	04
G			01
		(Not included)	01

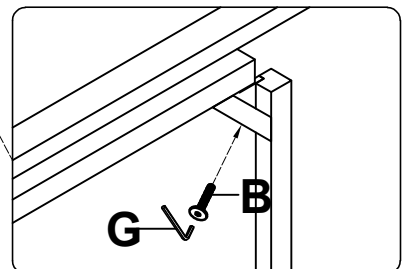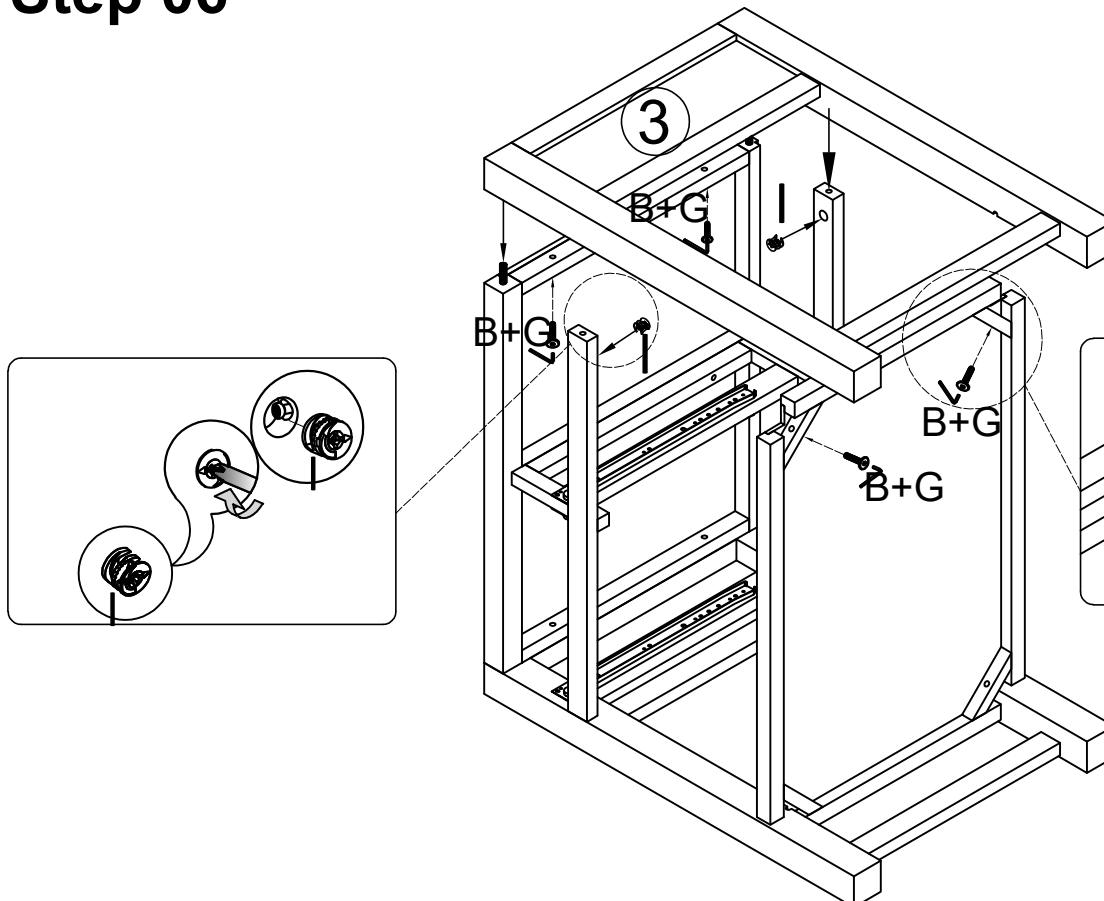


Step 07

F M3x15mm Screw **08**
01
 (Not included)

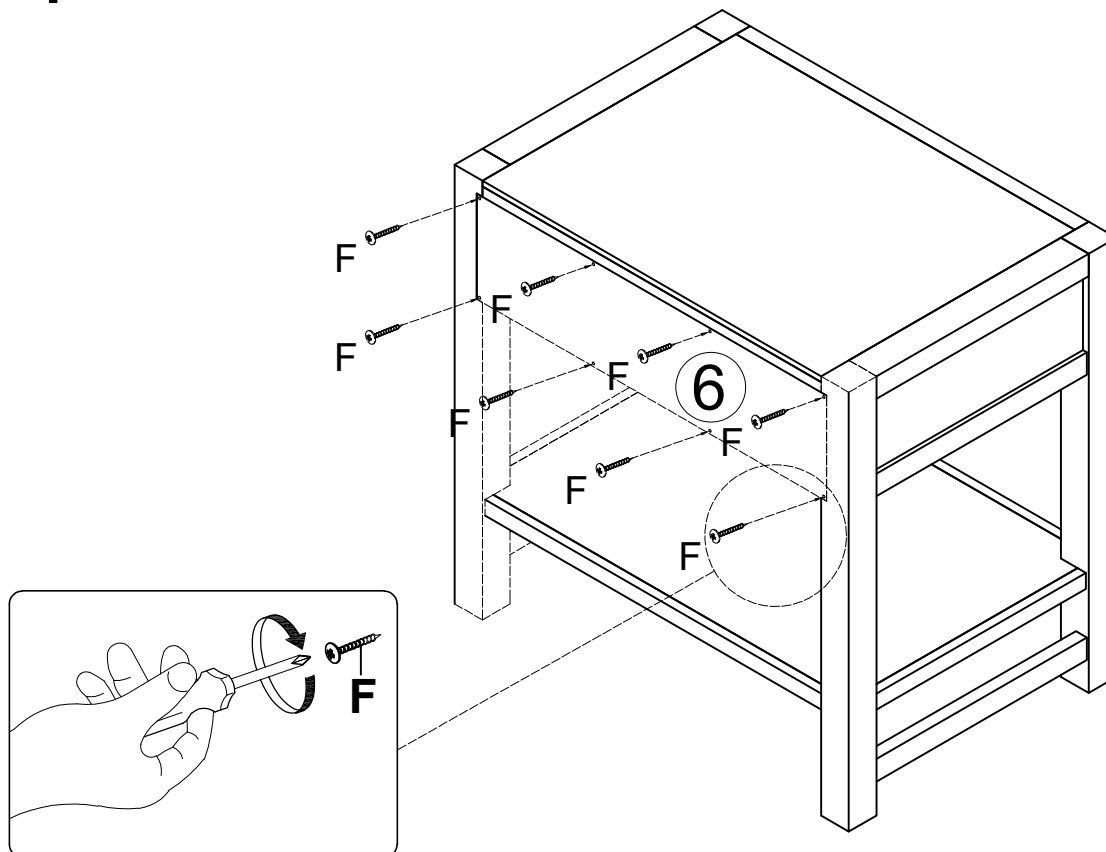


Step 08


C M4 x 25mm Screw **08**
D M4 x 13mm Screw **02**
E **01**
01
 (Not included)

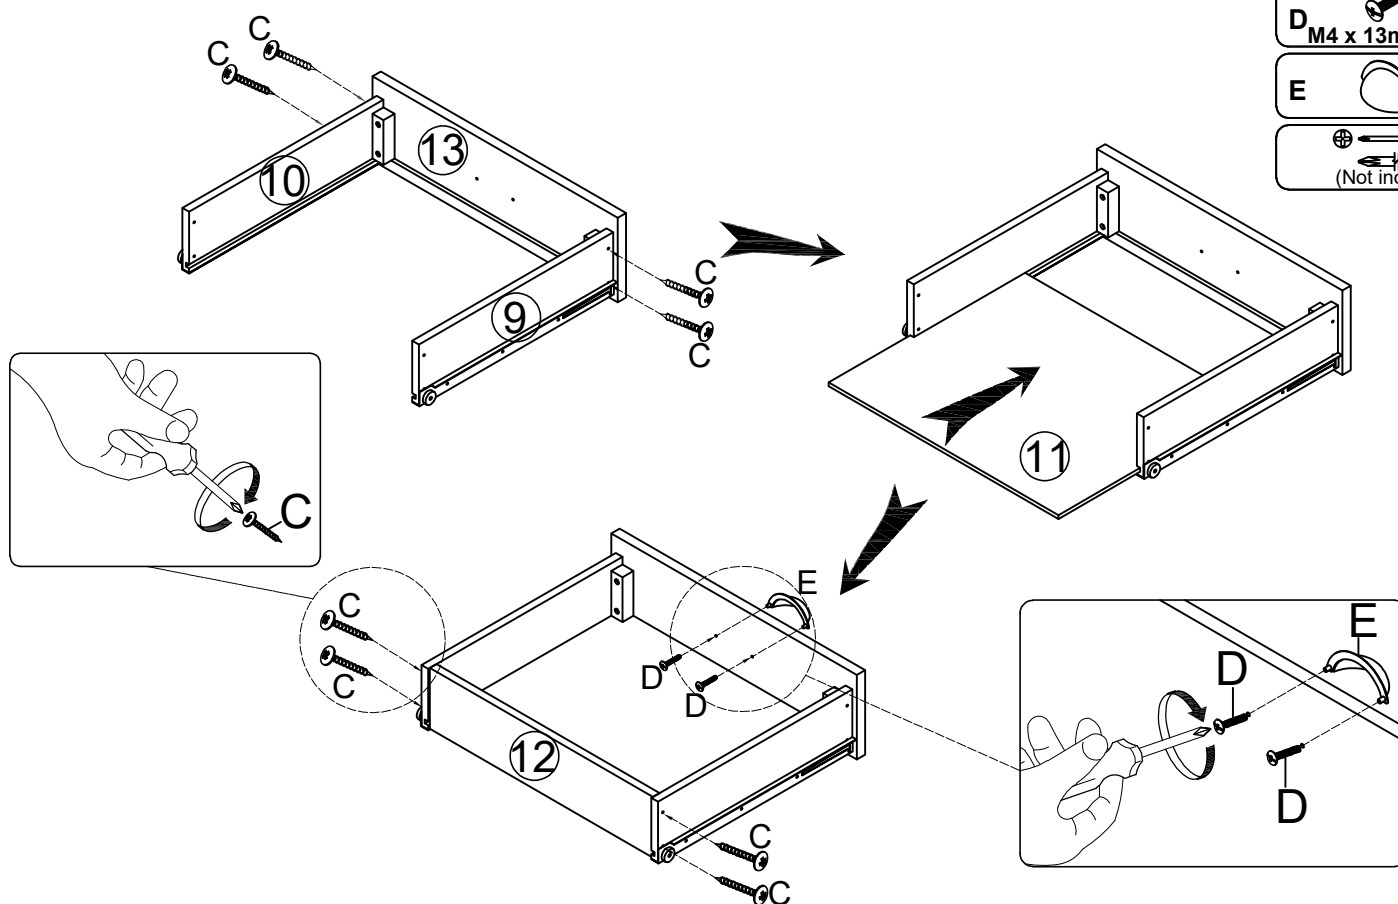


Step 09

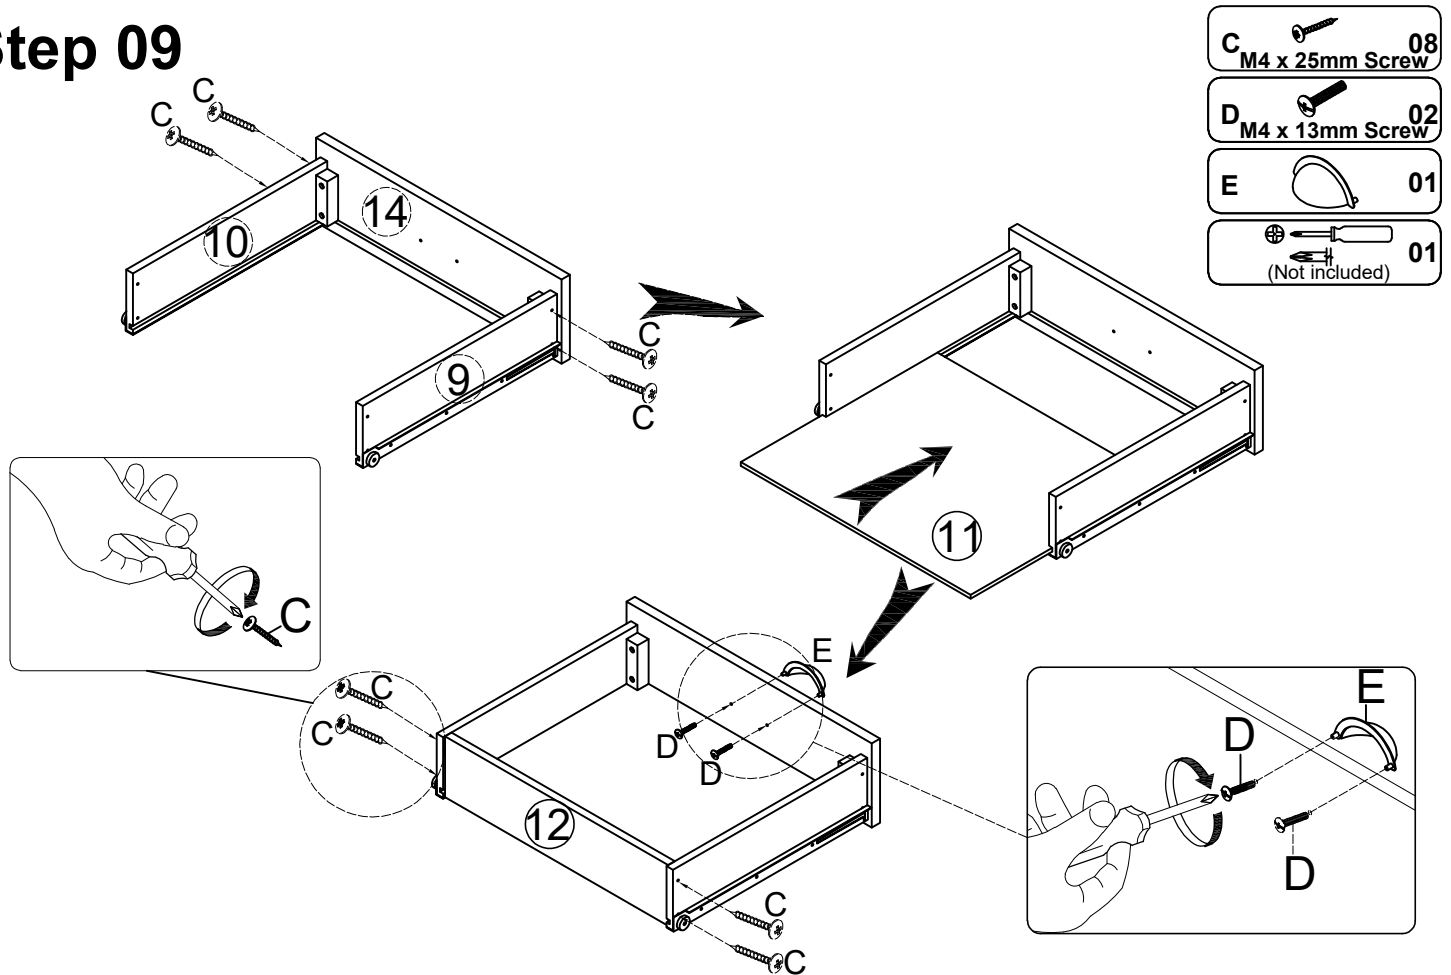


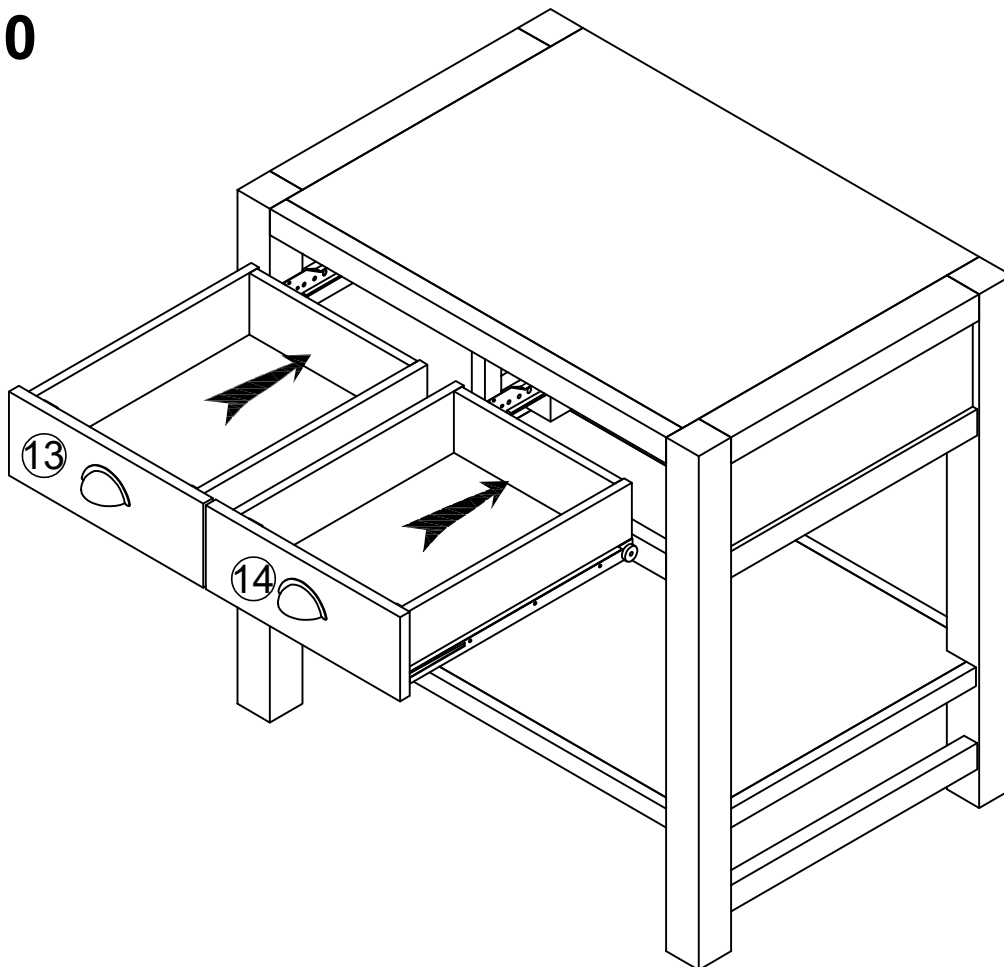


Step 10

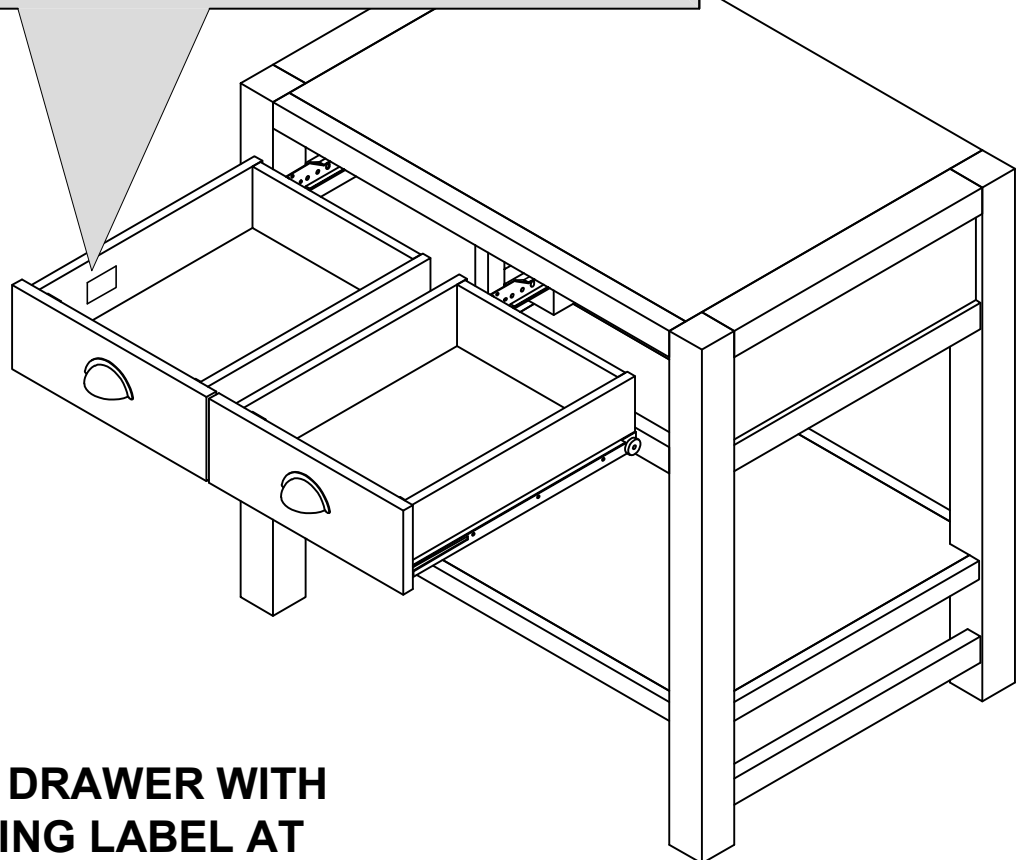



**PLACE DRAWER WITH
WARNING LABEL AT
TOP**

"J" Anti-Tip

A	 4x14 Screw	02	C	 Plastic wall bracket	02
B	 4x35 Screw	02	D	 Nylon strap 140mm	01

Secure to Stud behind Wallboard

