







ASSEMBLY INSTRUCTION

ITEM# 5865-90867-02 Anastasie 6/0-6/6 Uph Headboard

**Caution: Please make sure you have all parts indicated below prior to assembly.
This Headboard is heavy and can best be assembled with the help of two or more people.**

NO.	HARDWARE LIST		Q'TY
M		6*35mm Bolt	4
R		Allen wrench	1
N		6*30mm Bolt	4
U		1/4" Flat washer	8
V		1/4" Lock washer	8
P		Mending plate	2

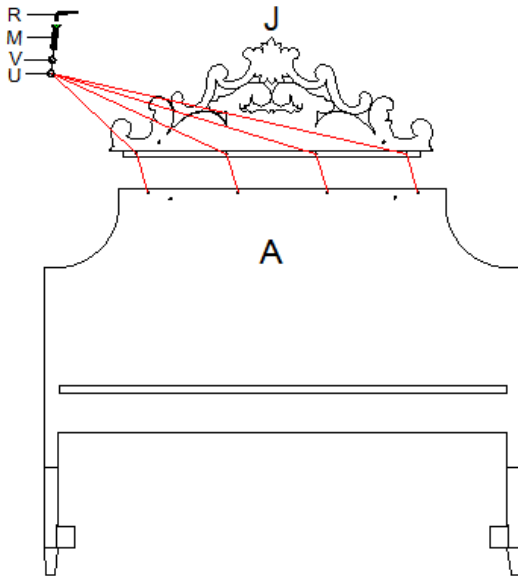
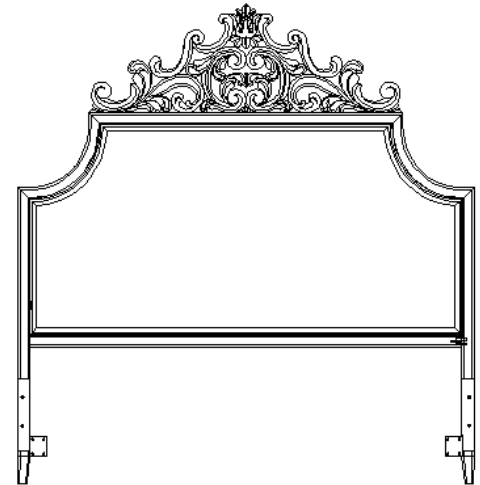


Diagram 1

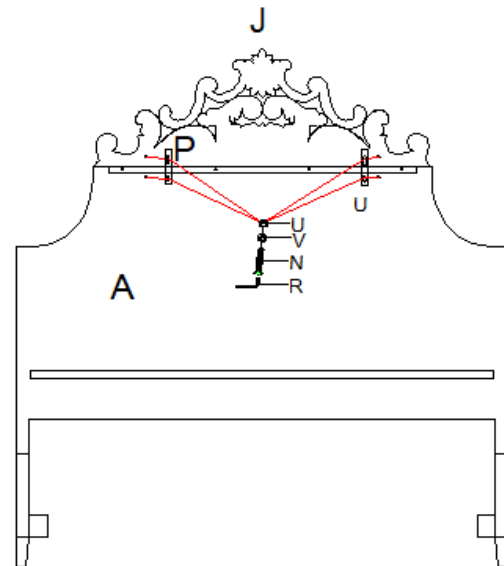


Diagram 2

Assembly steps:

1. Sit crown molding (J) on top of headboard (A). Align holes to the pre-drilled holes at the back of crown molding (J) and the back of headboard (A). Tighten up crown molding (J) by using bolts (M), lock washers (V) and flat washers (U) with Allen wrench (R). (See Diagram 1).
2. Attach mending plate (P) to the pre-drilled holes of crown molding and headboard, tighten up mending plate (P) by using bolts (N), lock washers (V) and flat washers (U) with Allen wrench (R). (See Diagram 2)
3. The back panel behind crown molding can be reversible used, one side is in wood finish, the other side is in white finish.

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.