
american drew
•inspired design•
Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

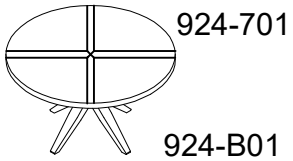

TOOLS REQUIRED:

Allen key (supplied, part # F)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1.Lay the top on a clean and padded surface to prevent scratches, unfasten the mounting plate from the bottom of the table top. Notice: Do not throw away the Bolts, Lock Washers, and Flat Washers which are provided to attach the base to the top.

2. Attach two legs, using Bolt (B), Lock washers (D), and Flat washers (E). Tighten with Allen key (F). (See Figure 1)

3. Attach the frame legs to the support plate, using Bolt (A), Lock washers (D), and Flat washers (E). Tighten with Allen key (F). (See Figure 2)

4.Turn the assembled Pedestal with mounting plate upside down to attach the Pedestal to the table top. Align the holes of the mounting plate with the inserts located on the table slides. Using the hardware removed in Step 1 and attach with Flat Washers, Lock Washers and Bolts. Tighten the bolts to secure the base to the top with Allen Wrench (See Figure 3)

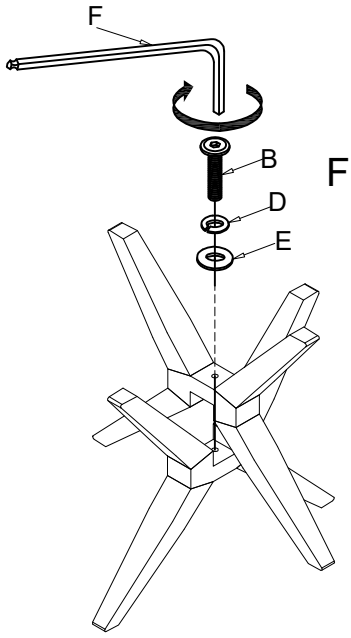


Figure 1

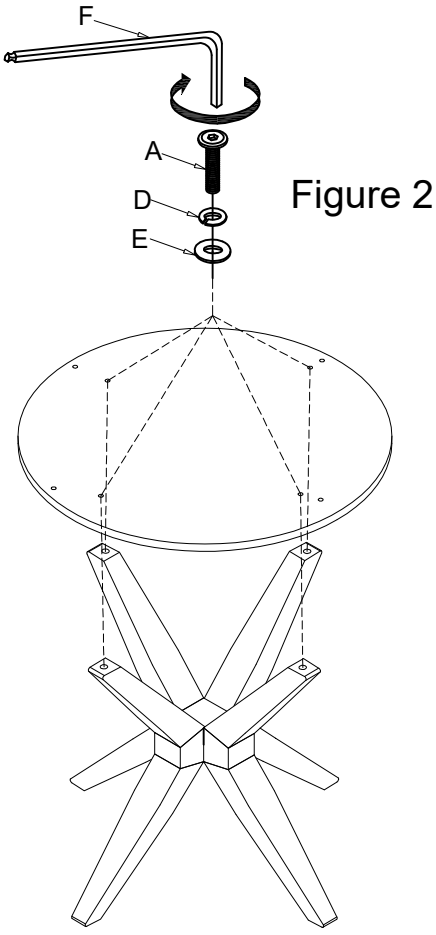


Figure 2

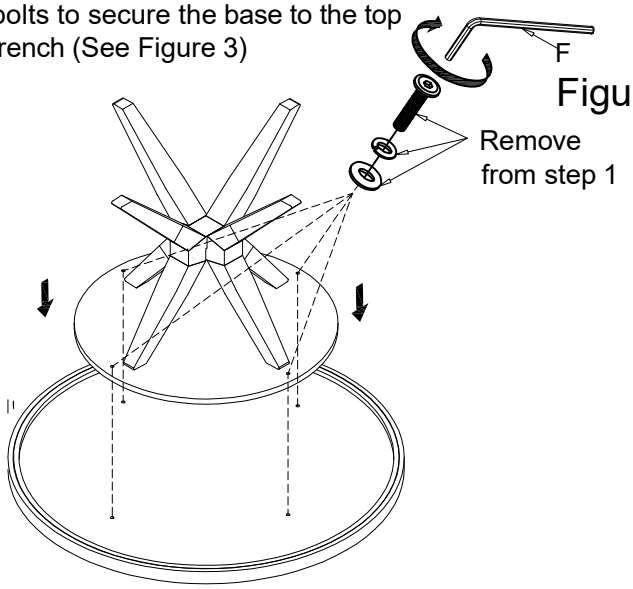


Figure 3

No.		Hardware List	Q'ty
A		Bolt Ø5/16"x 1-1/2"	4
B		Bolt Ø5/16"x 3"	1
D		Lock Washer Ø5/16"	5
E		Flat Washer Ø5/16"	5
F		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!