

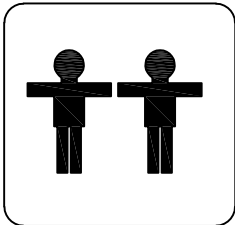


# ASSEMBLY INSTRUCTION

## 48" VANITY

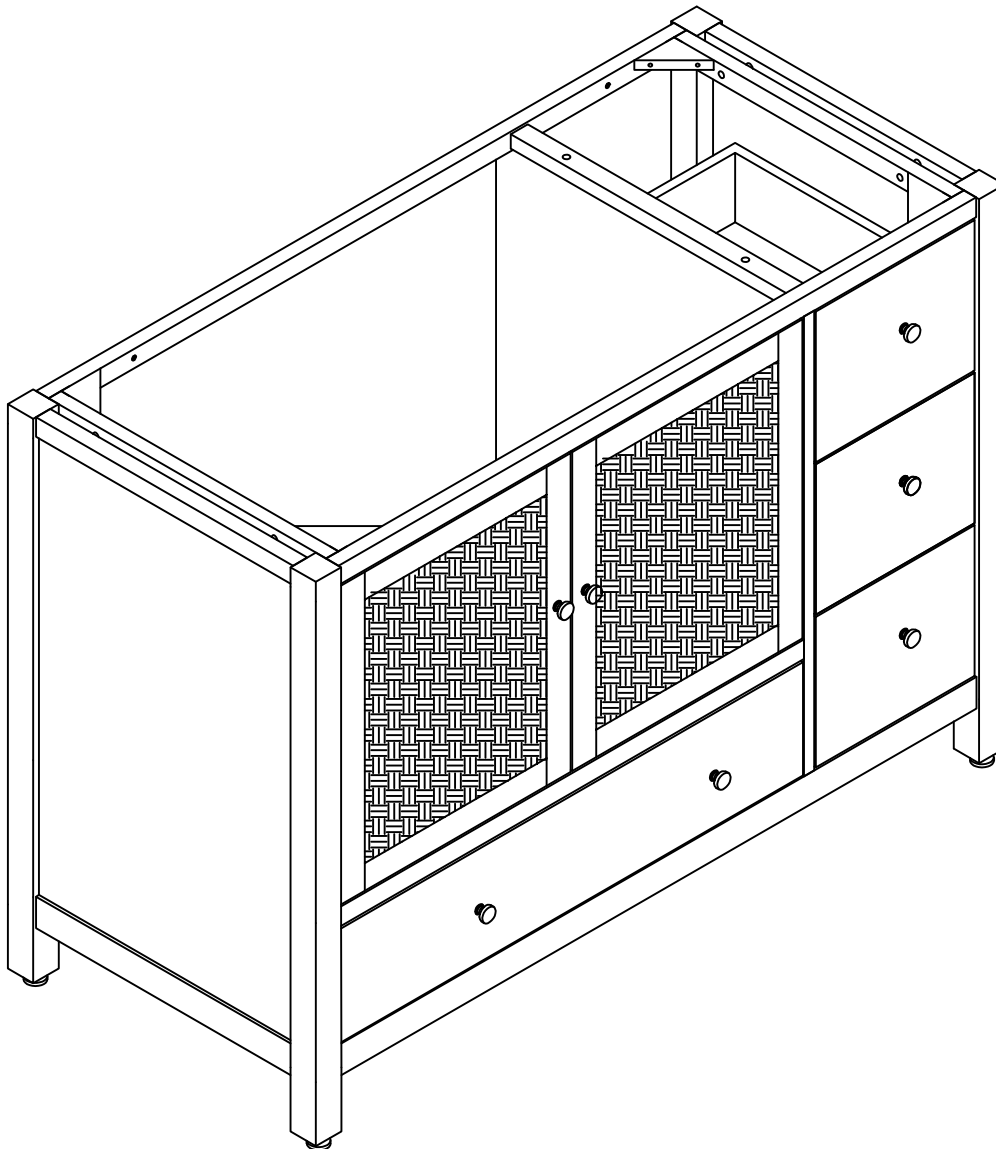


45 minutes

### Tools Required



(included)



(Not included)




ASSEMBLY VIDEO

[www.boltonfurniture.com](http://www.boltonfurniture.com)






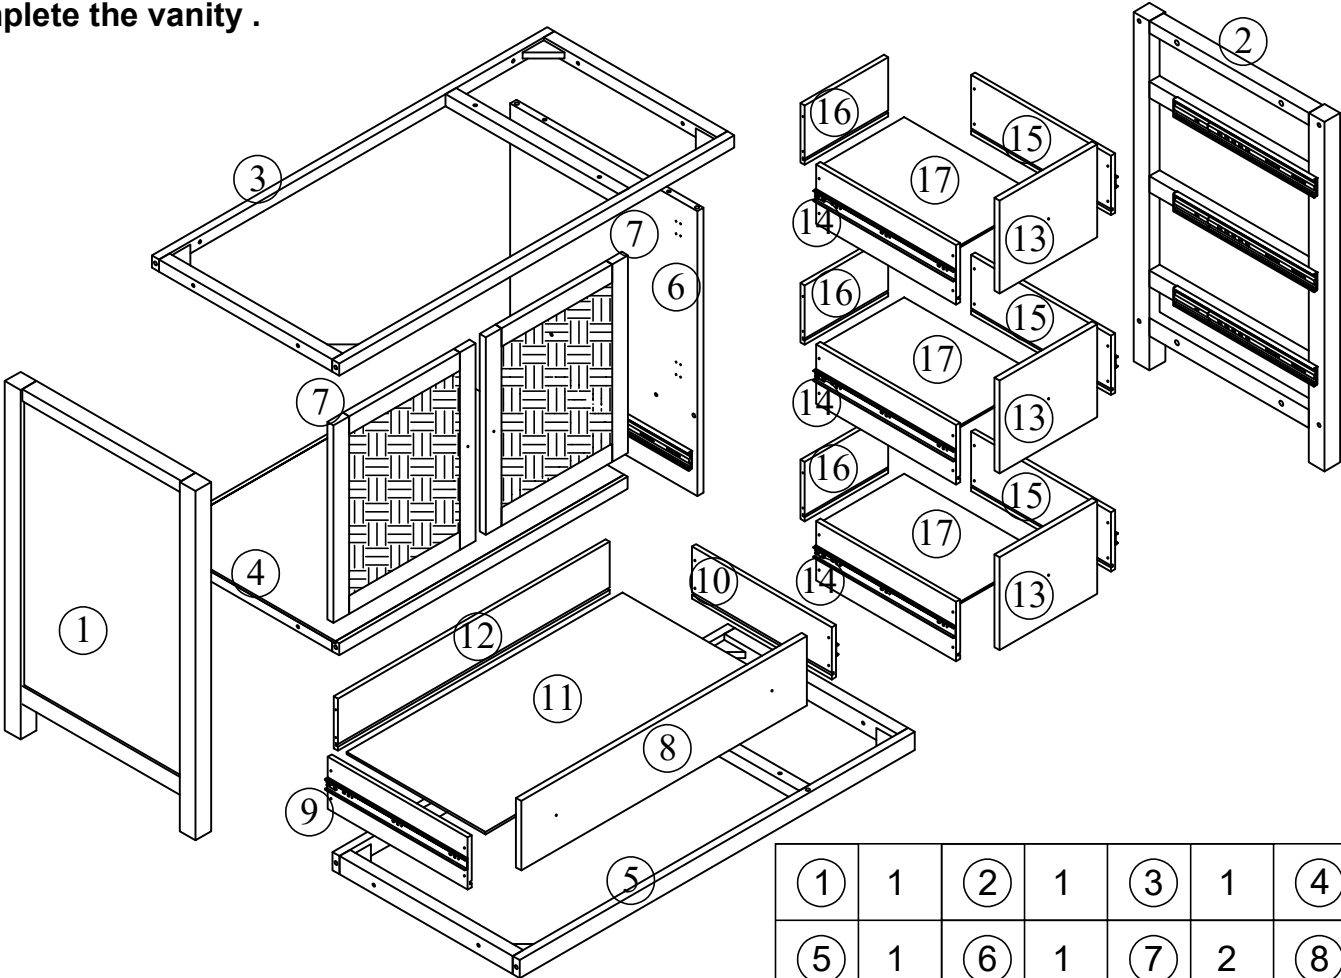







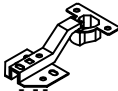

# Part list - 48" VANITY

Before assembling please confirm you have all of the parts and hardware required to complete the vanity .

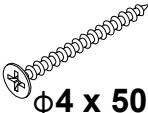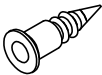


QTY									
①	1	②	1	③	1	④	1		
⑤	1	⑥	1	⑦	2	⑧	1		
⑨	1	⑩	1	⑪	1	⑫	1	⑬	3
⑭	3	⑮	3	⑯	3	⑰	3		




Identifying the hardware-Identify the hardware using the illustrations below


<b>A</b>  Ø10x35 <b>14</b>	<b>B</b>  M6x45mm Bolt <b>10</b>	<b>C</b>  Hinges <b>04</b>
<b>D</b>  φ3.5 x 12mm Screw <b>24</b>	<b>E</b>  Knob <b>07</b>	<b>F</b>  φ4 x 25mm Bolt <b>07</b>
<b>G</b>  Hex Wrench <b>01</b>	<b>H</b>  φ4 x 25mm Screw <b>32</b>	<b>I</b>  Leveler <b>04</b>
<b>J</b>  φ4 x 50mm Screw <b>02</b>	<b>K</b>  4x40mm Anchor <b>02</b>	<b>L</b>  M6x60mm Bolt <b>02</b>
<b>M</b>  M6x35mm Bolt <b>04</b>	<b>N</b>  Door Stopper <b>01</b>	<b>O</b>  φ4 x 15mm Screw <b>02</b>
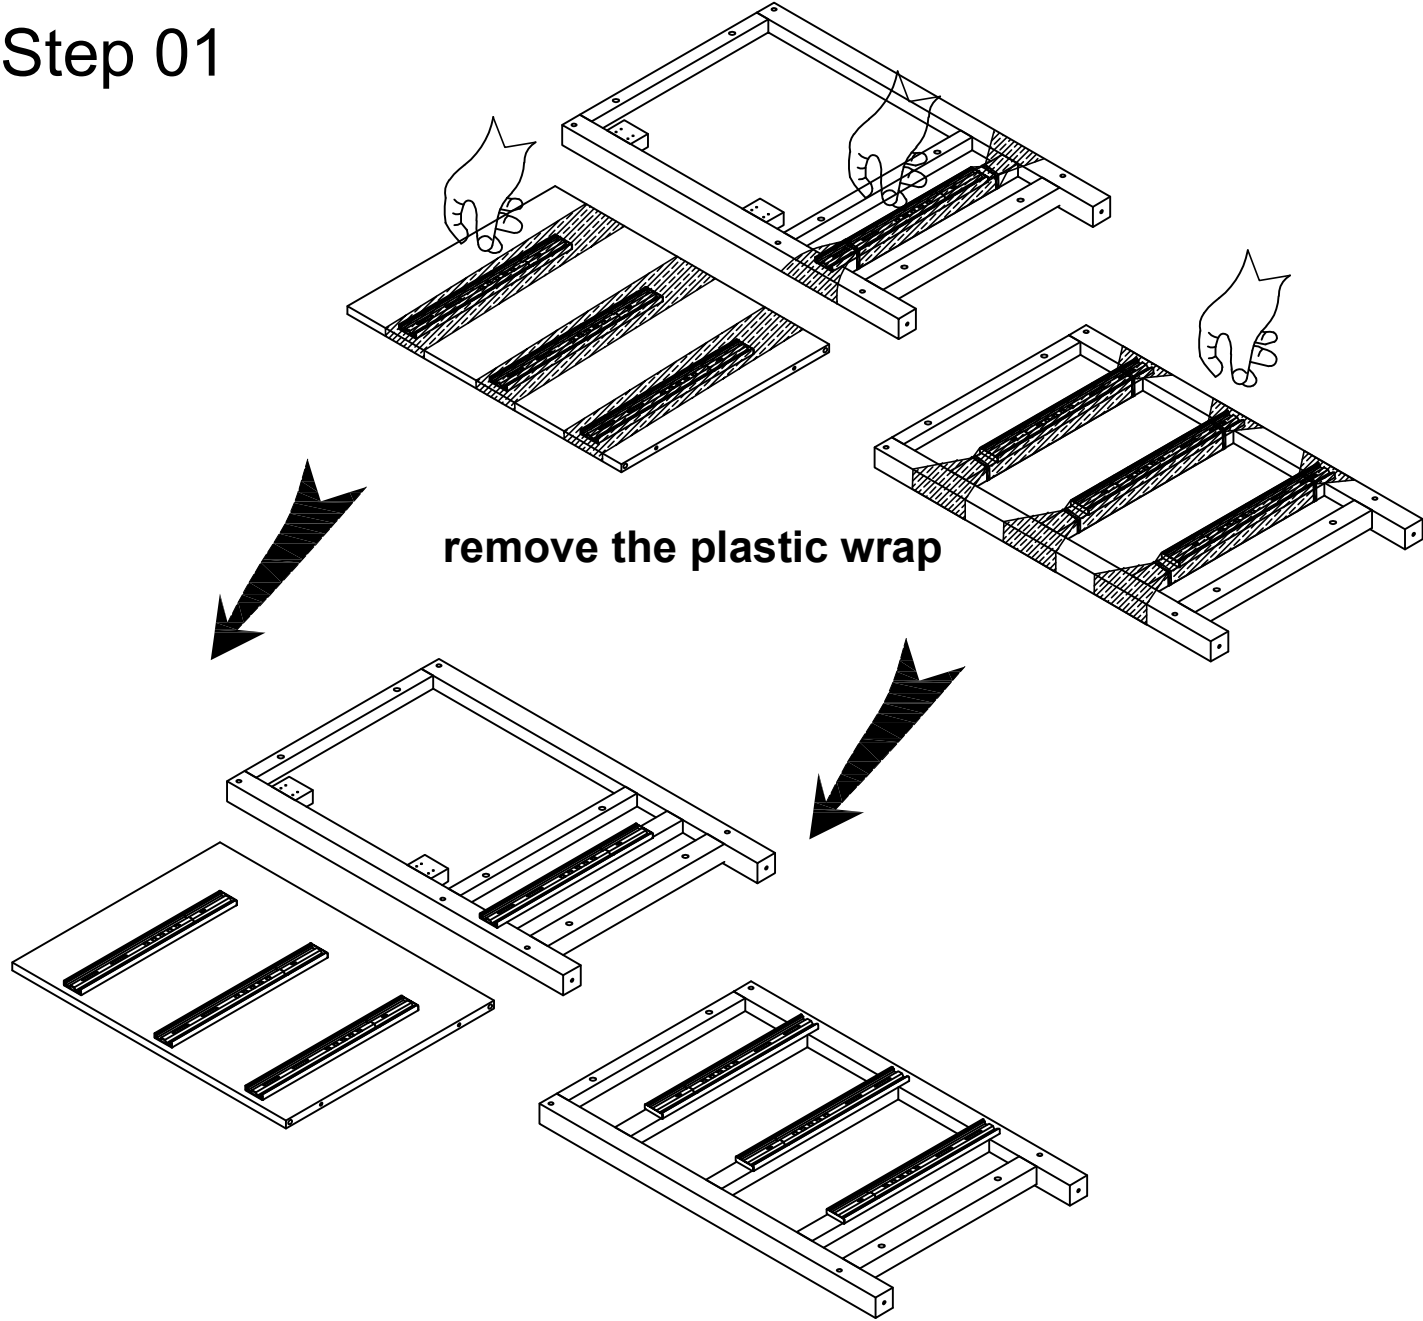
# Step 01



# Step 02


- O  **02**  
φ4 x 15mm Screw
- N  **01**  
Door Stopper
-  **01**  
(Not included)

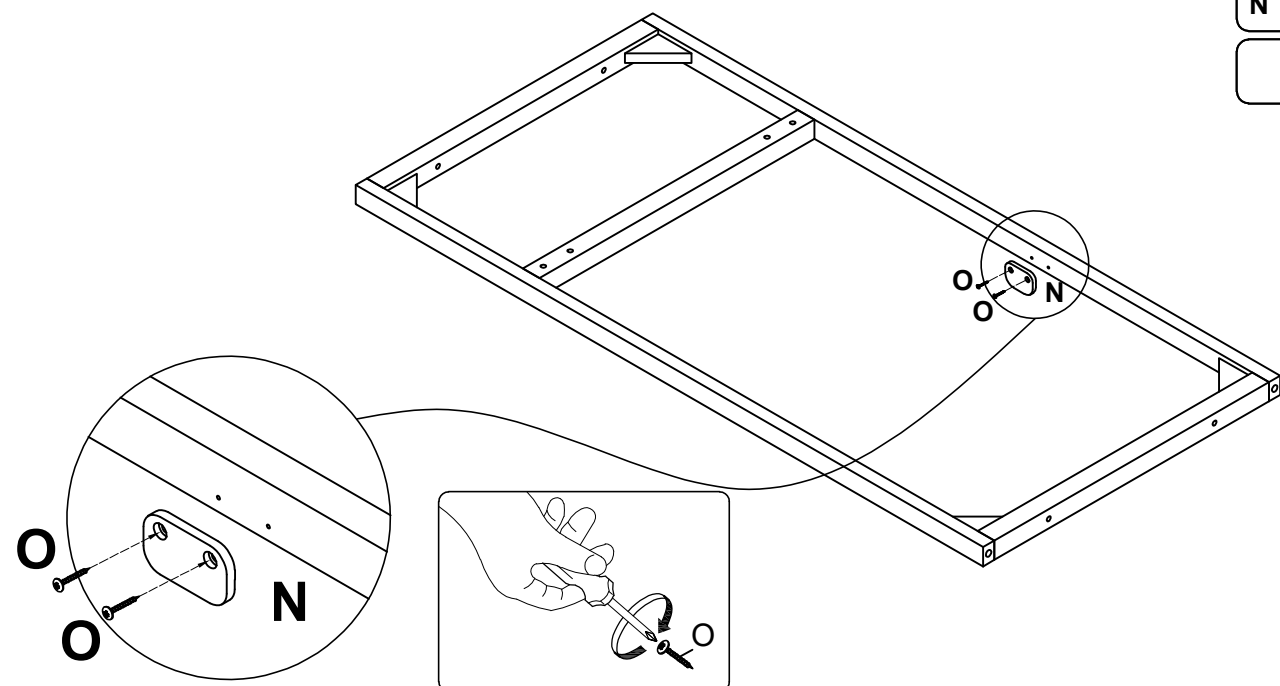

# Step 03


**A**  
  
Ø10x35

**14**

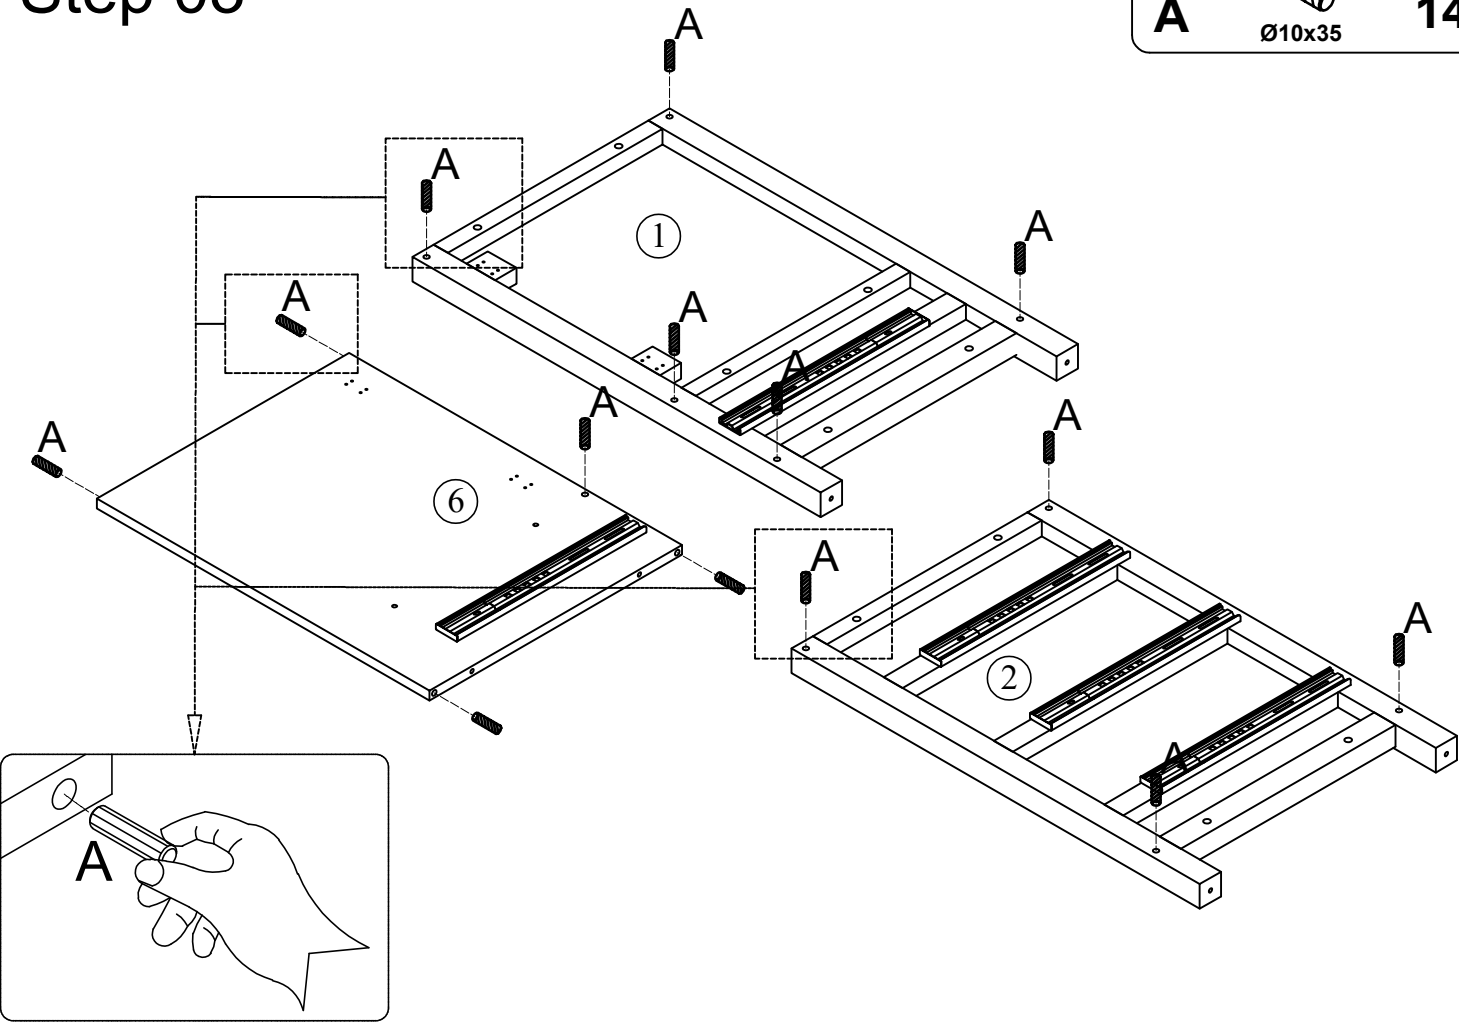


# Step 04


**Note: Do not tighten bolts firmly at this time.**

**B**  
  
M6x45mm Bolt


**04**

**G**  



**01**


**M**  
  
M6x35mm Bolt

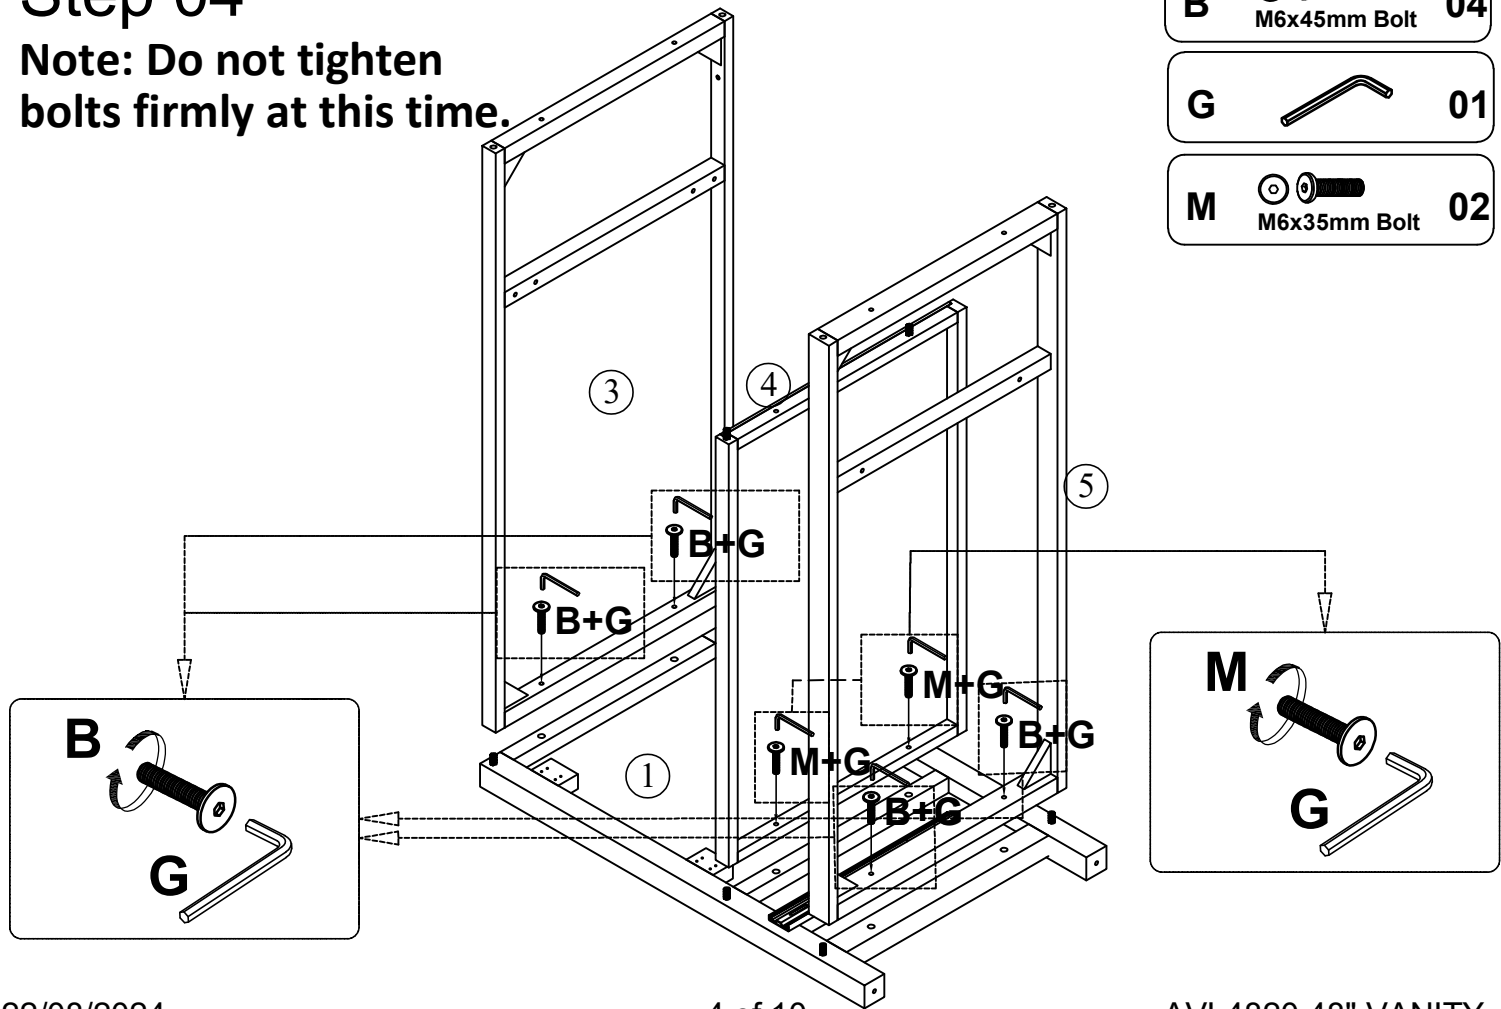
**02**




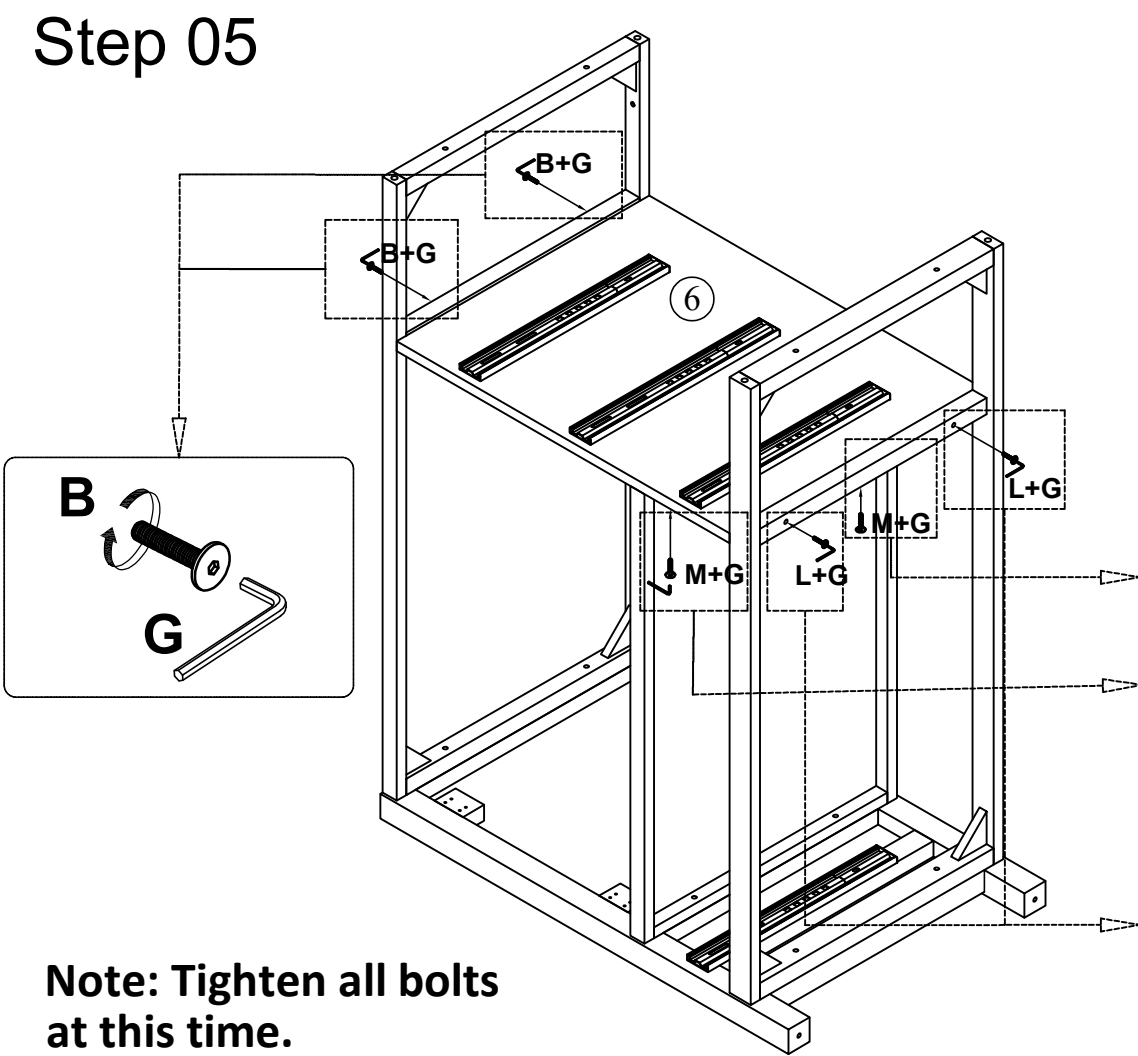
# Step 05

**B**  **02**  
M6x45mm Bolt

**G**  **01**


**L**  **02**  
M6x60mm Bolt


**M**  **02**  
M6x35mm Bolt




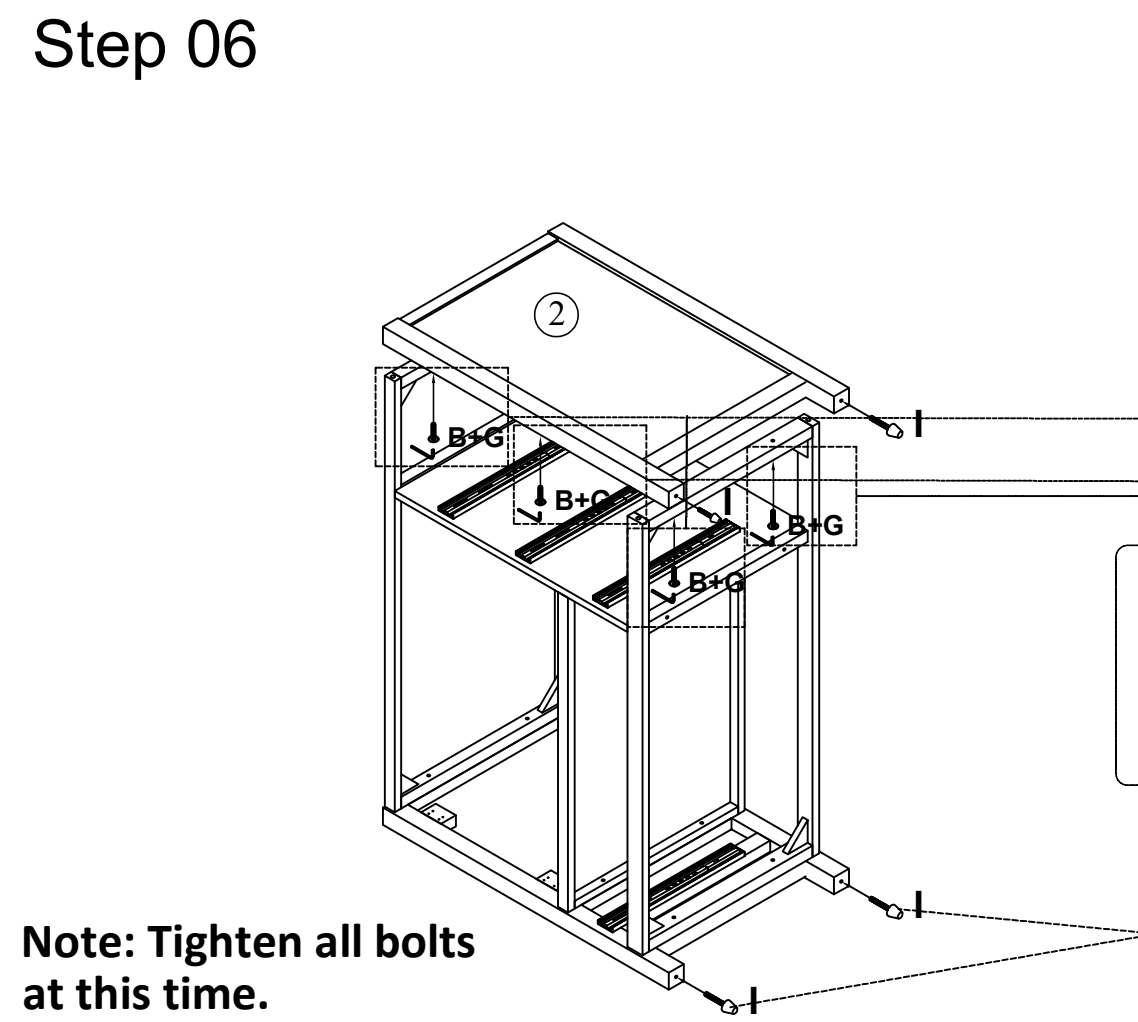
**Note: Tighten all bolts at this time.**

# Step 06

**B**  **04**  
M6x45mm Bolt



**G**  **01**

**I**  **04**  
Leveler



**Note: Tighten all bolts at this time.**


## Step 07

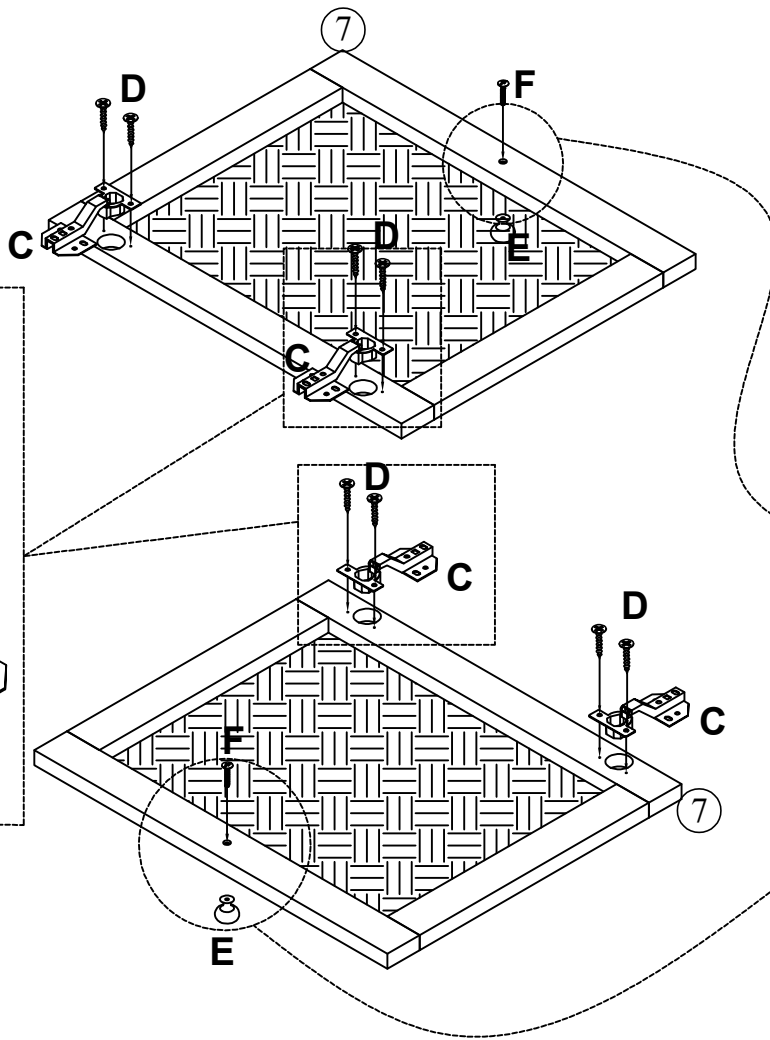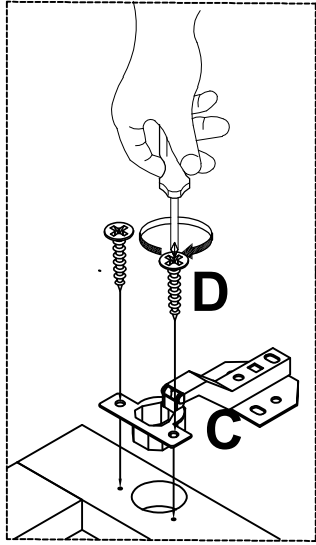


**C**  Hinges **04**



**D**   $\phi 3.5 \times 12\text{mm}$  Screw **08**

**E**  Knob **02**

**F**   $\phi 4 \times 25\text{mm}$  Bolt **02**

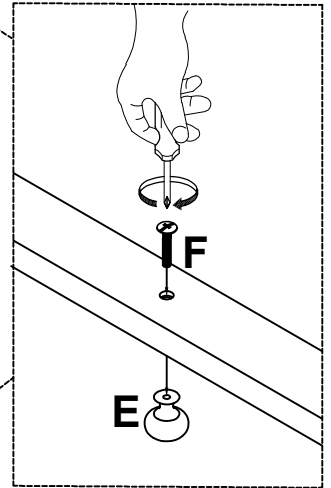

## Step 08

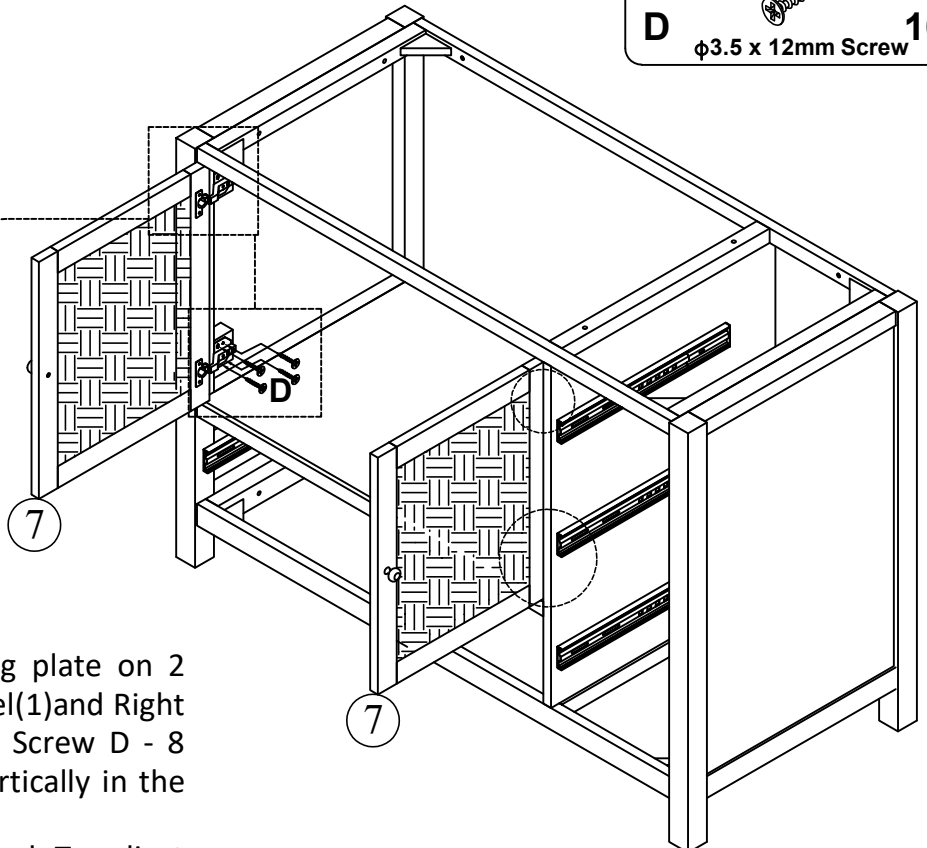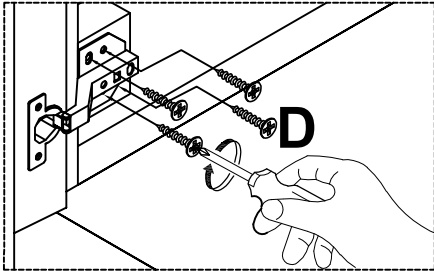

**D**   $\phi 3.5 \times 12\text{mm}$  Screw **16**

Align slotted holes in Hinge Mounting plate on 2 doors with pilot holes on Left End Panel(1) and Right End Panel(2). Attached 2 Doors using Screw D - 8 places. Screw D should be centered vertically in the slotted holes.

Note: Final adjustments may be required. To adjust up or down, loosen Screw D, Adjust as necessary and re-tighten Screw D.



## Step 09

If any hinge requires slight adjustment out, loosen Bolt II and adjust out as necessary.


To adjust the Left Hand Doors: Adjust door to Right by turning Bolt III clockwise. Adjust door to Left by turning Bolt III counterclockwise.

To adjust the Right Hand Doors: Adjust door to Left by turning screw III clockwise. Adjust door to Right by turning screw III counterclockwise.

Once all adjustments are made and doors are aligned, install set screw D in the last 2 holes in the mounting plate, on 2 doors, 8 places.

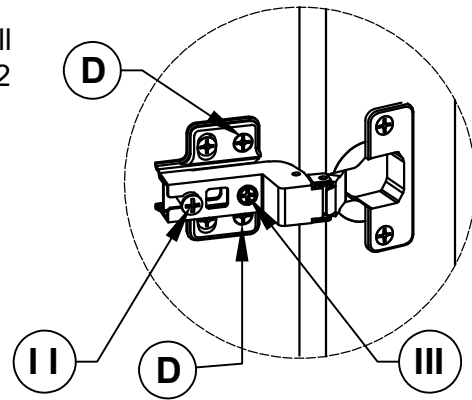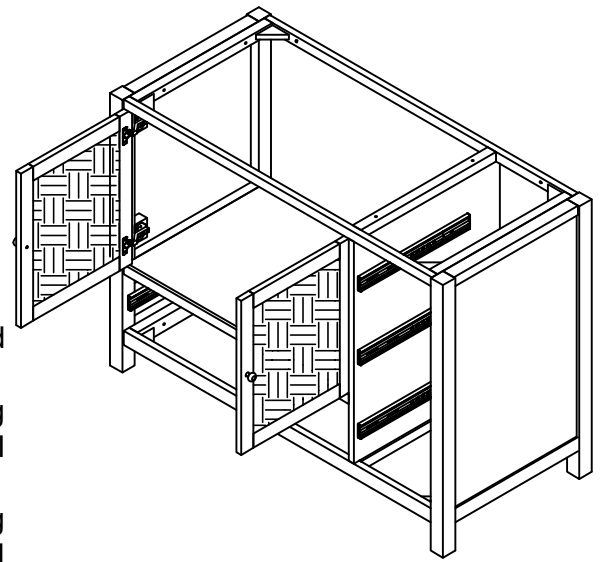


## Step 10

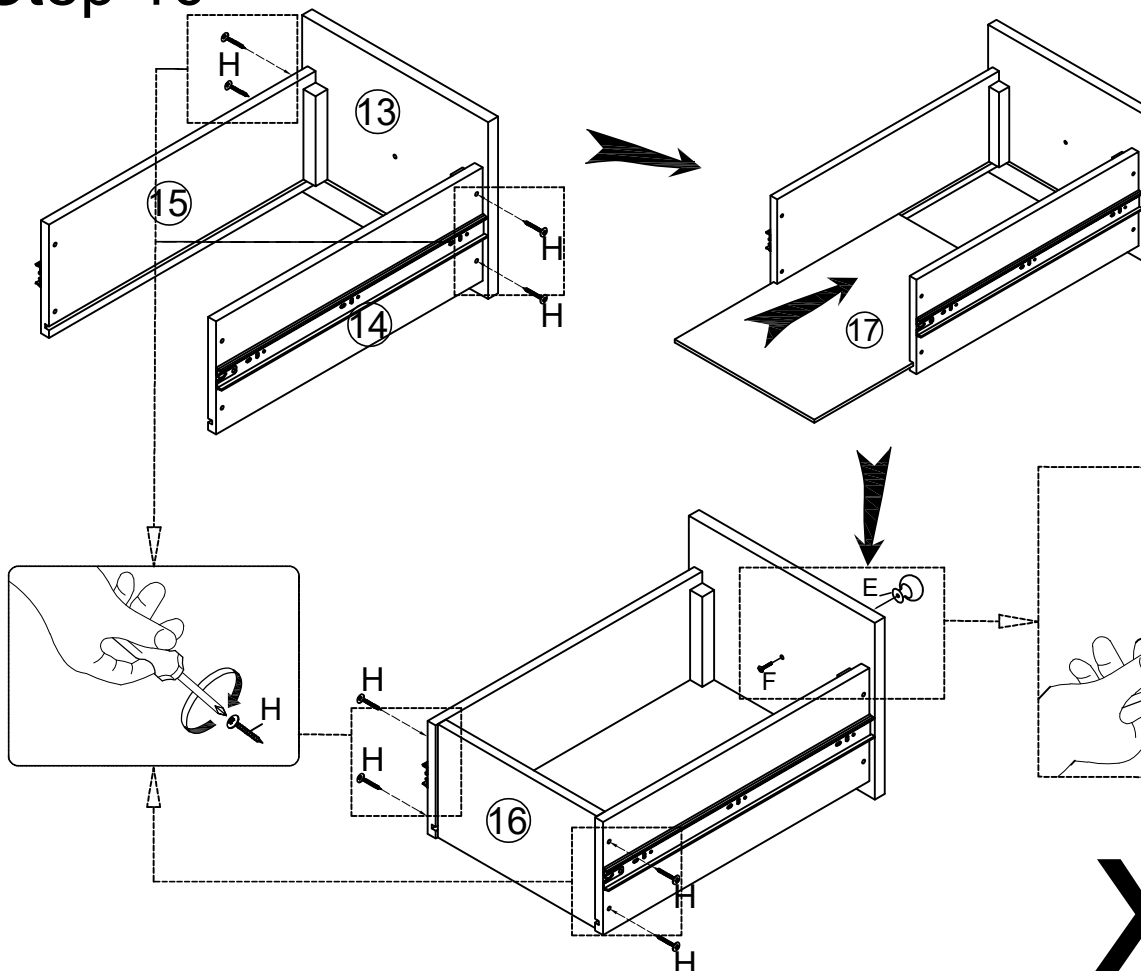


H		24
$\phi 4 \times 25\text{mm}$ Screw		
F		03
$\phi 4 \times 25\text{mm}$ Bolt		
E		03
Knob		
		01
(Not included)		

# Step 11

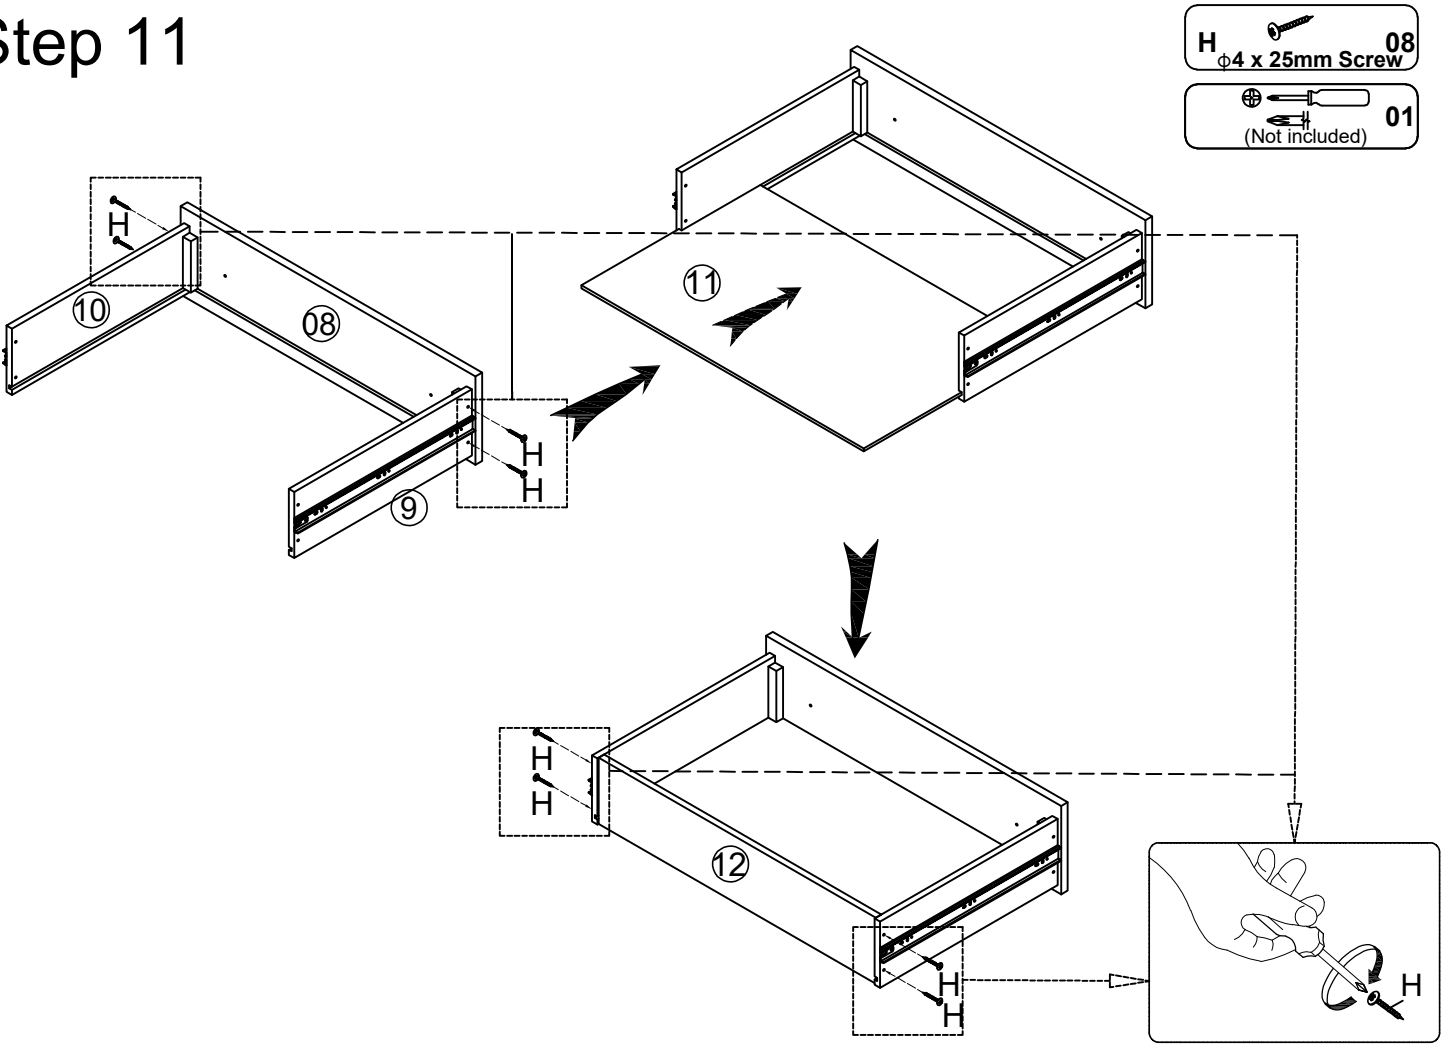


# Step 12

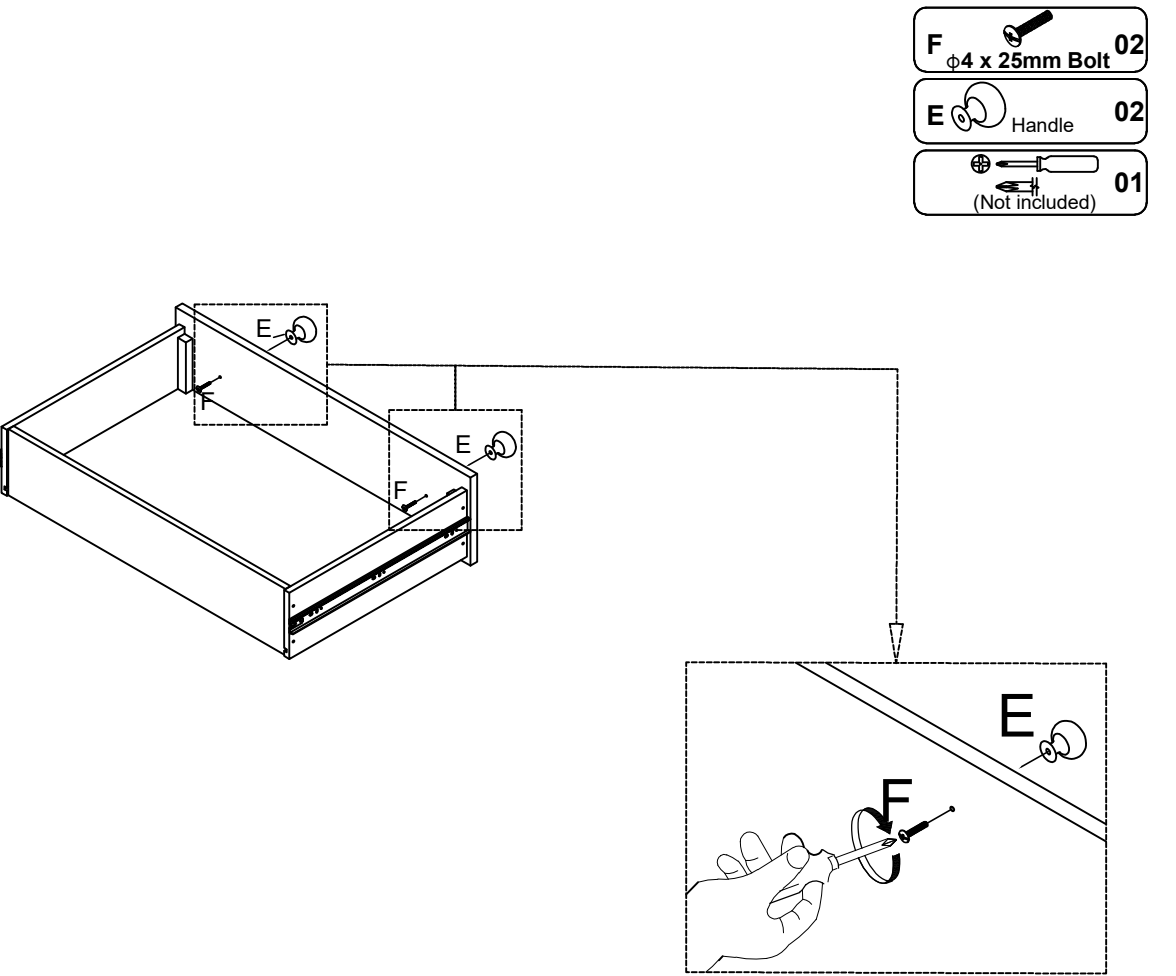




# Step 13

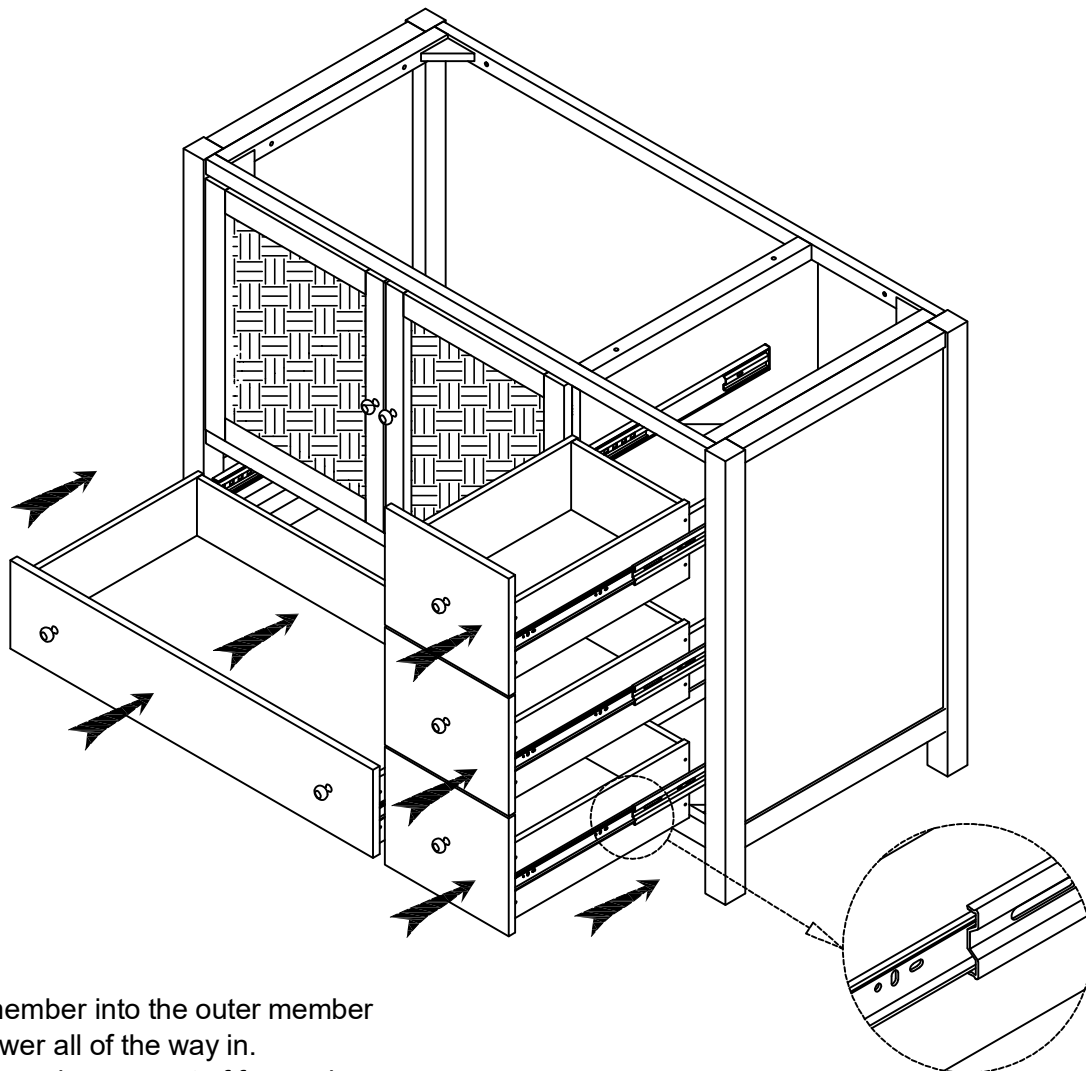

Insert the inner member into the outer member and push the drawer all of the way in.

Do not use an excessive amount of force when inserting the drawer.

Note: If the drawer can not be closed with ease, please remove the drawer and then try to insert it again.

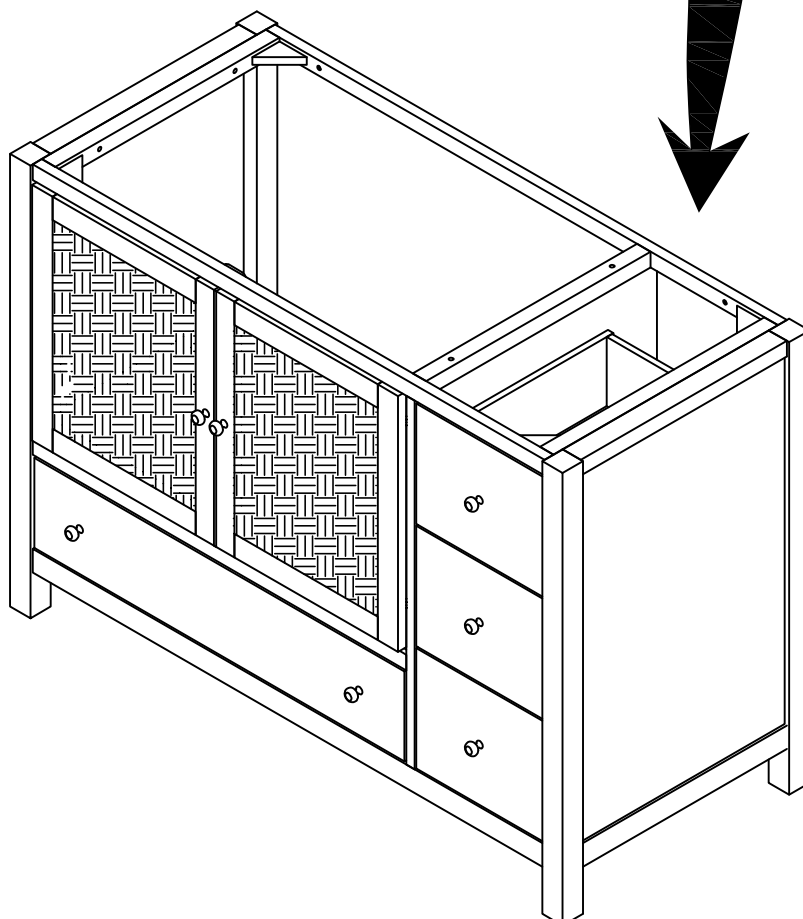

# Step 14


.For best results, we suggest securing your Vanity to a stud in at least two locations.

- . Mark the location of the Studs in the wall on the stretcher rail.
- . Drill a 1/16" thru hole in the center of the Stretcher Rail at the location of the studs in the wall.
- . Secure the Vanity to the wall using screws (J) make sure the screws align with the Stud in the wall.
- . If hole locations do not align with stud in wall, install the EZ Anchor(K) in to drywall and then screwing the EZ Anchor in to the drywall.



J  **02**  
Φ4 x 50mm Screw

K  **02**  
4x40mm Anchor

 **01**  
(Not included)

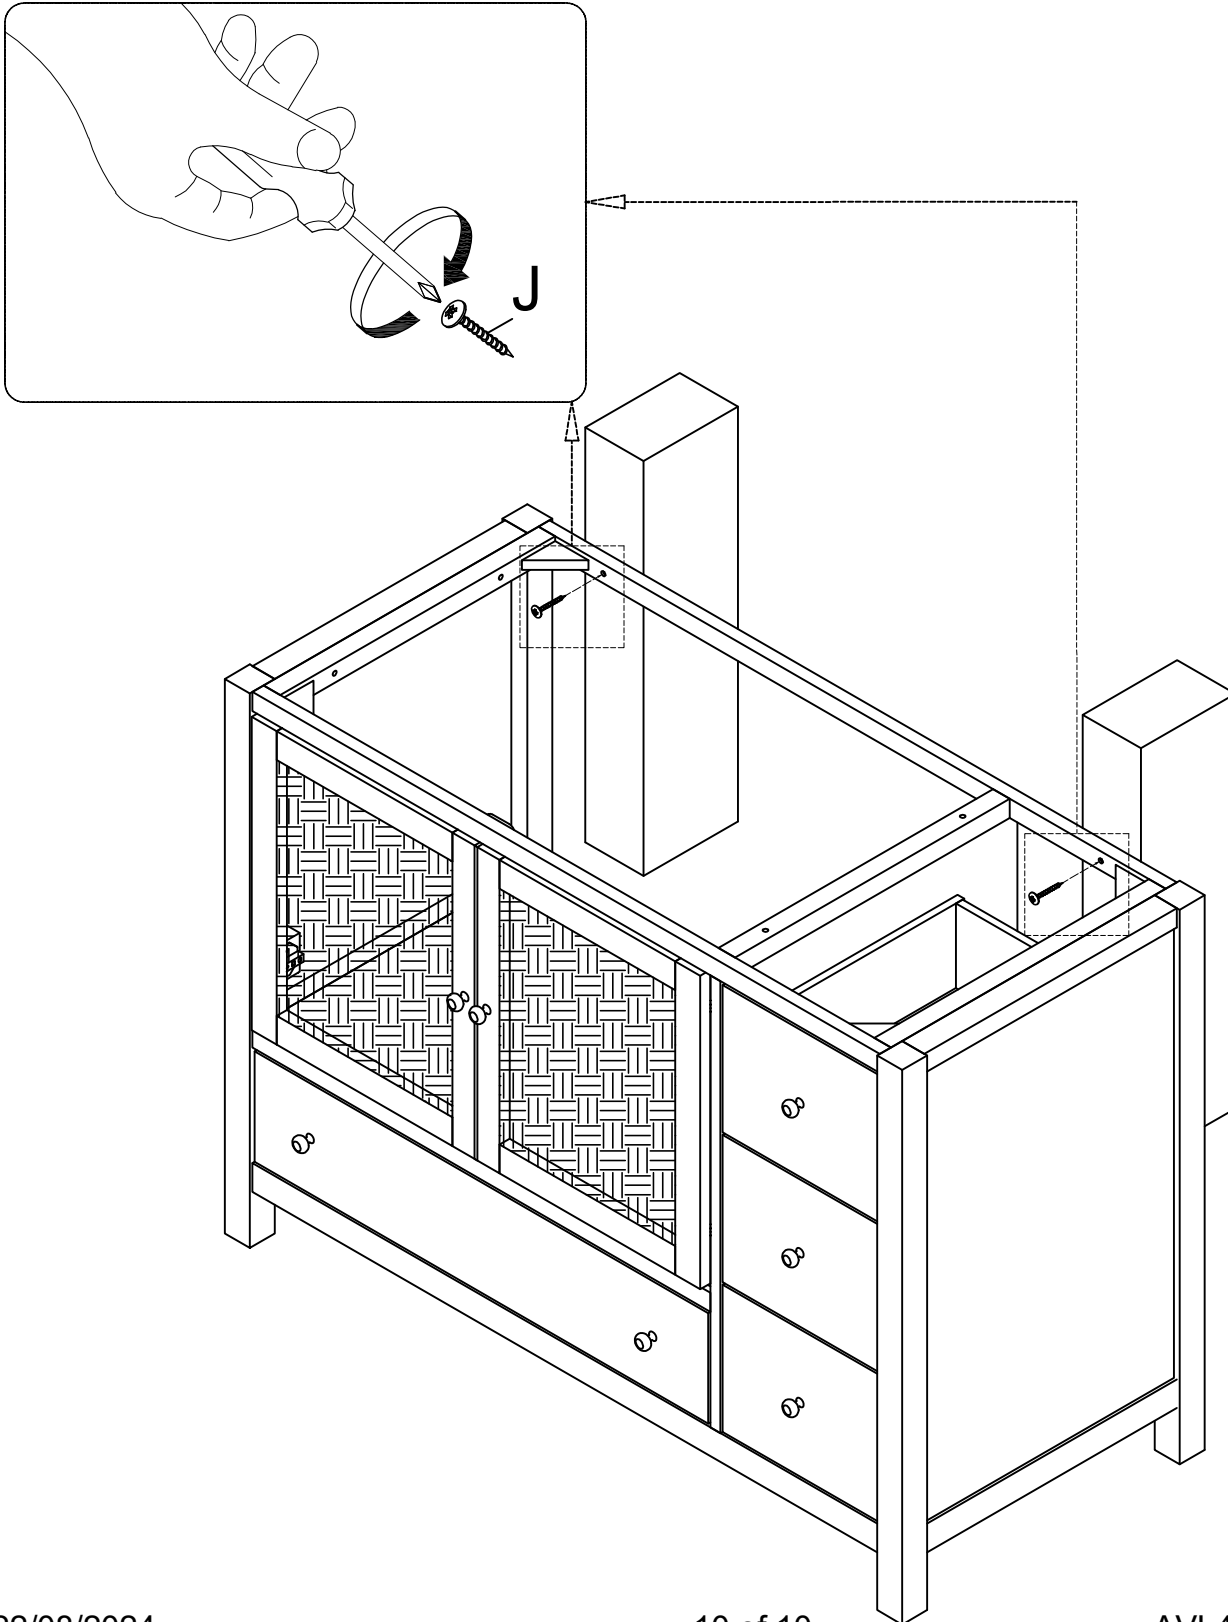

## 48" Vanity

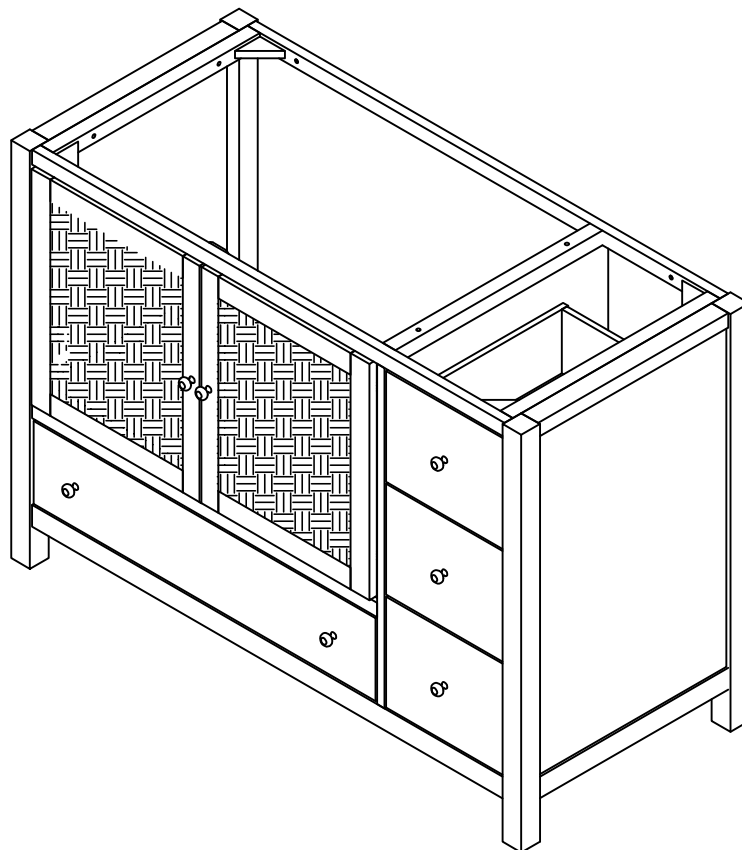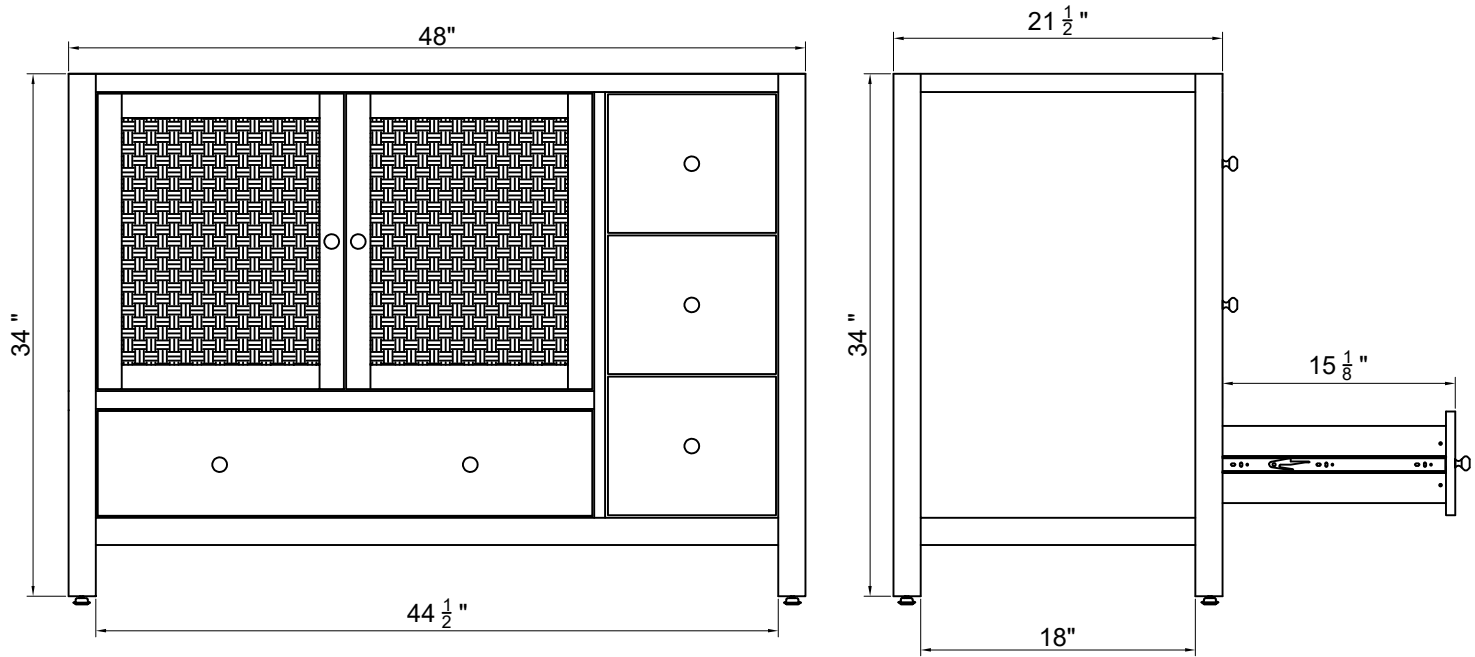

Weight Capacity on the top of vanity is  
300lbs, 48lbs on any interior shelves.