


NOTES:

- Instructions apply to Bower Sconces and Bower Surface Mounts.

REQUIRED TOOLS:

- Flathead Screwdriver


INCLUDED HARDWARE + TOOLS:




Wiring Kit (x1)



8-32 x 1.5" Screws (x2)

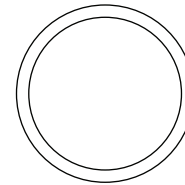

Canopy Gasket (x1)

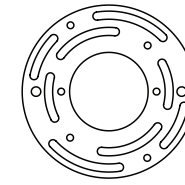

Circle Bracket (x1)

INSTALLATION INSTRUCTIONS

1. Detach Circle Bracket from fixture by removing 8-32 x 1.5" Screws. Reserve Screws for final step of installation.
2. If installing indoors, skip to step 3. If installing outdoors or in a wet location, attach included Canopy Gasket by removing the film on the gasket to reveal adhesive backing. Carefully position the gasket ring so that it aligns with the lip on the back of the fixture Canopy. Press firmly to adhere the Canopy Gasket to the fixture Canopy.
3. Attach Circle Bracket to junction box using included Wiring Kit Screws.
4. Wire the fixture to the junction box. Consult electrician, if necessary.
5. Attach fixture to Circle Bracket by lining up canopy mounting holes with threaded holes using 8-32 x 1.5" Screws. Tighten until the Canopy Gasket is compressed against Canopy and mounting surface.

