

# Item # : BR56GWN4D

## Assembly Instructions




Walker Edison®

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. [www.walkeredison.com](http://www.walkeredison.com)


Revised 21/10/2020 (I)

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

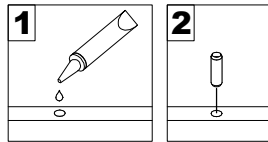


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

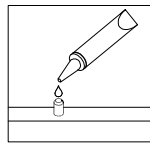

- VI. A Phillips head screwdriver is required for the assembly of this product .

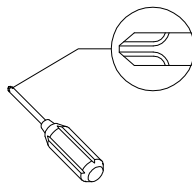


- VII. Power tools should not be used to assemble this product.

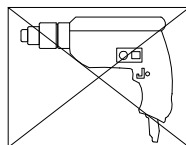






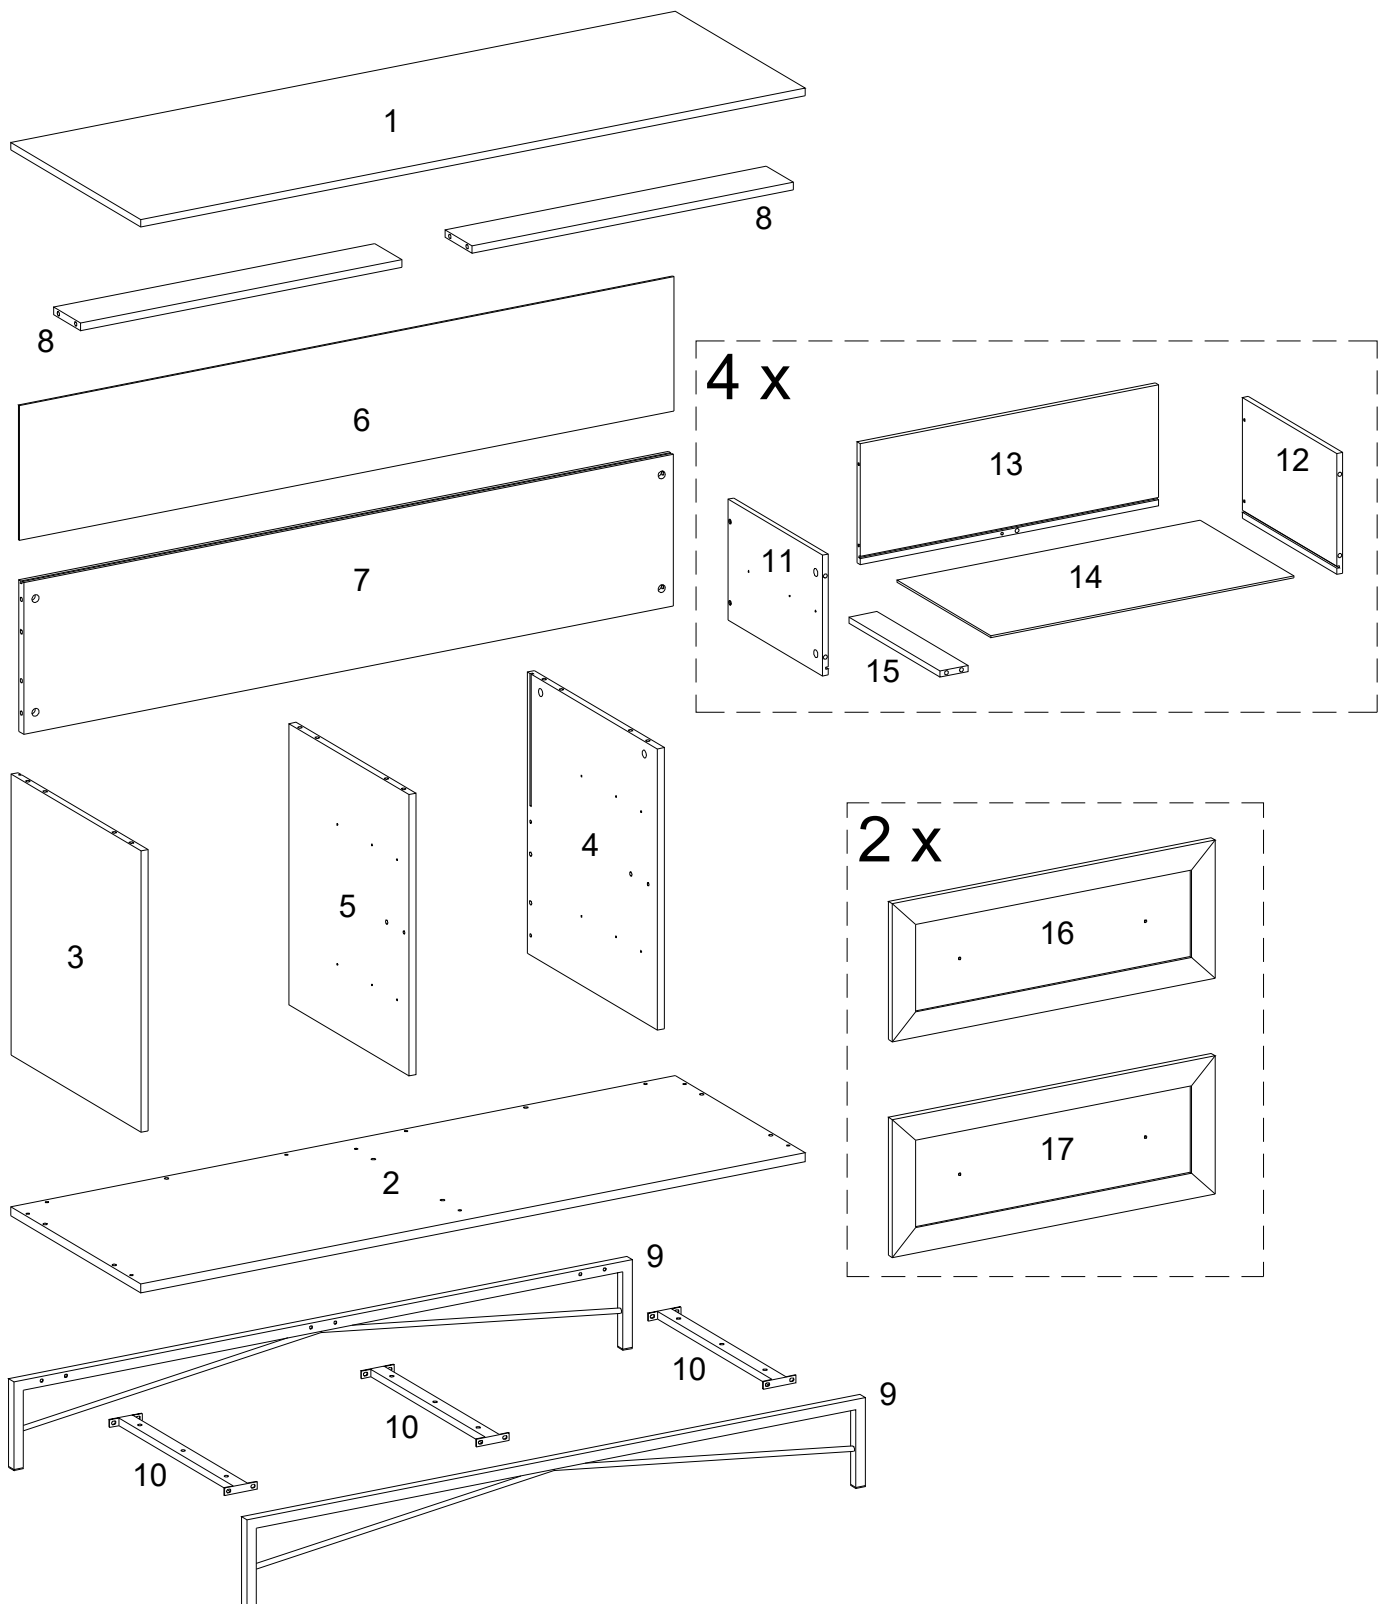











- VIII. Drill may be needed for securing product to wall.








# Parts List




# Hardware List

A		Ø8x30mm	Wooden dowel	20 pcs
B		Ø8x50mm	Wooden dowel	1 pc
C		Ø6x35mm	Cam bolt	32 pcs
D		Ø6x64mm	Cam bolt	1 pc
E		Ø15x11mm	Cam lock	14 pcs
F		Ø15x9mm	Cam lock	20 pcs
G		Ø30mm	Sticker	34 pcs
H		Ø6x50mm	Screw	10 pcs
J		Ø6x12mm	Bolt	12 pcs
K		Ø6x25mm	Bolt	9 pcs
L		M 4	Hex key	1 pc
M			Handle	8 pcs
N		Ø4x10mm	Handle Bolt	8 pcs
P		Ø3x17mm	Screw	6 pcs
Q			Plastic wedge	6 pcs
R		Ø4x38mm	Screw	20 pcs
S		Ø3x12mm	Screw	48 pcs

# Hardware List

T		Ø4x12mm	Screw	2 pcs
U		Ø4x25mm	Screw	2 pcs
V			Plastic strap	2 pcs
W			Nut	2 pcs
X		Ø6x30mm	Wooden dowel	8 pcs
Y			Glue tube	2 pcs
Z		12"	Drawer slider	4 sets


\* Note: This piece comes preassembled for shipping purposes and must be disassembled to complete the desk assembly.

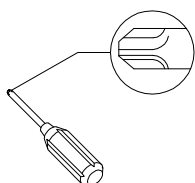

Philips head screwdriver required for assembly  
(not included)



*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Step 1

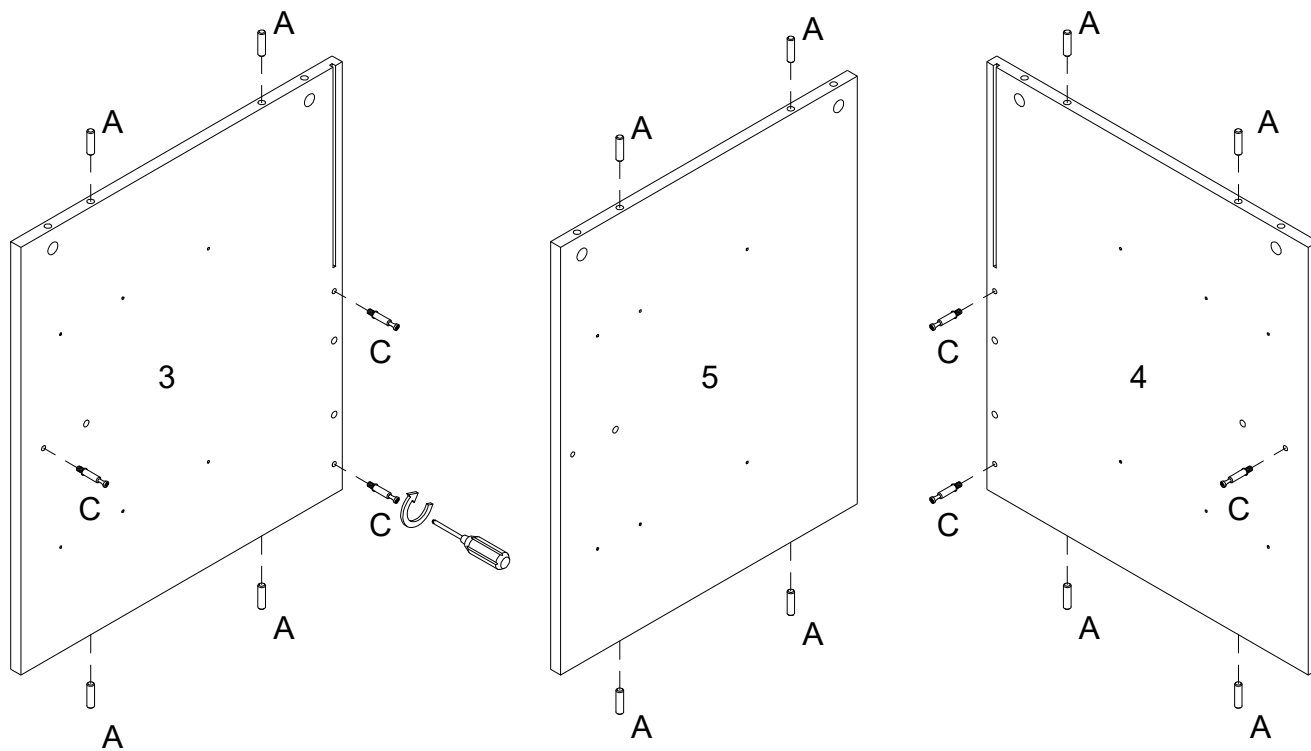


Insert wooden dowel (A) into parts (3,4,5) , then secure cam bolt (C) into parts (3,4) with Philips head screwdriver as per diagram.

# Step 2

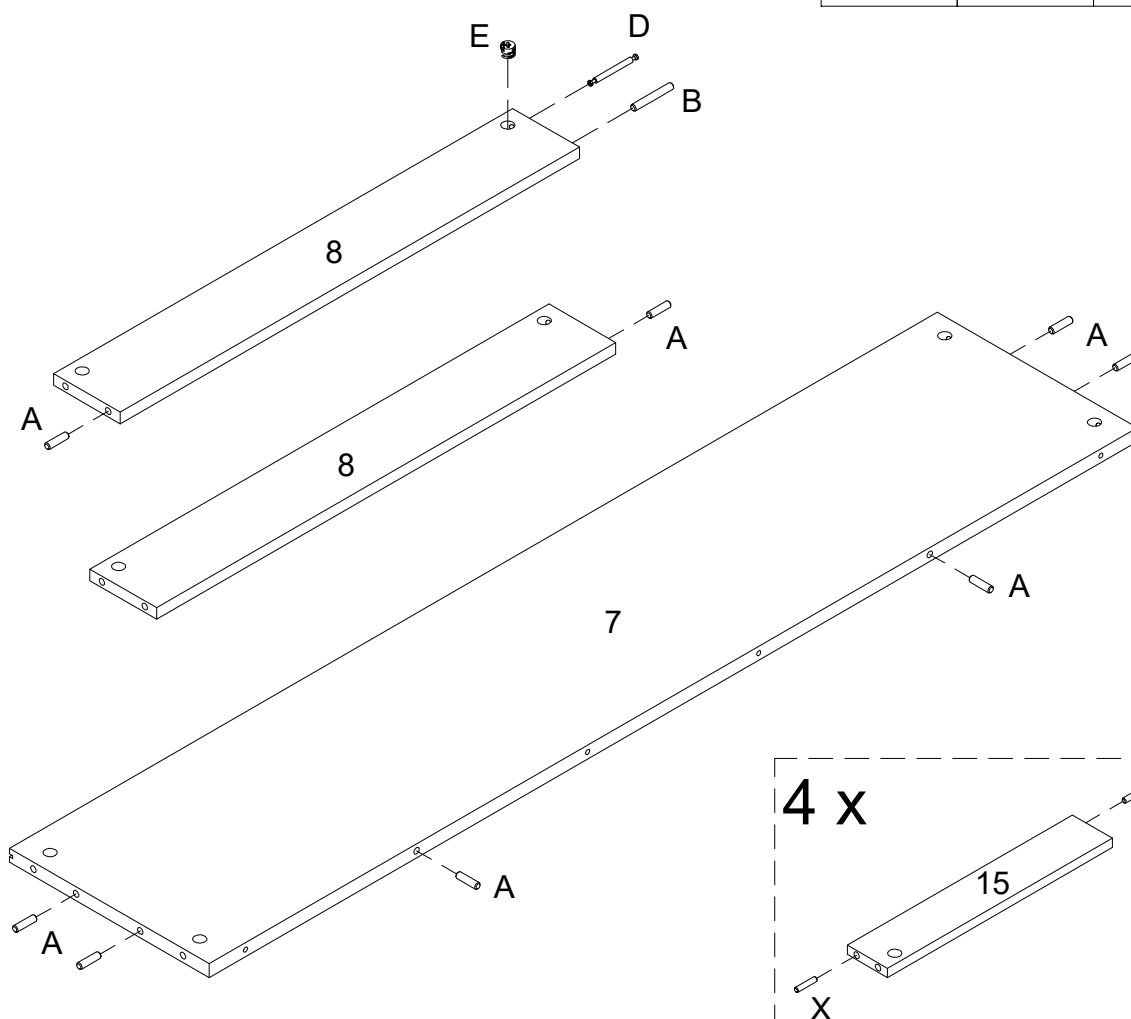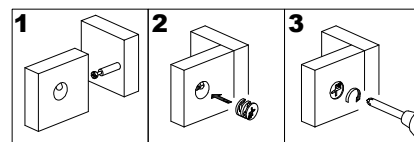

Insert wooden dowel (A) into parts (7,8) and wooden dowel (B) into part (8), wooden dowel (X) into part (15) , then using cam lock (E) secure cam bolt (D) into part (8) with Philips head screwdriver as per diagram.


## Step 3

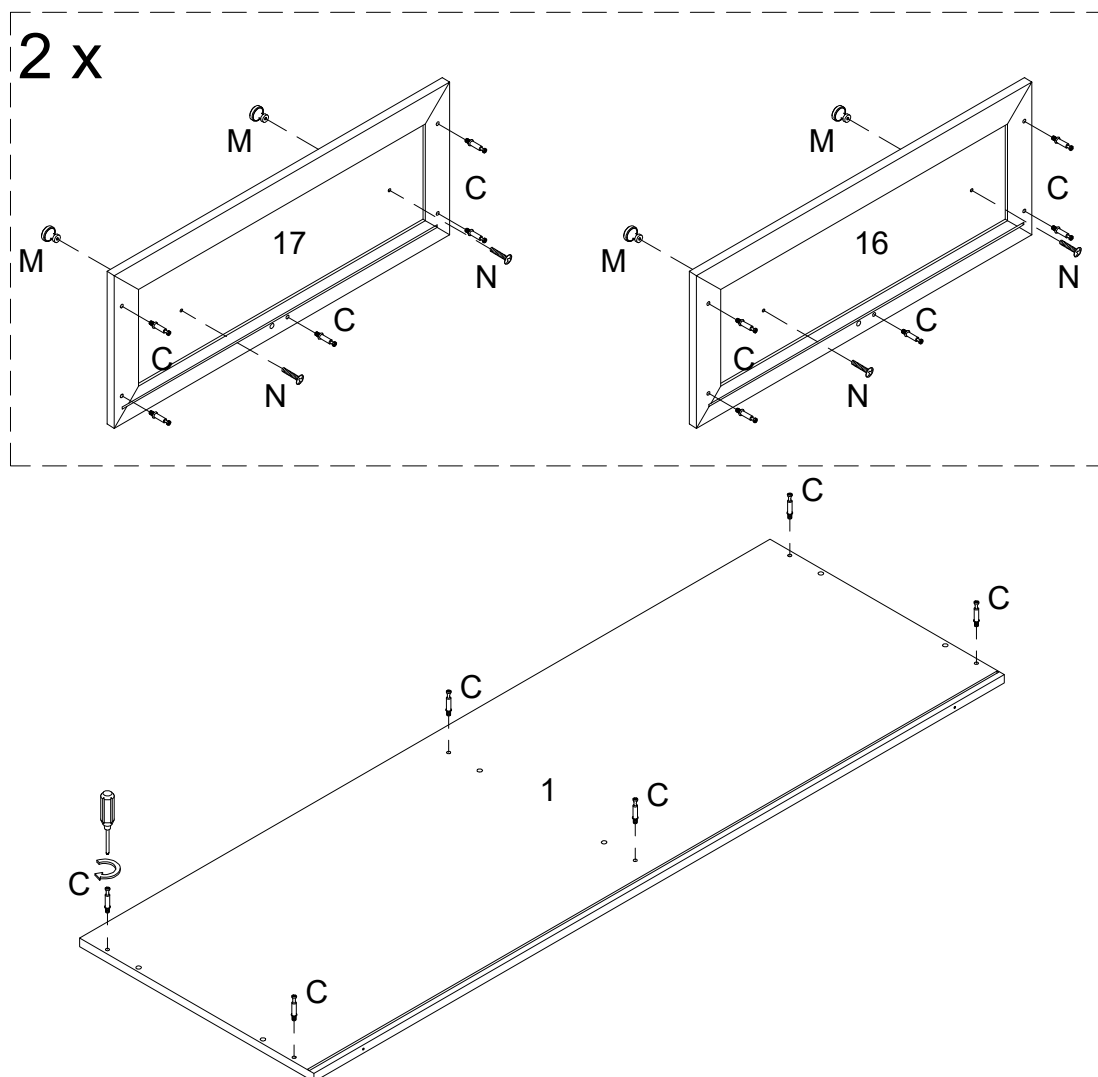

Secure cam bolt (C) into parts (1,16,17) ,then using handle bolt (N) secure handle (M) into parts (16,17)with Philips head screwdriver as per diagram.




## Step 4

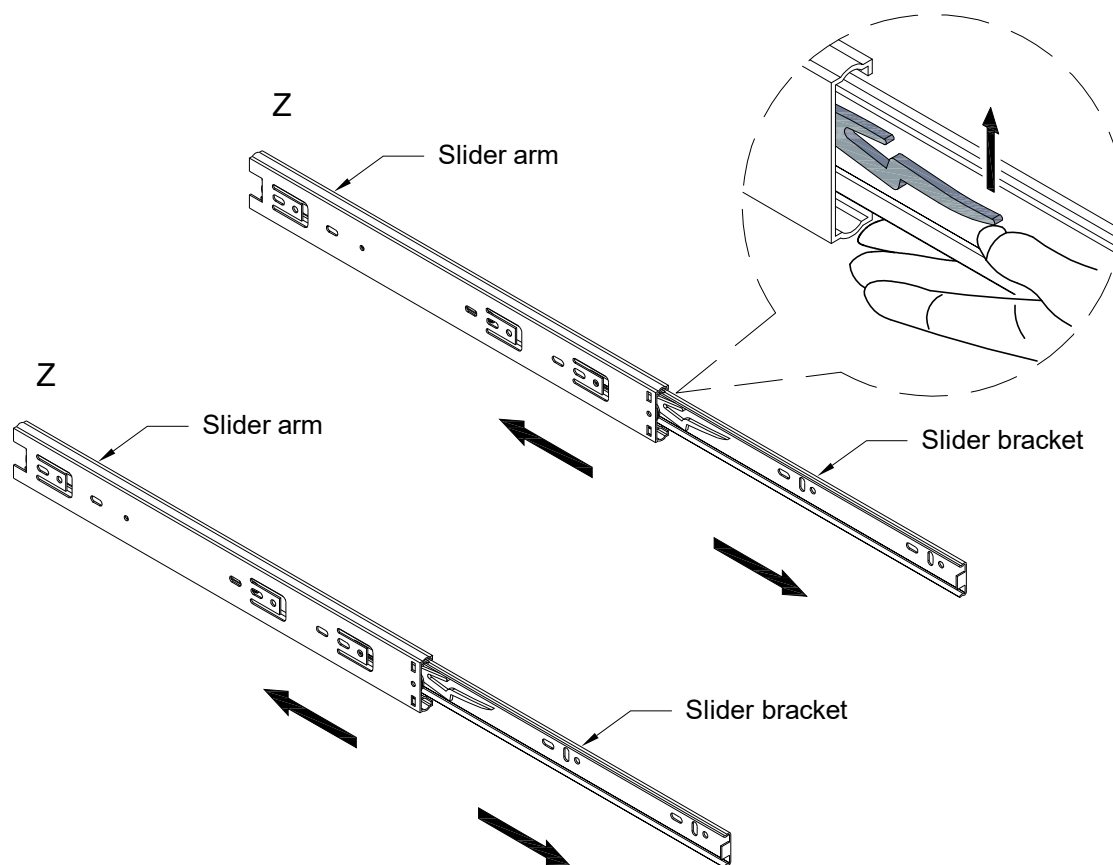



Pick up the slider arm (Z) and separate the slide runner for the following Steps. Extend the slide runner all the way forward, press the plastic release lever of the slider arm up and pull the slide runner complete out .

## Step 5

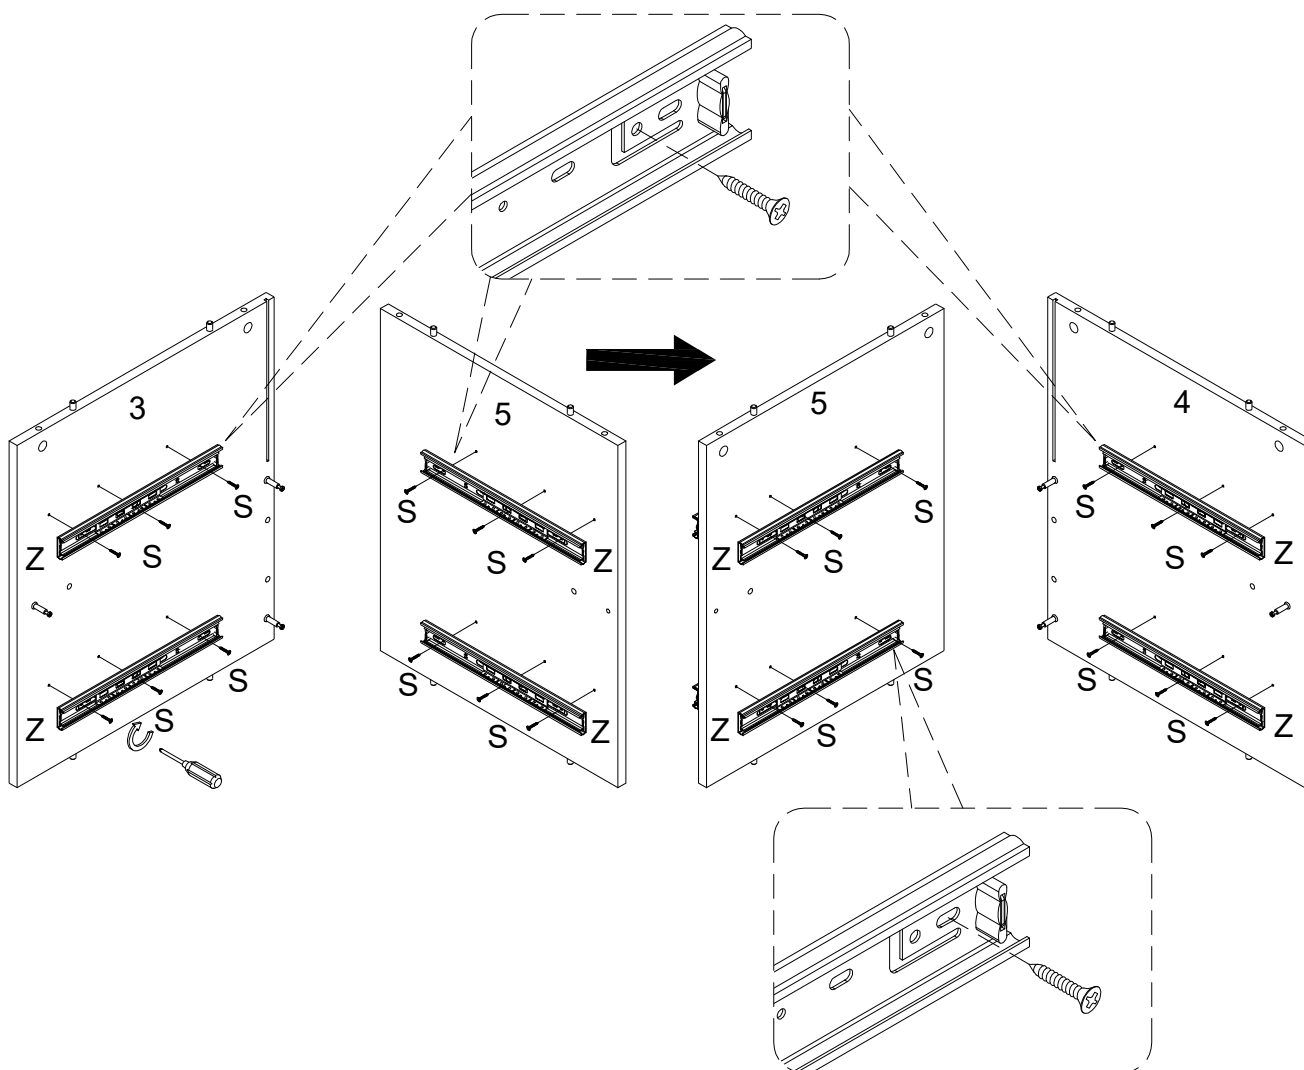



Using screw (S) attach drawer slider (Z) into parts (3,4,5) with Philips head screwdriver as per diagram.

## Step 6

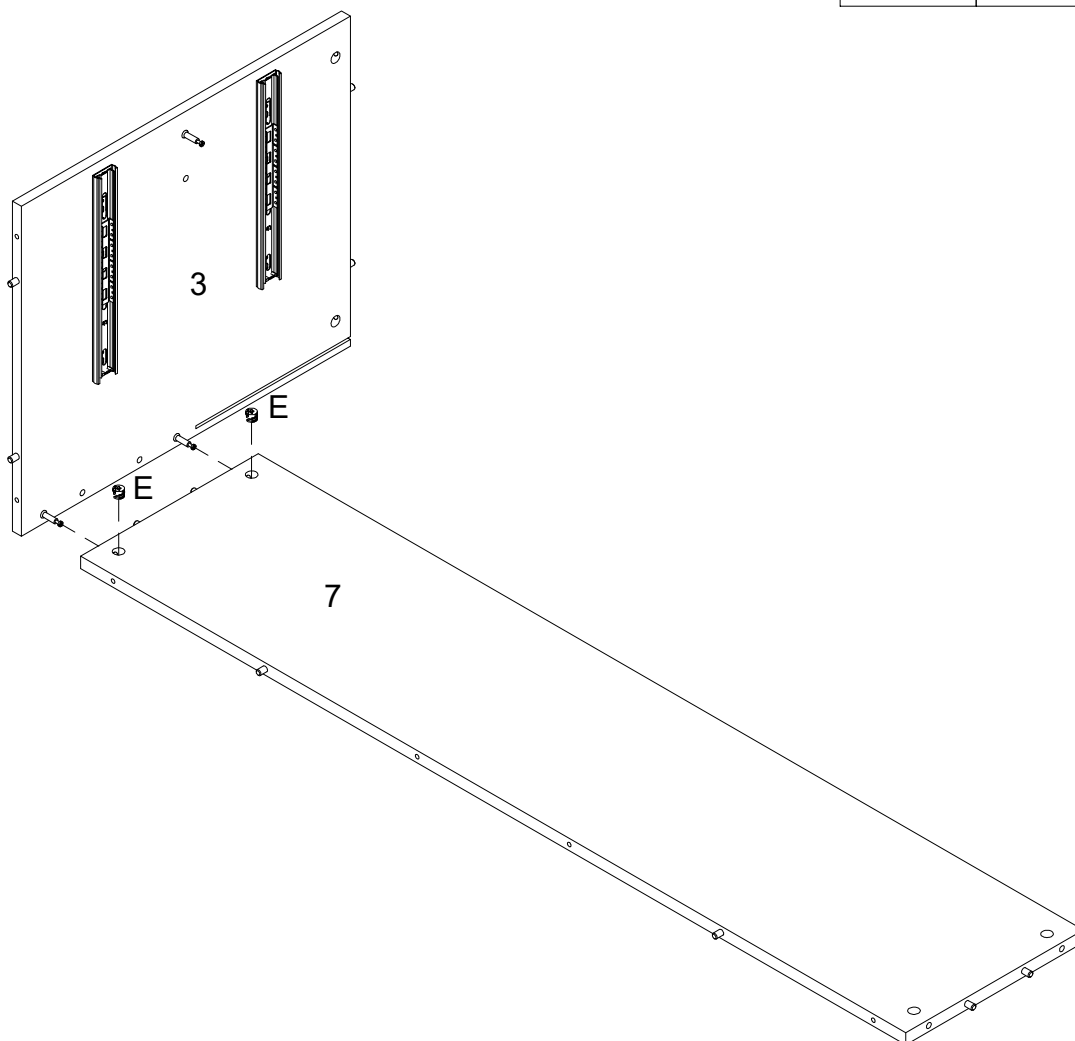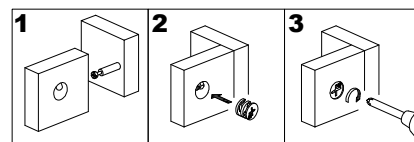


Using Cam lock(E) secure part (3) to part (7) with Philips head screwdriver as per diagram.

## Step 7

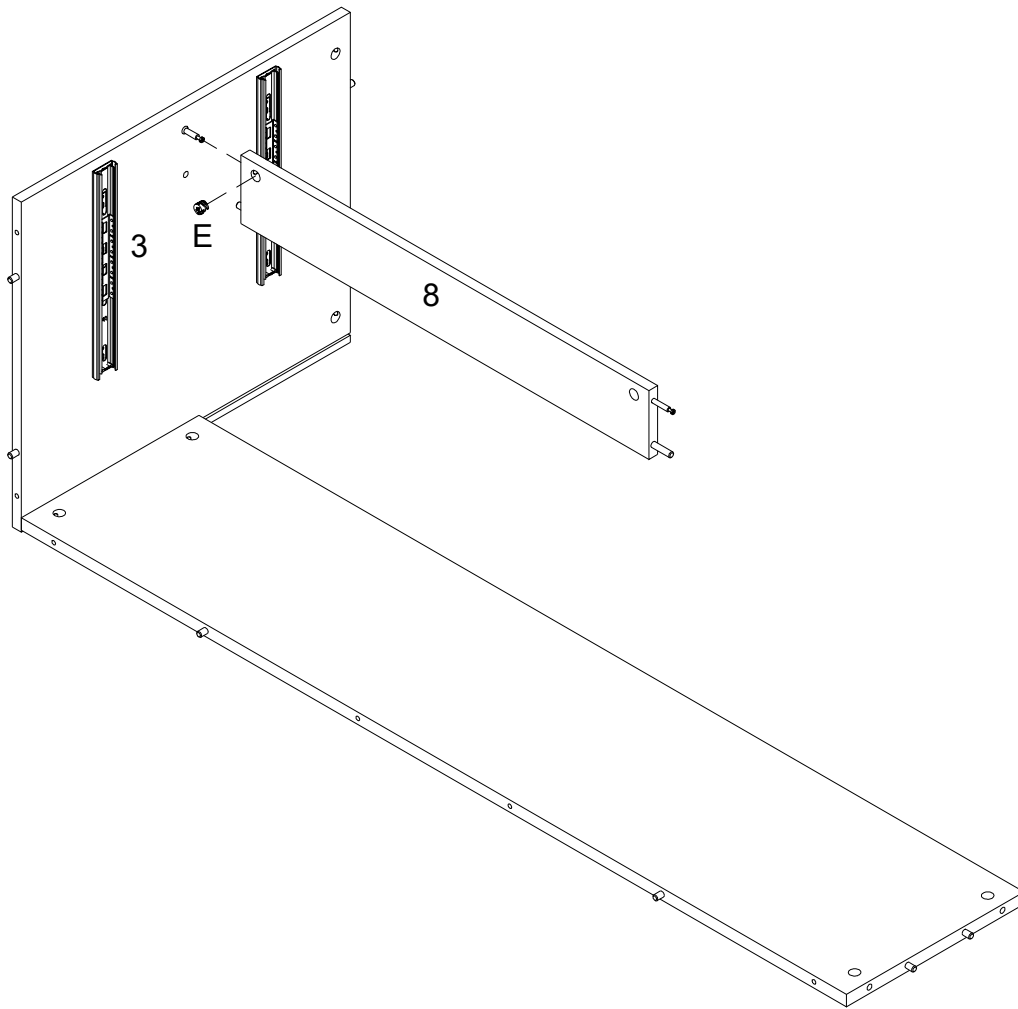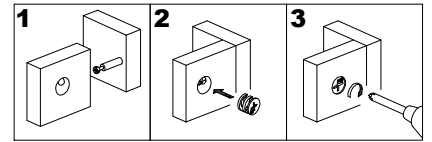



Using Cam lock(E) secure part (8) to part (3) with Philips head screwdriver as per diagram.

## Step 8

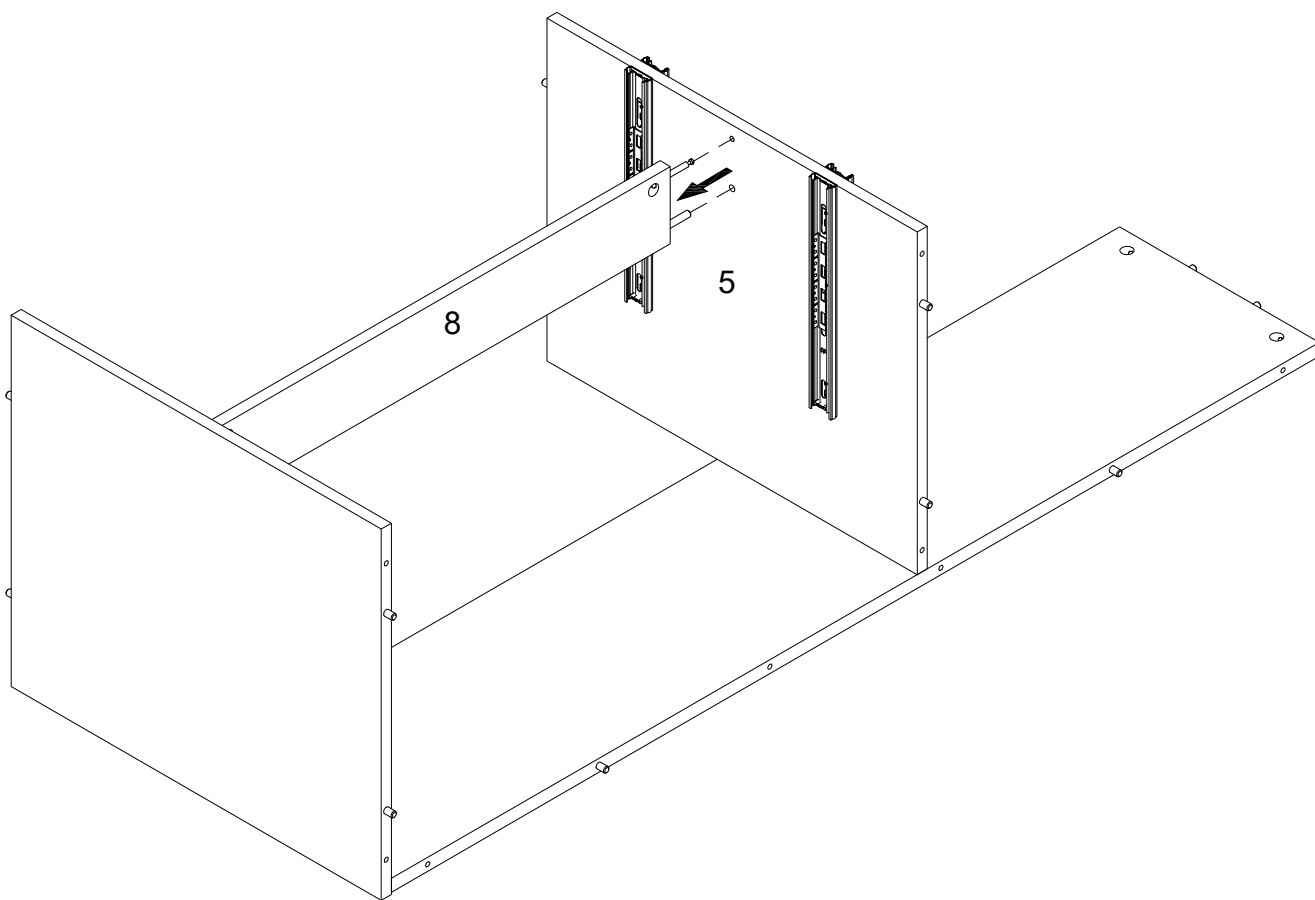



Attach part (5) into part (8) as per diagram.

## Step 9

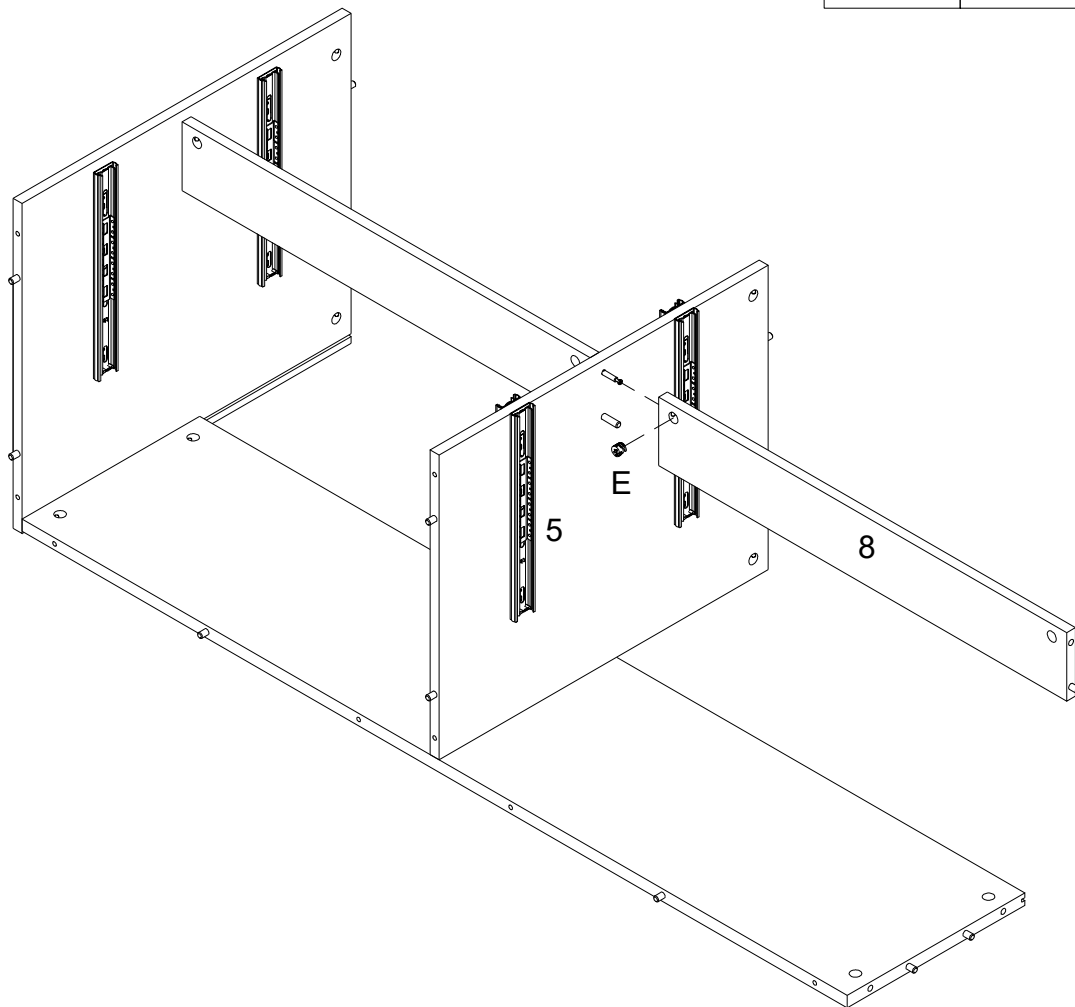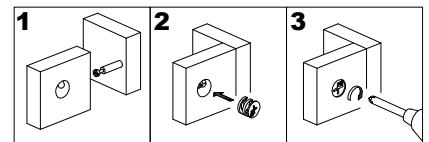


Using Cam lock(E) secure part (8) to part (5) with Philips head screwdriver as per diagram.

## Step 10

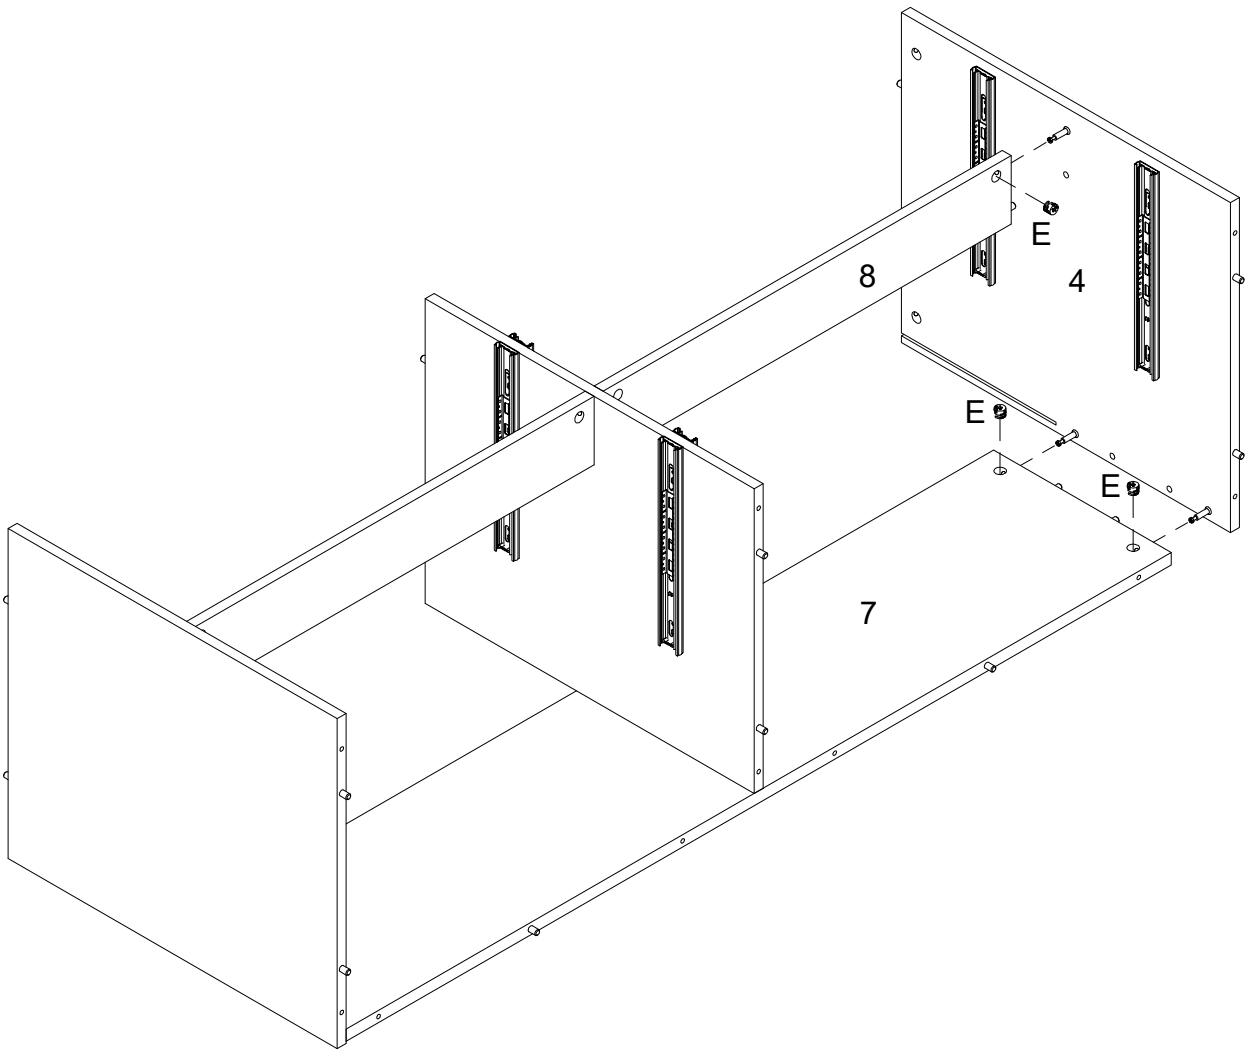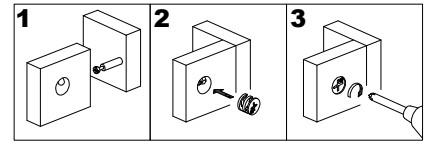

Using Cam lock(E) secure part (4) to parts (7,8) with Philips head screwdriver as per diagram.


# Step 11

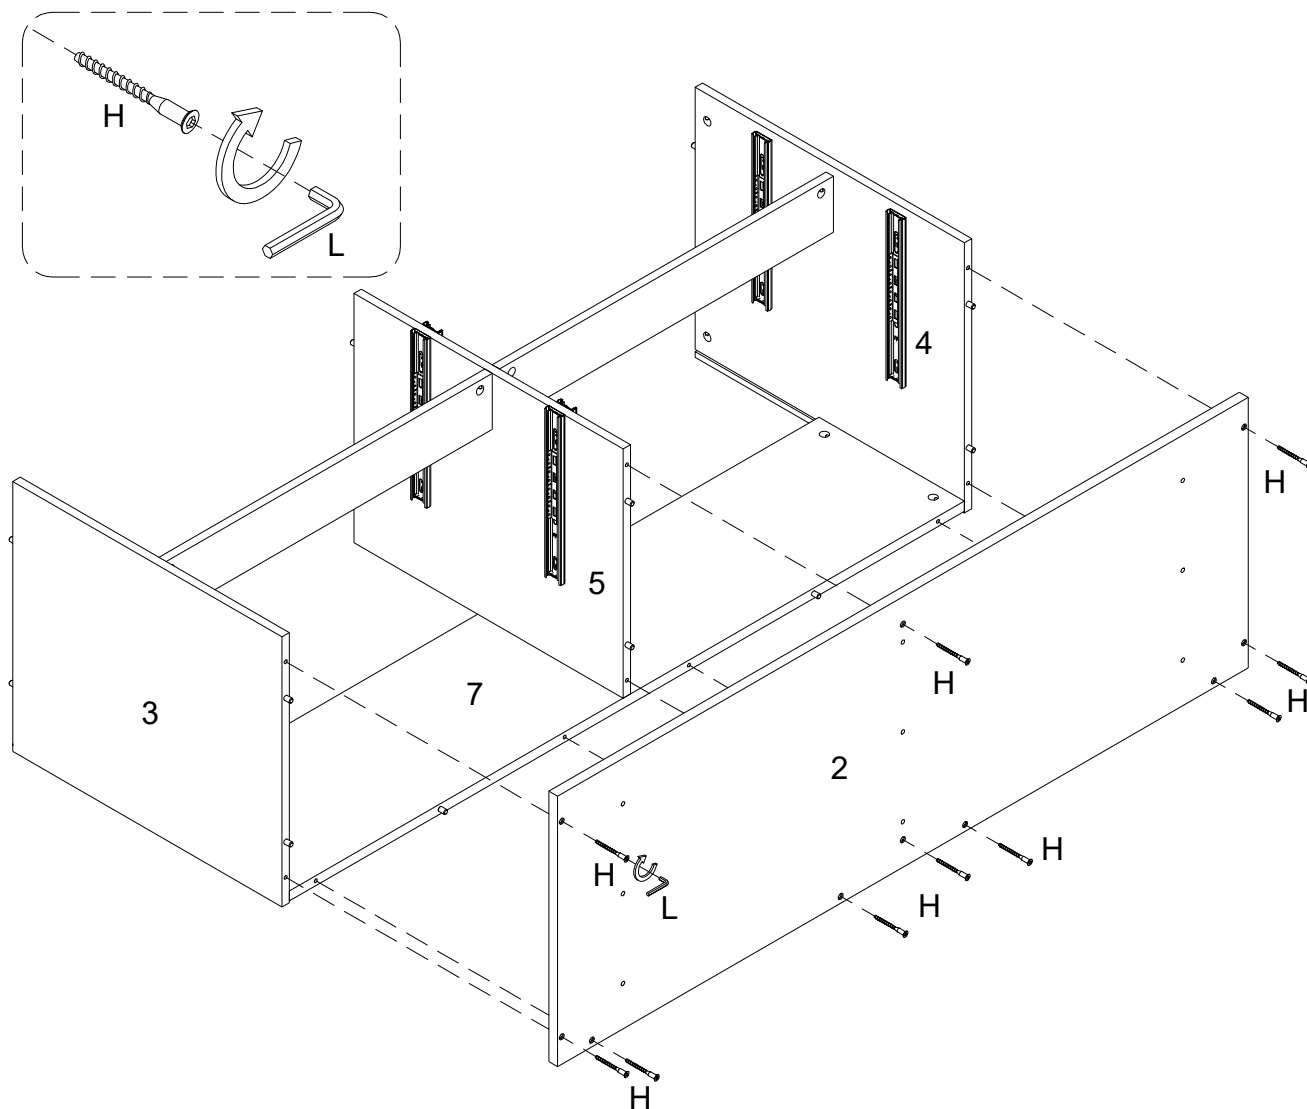

Using screw (H) attach part (2) into parts (3,4,5,7) with Hex key (L) as per diagram.





## Step 12

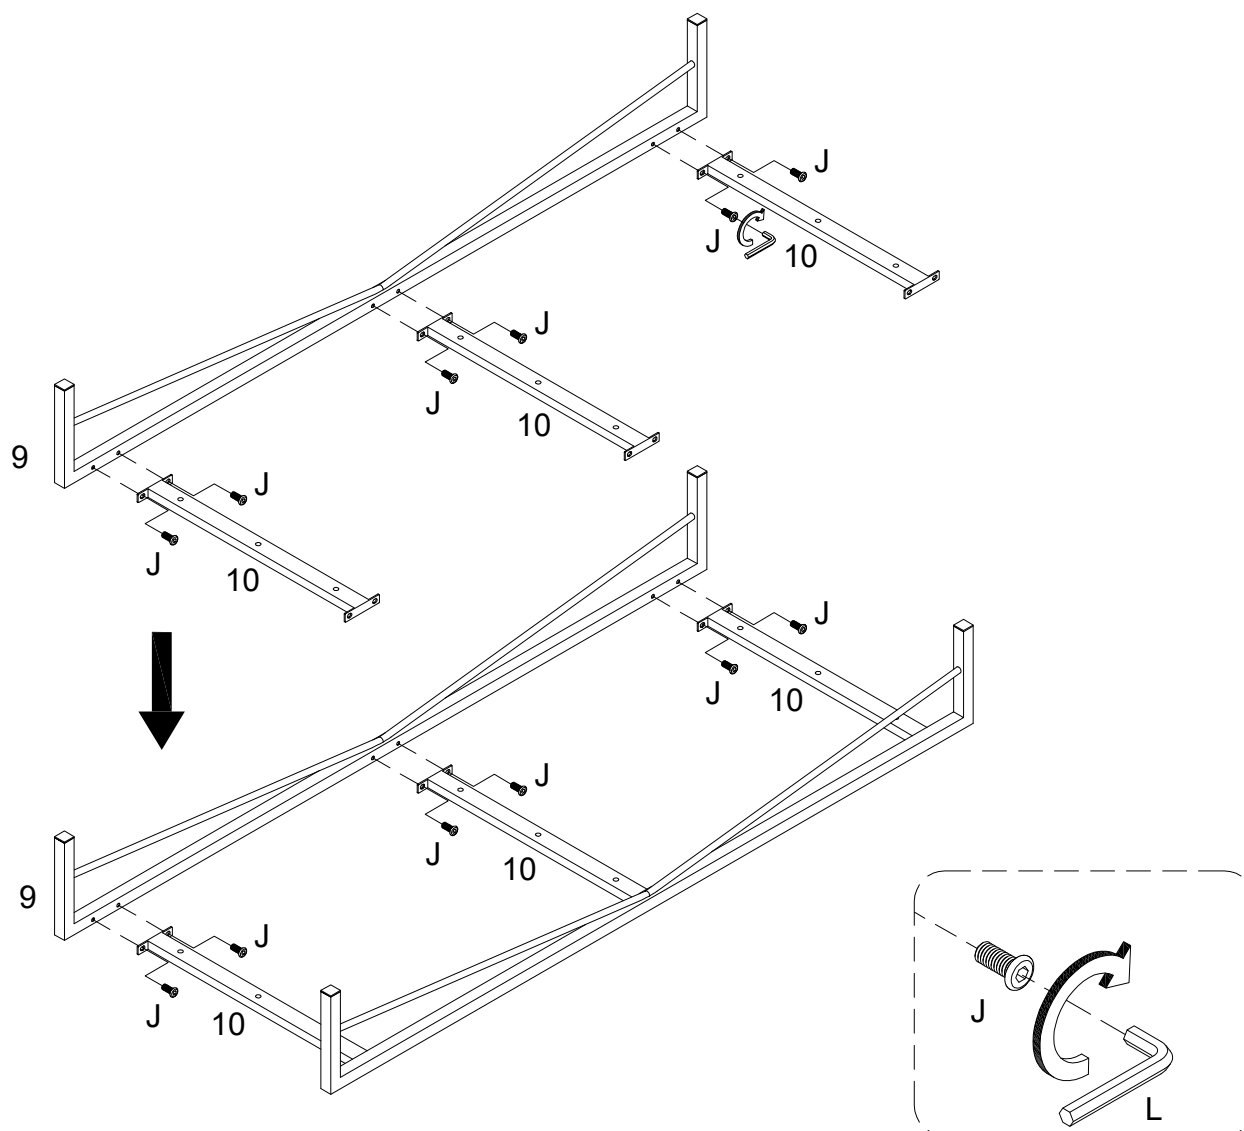


Using bolt (J) attach part (10) to parts (9) with Hex key (L) as per diagram.

## Step 13

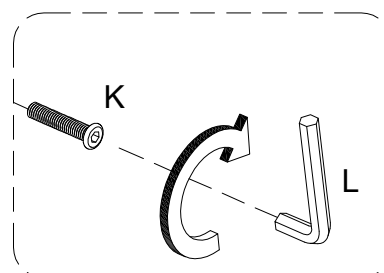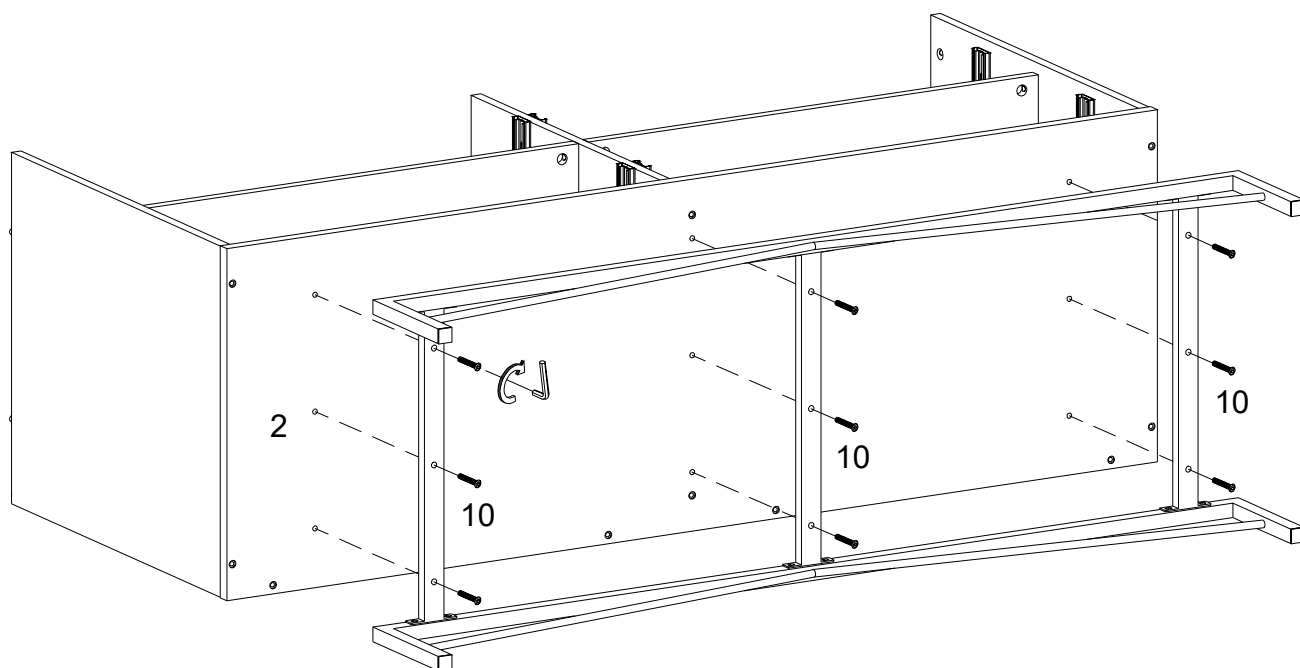



Using bolt (K) attach part (10) to part (2) with Hex key (L) as per diagram.

## Step 14

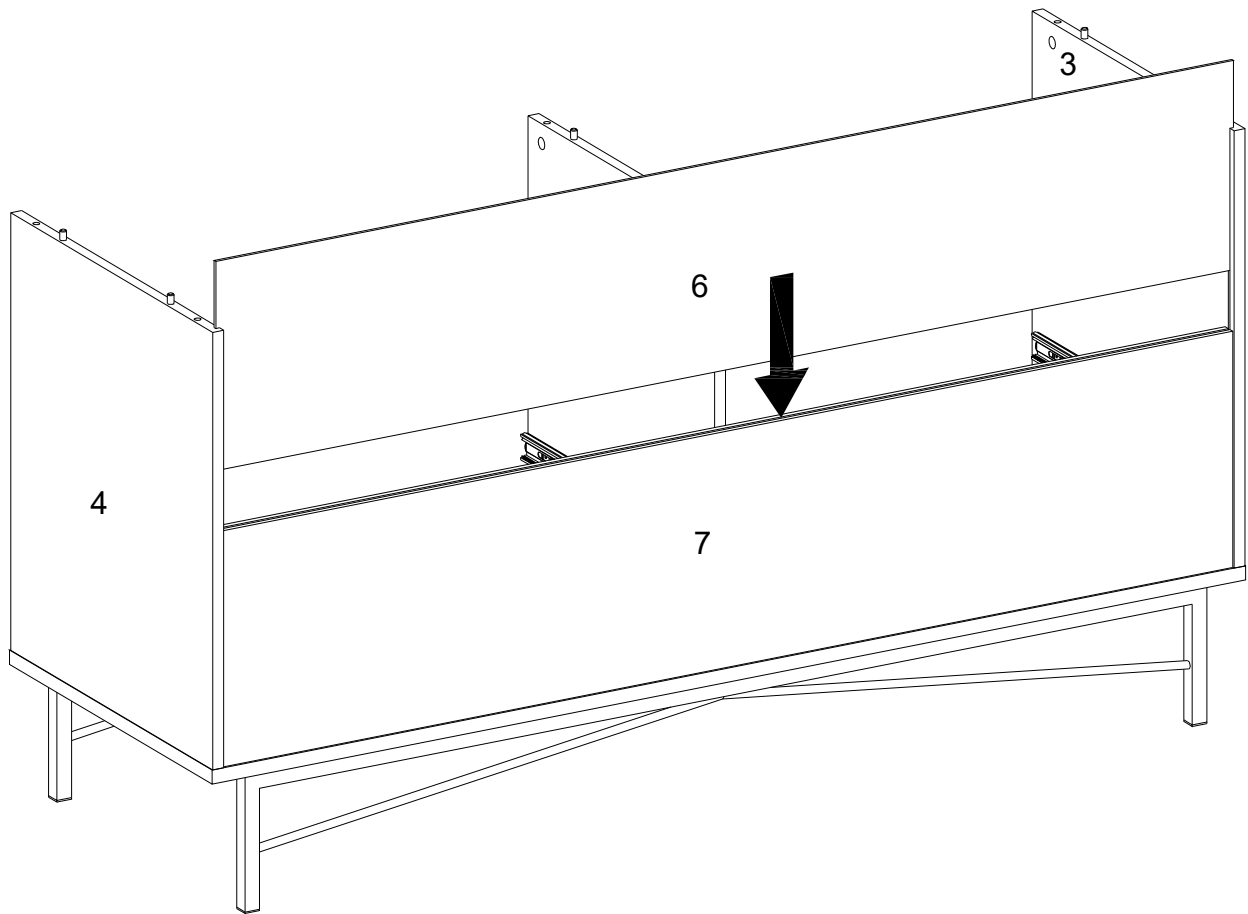


Put part (6) as per diagram.

## Step 15

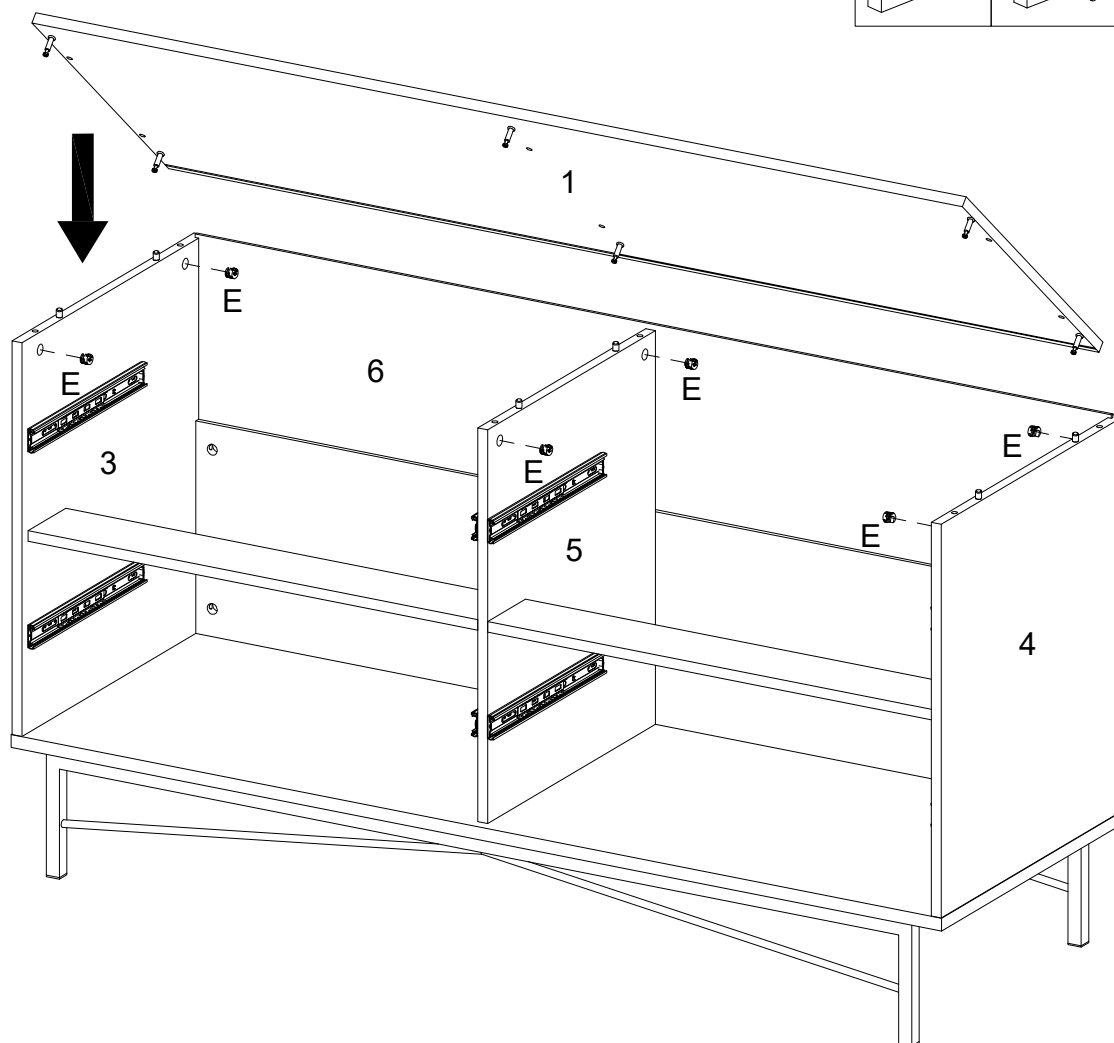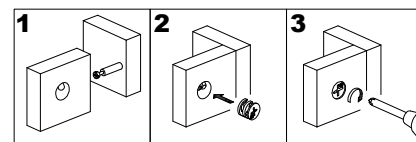


Using cam lock (E) secure part (1) into parts (3,4,5) with Philips head screwdriver as per diagram.

## Step 16

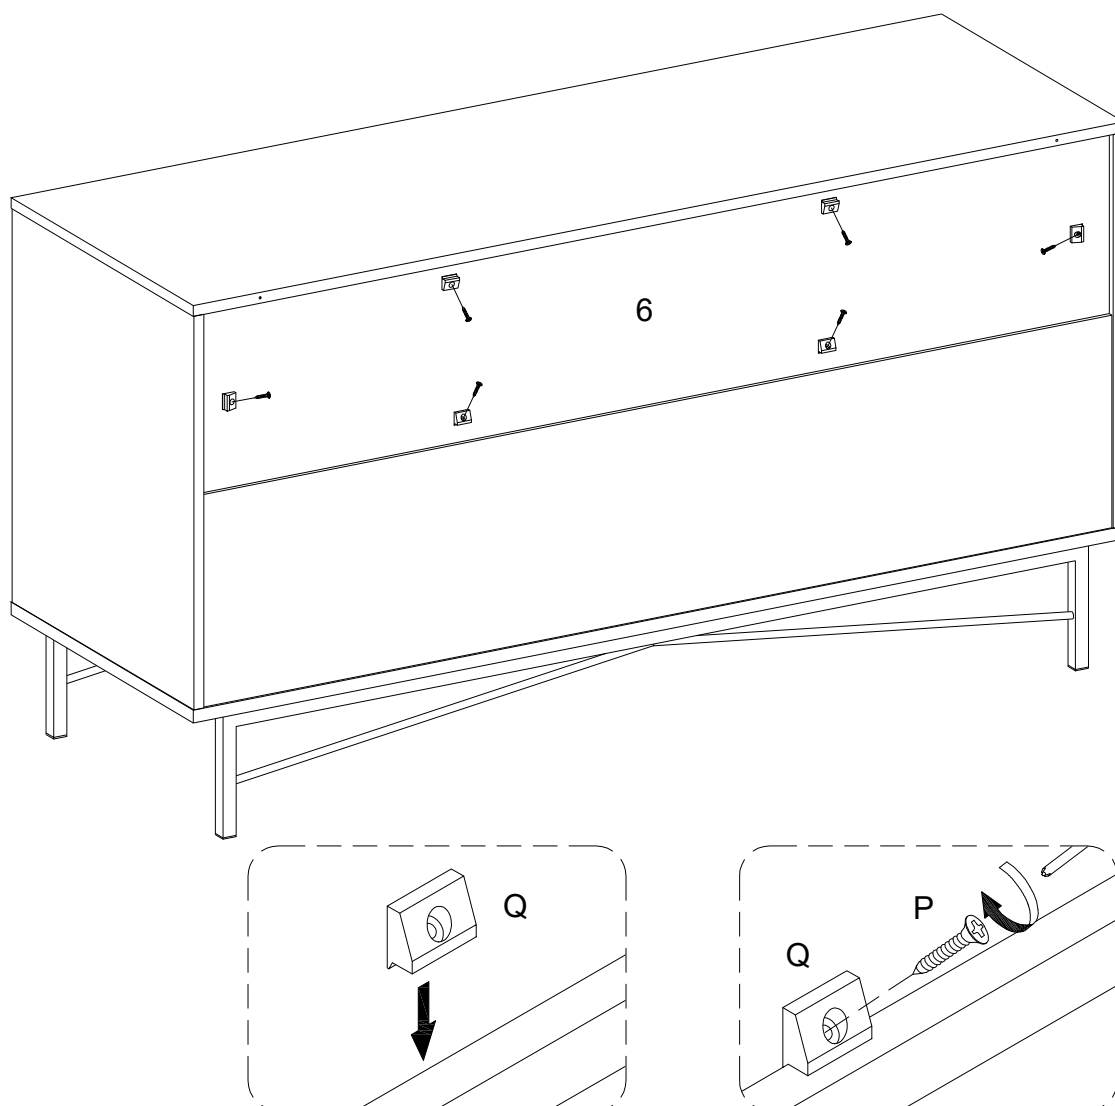

Using screw (P) secure plastic wedge (Q) to part (6) with Philips head screwdriver as per diagram.


## Step 17

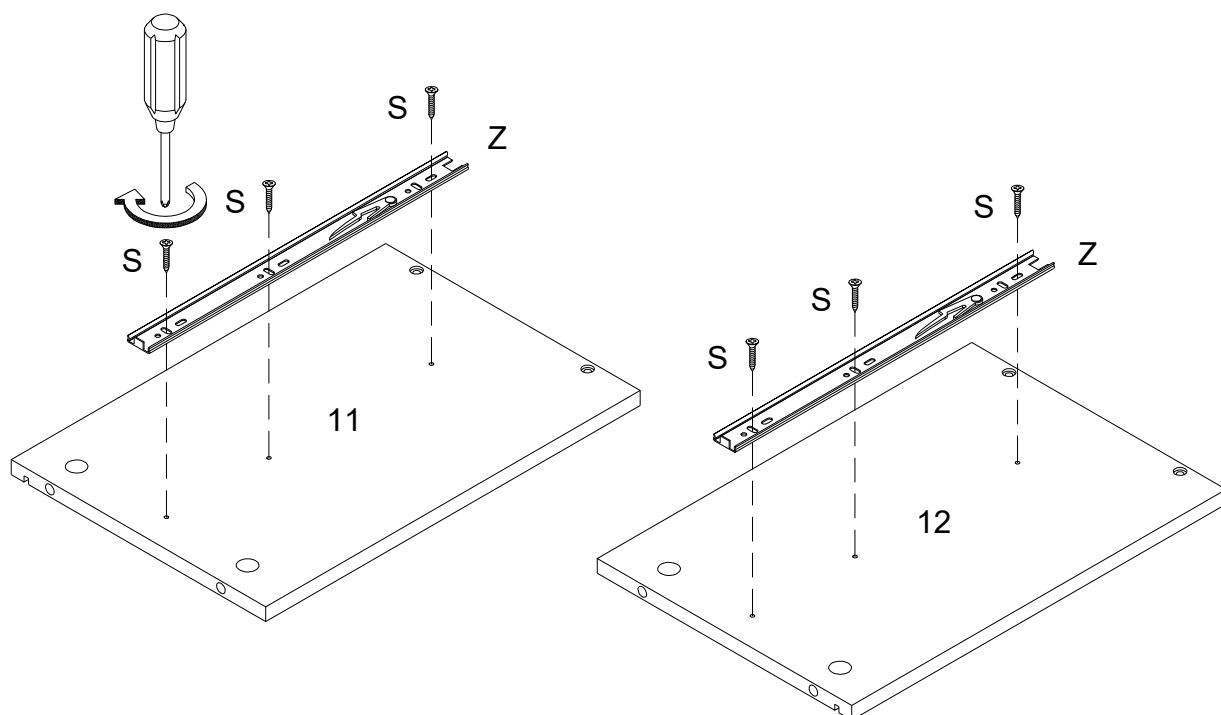

4 x




Using screw (S) attach drawer slider (Z) to parts (11,12) with Philips head screwdriver as per diagram.

## Step 18

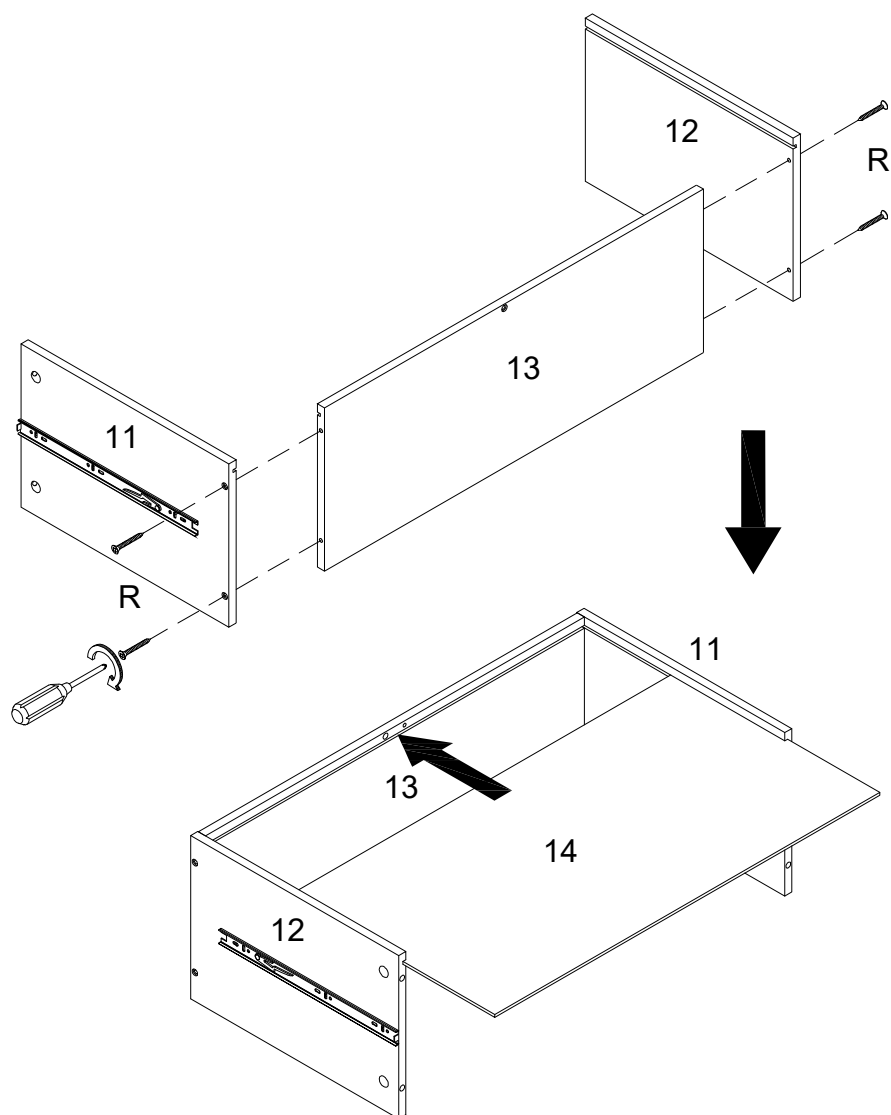

Using screw (R) attach parts (11,12) to part (13) with Philips head screwdriver ,then put part (14) as per diagram.


# Step 19

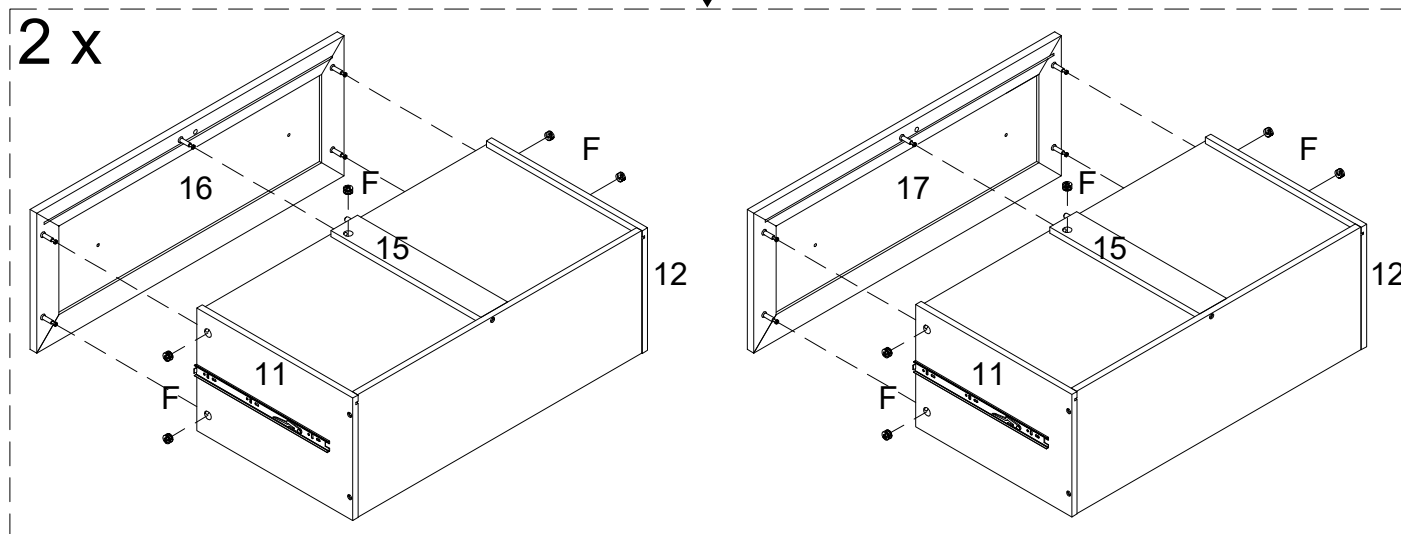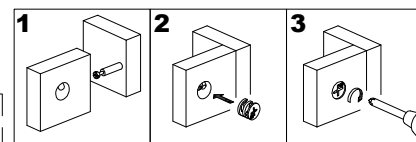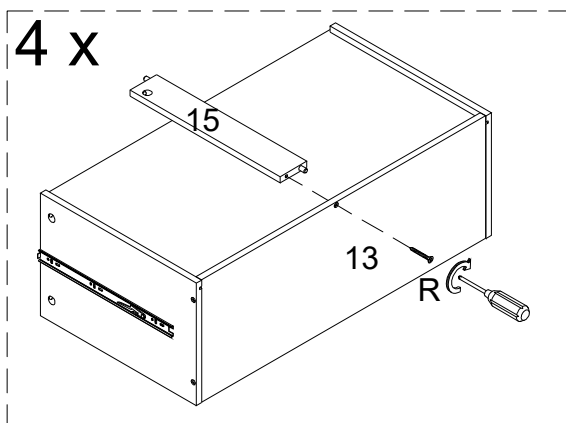

Using screw (R) attach part (15) to part (13) with Philips head screwdriver ,then using cam lock (F) secure parts (16,17) to parts (11,12) with Philips head screwdriver as per diagram.




# Step 20

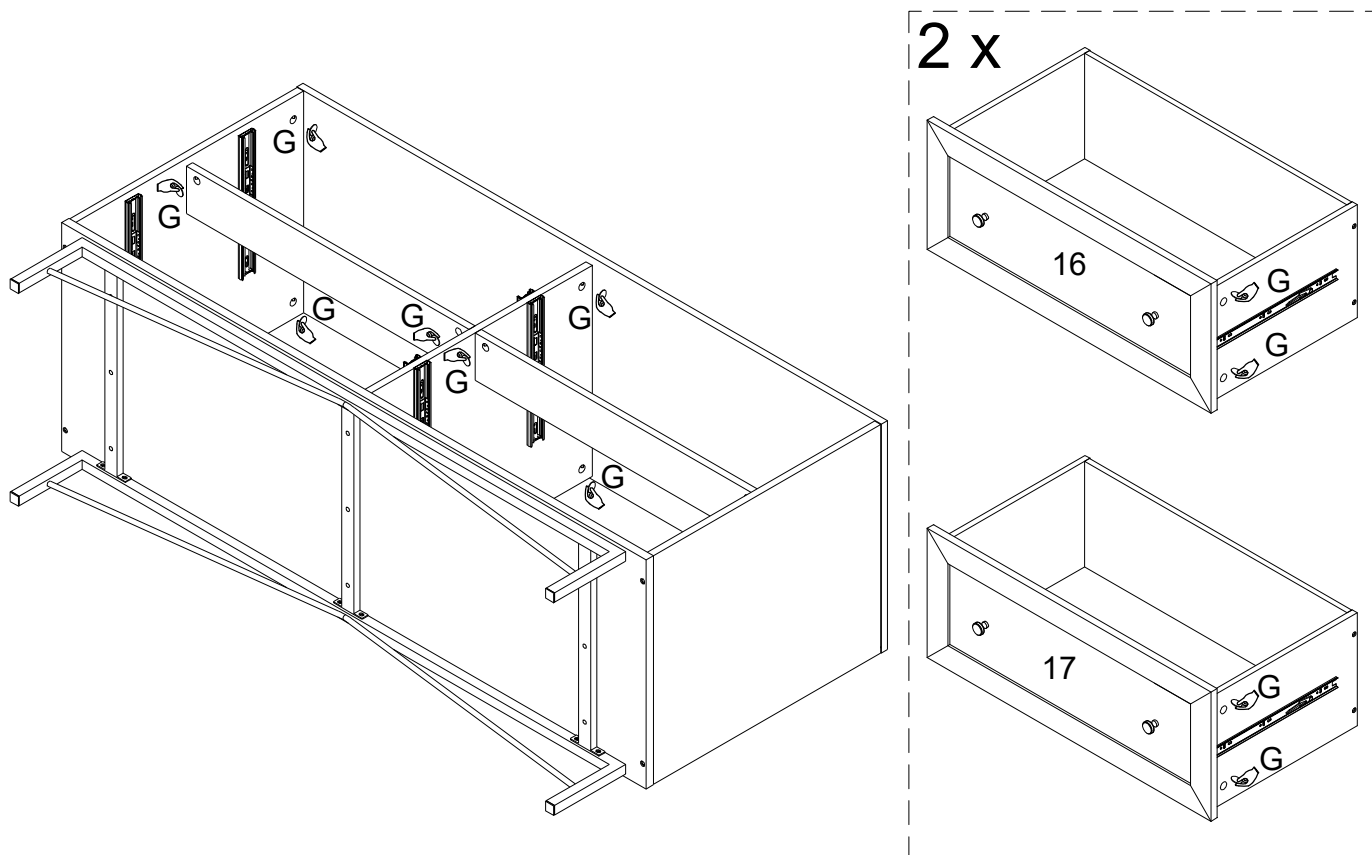


Place sticker (G) cover the holes as per diagram .

## Step 21

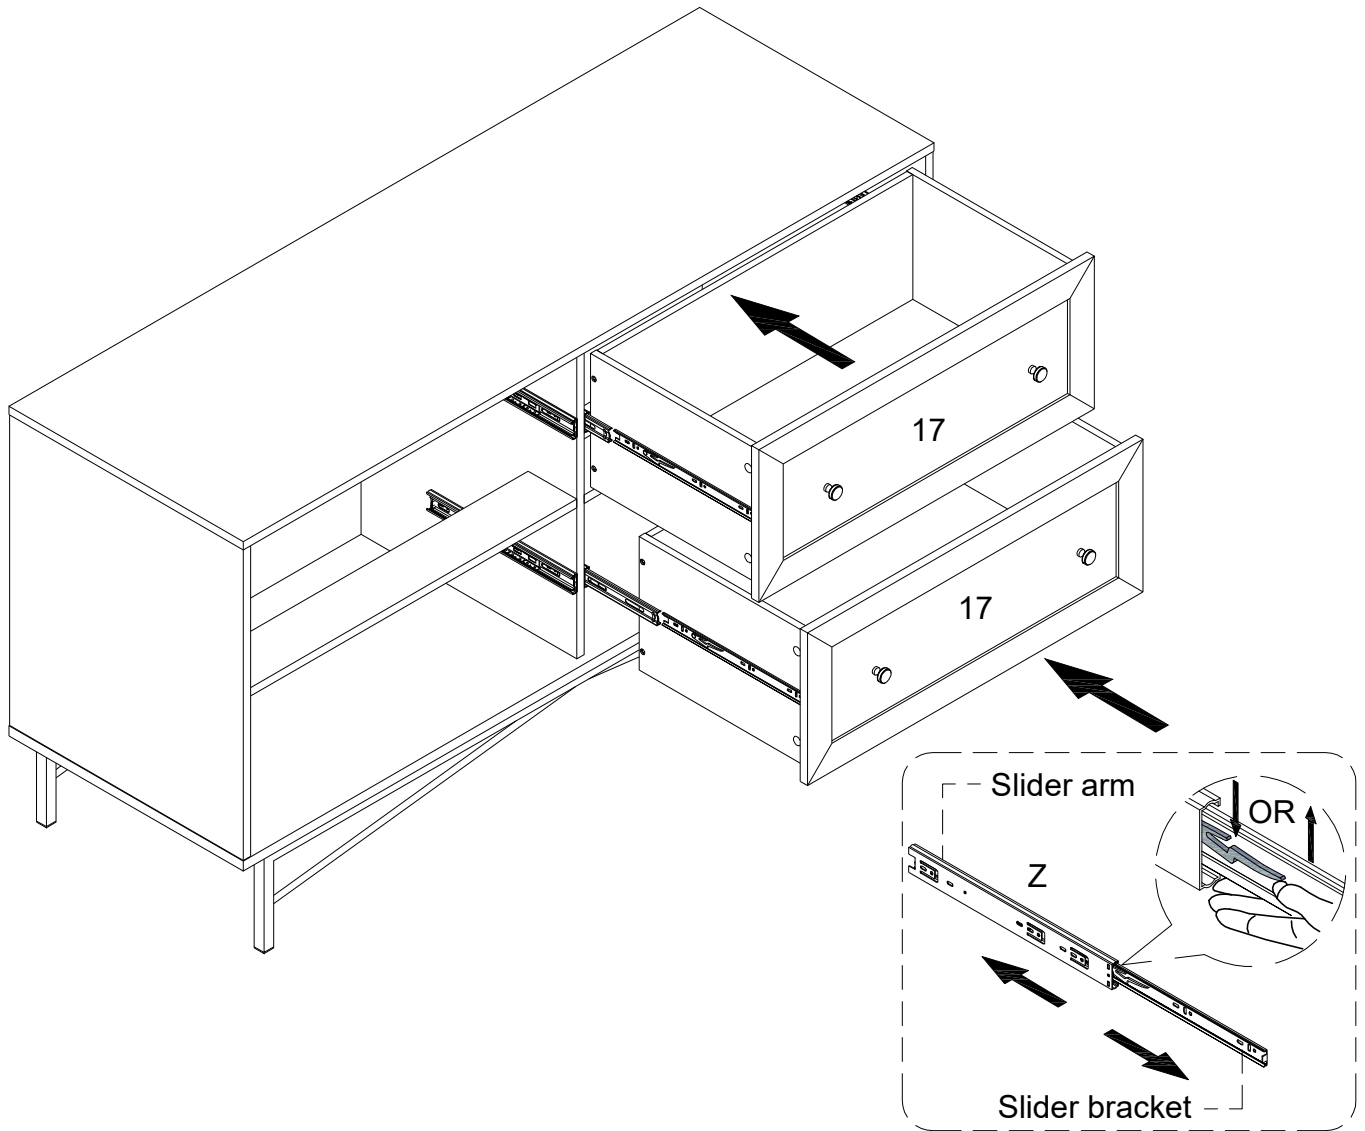


Insert the assembled drawers (17) into the unit frame, extend the Ball bearing drawer slider (Z) on the pedestal Side Panel all the way forward. Then align the Slide Runners on the assembled drawers with the Slide Tracks and push the drawer carefully inside until it stops. Note : if the drawer does not go in smoothly, please take it out and repeat the step. If you need to remove the drawer, please pull the drawer all the way out, press or lift the plastic release lever and pull out the drawer and then re-assembled the drawer until it was going in smoothly .

## Step 22

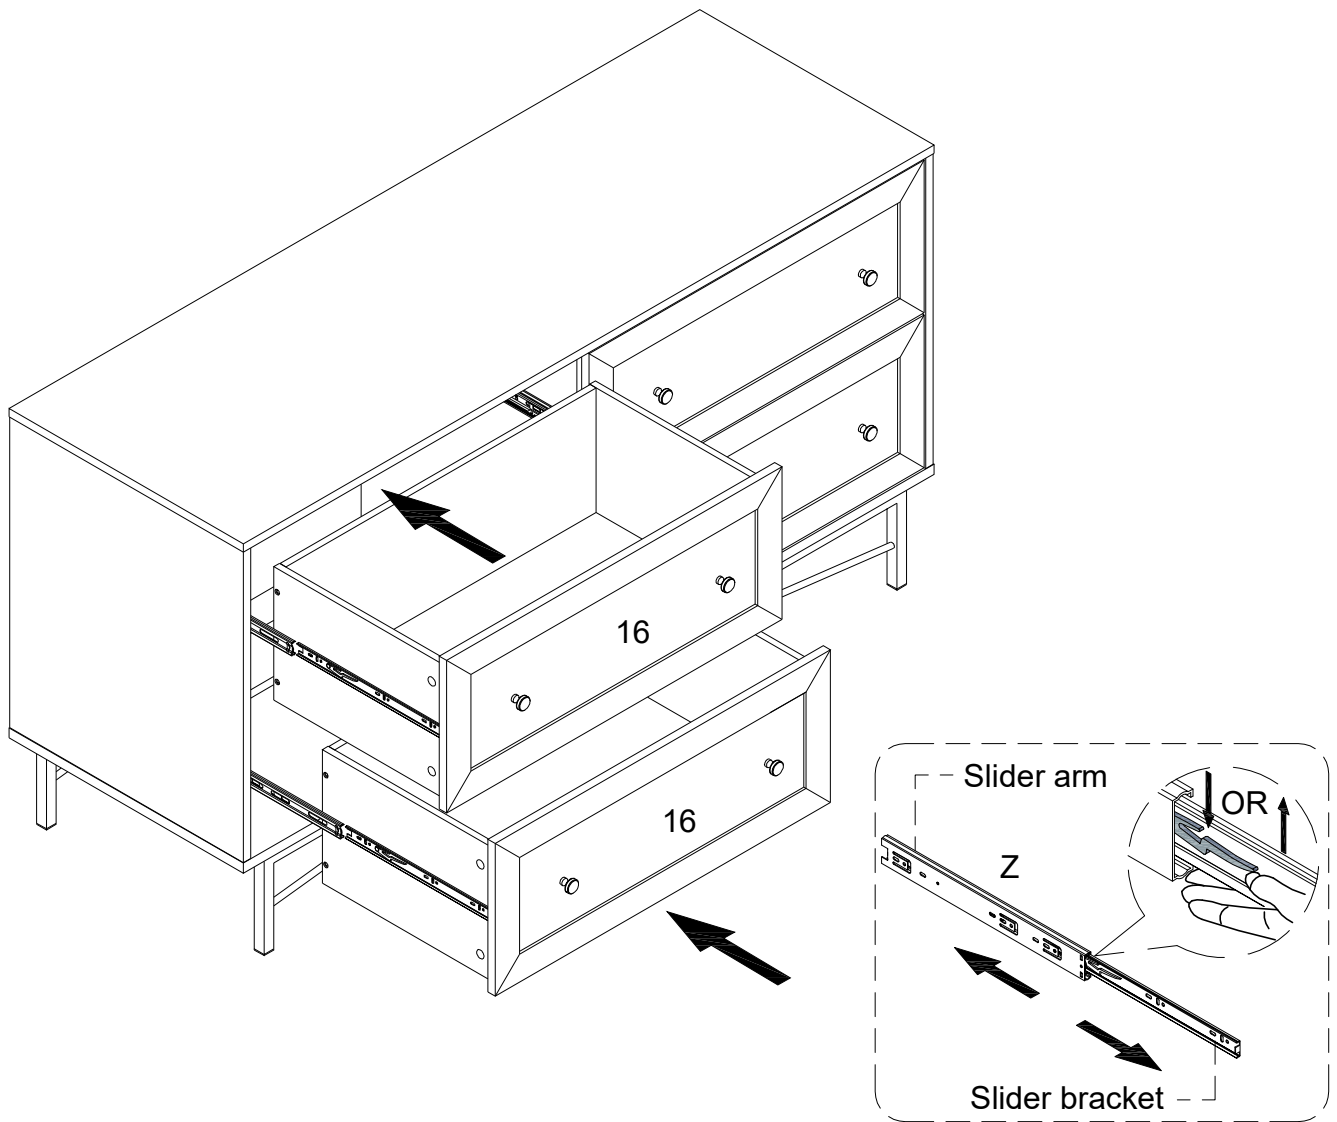

Insert the assembled drawers (16) into the unit frame, extend the Ball bearing drawer slider (Z) on the pedestal Side Panel all the way forward .Then align the Slide Runners on the assembled drawers with the Slide Tracks and push the drawer carefully inside until it stops. Note : if the drawer does not go in smoothly, please take it out and repeat the step. If you need to remove the drawer, please pull the drawer all the way out,press or lift the plastic release lever and pull out the drawer and then re-assembled the drawer until it was going in smoothly .


## Step 23

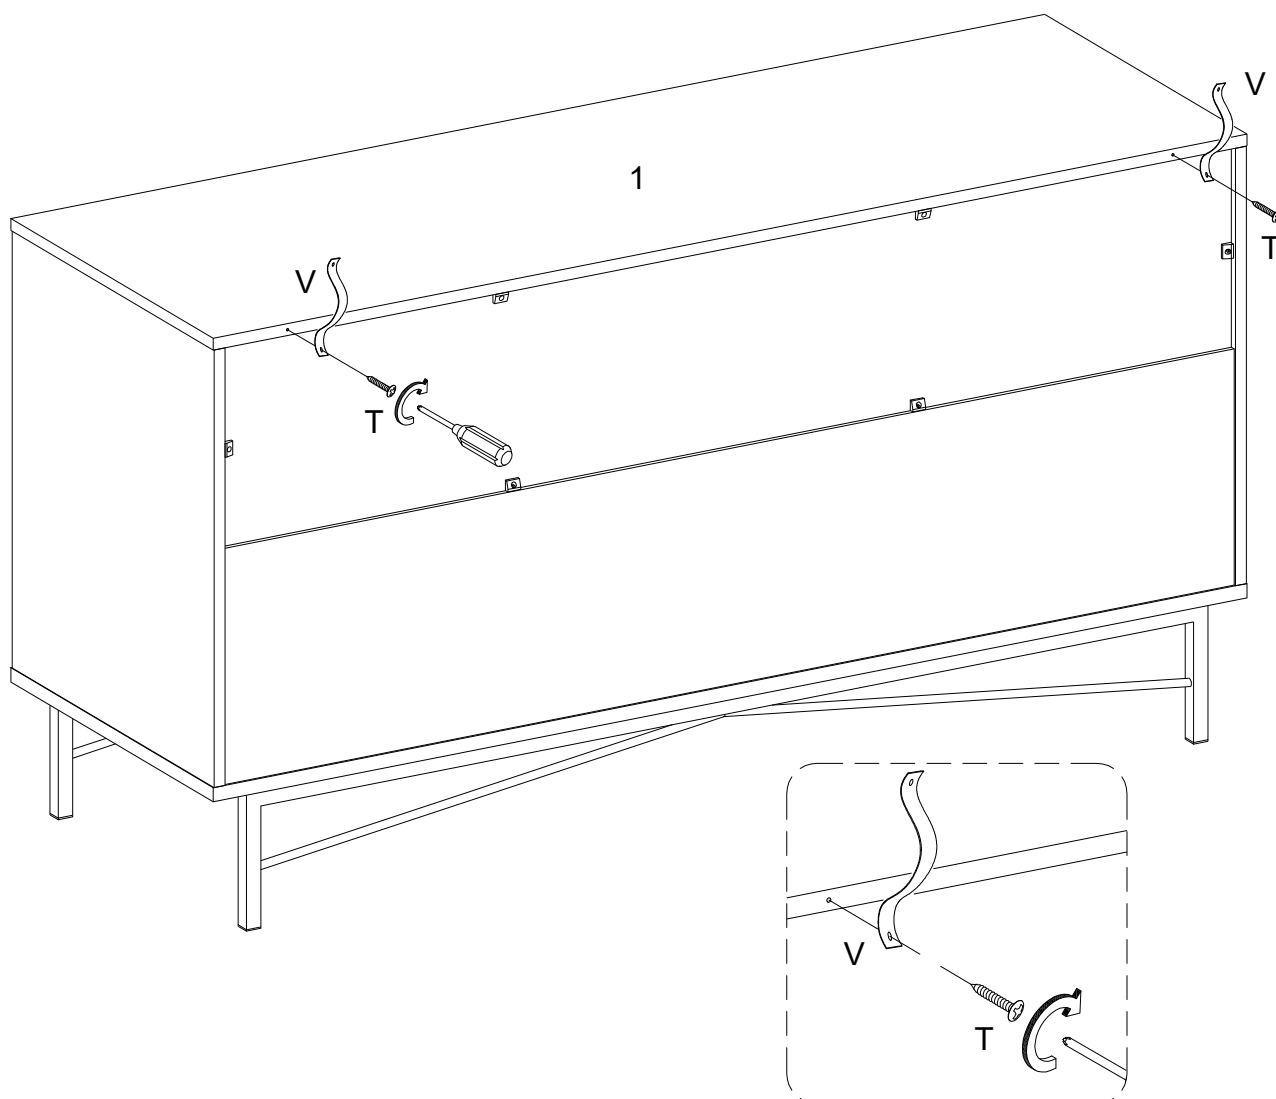

Using screw (T) attach plastic strap (V) into part (1) with Philips head screwdriver as per diagram.


## Step 24

### WARNING

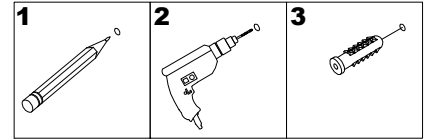


Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Wall

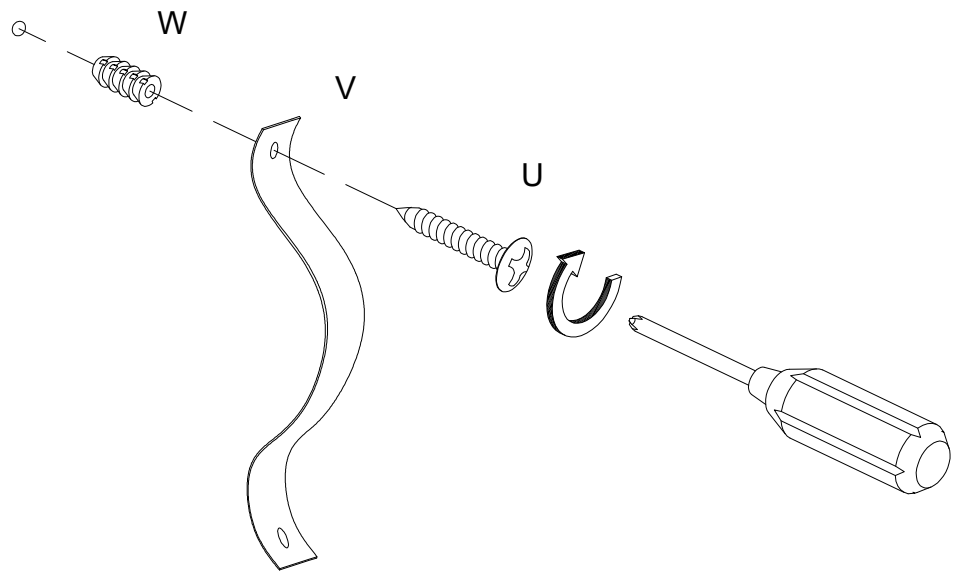

Using screw (U) attach plastic strap (V) into Nut (W) to wall with Philips head screwdriver as per diagram.

## Step 25

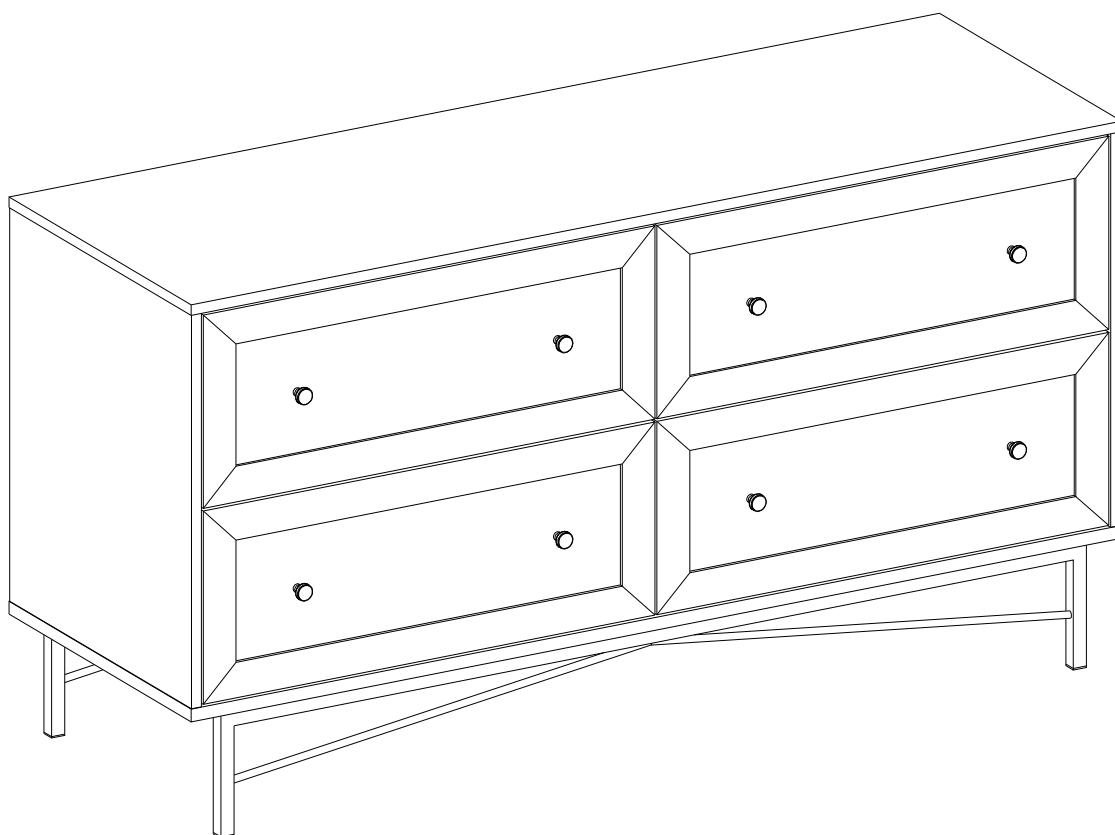

## Final Assembly