
american drew
•inspired design•

ASSEMBLY INSTRUCTIONS

Tel: 828-728-3261
www.americandrew.com

016-313 016-314

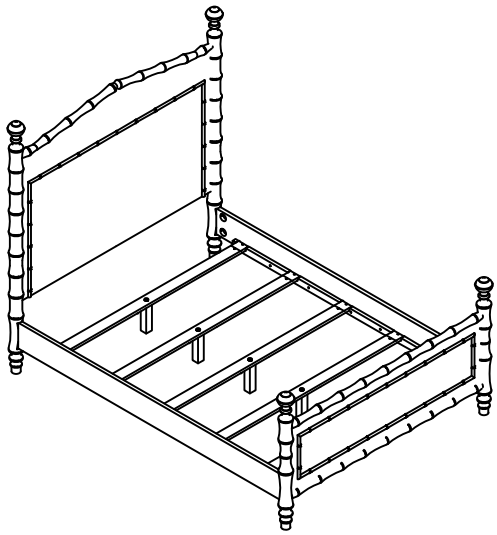

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Tighten the round ball to the headboard. (See Figure 1)
2. Tighten the round ball to the footboard. (See Figure 2)

Figure 1


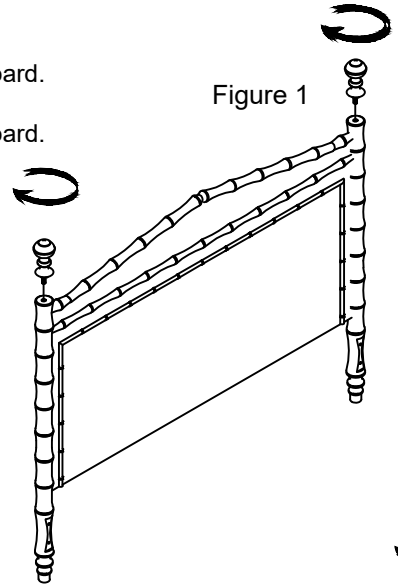


Figure 2

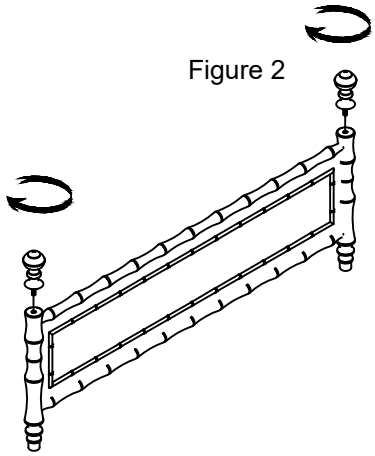

No.	Hardware List 2		Q'ty
A		Screw (#8*1-1/4")	10pcs
B		Thread Bolt (Ø5/16"*3-1/2")	8pcs
C		Curved Slotted Washer (Ø5/16"*12mm)	8pcs
D		Spanner Wrench (Ø12mm*160mmL)	1pc

Thank you for purchasing furniture from american drew!

american drew
•inspired design•

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS:

3. Attach the side rail into head panel and foot panel with Thread Bolt (B), Tighten the Curved Slotted Washer (C) with Spanner Wrench (D). (See Figure 3)
4. Tighten the center feet on each slats. (See Figure 4)
5. Attach slats to side rails with Screws (A). (See Figure 5)

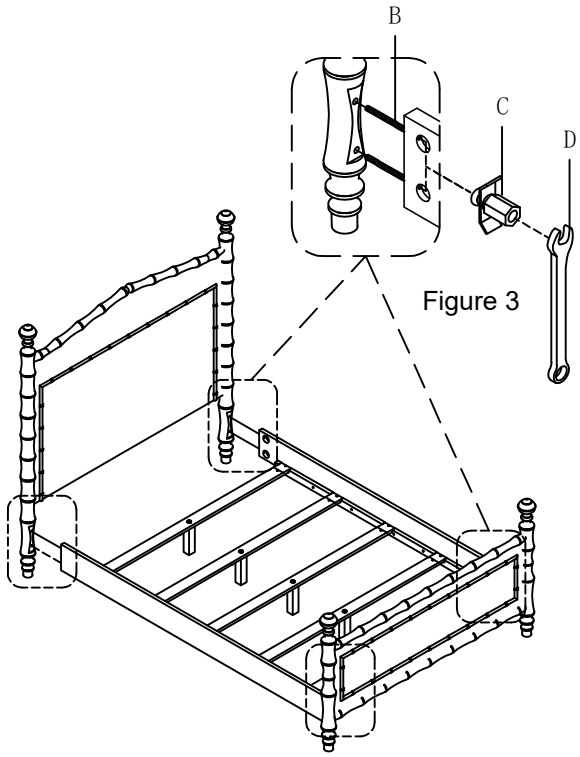
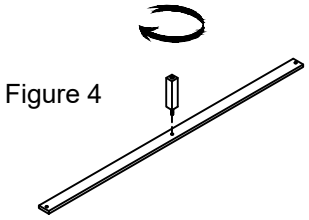


Figure 3


Figure 4

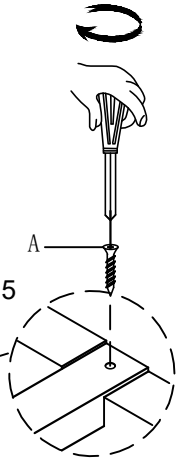


Figure 5

Thank you for purchasing furniture from american drew!