
KINCAID®

SOLID WOOD SINCE 1946

www.kincaidfurniture.com
phone :828-728-3261.

ASSEMBLY INSTRUCTION


161-304 5/0 Allenby Panel Bed Headboard
161-306 6/6 Allenby Panel Bed Headboard

HARDWARE LIST				
A		Threaded Bolt	Ø5/16"*4"	2PCS
B		Curved Washer Nut	Ø5/16"	2 PCS
C		Spanner Wrench	12MM	1 PC
D		Bolt	Ø5/16"*1-3/4"	10 PCS
E		Lock Washer	Ø5/16"	10 PCS
F		Flat Washer	Ø5/16"*19D	10 PCS
G		Allen Key	100*50*4mm	1 PC

PART LIST		
1	Headboard	1 PC
2	Left Leg	1 PC
3	Right Leg	1 PC
4	Stretcher	1 PC


IMPORTANT NOTES

. Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
. Check to be sure that you have all parts and hardware.
. Remove all wrapping materials,including staples and packing straps before you start to assemble.
. Do not tighten all screws and bolts until completely assembled.
. Keep all hardware out of the reach of children

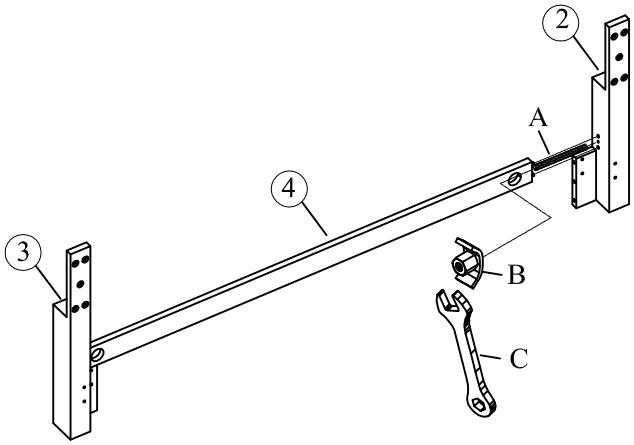

STEP 1. Insert the two threaded bolt (A) into the headboard leg left (2) and right (3). Tighten by hand only.

STEP 2. Insert the stretcher (4) into the threaded bolts protruding from the headboard leg (2), (3) use dowel as guide. Attach curved washer nuts (B) onto the threads and secure by hand at first. Tighten evenly by the spanner wrench (C).

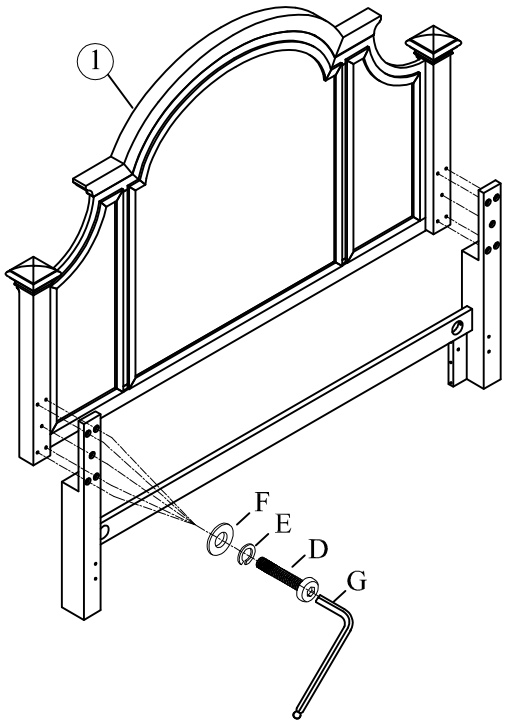

STEP 3. Attach the headboard panel (1) to headboard leg (2),(3)with lock washer (E), flat washer (F) and bolt (D). Six pieces per leg. Tighten the bolts using allen wrench (G).

MADE IN VIETNAM