

MODERN CURVEBACK ADIRONDACK DINING CHAIR

THANK YOU!

We appreciate you for choosing WestinTrends!

Thank you for letting WestinTrends continue to offer accessible luxury trends, inspired by everyone!

JOIN THE WESTINTRENDS COMMUNITY

Sign up here:

https://westintrends.com/welcome



OUESTIONS OR COMMENTS?

If you have questions reach out to cs@westintrends.com

FOLLOW, SHARE, & LEARN













PRODUCT REGISTRATION

https://westintrends.com/apps/product-registration



(!) NOTICE

Do not overtighten screws. (Insert all screws before tightening screws.)


- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open fame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- When using an electric drill, please adjust its speed slowly to avoid screw slippage.




HARDWARE




PARTS

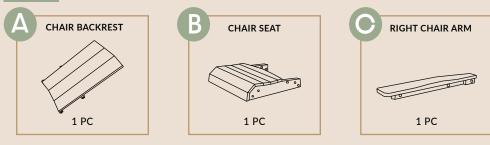

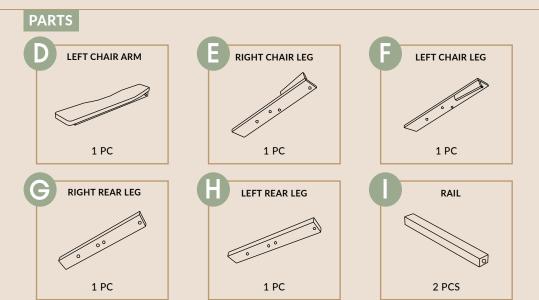

PRODUCT ASSEMBLY - OVERALL VIEW

Look at the overall view of this chair and learn the exact position of each part to be assembled.

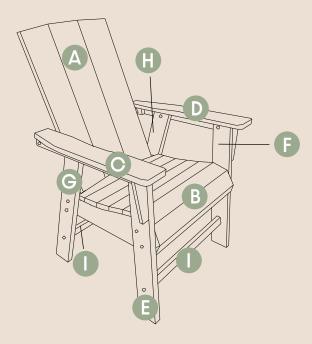


PRODUCT ASSEMBLY



Place Part A Chair Backrest and Part B Chair Seat as below. Attach Part H Left Rear Leg to Part B Chair Seat and Part A Chair Backrest with 1 pc of Hardware #1 Screw.


Do not tighten screws too much at this stage.

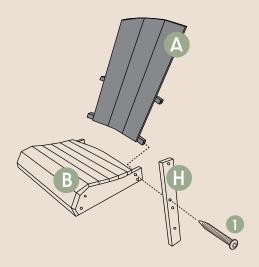

2

Attach Part H Left Rear Leg to Part B Chair Seat with 1 set of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut.

Attach Part I Back Rail to Part H Left Rear Leg with 1 pc of Hardware #3 Bolt.

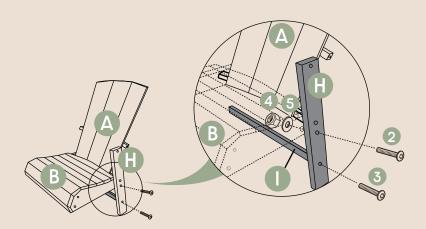


PRODUCT ASSEMBLY



Attach Part F Left Chair Leg to Part B Chair Seat with 2 sets of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut.


Attach Part I Front Rail to Part F Left Chair Leg with 1 pc of Hardware #3 Bolt.

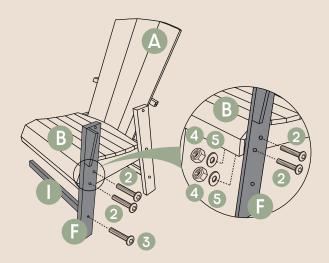



Do the same to attach Part E Right Chair Leg and Part G Right Rear Leg to Part A Chair Backrest and Part B Chair Seat with 3 sets of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut as well as 1 pc of Hardware #1 Screw.

Attach Part E Right Chair Leg and Part G Right Rear Leg to Part I Rails with 2 pcs of Hardware #3 Bolt.

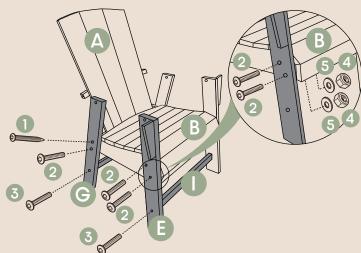




Attach Part D Left Chair Arm to Part A Chair Backrest with 1 pc of Hardware #1 Screw.


Attach Part D Left Chair Arm to Part F Left Chair Leg and Part H Left Rear Leg with 2 sets of Hardware #2 Bolt, Hardware #5 Washer and Hardware #4 Nut.

Do the same to attach Part C Right Chair Arm to the chair to finish the assembly.

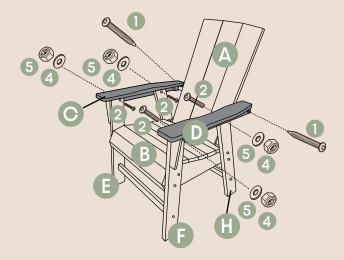



Tighten all the bolts and screws again to ensure this chair is steady enough to use.

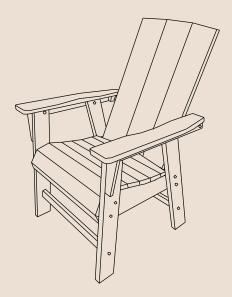

REGISTRATION & REFUND POLICY

https://westintrends.com/apps/product-registration



https://westintrends.com/policies/refund-policy



HAVING TROUBLE

• Not sure how to assemble or missing pieces?
Please contact our Customer Service Team for assistance at cs@westintrends.com

Have Order #, Part # or SKU ready to speed up customer service!

CLEANING TIPS

REGULAR CLEAN: Use a mixture of warm water and mild soap. Gently scrub the surface with a soft bristle brush to remove any dirt or stains.

QUICK CLEAN: You can simply wipe down the HDPE furniture with a damp cloth. The material's resilience makes it resistant to most spills and stains, ensuring a hassle-free maintenance routine.

Regular cleaning not only preserves the aesthetic appeal of your furniture but also helps extend its lifespan.

Pressure washer can be used for seriously deep-cleaning - DO NOT exceed 1500 PSI - this will remove any debris and dirt.