





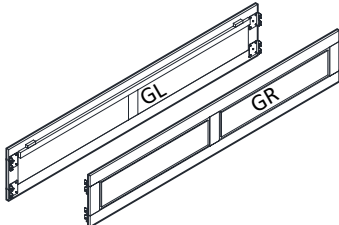
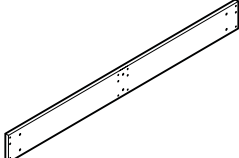














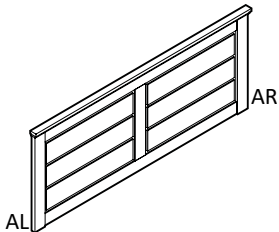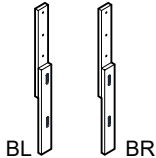


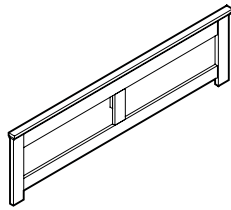

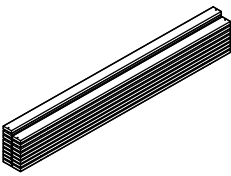



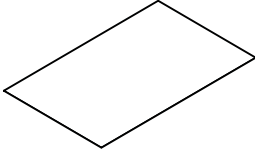
# ASSEMBLY INSTRUCTION

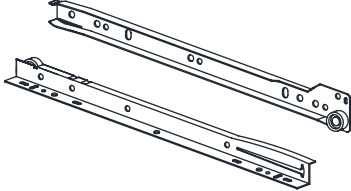QUEEN BED  
EASTERN KING BED

<b>A</b> Headboard  1pc	<b>B</b> Headboard Post  2pcs	<b>C</b> Footboard  1pc
<b>D</b> Slat  1set (13pcs)	<b>E</b> Slat Center Rail  1pc	<b>F</b> Slat Support Leg  4pcs
<b>G</b> Side Rail  2pcs	<b>H</b> Drawer Back Support  1pc	<b>I</b> Drawer Side Support  4pcs
<b>J</b> Drawer Front  2pcs	<b>K</b> Left Drawer Side  2pcs	<b>L</b> Right Drawer Side  2pcs
<b>M</b> Drawer Back  2pcs	<b>N</b> Drawer Bottom  2pcs	<b>O</b> Drawer Bottom Support  2pcs
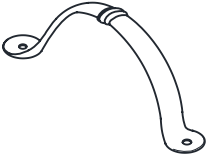
<b>P</b> Drawer Support Leg  3pcs	<b>Q</b> Dust Cover  1pc	<b>R</b> Cam Bolt 6.5mm x 35mm  24pcs
<b>S</b> Cam Lock 15mm x 12mm  24pcs	<b>T</b> Dowel Ø8 x 25mm  16pcs	<b>U</b> JCBC Bolt M6 x 30mm  7pcs
<b>V</b> JCBC Bolt M6 x 50mm  4pcs	<b>W</b> Drawer Slide 350mm  2pcs	<b>X</b> JCBB Bolt M8 x 20mm  16pcs
<b>Y</b> JCBB Bolt M8 x 40mm  6pcs	<b>Z</b> Spring Washer M8  6pcs	<b>AA</b> Flat Washer M8  6pcs
<b>AB</b> Handle  2pcs	<b>AC</b> PH M4 x 20mm  4pcs	<b>AD</b> CBS M3.5 x 16mm  28 pcs

**AE** CBS  
M4 x 38mm




8pcs

**AF** CBS  
M4 x 30mm




26pcs

**AG** Allen Key  
M4

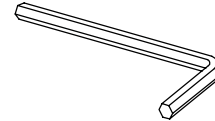


1pc

**AH** Allen Key  
M5

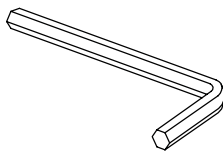


1pc

**AI** Adjustable Glider  
M6 (Ø23)

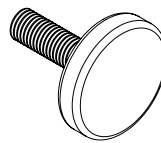


4pcs

**AJ** Adjustable Glider  
M6 (Ø16)

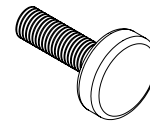

3pcs

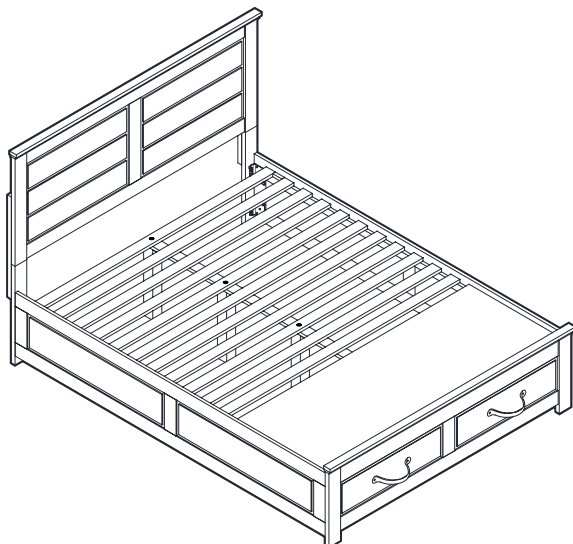


These pages lists all the content included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**IMPORTANT NOTE :**


1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

**1**

- (i) Attach Adjustable Glider (AI) to Slat Support Leg (F) and Adjustable Glider (AJ) to Drawer Support Leg (P).
- (ii) Attach Cam Bolt (R) to Drawer Back Support (H) holes as image below and tighten with screwdriver (not provided).

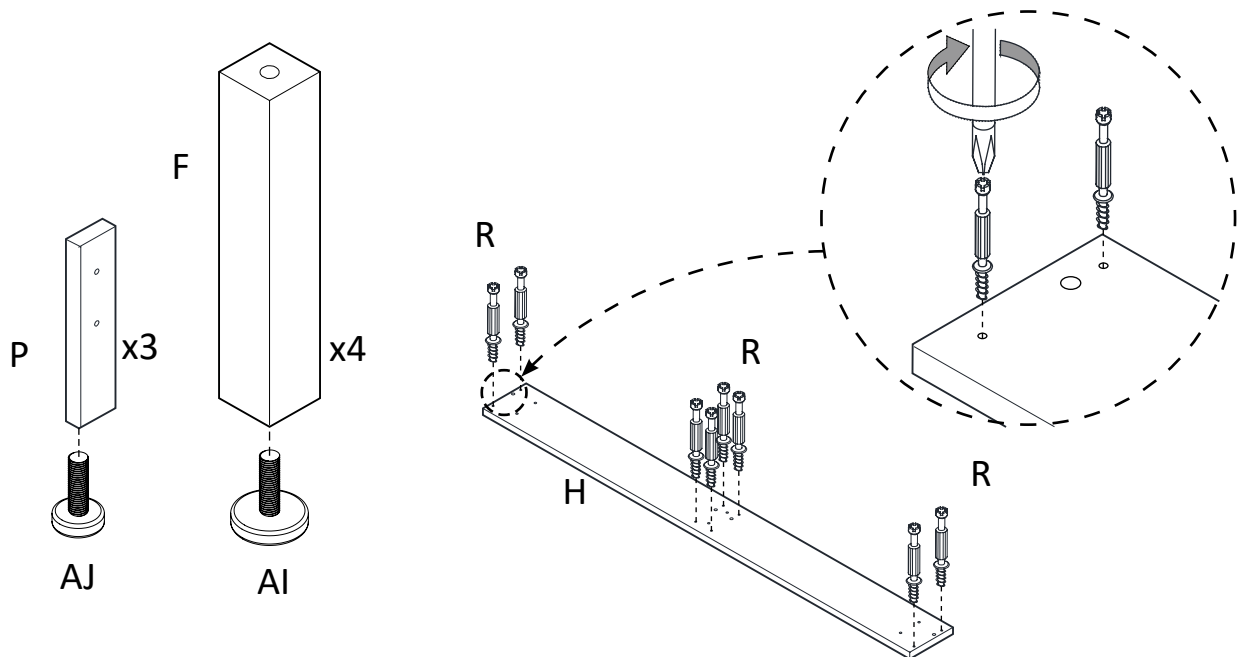
**2**

- Attach Cam Bolt (R) to Footboard (C) holes as image below and tighten with screwdriver (not provided).

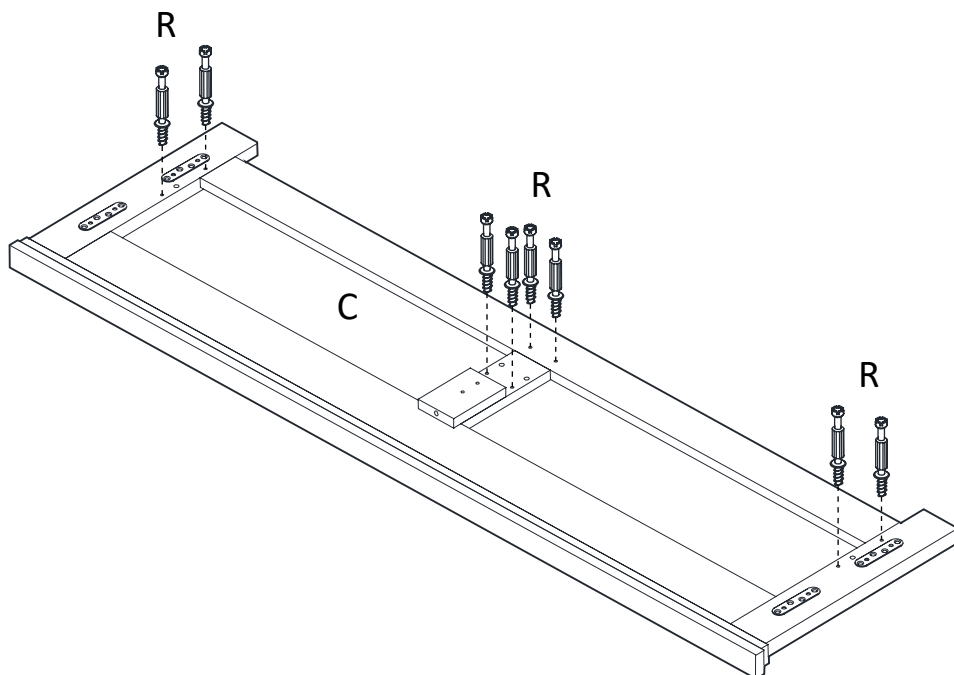


# 3

- (i) Attach Drawer Support Leg (P) to Drawer Back Support (H) and insert JCBC (U) to the holes and tighten using Allen Key (AG).
- (ii) Insert Cam Lock (S) and Dowel (T) to Drawer Side Support L & R (I) holes.

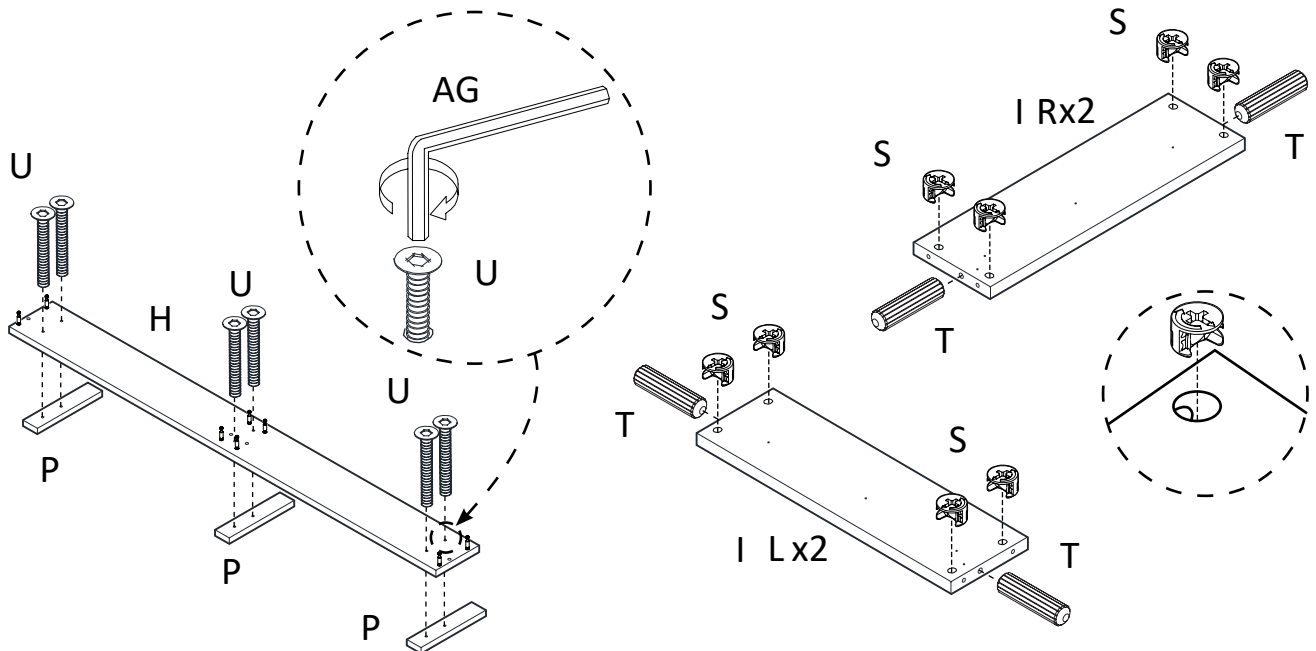


# 4

- (i) Attach Cam Bolt (R) to Drawer Front (J) holes.
- (ii) Attach Drawer Slide (W) to Drawer Side Support L & R (I) and insert CBS (AD) to the holes and tighten.

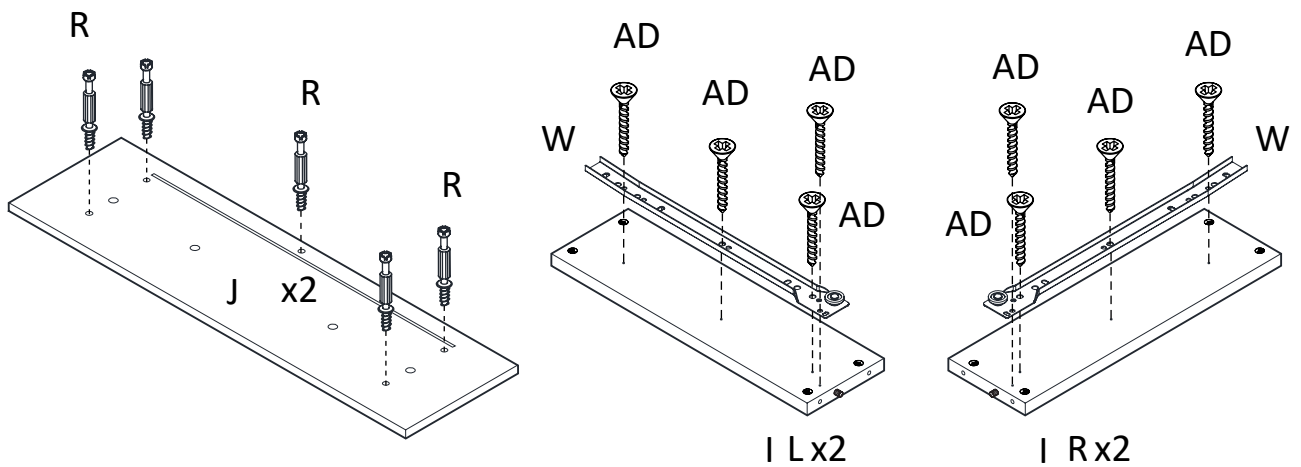


**5**

- (i) Insert Cam Lock (S) to the holes of Left Drawer Side (K), Right Drawer Side (L) and Drawer Bottom Support (O) properly.
- (ii) Attach Drawer Slider (W) to Left Drawer Side (K) and Right Drawer Side (L) and insert CBS (AD) to the holes and tighten.
- (iii) Attach Cam Bolt (R) to Drawer Back (M) holes as image below and tighten with screwdriver (not provided).

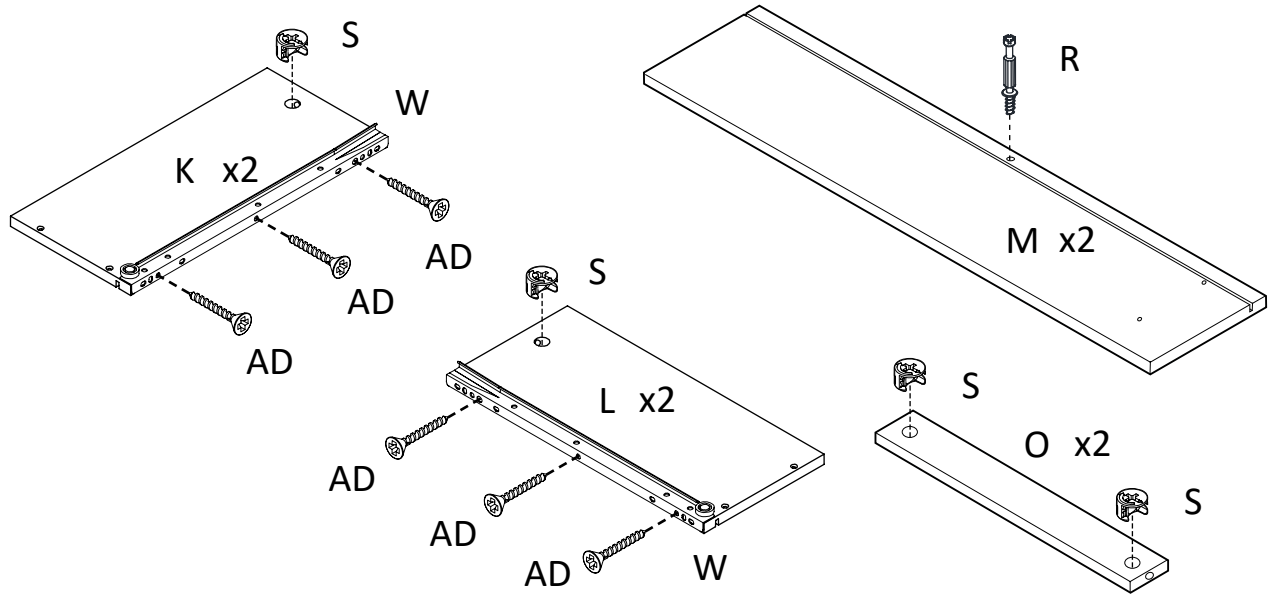
**6**

- (i) Turn the Headboard Panel (A) upside down and place it on a piece of cloth to prevent from scratching.
- (ii) Attach Headboard Post (B) to the Headboard Panel (A) with right pair (AL=BL, AR=BR).
- (iii) Insert JCB (Y), Spring Washer (Z) and Flat Washer (AA) to the holes and tighten using Allen Key (AH).

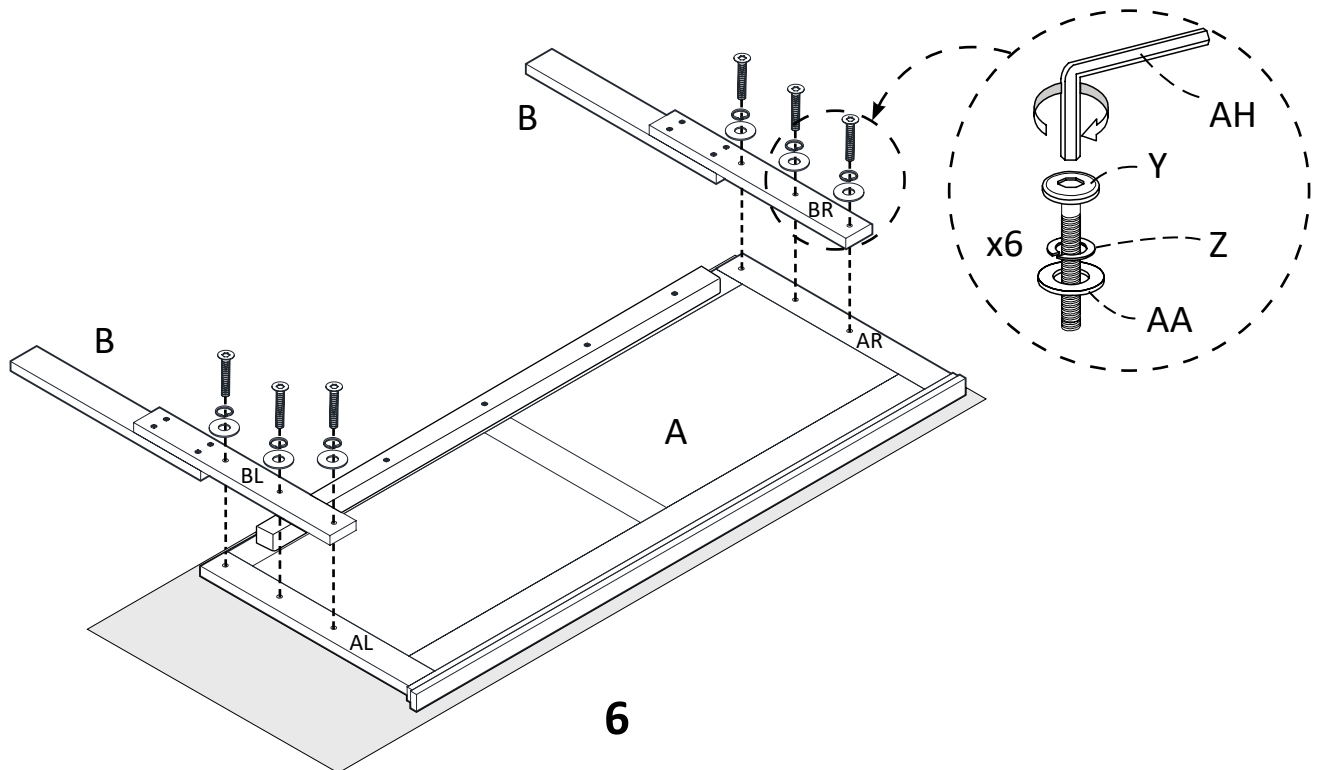


7

- (i) Attach Side Rail L&R (G) to Headboard (A) and Footboard (C) by inserting JCBB (X) loosely into provided holes.
- (ii) Hook Side Rail's brackets on as shown and tighten all bolts using Allen Key (AH).

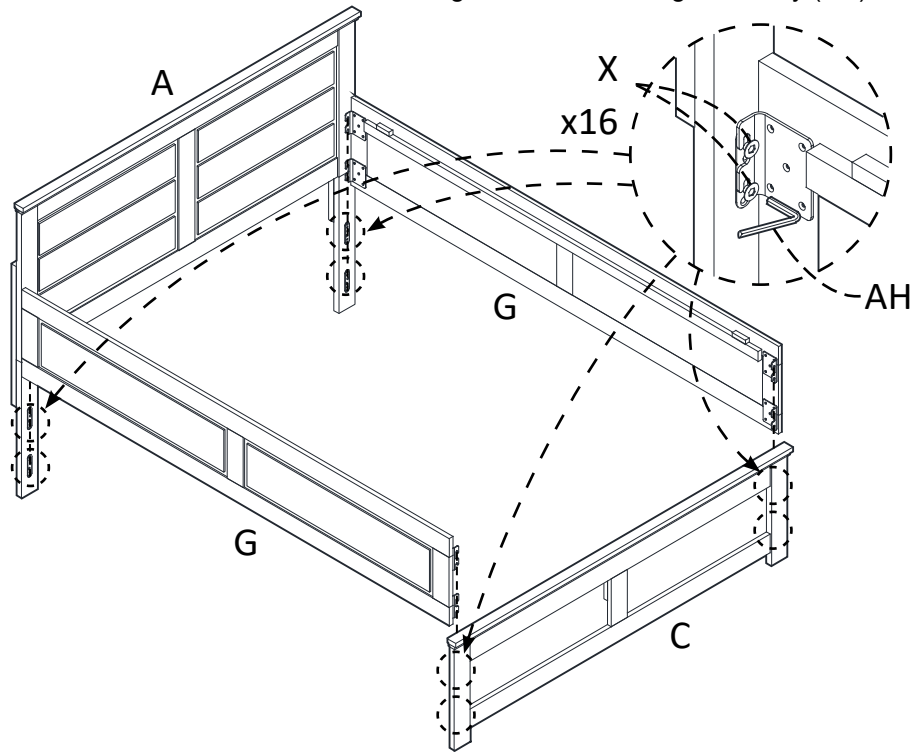


8

- Attach Drawer Back Support (H) with Drawer Support Leg (P) to Drawer Side Support L&R (I) with right face and tighten.

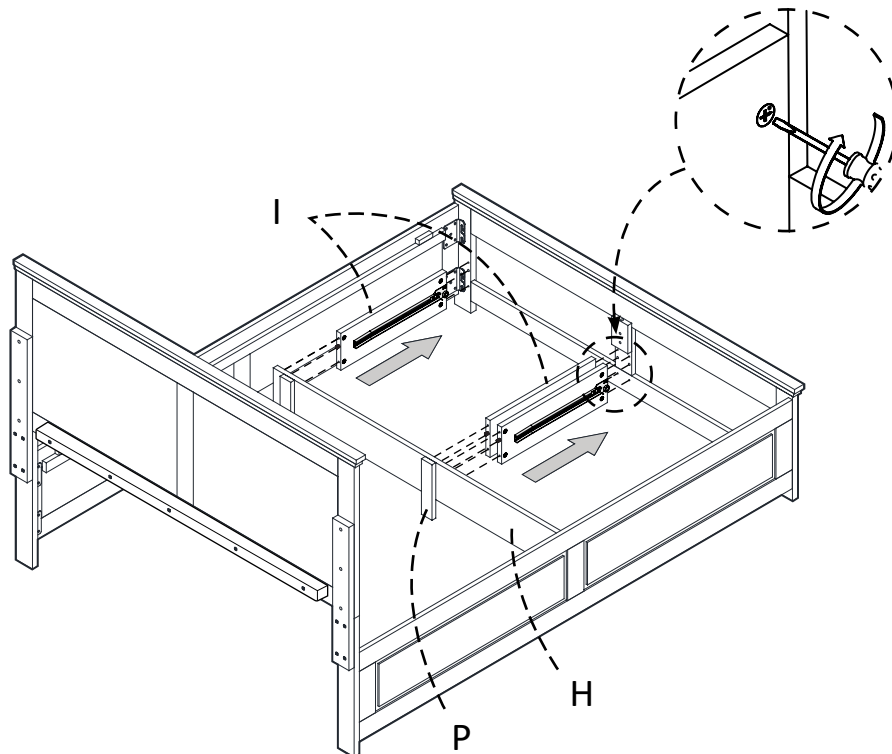


9

- (i) Spread the Slat (D) with bottom facing up. Place Slat Center Rail (E) and Slat Support Leg (F) on top of Slat (D).
- (ii) Please notice on FACING HEADBOARD sticker on Slat (D) to match on Slat Center Rail (E).
- (iii) From bottom of Slat (D) insert JCBC (V) to the holes and tighten using Allen Key (AG).

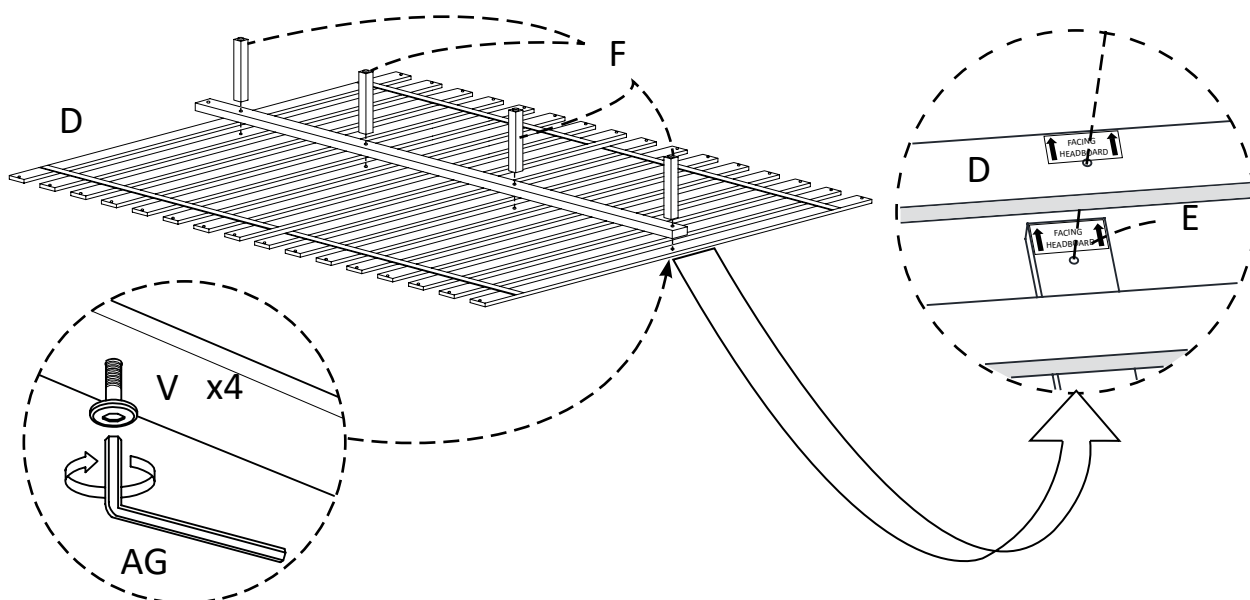

10


- (i) Attach Slats with Legs to top of Queen Bed / King Bed properly and insert JCBC (U) to the holes and tighten using Allen Key (AG).
- (ii) Tighten the Slat (D) with CBS (AF) using screwdriver (not provided).

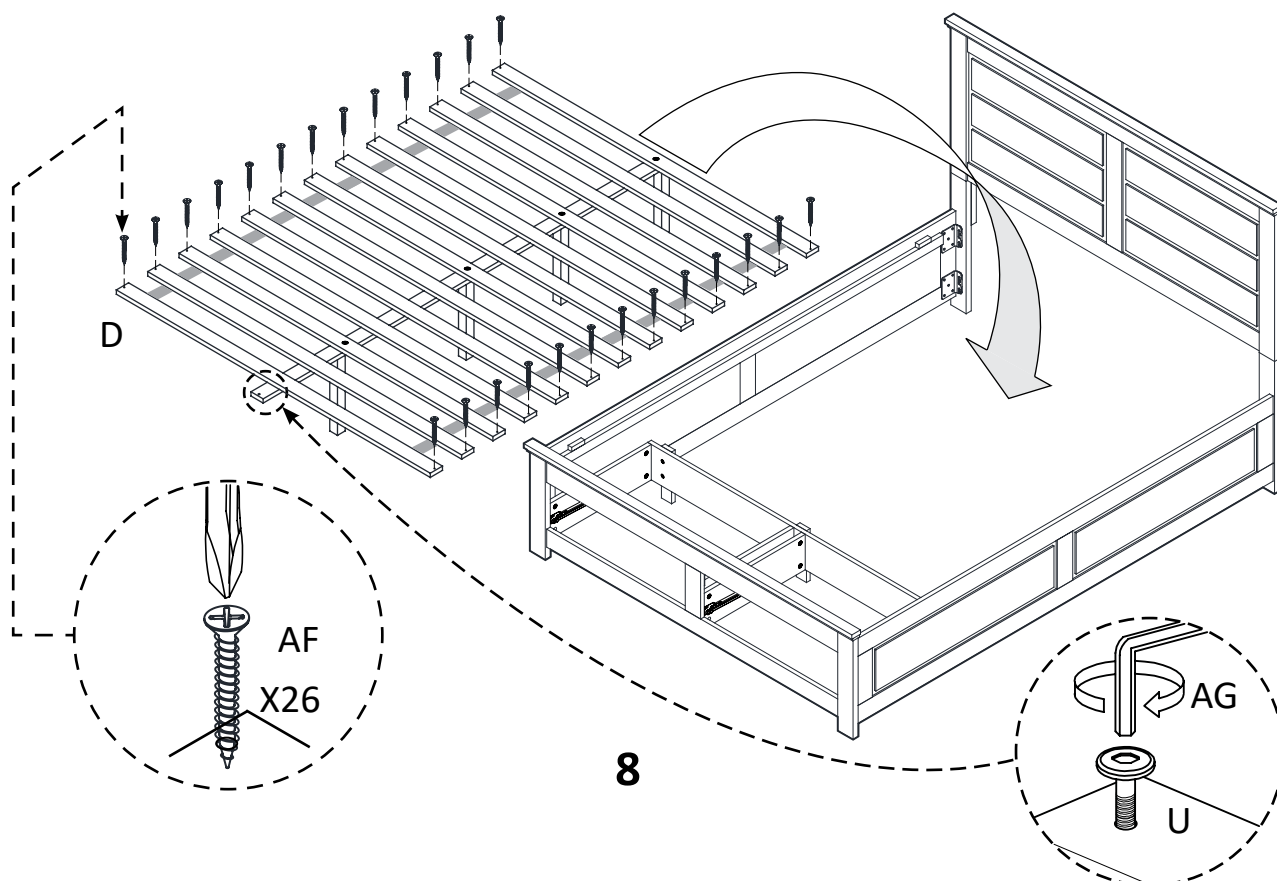




**11**

Attach Left Drawer Side (K) and Right Drawer Side (L) to Drawer Front (J) and fully tighten.

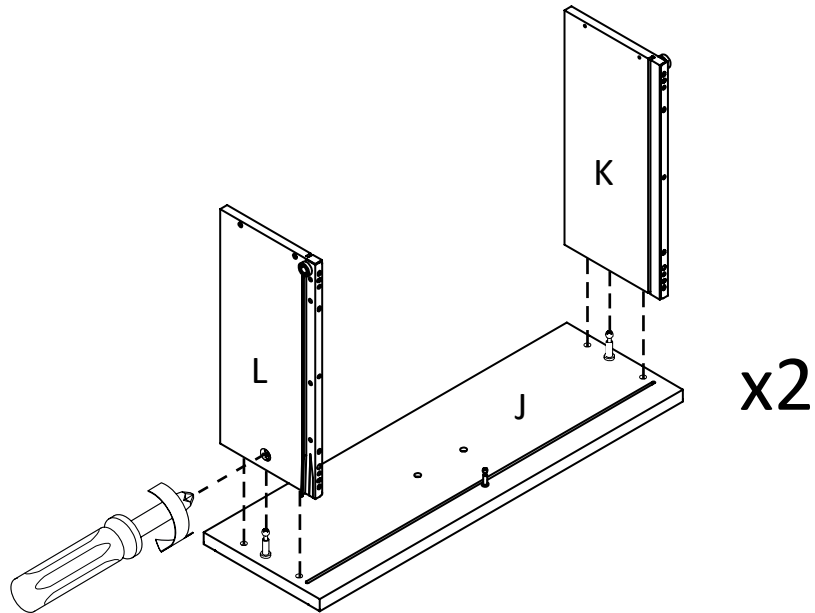
**12**

Attach Drawer Bottom Support (O) to Drawer Front (J) and fully tighten.

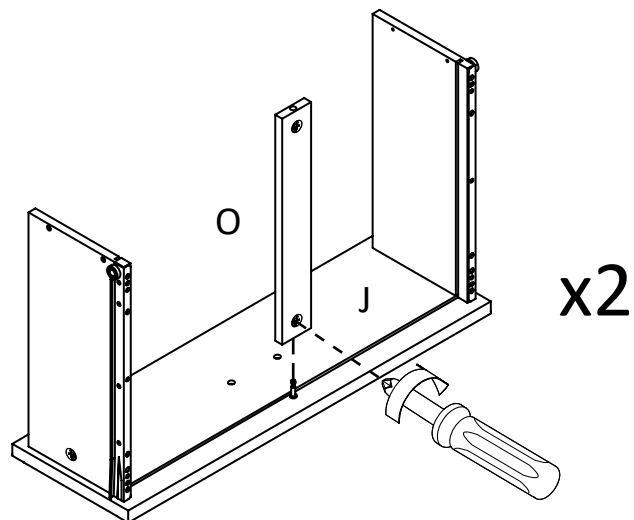


**13**

Slide in Drawer Bottom (N) to Left Drawer Side (K) and Right Drawer Side (L) groove.

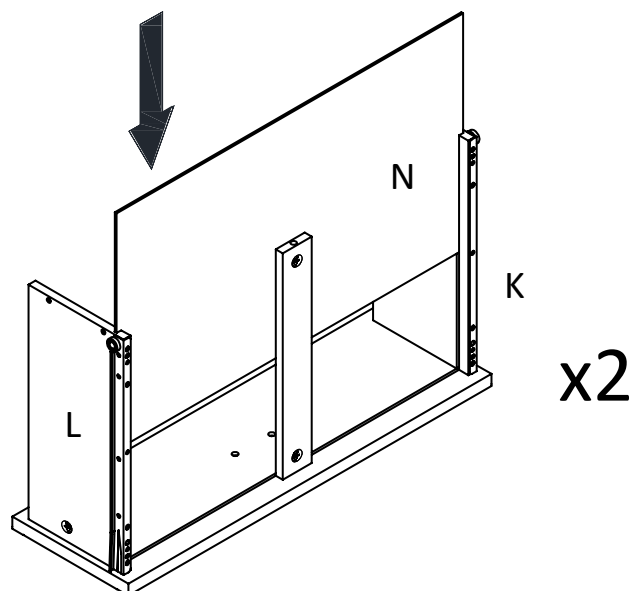
**14**

- (i) Attach Drawer Back (M) to Left Drawer Side (K) and Left Drawer Side (L) and insert CBS (AE) to the holes and fully tighten.
- (ii) Lock Drawer Bottom Support (O) tightly.

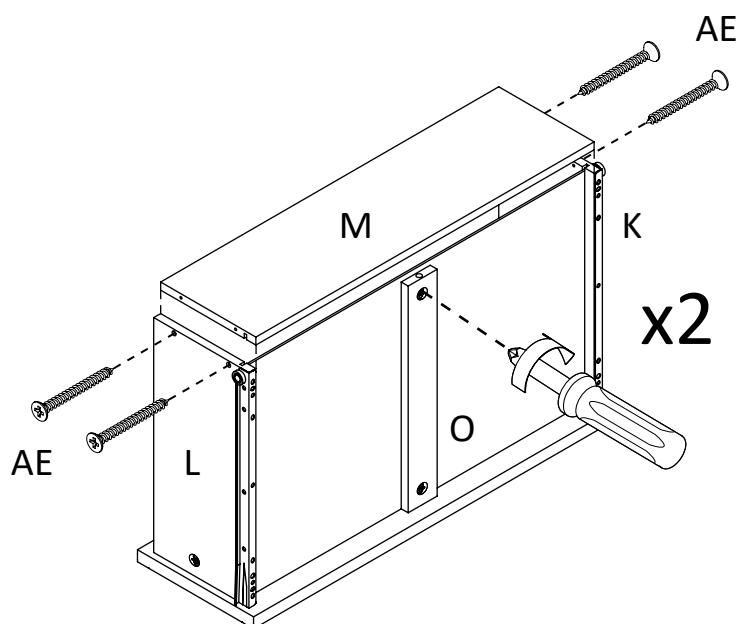


**15**

Attach Handle (AB) to Drawer Front (J) and insert PH (AC) to holes and tighten.

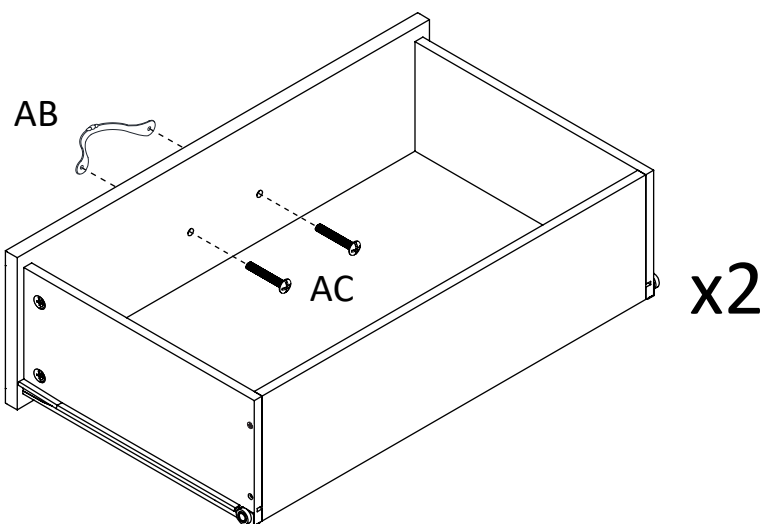

**16**


Slide in Drawer Box Sets properly as image below.

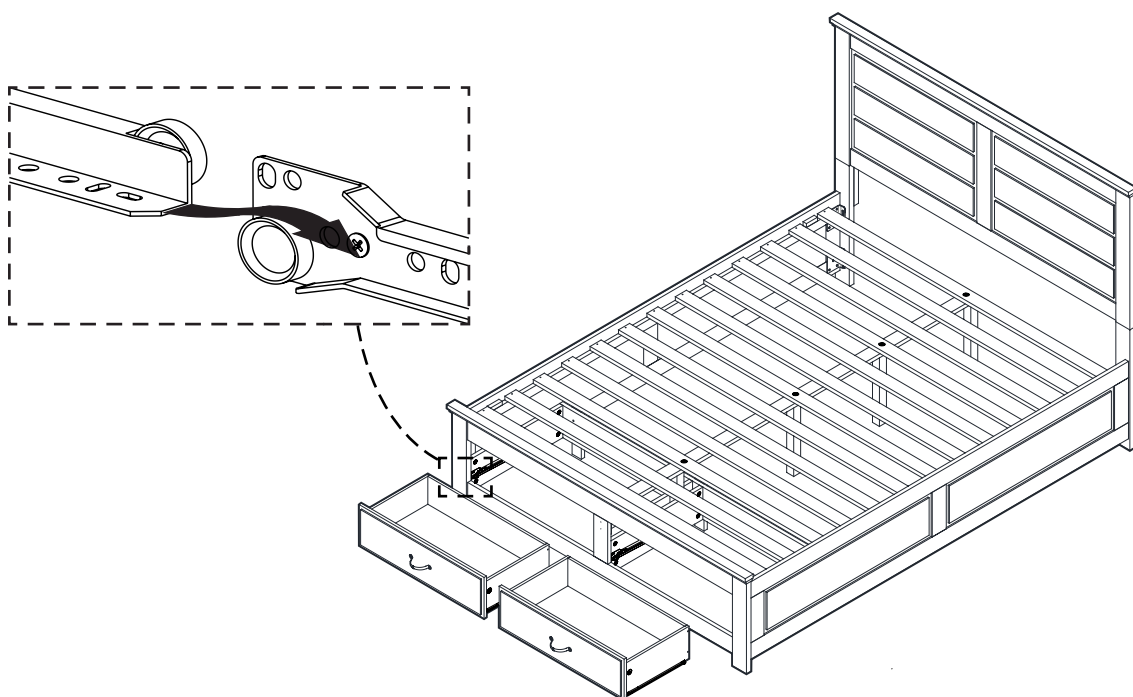

**11**

**17**

Attach Dust Cover (Q) and CBS (AD) to the top of Slats and Drawer area and fully tighten.

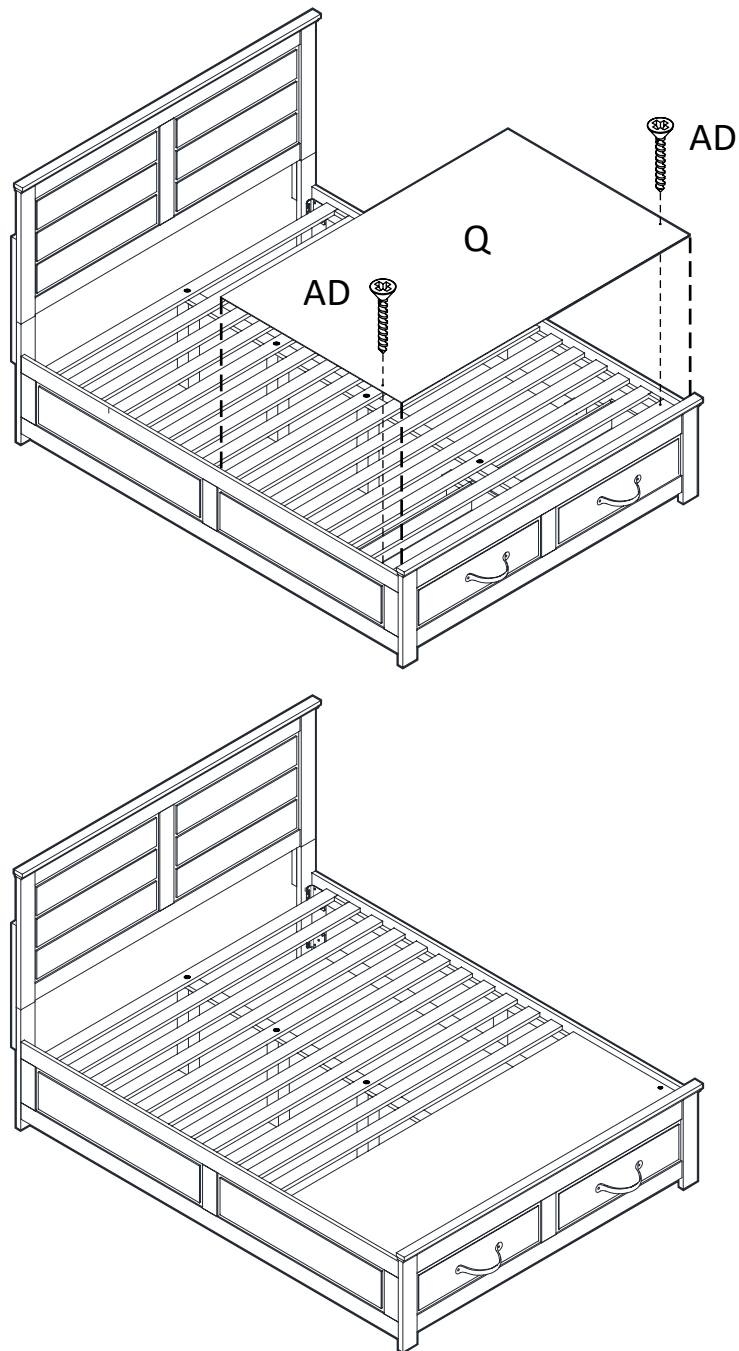

---

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.