

Pedestal Installation Instructions

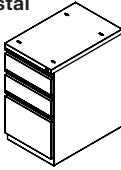

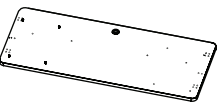
Tools Required for Assembly

- Power Drill with Phillips Bit

Important

Read all instructions, review illustrations and identify all parts prior to assembly.

Required Components

Pedestal  x 1	7/8" Screws  x 4	Worksurface (Sold Separately)  x 1
--	--	---

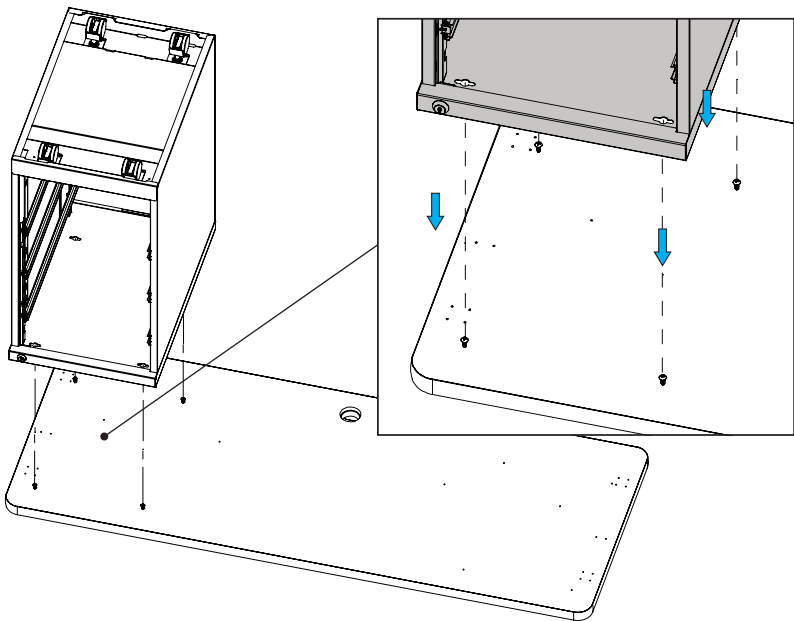
⚠ WARNING

This pedestal is heavy. Two or more people are required for assembly. Attempting to assemble alone may cause injury. Take care when handling metal parts. Sharp edges may cause injury.

Assembly Instructions

! NOTE: Installation instructions intended for use with corresponding Modern Teacher's Desk Worksurface.

1. Flip your worksurface over onto a non-scratching surface and install screws, leaving enough space to slide pedestal top under screw-head.
2. Flip your pedestal cabinet over onto the worksurface and align holes with screws installed on worksurface in Step 1.



3. Slide pedestal cabinet towards the outside of the worksurface.
4. Tighten screws until pedestal cabinet is secure.

