
KINCAID
SOLID WOOD SINCE 1946

ASSEMBLY INSTRUCTION

75/76 - 062 ARM CHAIR

www.kincaidfurniture.com
Phone : 828-728-3261.

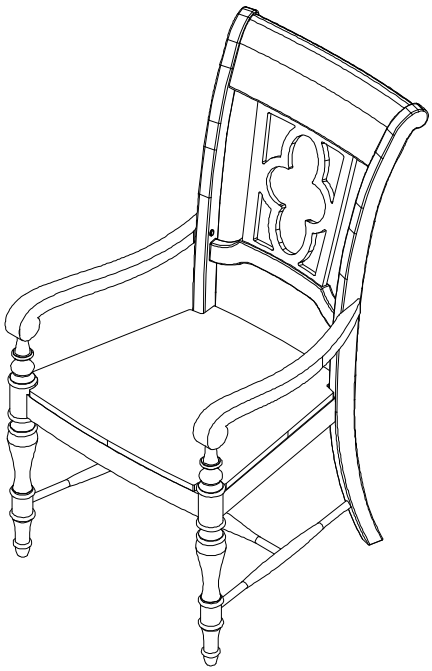

IMPORTANT NOTES :


. Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched.

. Check to be sure that you have all parts and hardware.

. Remove all wrapping materials,including staples and packing straps before you start to assemble.

. Do not tighten all screws and bolts until completely assembled.

. Keep all hardware out of the reach of children.

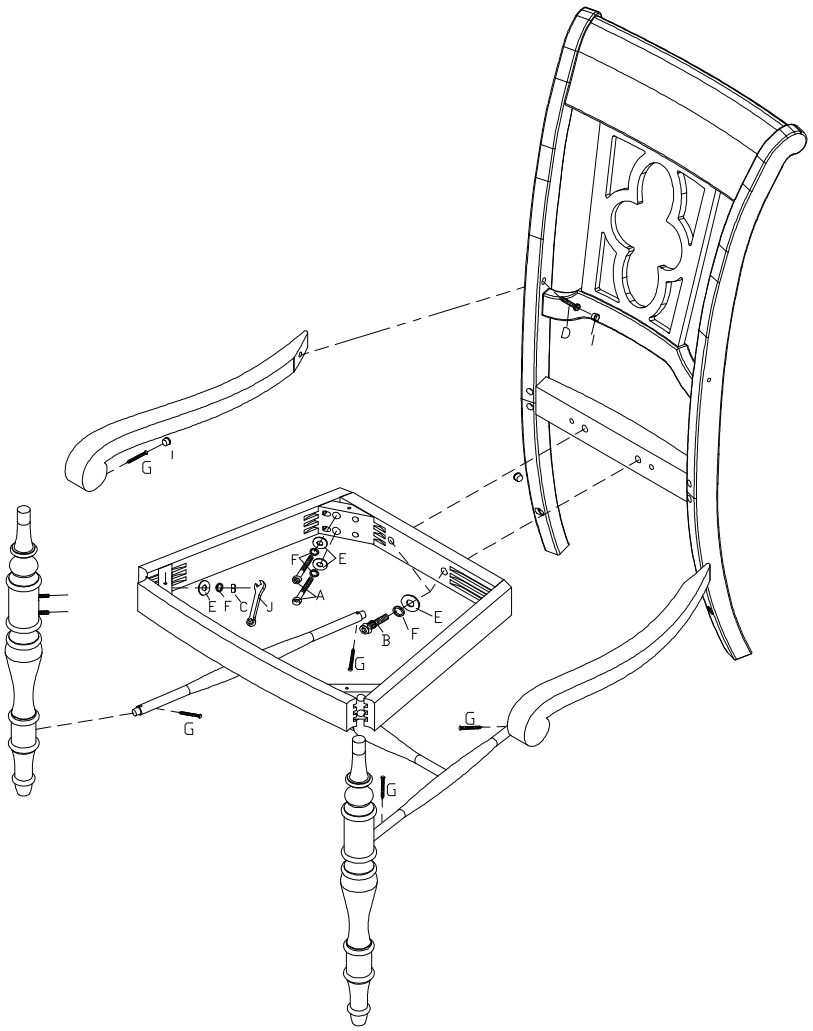

CODE	DESCRIPTION	NUM
A	Bolt 5/16"*3-1/2"	4
B	Bolt 5/16"*2"	2
C	Nut	4
D	Bolt 1/4"*1-3/8"	2
E	Flat washer	10
F	Lock washer	10
G	Screw #8*1-1/4"	6
H	Allen Key	1
I	Wood plug	4
J	Wrench	1

MADE IN VIETNAM