american drew
•inspired design•
Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

513-130/131/215/221/420/585/850/857


513-130


513-131


513-215


513-221

TOOLS REQUIRED:

Allen Wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.


513-420


513-585


513-850


513-857

INSTRUCTIONS:

1. Turn the case top upside down on a clean soft surface.

2. Screw hanger bolt on Bun foot into spring insert on bottom base. Secure all bun feet and make sure they align together.
see Figure 1.

NOTE: The insert has a spring which allows up to a 3/4 turn to align the square Bun Foot with the base shape.

THIS STEP IS FOR 513-130/131/585/850/857 ONLY:

3. Attach hanger bolt on Center Support into the bottom of case. Tighten by turning the Center Support clockwise.
See Figure 2.

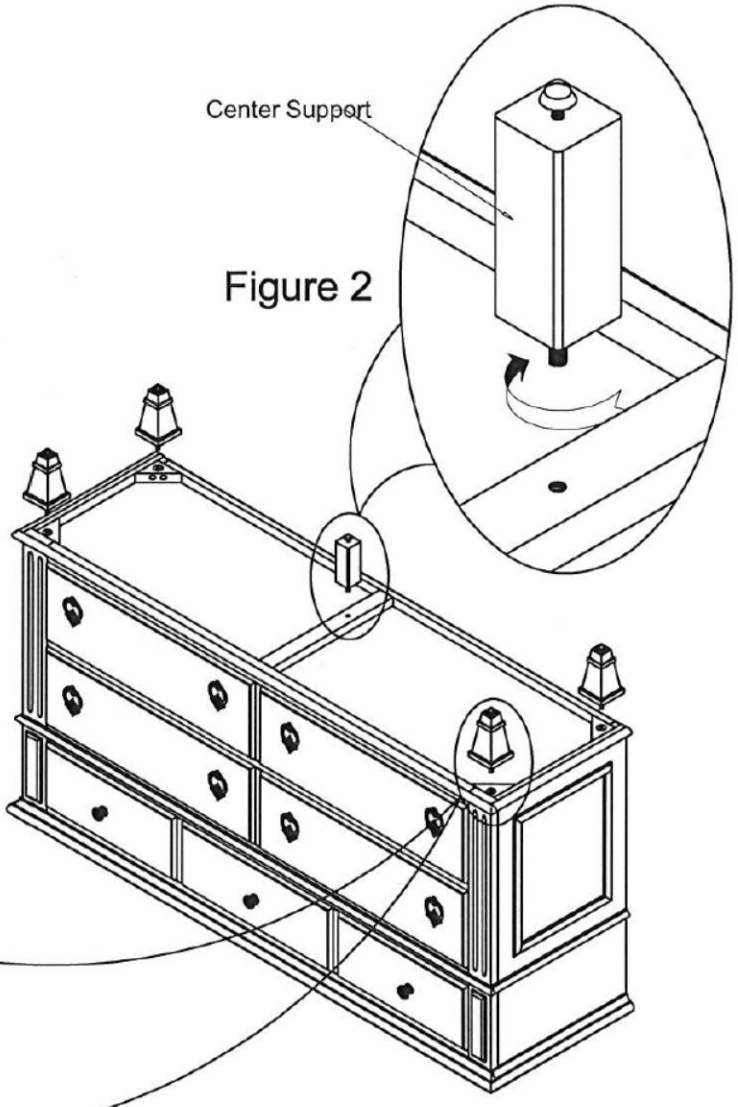


Figure 2

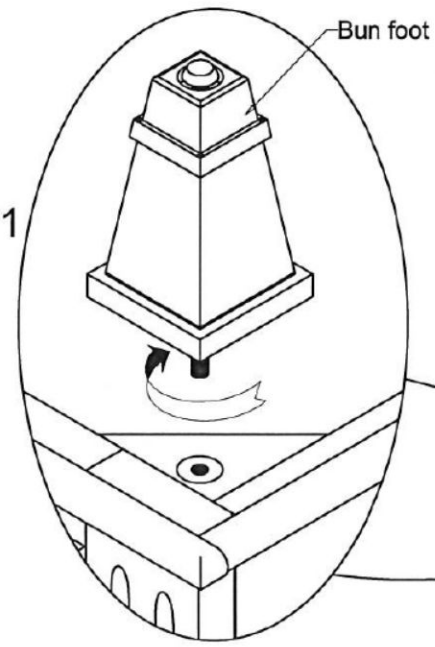


Figure 1

Thank you for purchasing furniture from american drew!