


BLOC COMPACT SIDEBORD ASSEMBLY INSTRUCTIONS

Thank you for purchasing the Bloc Compact Sideboard.

Please read the instructions carefully to ensure safe operation of this product, especially the installation warnings shown in Page 2 of this Assembly Instruction.

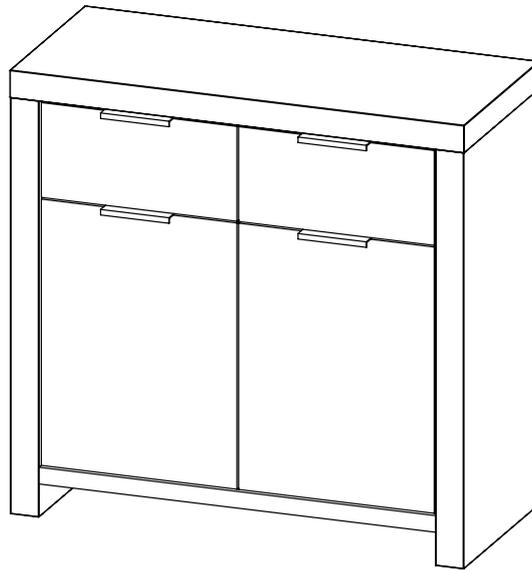

Size: 79.9 x 35 x 80cm (WDH)

Colour: Concrete




Finish: Melamine

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking.

Tools Required

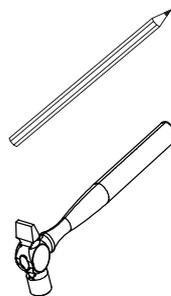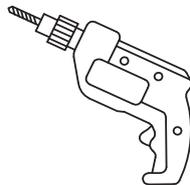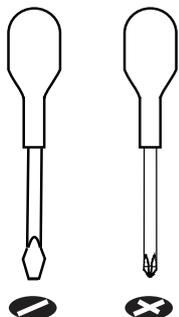

1 Hour
Set Up

Version 1 - 210407

PO No: 6644

Page 1 of 14

BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

- This product is designed to hold 12 Kg in total, spread evenly over the whole unit.
- Do not exceed this weight.
- We recommend that this unit is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent them from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before use.
- Check all screws or bolts are tightened and inspect regularly
- Tools not included unless specified in parts list.

WARNINGS

- DO NOT use power tools to construct this product.
- DO NOT tighten screws until parts are assembled or as advised in this guide.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- For safety this unit is designed to fix to the wall using the anti-tilt strap (P).

INSTALLATION WARNINGS:

- In order to prevent the cabinet tipping over, this product must be installed with the anti-tilt strap (P) provided.
- It is essential for the safety of you and your children, the cabinet is not free-standing.
- Carefully assess the suitability of the wall to ensure that the fastening device will withstand the load and forces generated.
- Walls can be quite different in construction so wall fixings are not supplied - please choose the most suitable fixing for your wall type - if in doubt consult an expert.
- When drilling the wall always be sure the area to be drilled is free from hidden electrical wiring, water or gas pipes.
- The fixing of this product to the wall must be done carefully following the detailed stages in this Assembly Instruction. See Step 8 & 9.

CARE INFORMATION


- To clean, wipe with a damp cloth.
- Never use scourers, abrasives or chemical cleaners.
- Do not use solvent based cleaners or detergents as they can bleach or damage the product.

BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

Parts and Fittings Checklist

Please check the pack contents before assembling the product. If any components are missing, please contact your retailer.

The fittings pack contains small items that should be kept away from children.

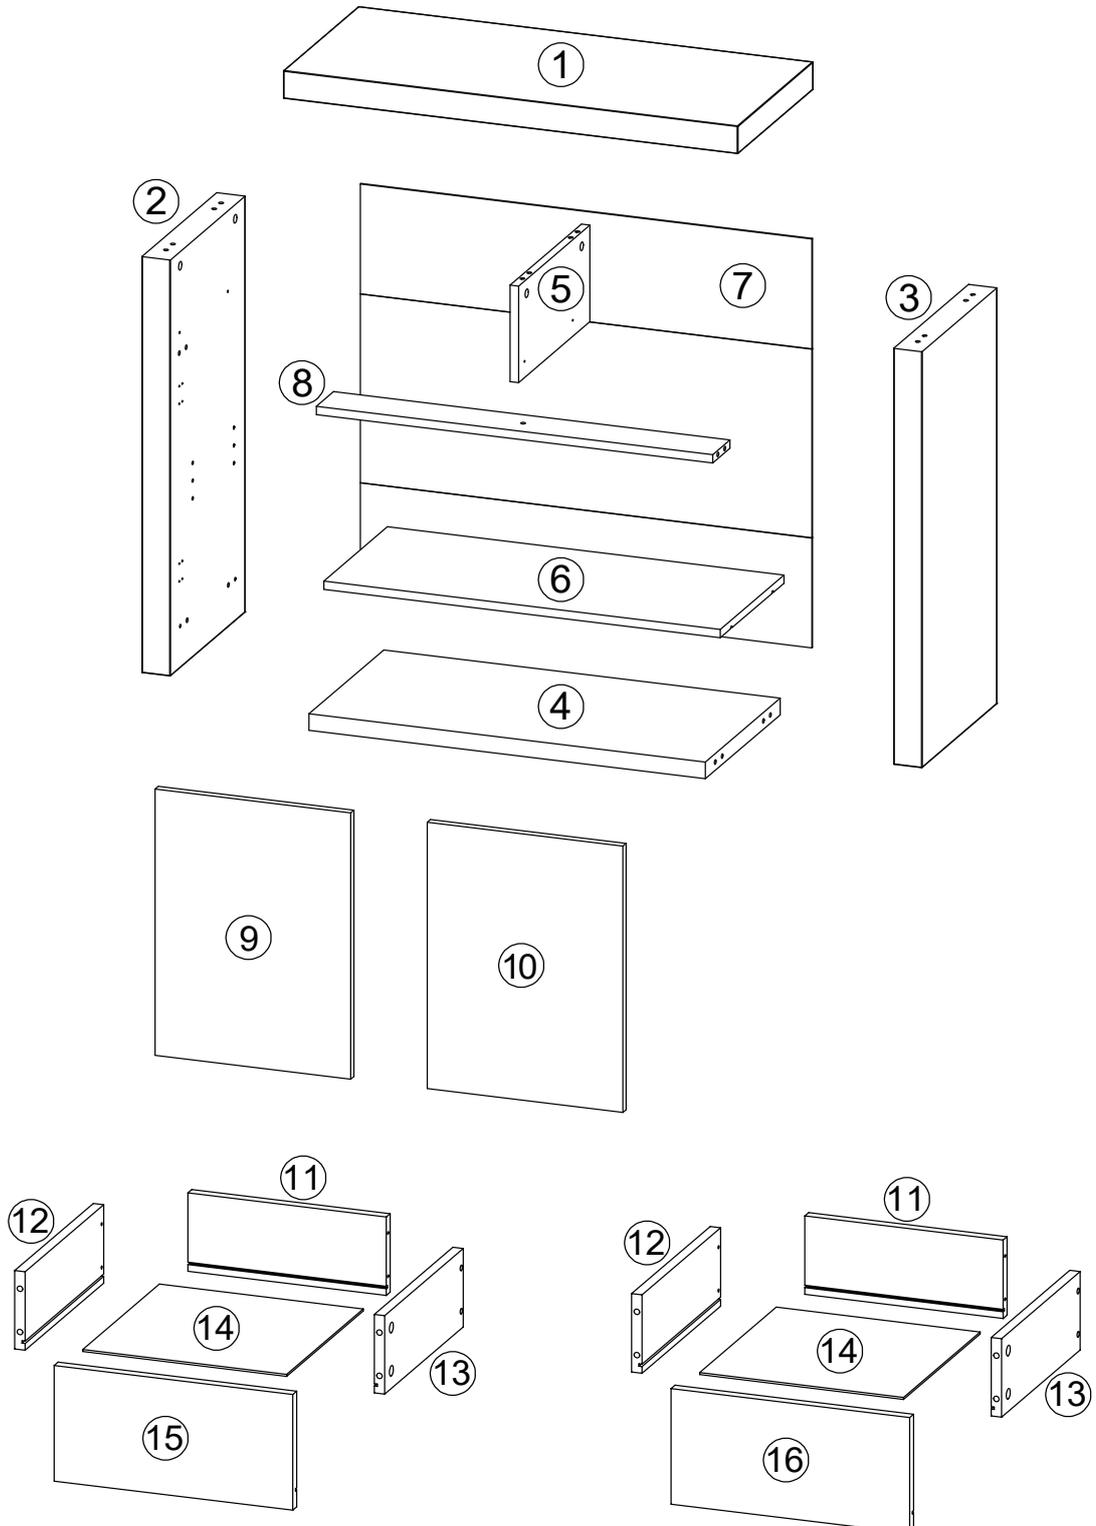

BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS


All parts are packed in one carton

1	2	3
Description: Top Qty: 1 Size: 799 x 350 x 50 mm Carton No: 1/1	Description: LH Side Qty: 1 Size: 750 x 349 x 50 mm Carton No: 1/1	Description: RH Side Qty: 1 Size: 750 x 349 x 50 mm Carton No: 1/1
4	5	6
Description: Base Qty: 1 Size: 697 x 348 x 30 mm Carton No: 1/1	Description: Upright Qty: 1 Size: 332x 174 x 15 mm Carton No: 1/1	Description: Adjustable Shelf Qty: 1 Size: 696x 296 x 15 mm Carton No: 1/1
7	8	9
Description: Back Panel Qty: 1 Size: 794 x 736 x 3mm Carton No: 1/1	Description: Rail Qty: 1 Size: 697 x 80 x 15 mm Carton No: 1/1	Description: Left Hand Door Qty: 1 Size: 480 x 344 x 15 mm Carton No: 1/1
10	11	12
Description: Right Hand Door Qty: 1 Size: 480 x 344 x 15 mm Carton No: 1/1	Description: Drawer Back Qty: 2 Size: 286 x 116 x 15 mm Carton No: 1/1	Description: LH Drawer Side Qty: 2 Size: 300 x 116 x 15 mm Carton No: 1/1
13	14	15
Description: RH Drawer Side Qty: 2 Size: 300 x 116 x 15 mm Carton No: 1/1	Description: Drawer Base Qty: 2 Size: 294 x 292.5 x 3 mm Carton No: 1/1	Description: LH Drawer Front Qty: 1 Size: 344 x 171 x 15 mm Carton No: 1/1
16		
Description: RH Drawer Front Qty: 1 Size: 344 x 171 x 15 mm Carton No: 1/1		

BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS


Fittings (to scale)

Code	Item	Quantity
A	Cam Bolt (35mm overall)	22
B	Cam Lock	22
C	Dowel (8x30mm)	10
D	Screw for Fitting Drawer Sides (3.5x40mm)	9
E	Screw for Fitting Runner Anti-tilt Strap, Handle Back Panel, Hinge (3x12mm)	65
F	Flat Washer	1

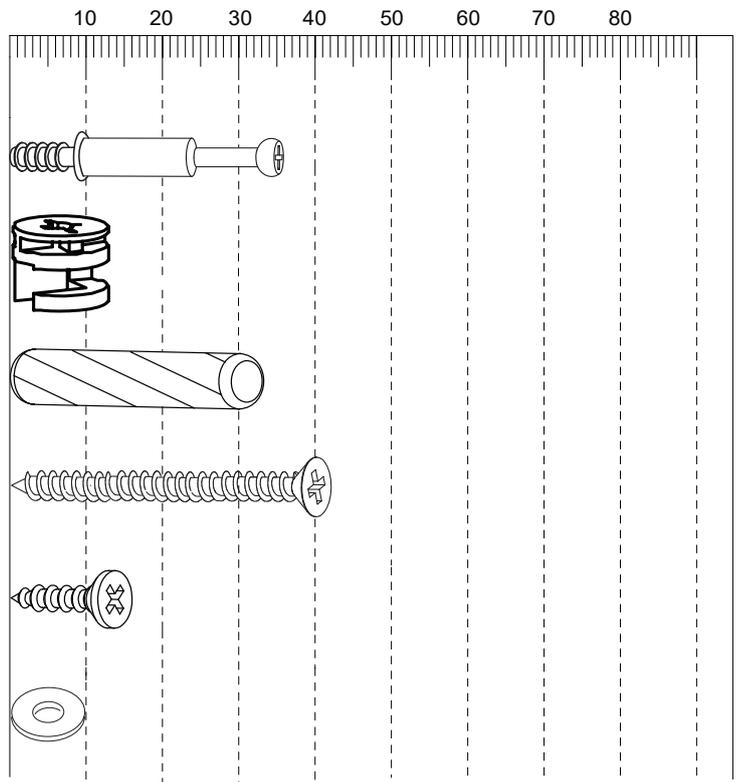


Fittings (not to scale)

Code	Item	Quantity
H	Hinge Set	4

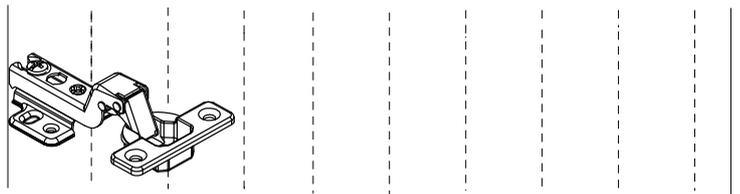


General Hints & Tips

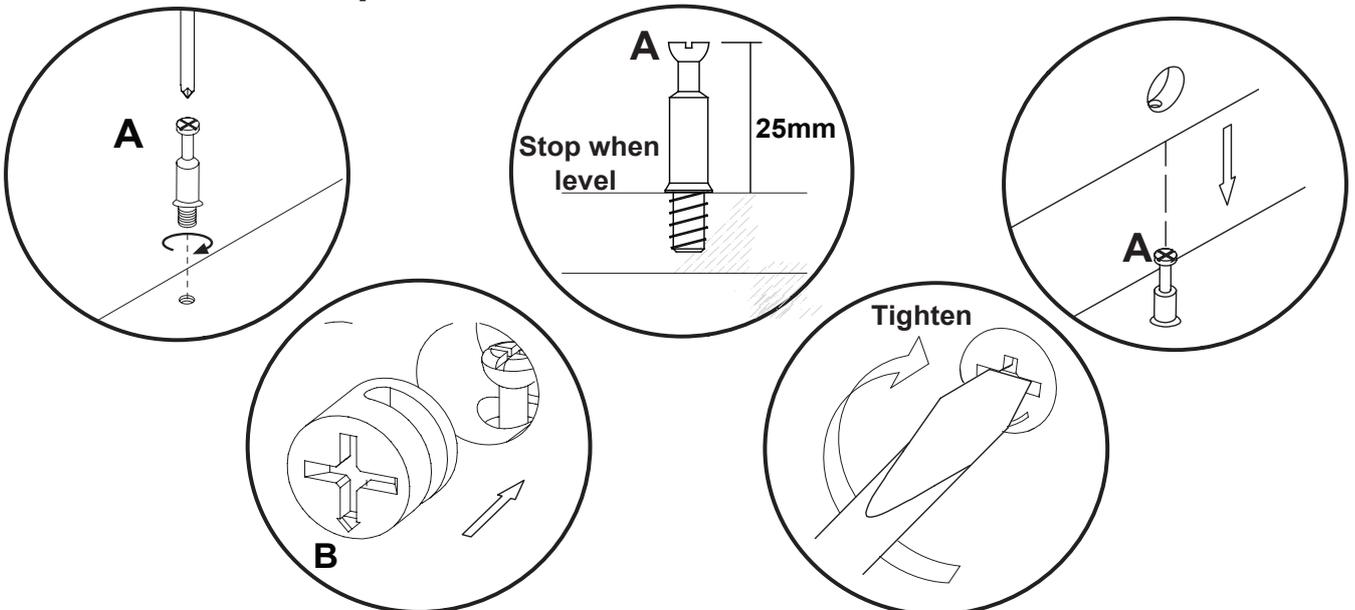


BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

Fittings (not to scale)


Code	Item	Quantity
J	Outer Drawer Runner - Right	2
K	Outer Drawer Runner - Left	2
L	Inner Drawer Runner - Right	2
M	Inner Drawer Runner - Left	2
N	Handle	4
P	Anti-tilt Strap	1
Q	Shelf Support	4

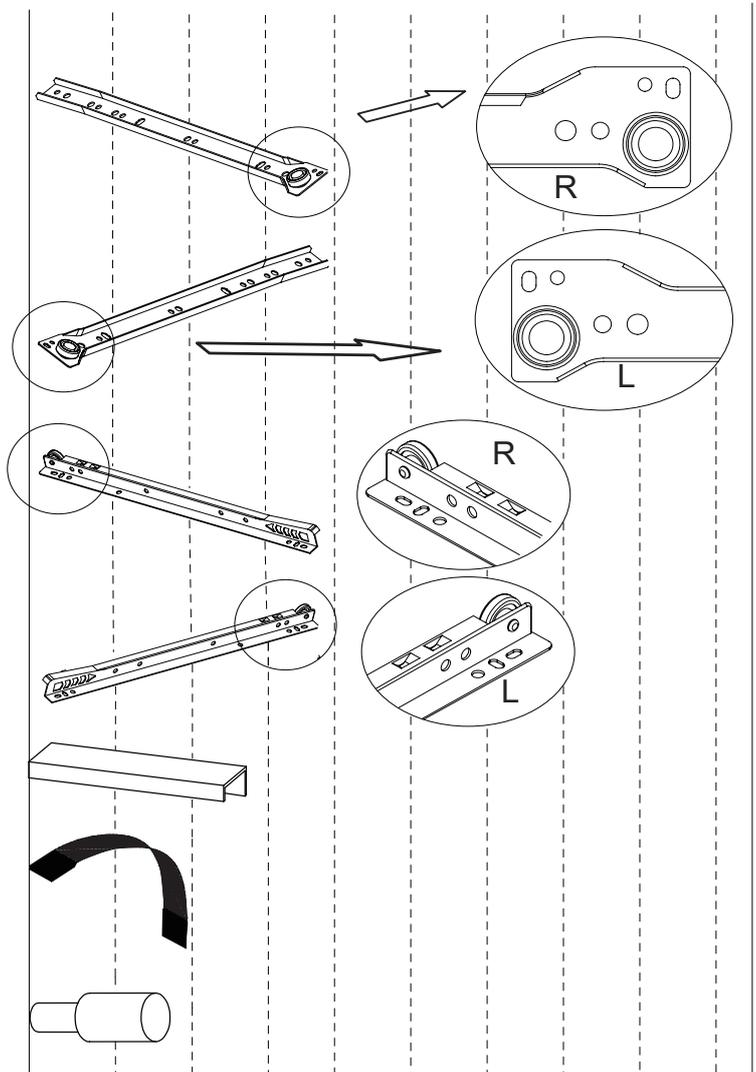

STEP 1

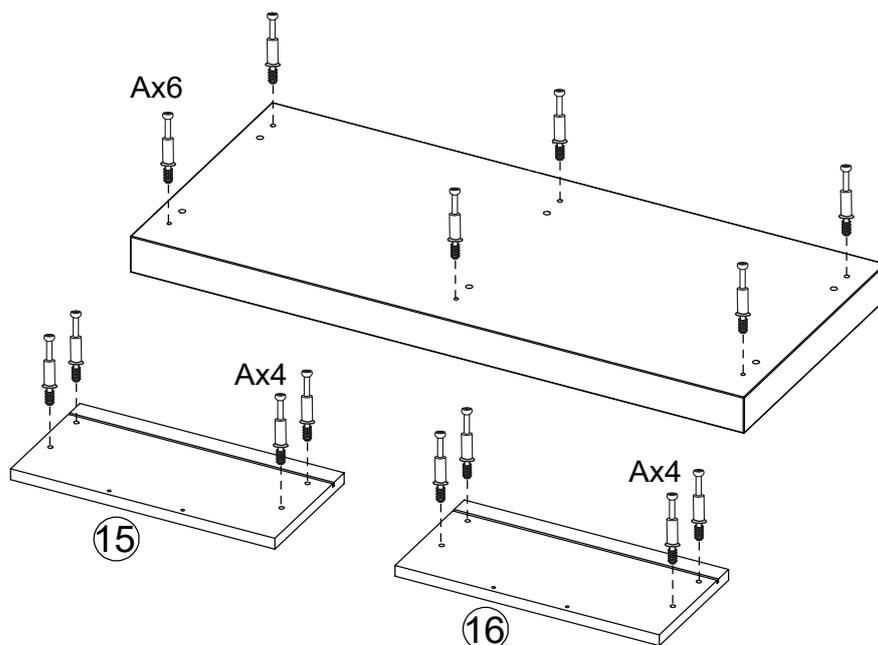

For this step:
Tools required




Fittings required



A x14

BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

STEP 2

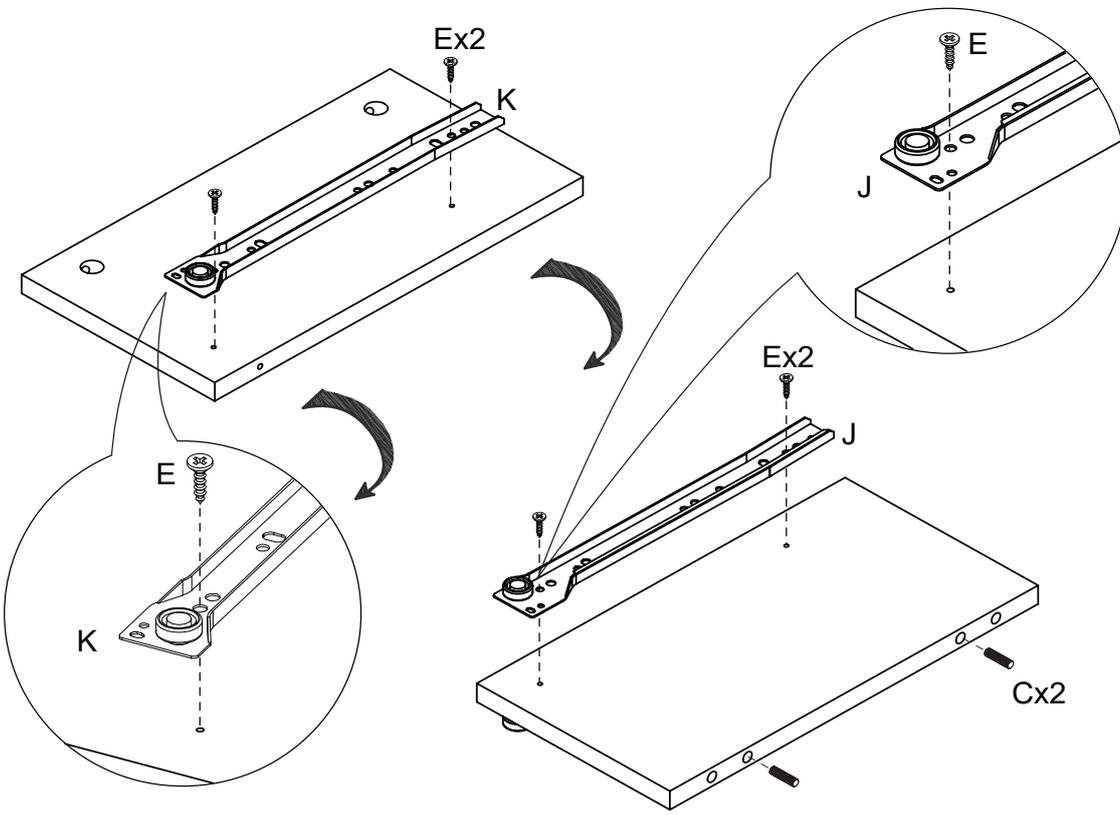


For this step:


Tools required



Fittings required



C x2



E x4





J x1



K x1

STEP 3

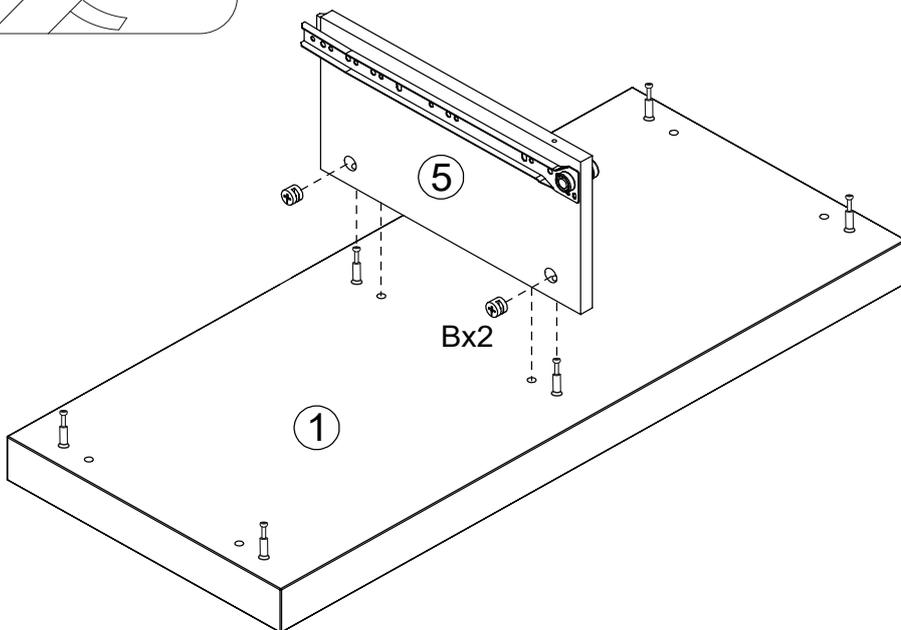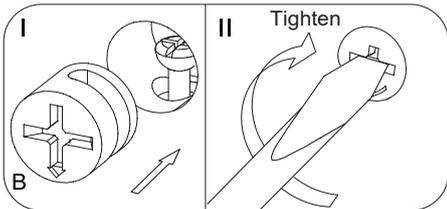

For this step:

Tools required



Fittings required




B x2

BLOC COMPACT SIDEBORD ASSEMBLY INSTRUCTIONS

STEP 4

For this step:


Tools required



Fittings required



A x 4




C x 2



E x 2



K x 1

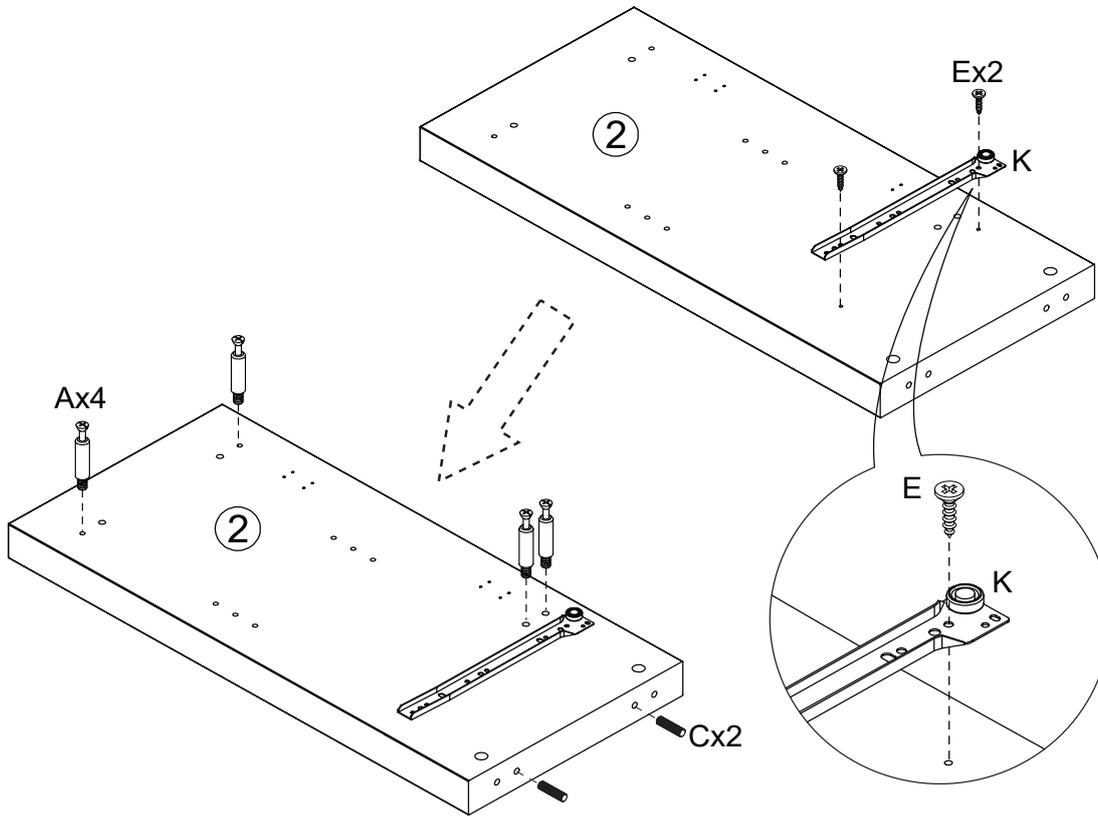


STEP 5

For this step:


Tools required




Fittings required




A x 4




C x 2



E x 2




J x 1

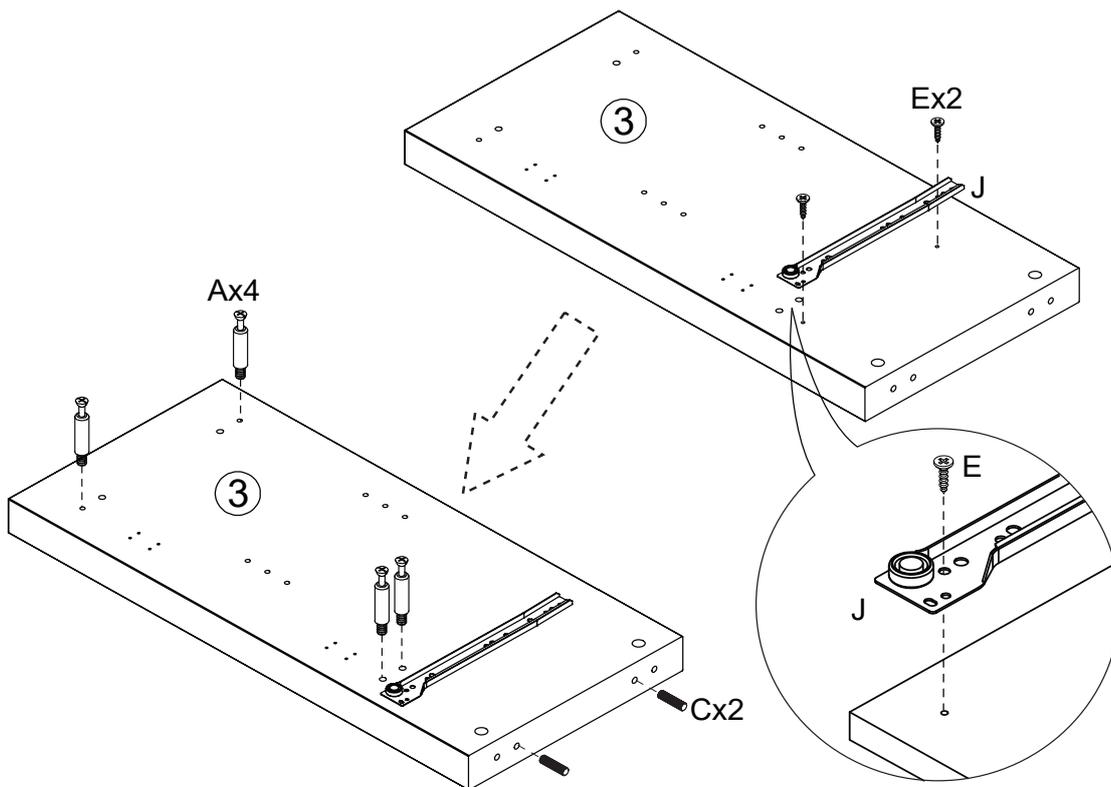

BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

STEP 6

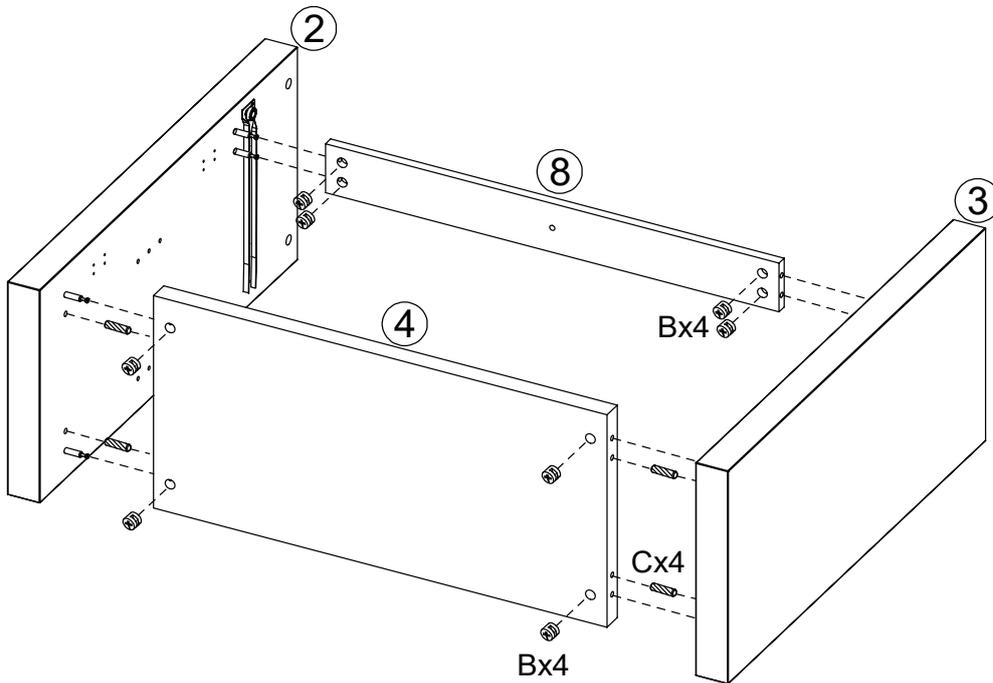

For this step:


Tools required



Fittings required




B x 8




C x 4

STEP 7

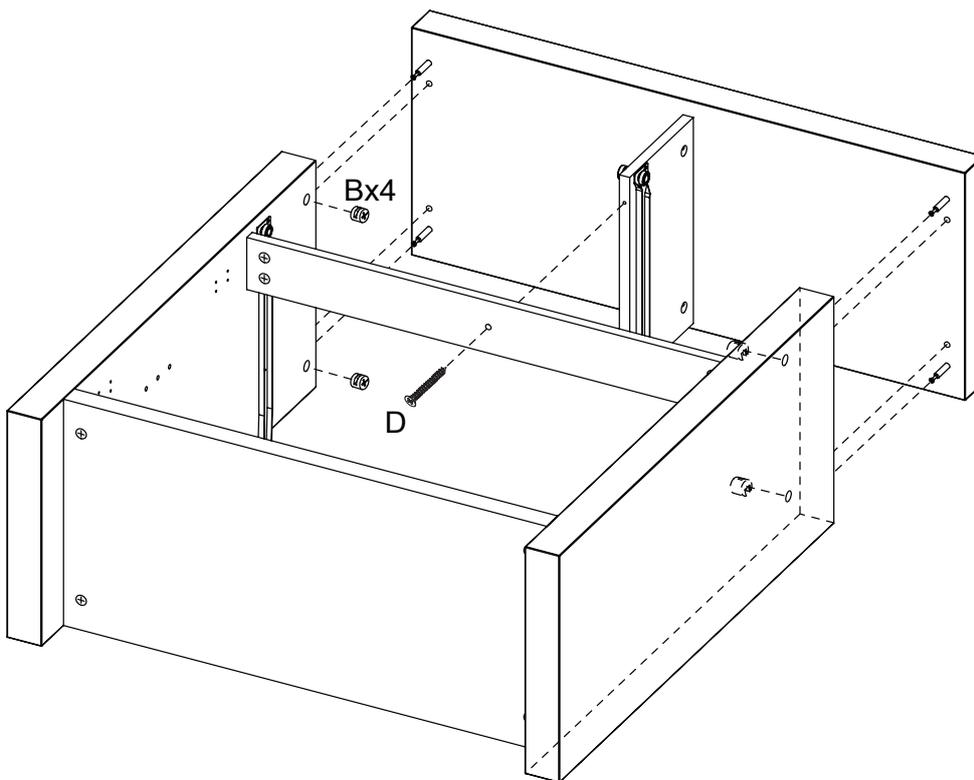

For this step:

Tools required

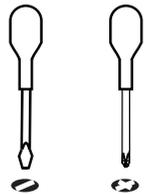

Fittings required




B x 4



D x 1


BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

STEP 8

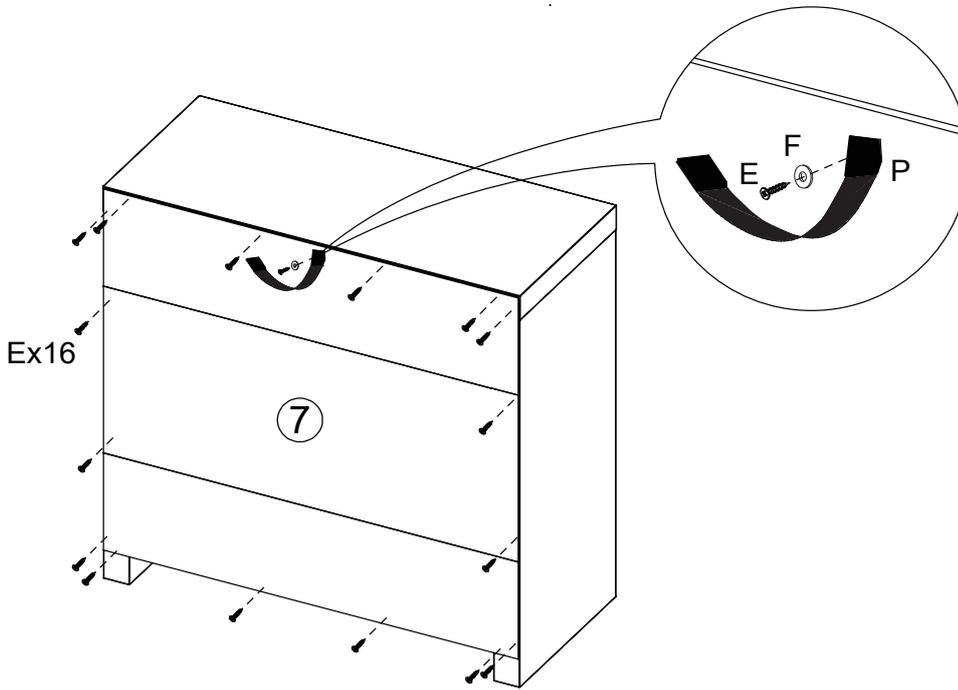

For this step:

Tools required



Fittings required



E x17


F x1



P x1



STEP 9

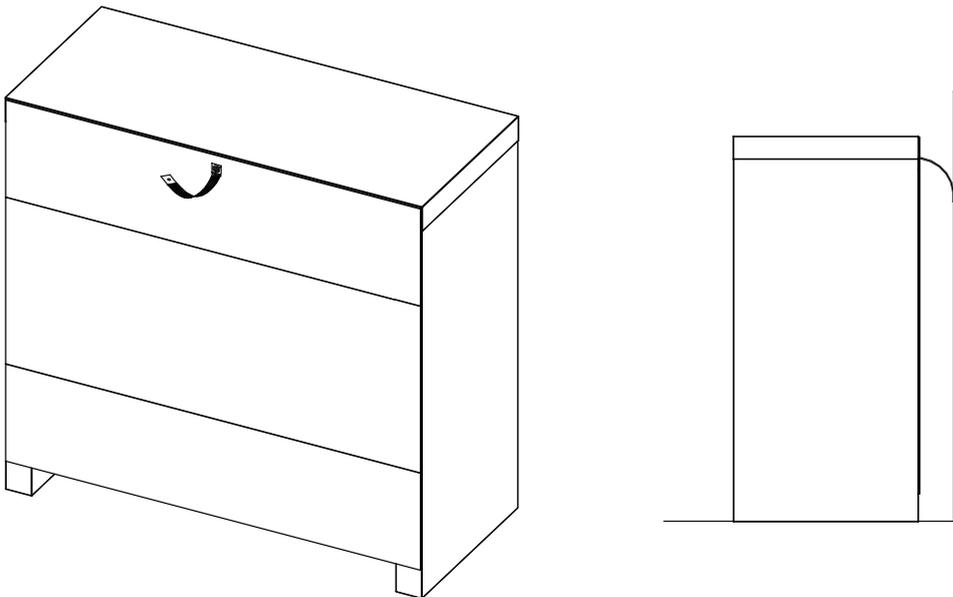

For this step:

Tools required


Note: We recommend the use of the wall strap provided (P) to avoid accidents and possible fatal injuries if the item falls over or tips over during use.

Warning: Always ensure the wall area to be drilled is free of electrical wires, water and gas pipes. We don't supply wall fixings as these must suit the wall type of your own home. If in doubt please consult a qualified trades person.

Fittings required


BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

STEP 11

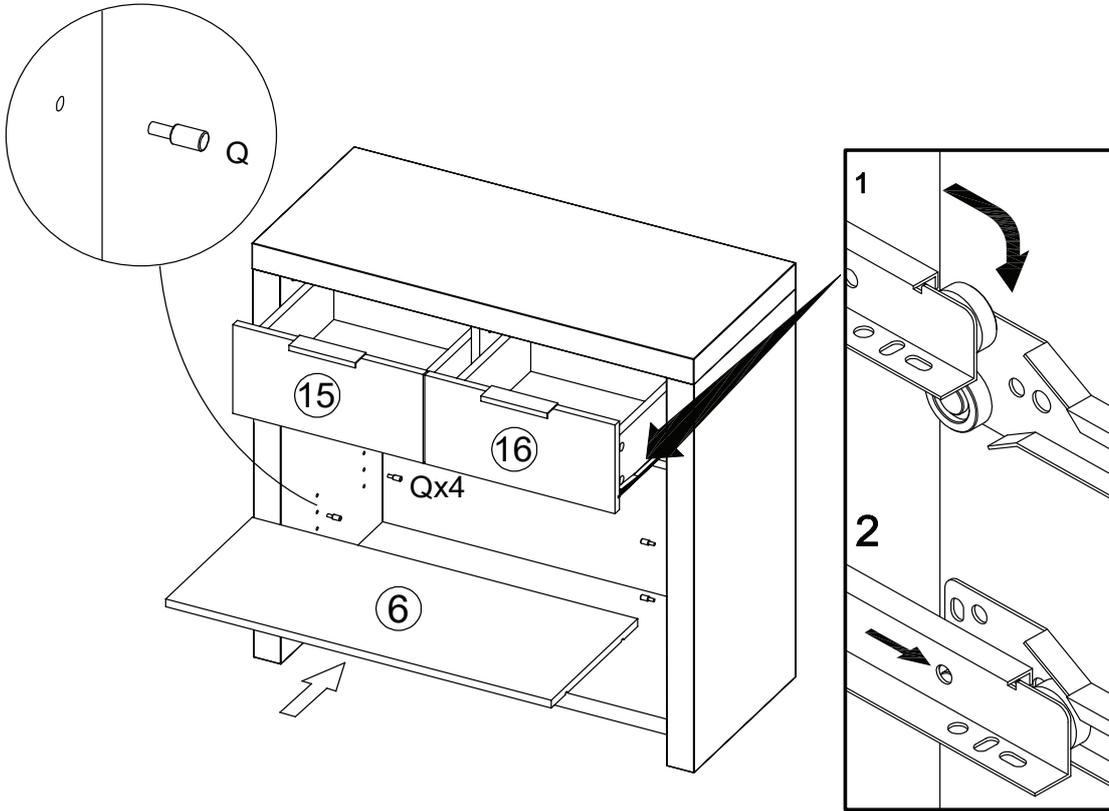


For this step:
Tools required

Fittings required



Q x4

STEP 12

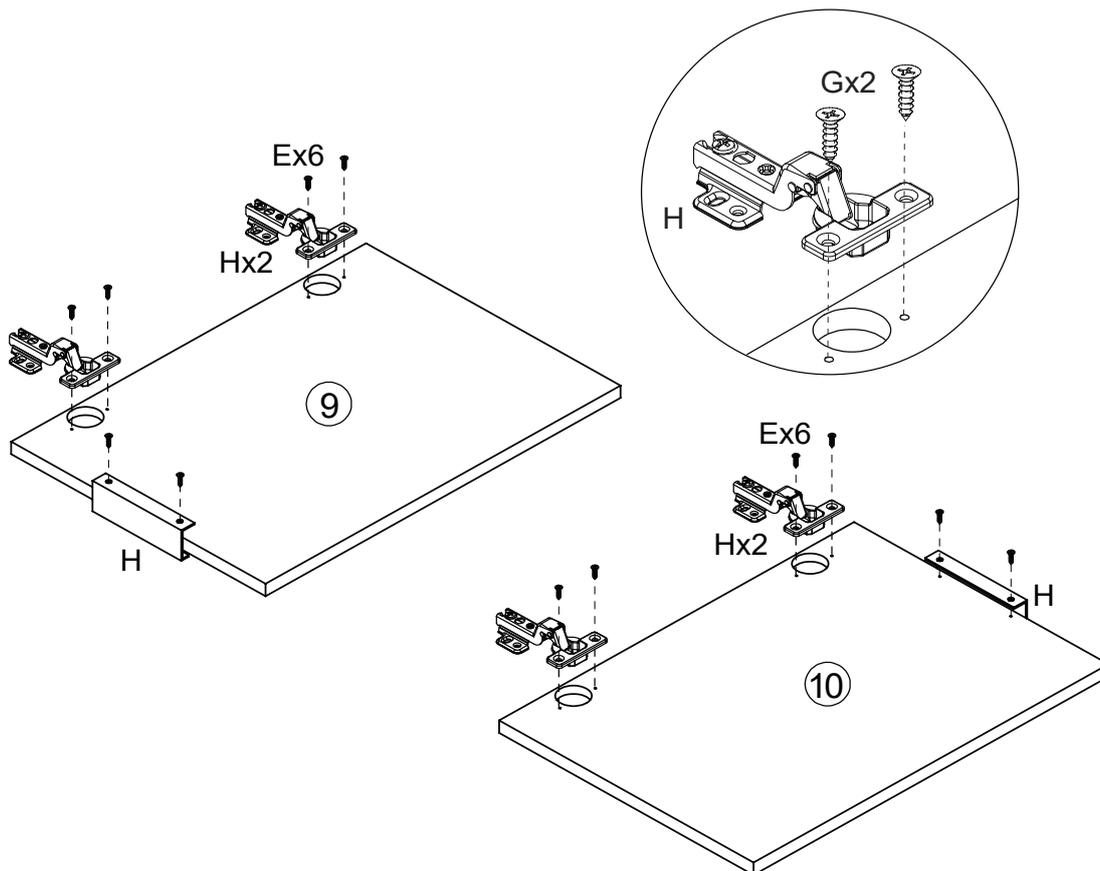


For this step:
Tools required



Fittings required



E x12



H x4



N x2


BLOC COMPACT SIDEBOARD ASSEMBLY INSTRUCTIONS

STEP 13

Initially in each door fix 4 screws (G) through the centre of the elongated holes in each hinge plate, screwing into the side panel.

For this step:



Tools required










Fittings required



G x8

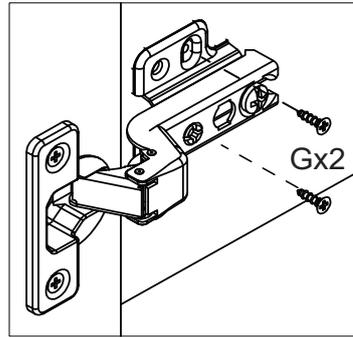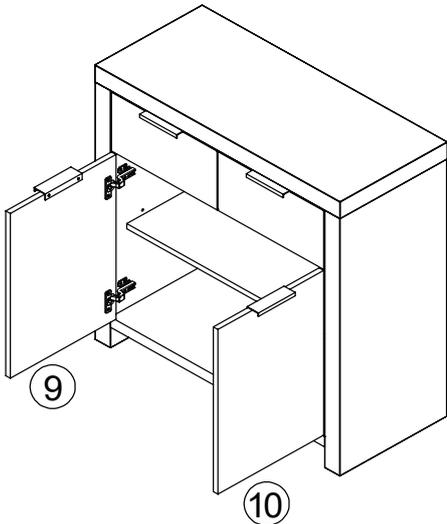

If it is necessary to re-align the door vertically, loosen the screws (X) and adjust the hinge plates up or down (Y) until gaps at top and bottom of the door are even, then re-tighten the screws.

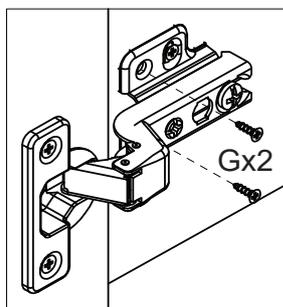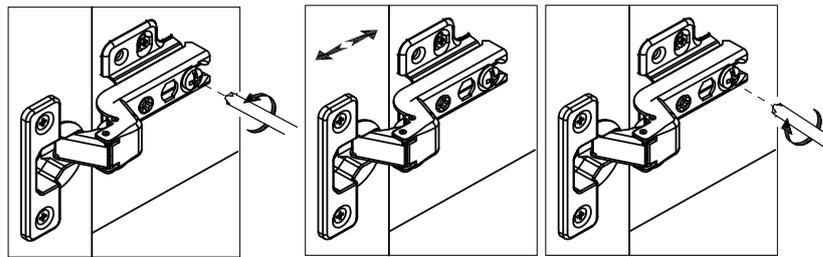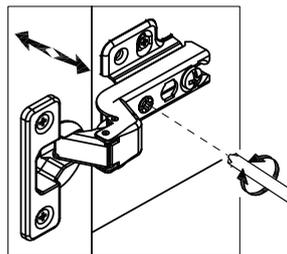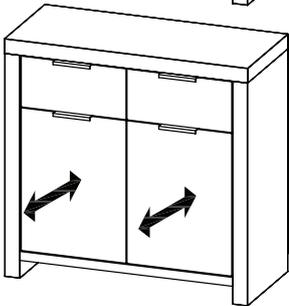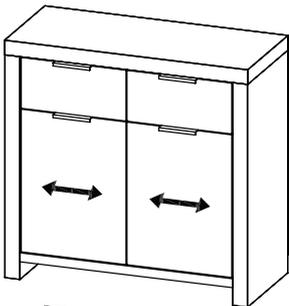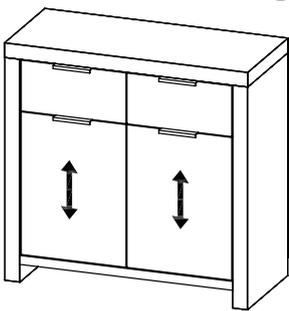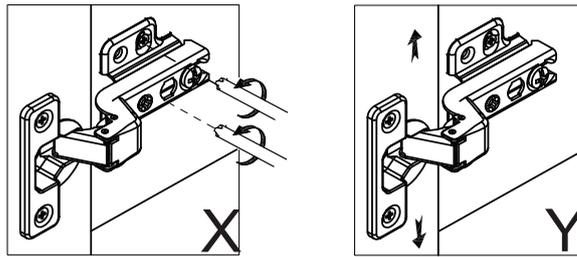

Once all the adjustments are complete and both doors are aligned, fix remaining x8 screws (G) into the other hinge plate holes then check all the other hinge screws are tight.


Please do not over-tighten.



G x8

Assembly Completed

Your Bloc Compact Sideboard is now completely assembled.
Periodically check to ensure that the components are in their proper position, free from damage.
Also, make sure the connectors are tight and secure.

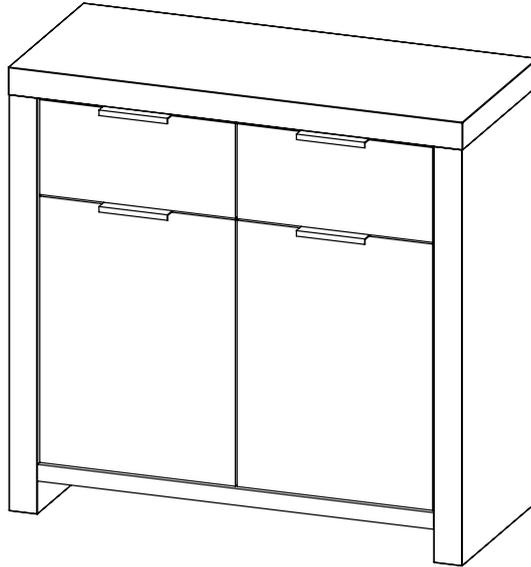

Keep instructions for future reference

