


# ADLER FULL / QUEEN BED

## ASSEMBLY INSTRUCTIONS




### BOX #1

- A. HEADBOARD 1 PC  
B. FOOTBOARD 1 PC

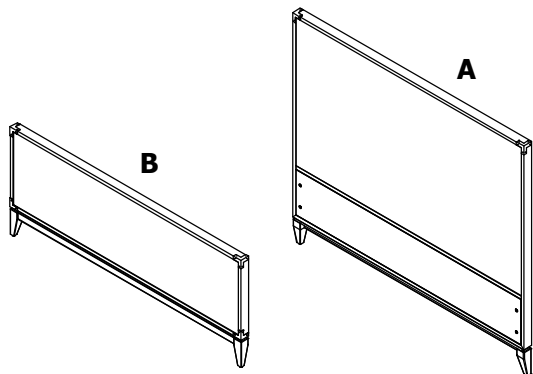


### BOX #2

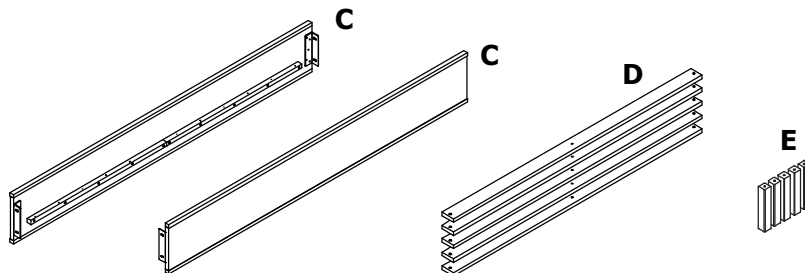




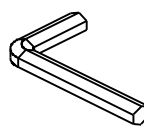
- C. SIDE RAIL 2 PCS  
D. BED SLAT 5 PCS  
E. LEG SUPPORT 5 PCS  
BED HARDWARE BOX\*

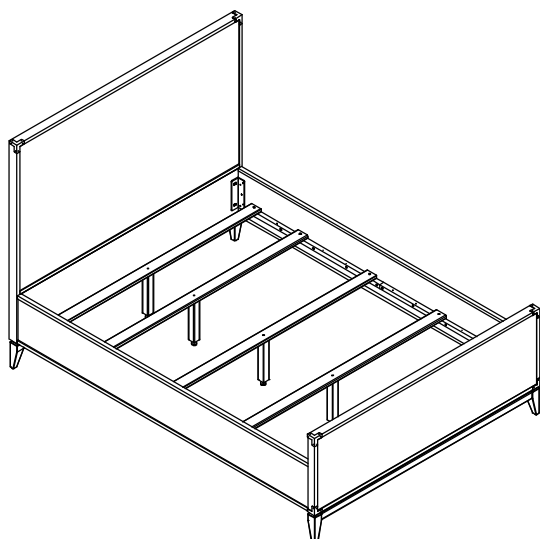

### ADLER BED ASSEMBLED






### BED HARDWARE PACKED IN BOX #2


1	PHILLIPS HEAD BOLT (8x20mm)	8 PCS	2	SPRINGWASHER (M8)	8 PCS	3	FLAT WASHER (M8)	8 PCS
								
4	ALLEN BOLT (6x40mm)	6 PCS	5	WOOD SCREW (8x30mm)	11 PCS	6	ALLEN KEY	1 PC
								

TOOL REQUIRED : PHILLIPS HEAD SCREWDRIVER (NOT PROVIDED)

YOUR BOX  
MAY CONTAIN  
EXTRA HARDWARE

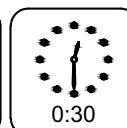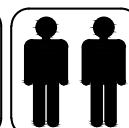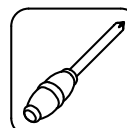


### STEP 1 :

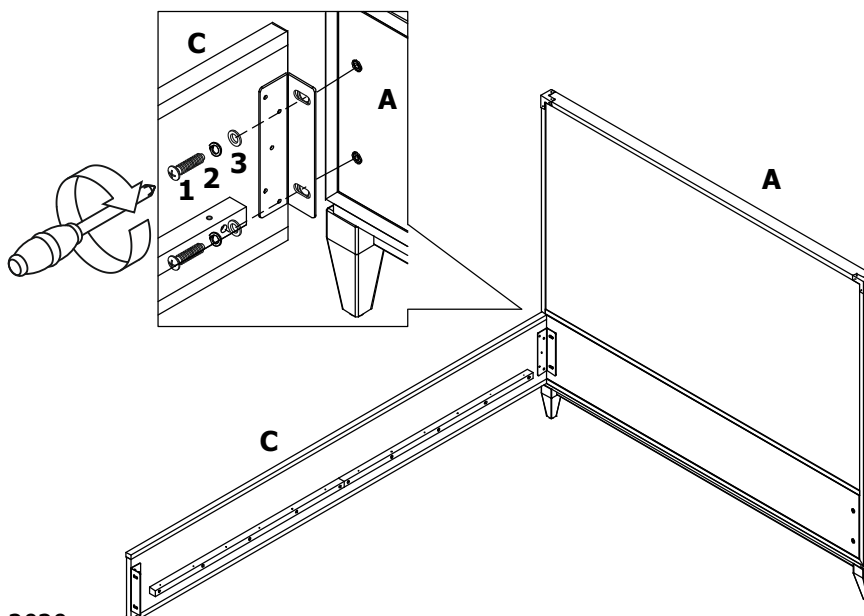


UPDATED : JUNE 3RD, 2020

## STEP 2 :

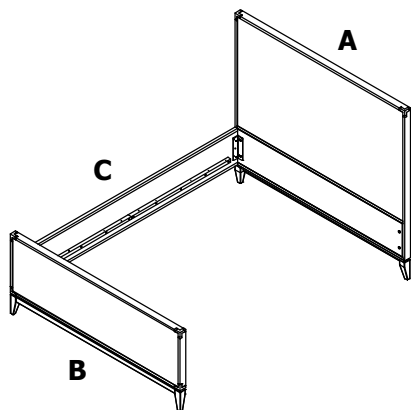


## STEP 3 :

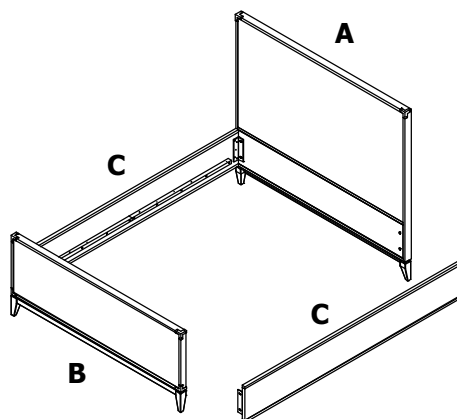


### STOP

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 4.

## STEP 4 :

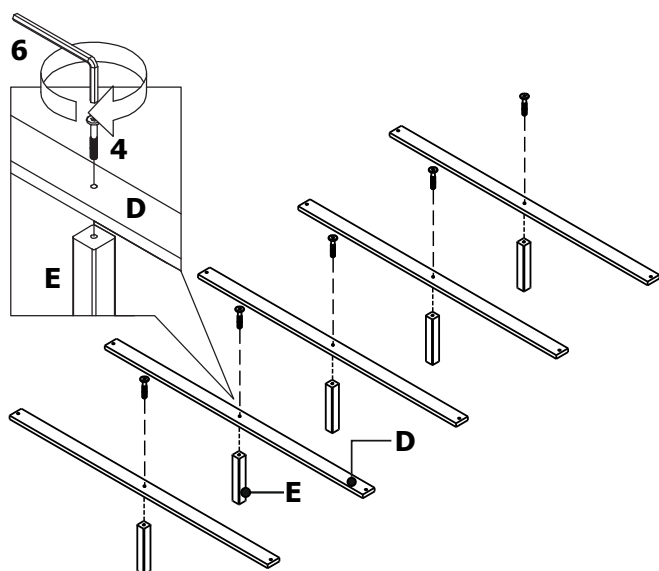

## STEP 5 :

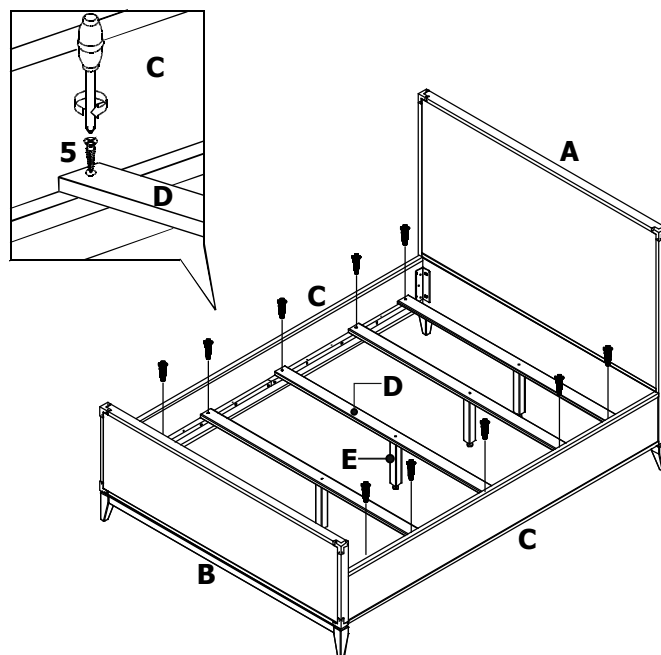


## INSTRUCTIONS FOR ADJUSTING LEVELERS :

POSITION THE BED IN YOUR ROOM.  
LOCATE LEVELERS UNDER EACH  
LEG SUPPORT (E).

TURN LEVELERS COUNTER-CLOCKWISE TO  
EXTEND, CLOCKWISE TO RETRACT.

ADJUST LEVELERS UNTIL EACH LEG  
SUPPORT IS APPLYING EQUAL UPWARD  
PRESSURE ON THE BED SLAT.

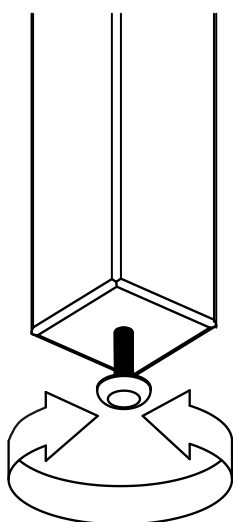

## MAINTENANCE INSTRUCTIONS :

- REMOVE BOX SPRING AND MATTRESS  
BEFORE MOVING YOUR BED.
- LIFT YOUR BED WHEN MOVING IT.  
DRAGGING CAN DAMAGE  
LEG SUPPORT.
- READJUST LEVELERS AFTER MOVING  
YOUR BED.

# ADLER FULL / QUEEN BED

## APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:


D. BED SLAT  
E. LEG SUPPORT

5 PCS  
5 PCS

4. ALLEN BOLT (6x40mm) 6 PCS  
5. WOOD SCREW (8x30mm) 11 PCS

### STEP 1 :

USE ALLEN KEY **(6)** TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

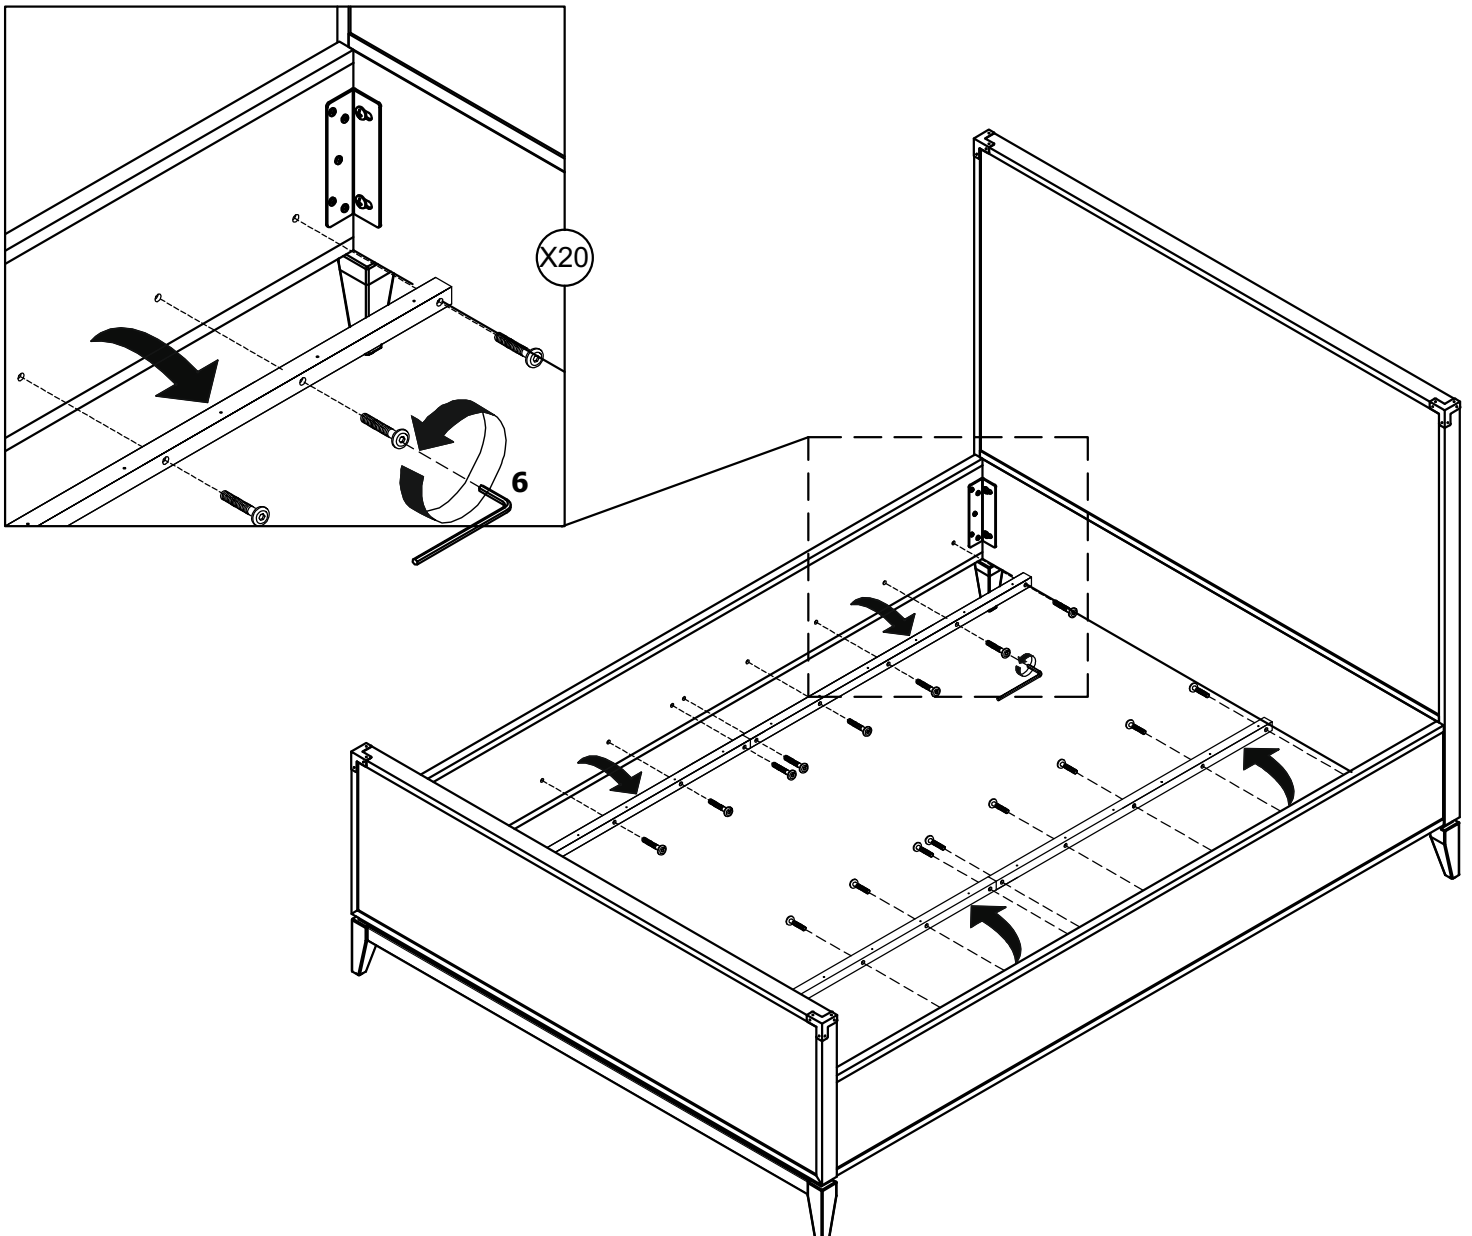

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

UPDATED : JUNE 3RD, 2020