

INSTALLATION GUIDE


MONTAGEANLEITUNG

GUÍA DE INSTALACIÓN

GUIDE D'INSTALLATION

GUIDA ALL'INSTALLAZIONE

INSTALLATIE VOORSCHRIFT

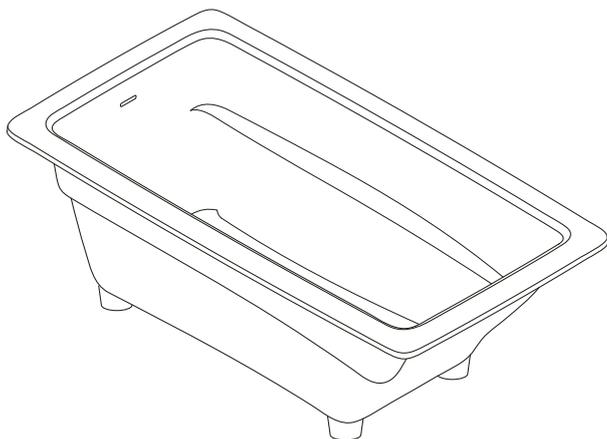

Built in baths
Eingebaute Wannen
Bañeras Encastradas
Baignoires Encastrées
Vasca da Incasso
Inbouwbaden

HELPFUL TOOLS

For safety and ease of installation, the use of these helpful tools is recommended.

OUTILS NECESSAIRES

Pour la sécurité et la facilité d'installation, l'utilisation de ces outils nécessaires est recommandée.




Safety Glasses
Schutzbrille
Gafas de seguridad
Lunettes de sécurité
Occhiali di sicurezza
Veiligheidsbril

HILFREICHE WERKZEUGE

Zur Sicherheit und einfachen Installation wird die Verwendung dieser hilfreichen Werkzeuge empfohlen.

STRUMENTI UTILI

Per motivi di sicurezza e facilità di installazione, si consiglia l'uso dei seguenti strumenti.



Caulk Gun
Kartuschenpistole
Pistola para calafatear
Pistolet à calfeutrer
Pistola per mastice
Kitpistool

HERRAMIENTAS ÚTILES

Para la seguridad y la facilidad de la instalación, se recomienda el uso de estas herramientas útiles.

NUTTIG GEREEDSCHAP

Voor de veiligheid en het gemak van installatie wordt het gebruik van deze handige hulpmiddelen aanbevolen.

For care and cleaning, product warranty, and additional information contact:

US Customers

U.S.A.
houseofrohl.com/support
1-800-777-9762

Canadian Customers

QUEBEC / MARITIMES / WESTERN CANADA
QUÉBEC / MARITIMOS / OUEST CANADIEN
QUEBEC / MARITIMOS / CANADA OCCIDENTAL
houseofrohl.ca/support
1-866-473-8442

ONTARIO
houseofrohl.ca/support
1-800-287-5354

EMEA Customers

vandabaths.com
+44 (0) 1952 221 100

Riobel

PERRIN & ROWE®
LONDON




victoria ⊕ albert®

ROHL


Drop in Stud Framing

ADA: In order for this to satisfy ADA requirements the installation must meet the standards set out in ANSI A117.1.

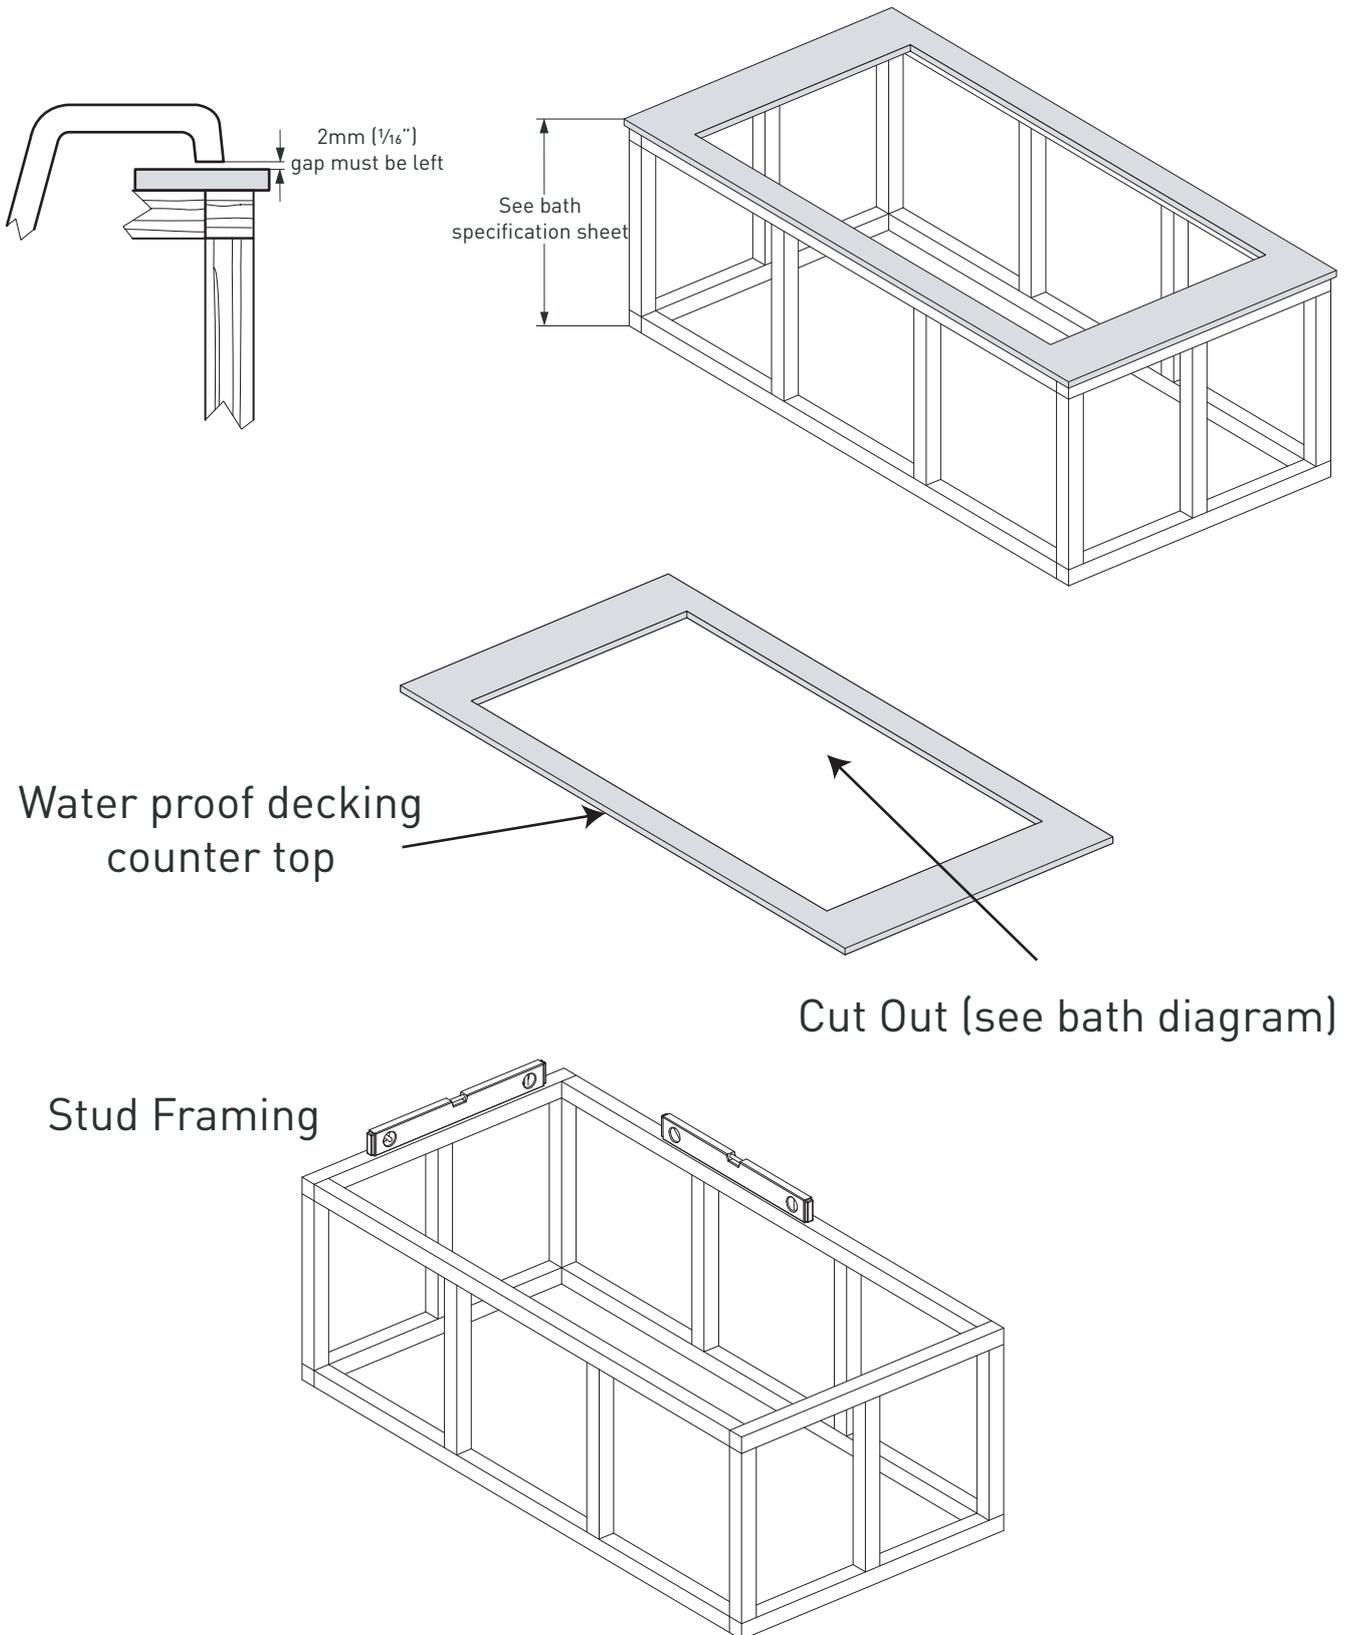




Note: DO NOT support the bathtub by the frame, the bath tub is self supporting on its feet

Drop in Fitting

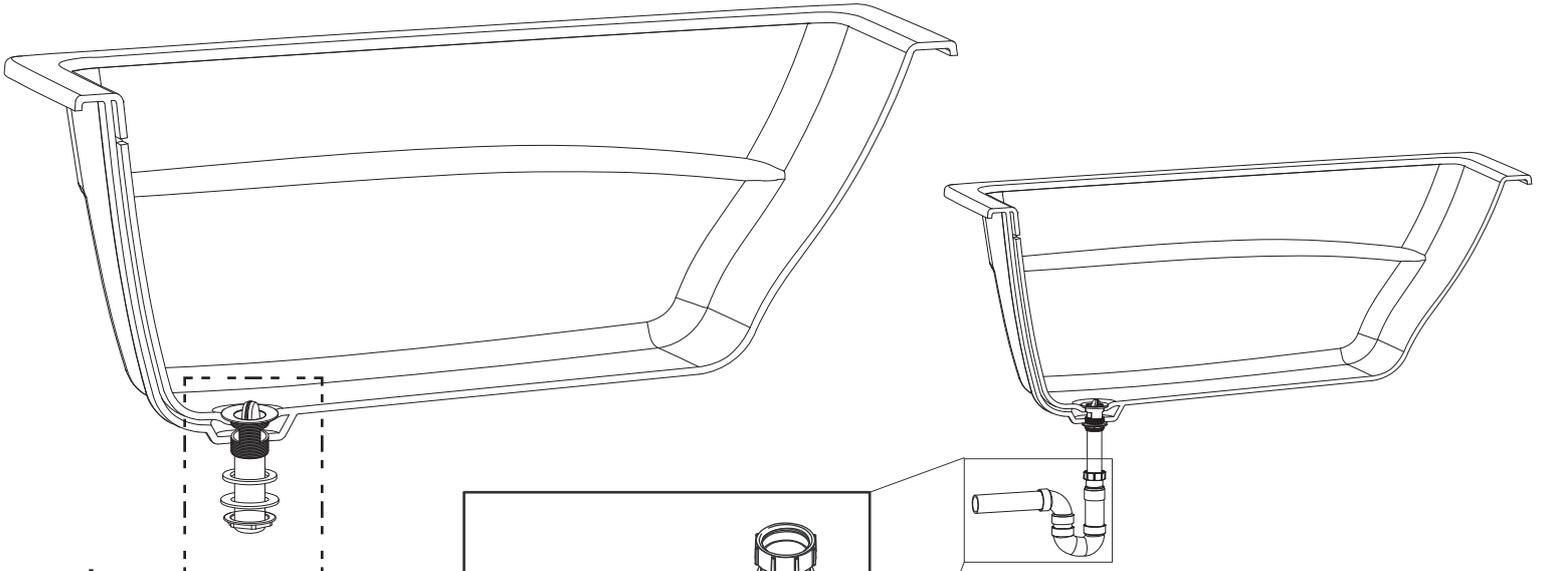

! - Drain Fitting (K13)
not supplied with tub

! - Trap not supplied with tub

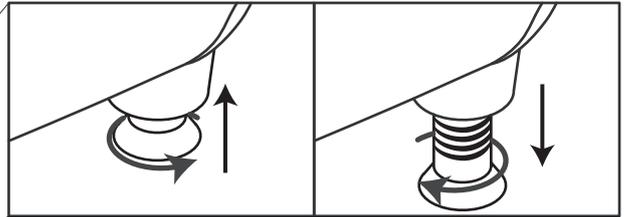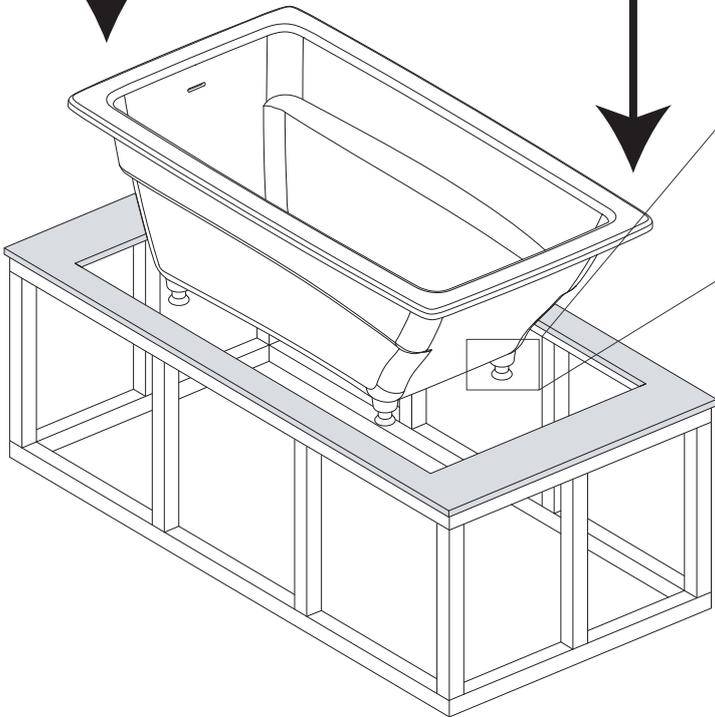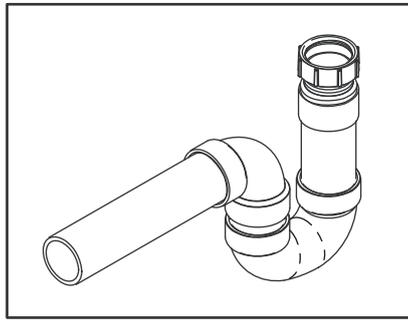

!-Minimum 4 threads engaged

1

Bathroom Silicon
(Not supplied)

2




3 
24h


Undermount Stud Framing

*Not suitable for bathtubs with a tile flange

ADA: In order for this to satisfy ADA requirements the installation must meet the standards set out in ANSI A117.1.

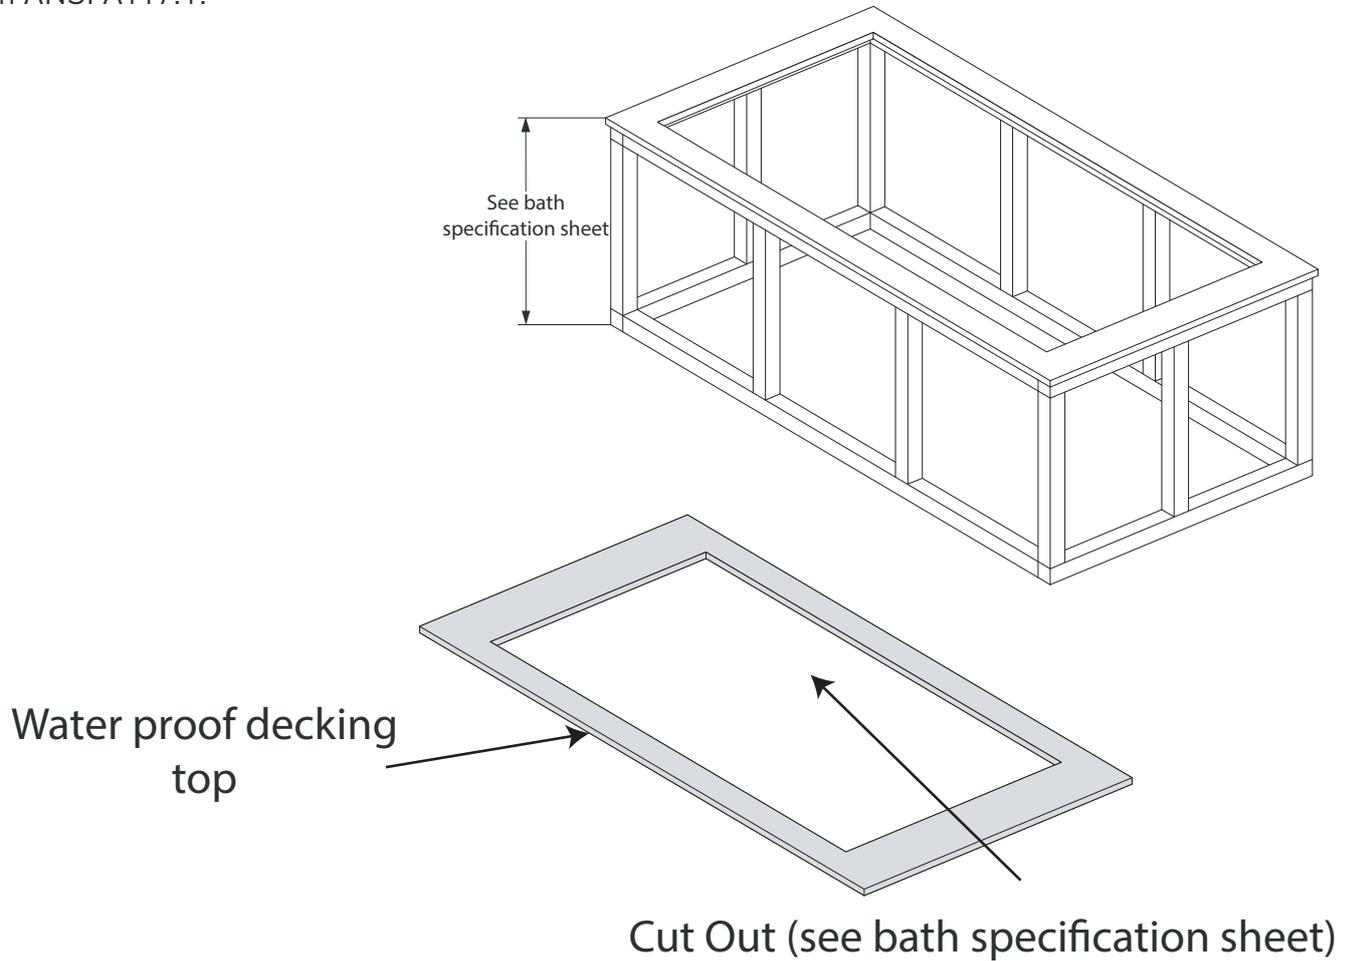


Stud Framing

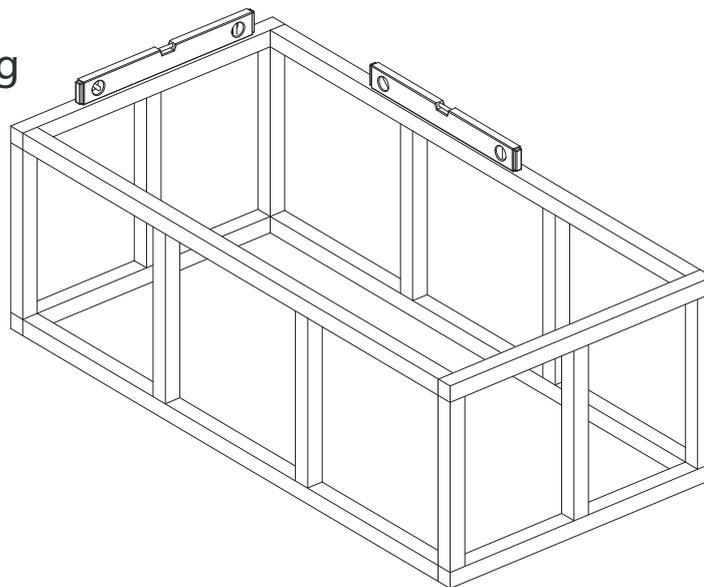


Note: DO NOT support the bathtub by the frame, the bath tub is self supporting on its feet

Undermount Fitting

*Not suitable for bathtubs with a tile flange

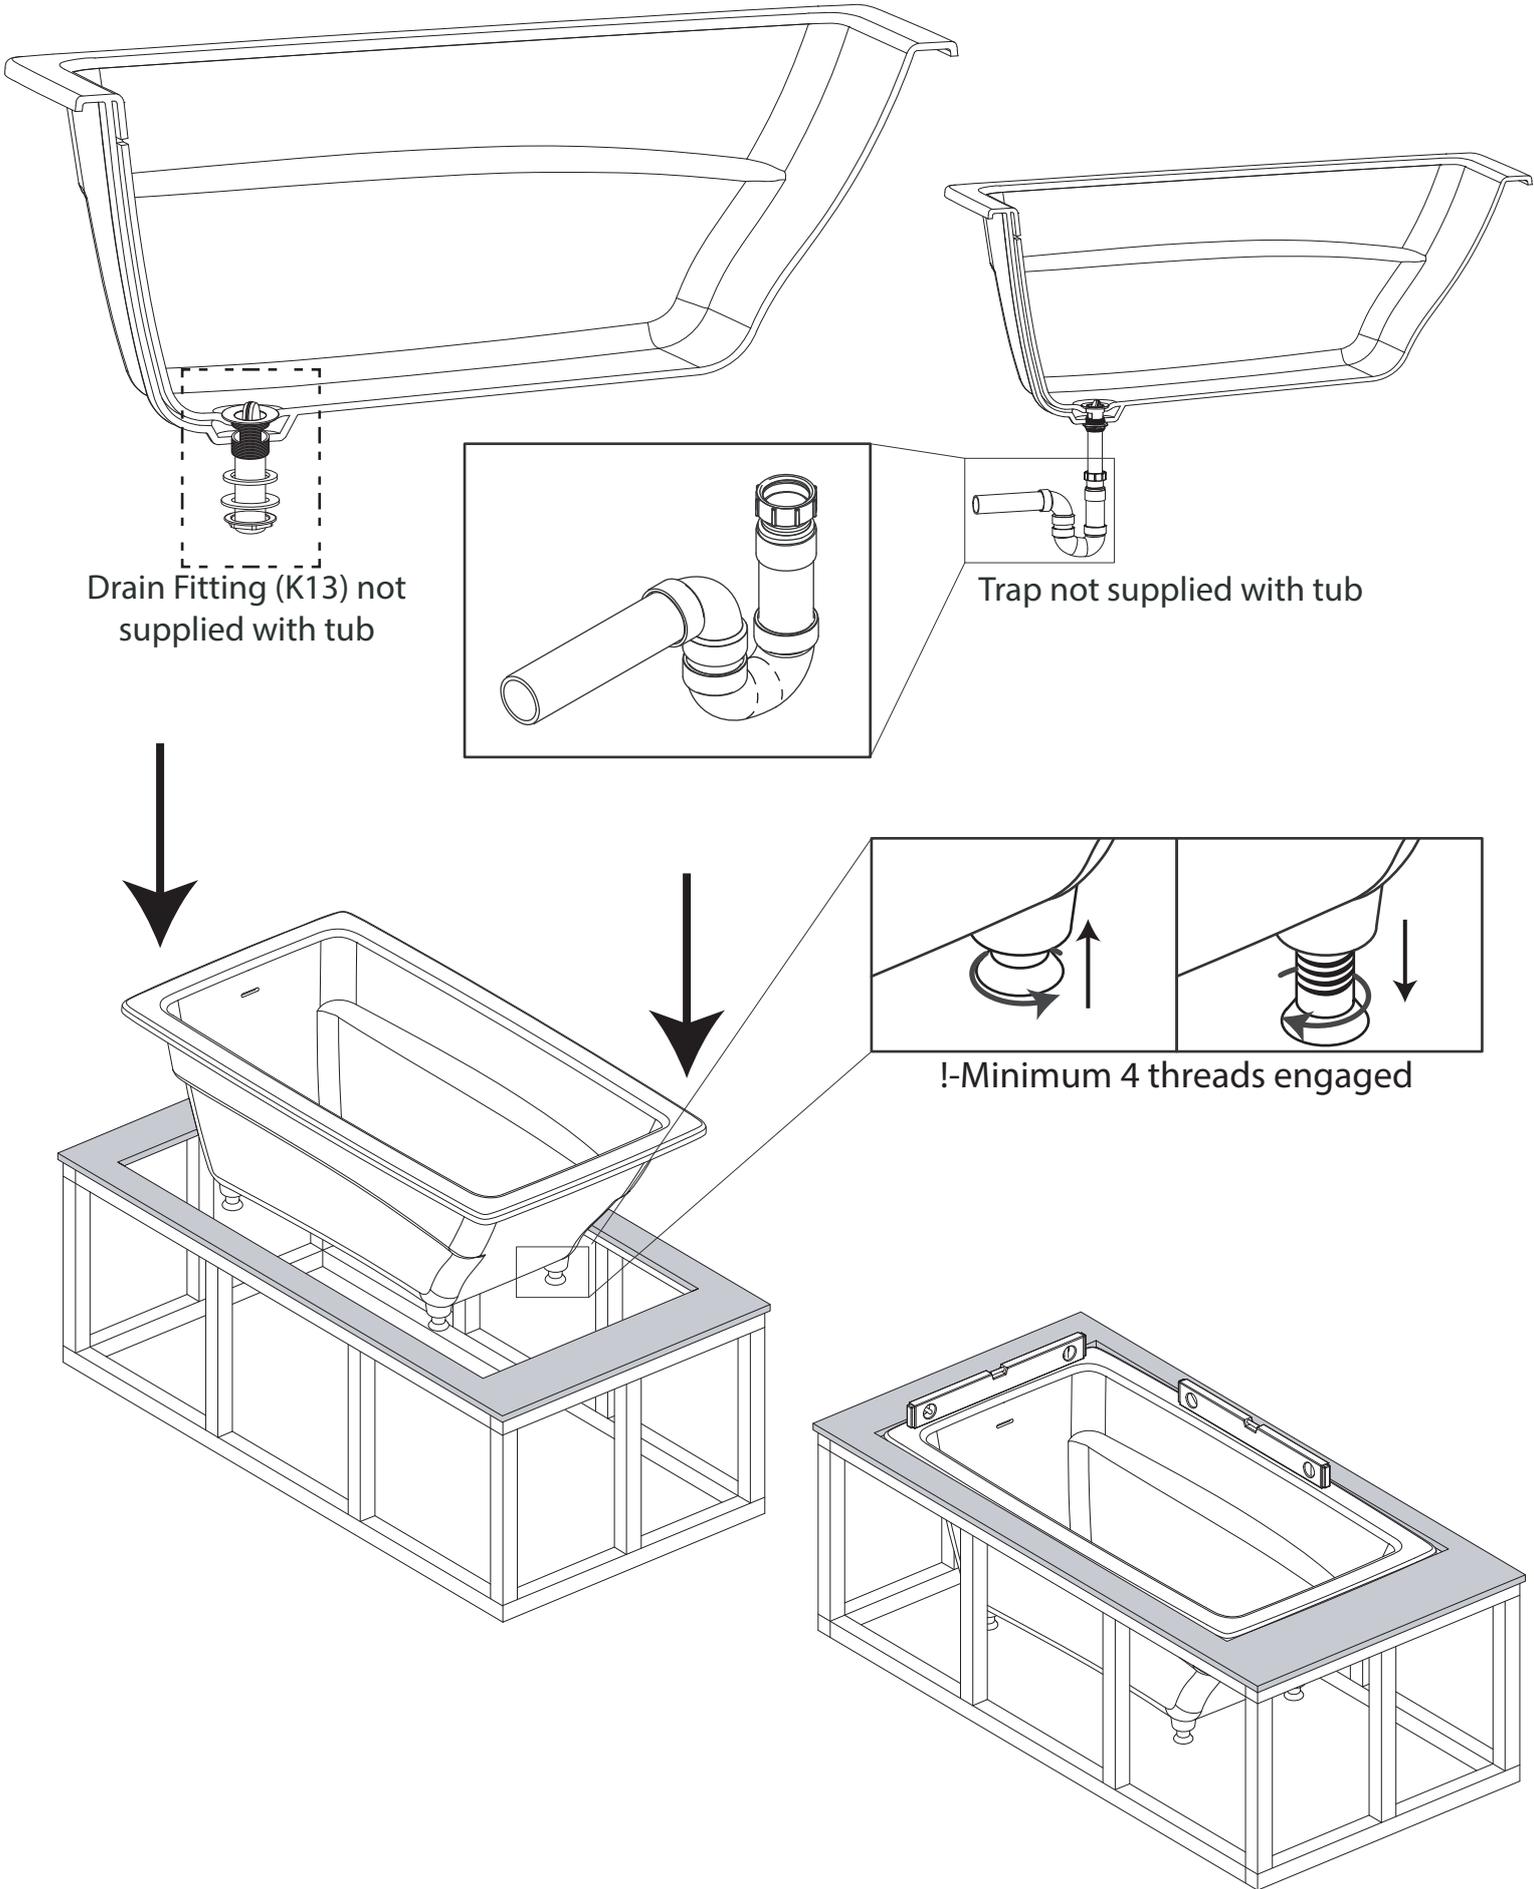

Undermount Fitting

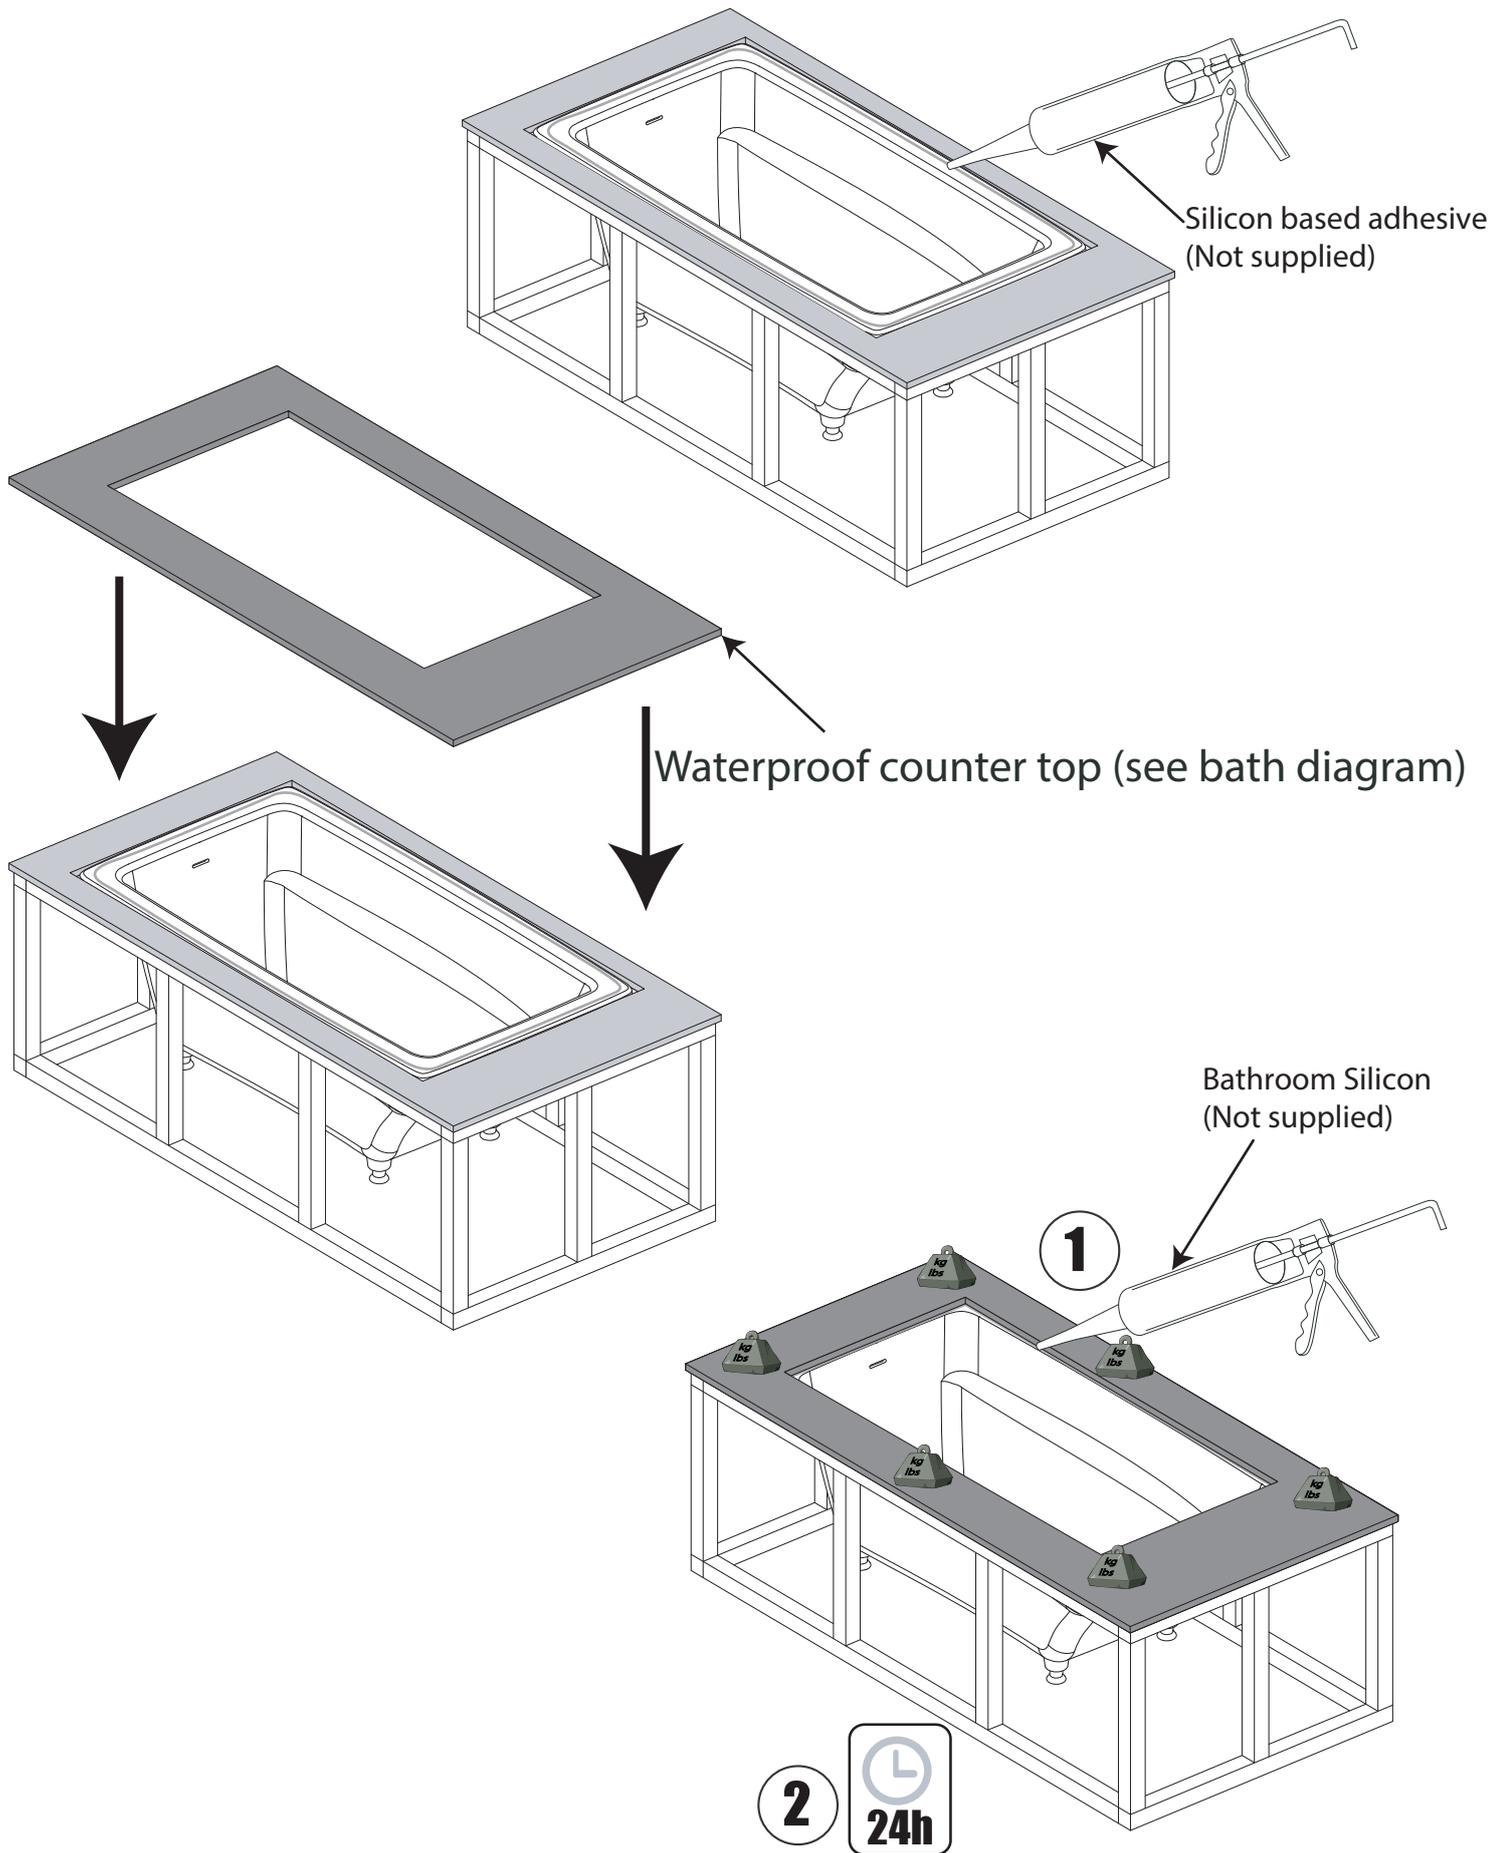

United Kingdom

VICTORIA & ALBERT BATHS LTD
i54 Business Park, 2 Pioneer Way,
Coven, Wolverhampton, WV9 5FH
United Kingdom

Europe

VICTORIA & ALBERT BATHS LTD
C/O AQUALISA INTERNATIONAL B.V.,
Jan Palfijnstraat, 8500 Kortrijk
Belgium

Riobel

PERRIN & ROWE
LONDON



victoria ⊕ albert®

ROHL

Schaub

EMTEK