a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

803-700 +B00

TOOLS REQUIRED:

Allen wrench (supplied, part # E)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Place your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

Note:

Unscrew all Bolts, lock washers and washers.
keep all Bolts , lock washers and washers
for installing the table top (Figure 1)

1. Align dowels at the frame with pre-drilled holes in the post base table.

2. Attach the base to the Pedestal, using , Bolts (B), Lock Washers (C) Flat Washers (D) tighten with Wrenchs (E) (Figure 2)

3. Lay the top on a clean and padded surface to prevent scratches. Attach the Pedestal with Table top . Use the bolts , lock washers, washers removed in (Figure 1) with Allen Wrench (E) To fit in as shown in (Figure 3 and Figure 4)

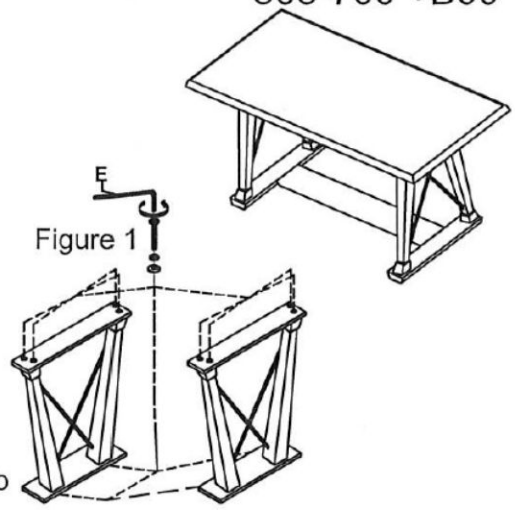


Figure 1

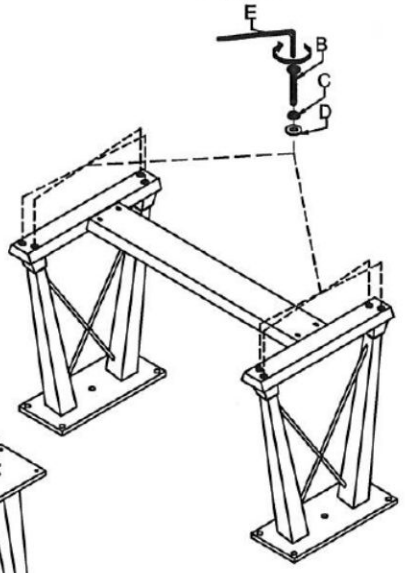


Figure 2

Figure 3

Figure 4

No.	Hardware List		Q'ty
A		Bolt Ø5/16xL1-1/2(Ø14)	02
B		Bolt Ø5/16xL2(Ø14)	08
C		Lock Washer Ø5/16xØ14x1mm	10
D		Flat WasherØ5/16xØ18x1mm	10
E		Allen Wrench 4mm	01

Thank you for purchasing furniture from american drew!