


#### BOX #1:

A. HEADBOARD PANEL 1 PC
B. LEFT LEG 1 PC
C. RIGHT LEG 1 PC
D. STRETCHER 1 PC

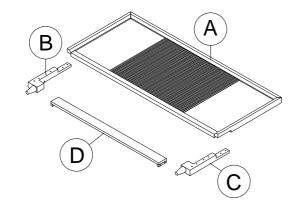


#### BOX #2:

E. FOOTBOARD 1 PC
F. SLAT ROLL 1 SET
G. CENTER LEG 10 PCS

F

#### BOX #3:


H. SIDE RAIL 2 PCS I. MATTRESS SPACER 2 PCS

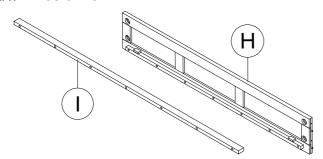

#### HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (8x50mm)	<b>(((()</b>	10 PCS
2	SPRING WASHER (9x13mm)	<b>ම</b>	10 PCS
3	FLAT WASHER (9x19mm)	0	10 PCS
4	ALLEN KEY		1 PC

#### FULLY ASSEMBLED

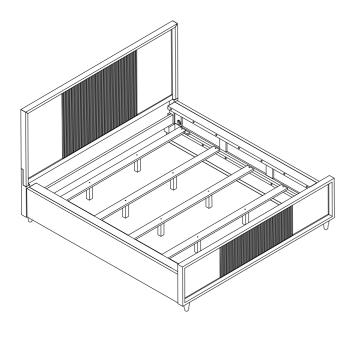


#### HARDWARE KIT PACKED IN BOX #2


No.	Description	Image	Quantity
1	THREADED BOLT (8x70mm)		8 PCS
2	SPRING WASHER (9x13mm)	◎	8 PCS
3	HALF MOON WASHER (9x28mm)	6	8 PCS
4	HEX NUT (8x13mm)	<b>(6)</b>	8 PCS
5	WRENCH (K13)		1 PC
6	WOOD SCREWS (4x30mm)	<b>←</b>	10 PCS
7	ALLEN BOLT (6x50mm)		14 PCS
8	ALLEN KEY		1 PC








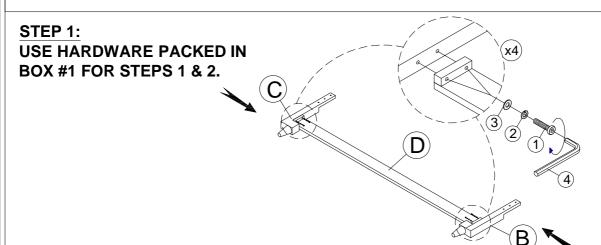


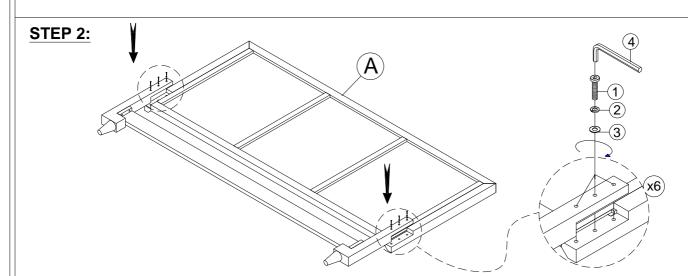

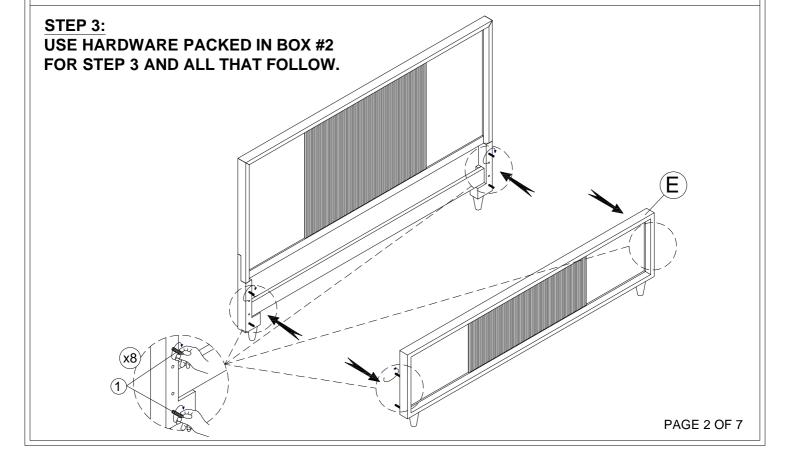




### STEP 4:

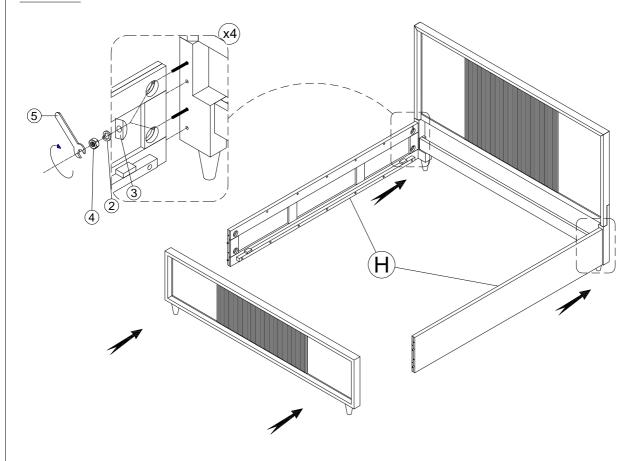

### STEP 5:

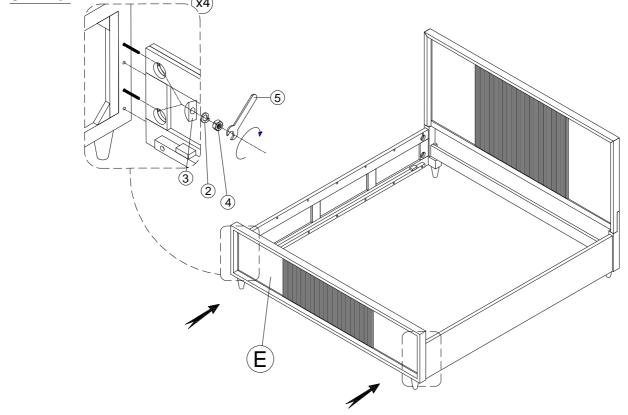

PAGE 3 OF 7







#### **STOP**

- \* IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- \* IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.


#### STEP 6:

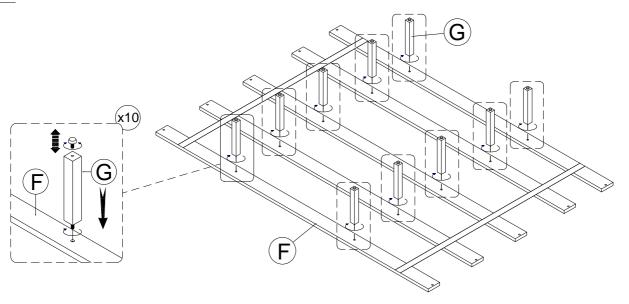

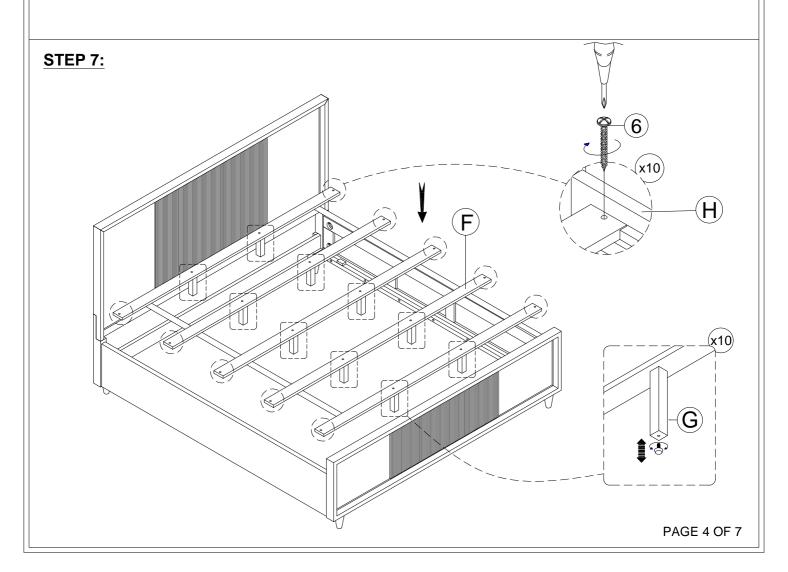





### STEP 8:

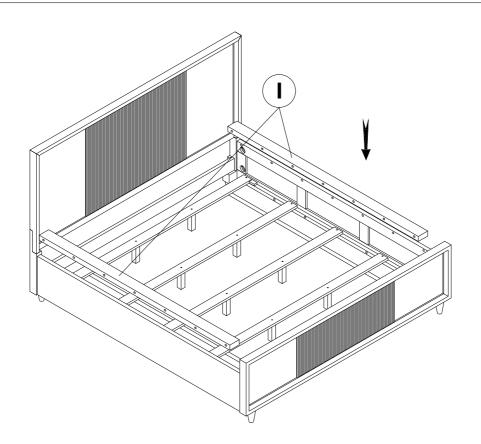

### STEP 9:

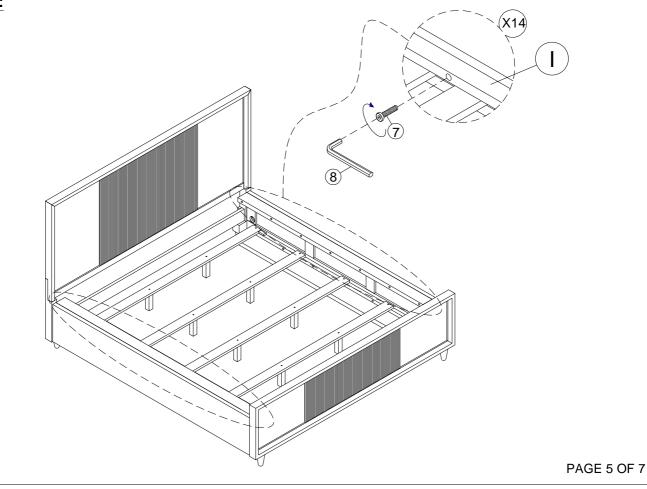



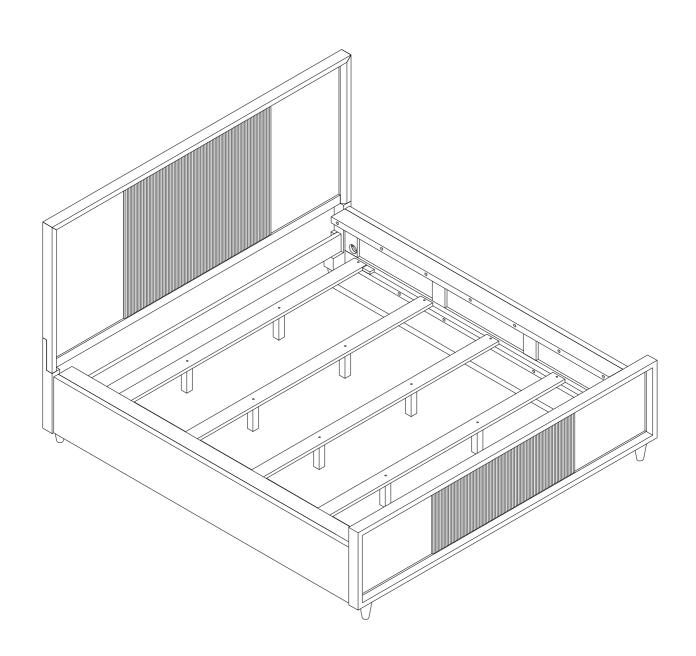


#### **ASSEMBLY COMPLETE**

#### **INSTRUCTIONS FOR ADJUSTING LEVELER:**

POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG.

TURN THE LEVELER COUNTER-CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.

ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT



#### **MAINTENANCE INSTRUCTIONS:**

PERIODICALLY CHECK ALL FITTINGS AND TIGHTEN IF NECESSARY AS THEY CAN LOOSEN OVER TIME.

REMOVE BOX SPRING AND MATTRESS BEFORE MOVING YOUR BED.

LIFT YOUR BED WHEN MOVING IT. DRAGGING CAN DAMAGE THE LEG SUPPORT.

READJUST LEVELERS AFTER MOVING YOUR BED.

PAGE 6 OF 7



#### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL 1 SET G. CENTER LEG 10 PCS I. MATTRESS SPACER 2 PCS

6. WOOD SCREW (4x30mm) 10 PCS 7. ALLEN BOLT (M6x50mm) 14 PCS

#### STEP 1:

USE ALLEN KEY (8) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS

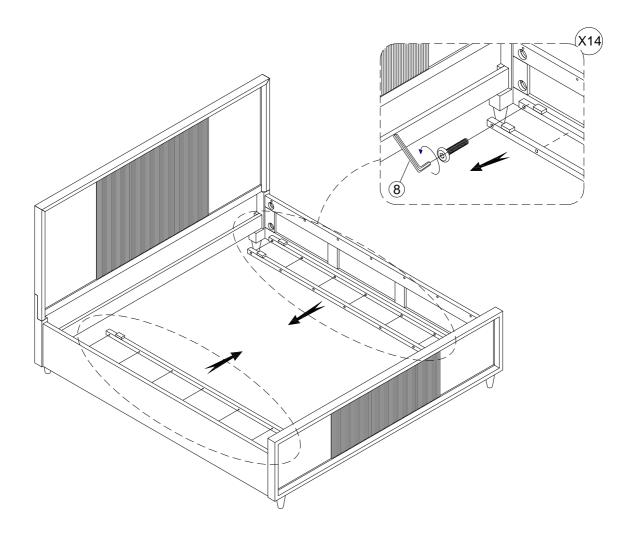

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

PAGE 7 OF 7