
american drew
•inspired design•

ASSEMBLY INSTRUCTIONS

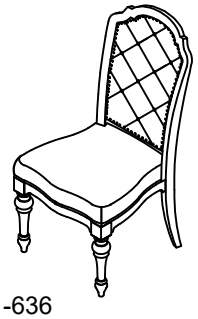

011-636

TOOLS REQUIRED:

Allen Key (supplied, part # E)
Spanner Wrench (supplied, part # G)
Phillips Head Screwdriver (Not Provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.


INSTRUCTIONS:

1. Place the Chair Back facing upward on a soft and flat surface . Attach chair seat to the chair back, using Flat Washer (D), Lock Washer (C), Bolts (A). Tighten with Wrench (E). (See Figure 1)

2. Place the Chair Back facing upward on a soft and flat surface . Attach chair seat to the chair back, using Flat Washer (D), Lock Washer (C), Bolts (B) for in the corners. Tighten with Wrench (E). (See Figure 2)

3. Attach the front leg to the front corner block of the chair seat, using Flat Washer (D), Lock Washer (C), Nuts (F) and tighten all nuts with Wrench (G). (See Figure 3)

4. Tighten all bolts and nuts before use.

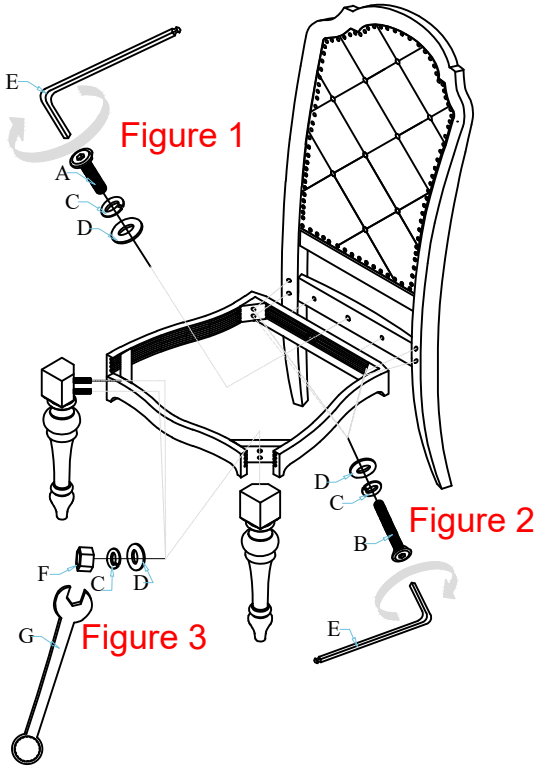

No.	Hardware List		Q'ty
A		Bolt Ø5/16"xL1-3/4"	1
B		Bolt Ø5/16"xL3"	4
C		Lock Washer Ø5/16"	9
D		Flat Washer Ø5/16"	9
E		Allen Wrench 4mm	1
F		Hex Nut Ø5/16"	4
G		Spanner Wrench 12mm	1

Thank you for purchasing furniture from american drew!