



ASSEMBLY INSTRUCTION

Slat Twin Bed



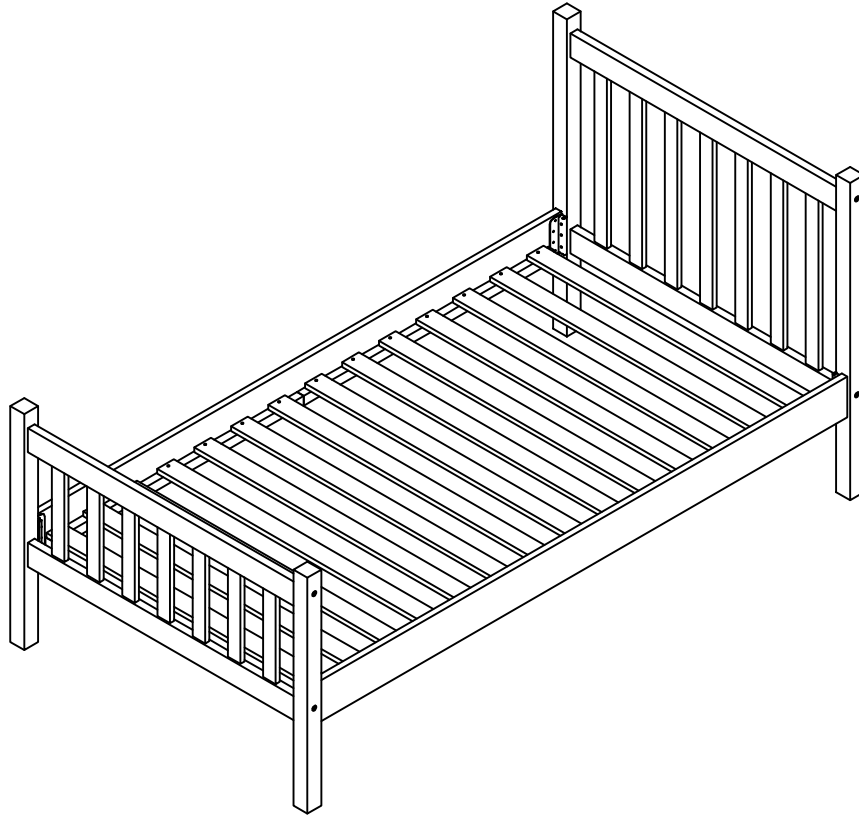


REPLACEMENT PARTS



Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at " www.boltonfurniture.com "

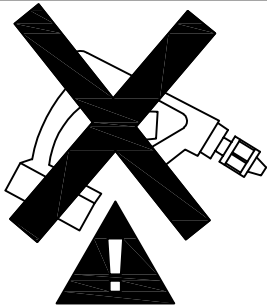

. Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe !!!
. Please assemble on a clean soft surface to avoid damage.

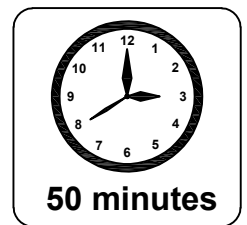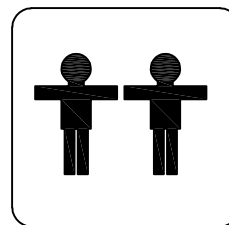


Tools Required

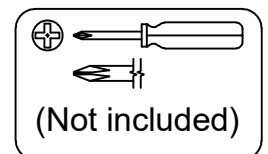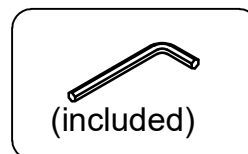

www.boltonfurniture.com

Part List :

01	1 pcs
02	1 pcs
03	1 pcs
04	1 pcs
05	1 pcs
06	1 pcs
07	2 pcs
08	14 pcs

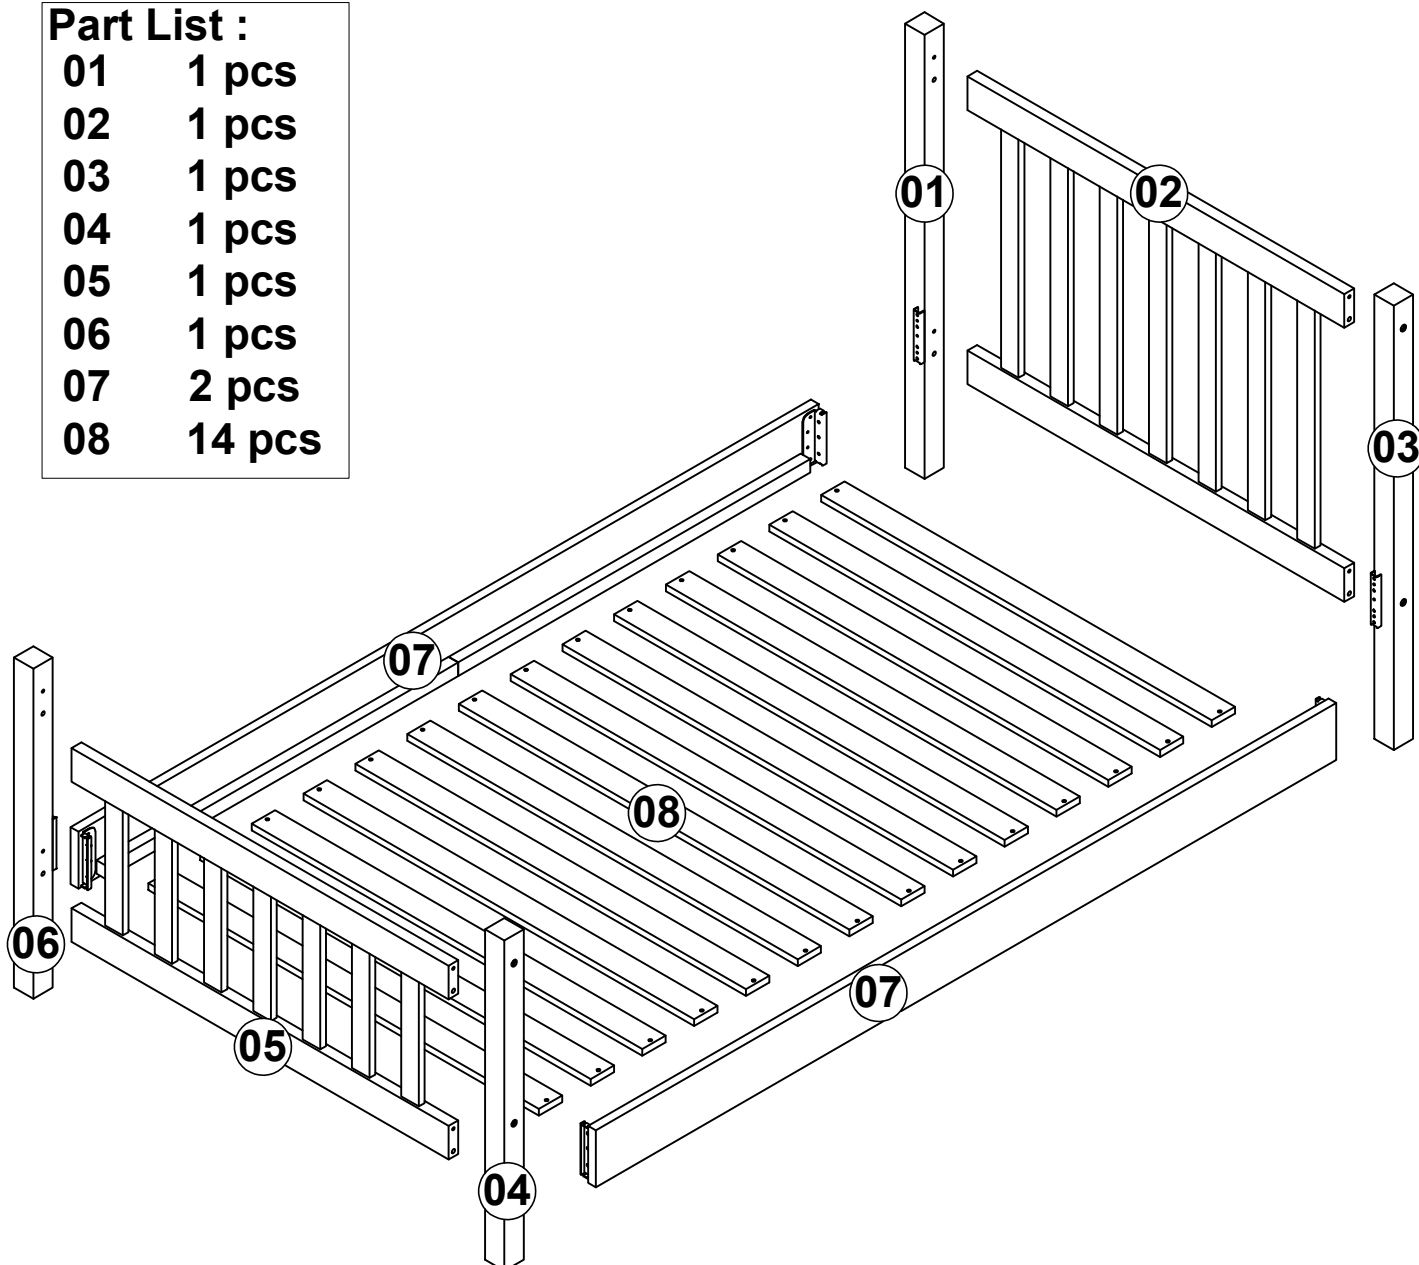

Identifying the hardware-Identify the hardware using the illustrations below


A



Ø10x35

08

B



M6x70mm Bolt

08

C



φ4 x 30mm Screw

28

D



M6x10mm Bolt


08

E



02

F



Spacer 73 mm

02

G




M6 x 13 mm

08

www.boltonfurniture.com

Step 01

A  **Ø10x35 08**

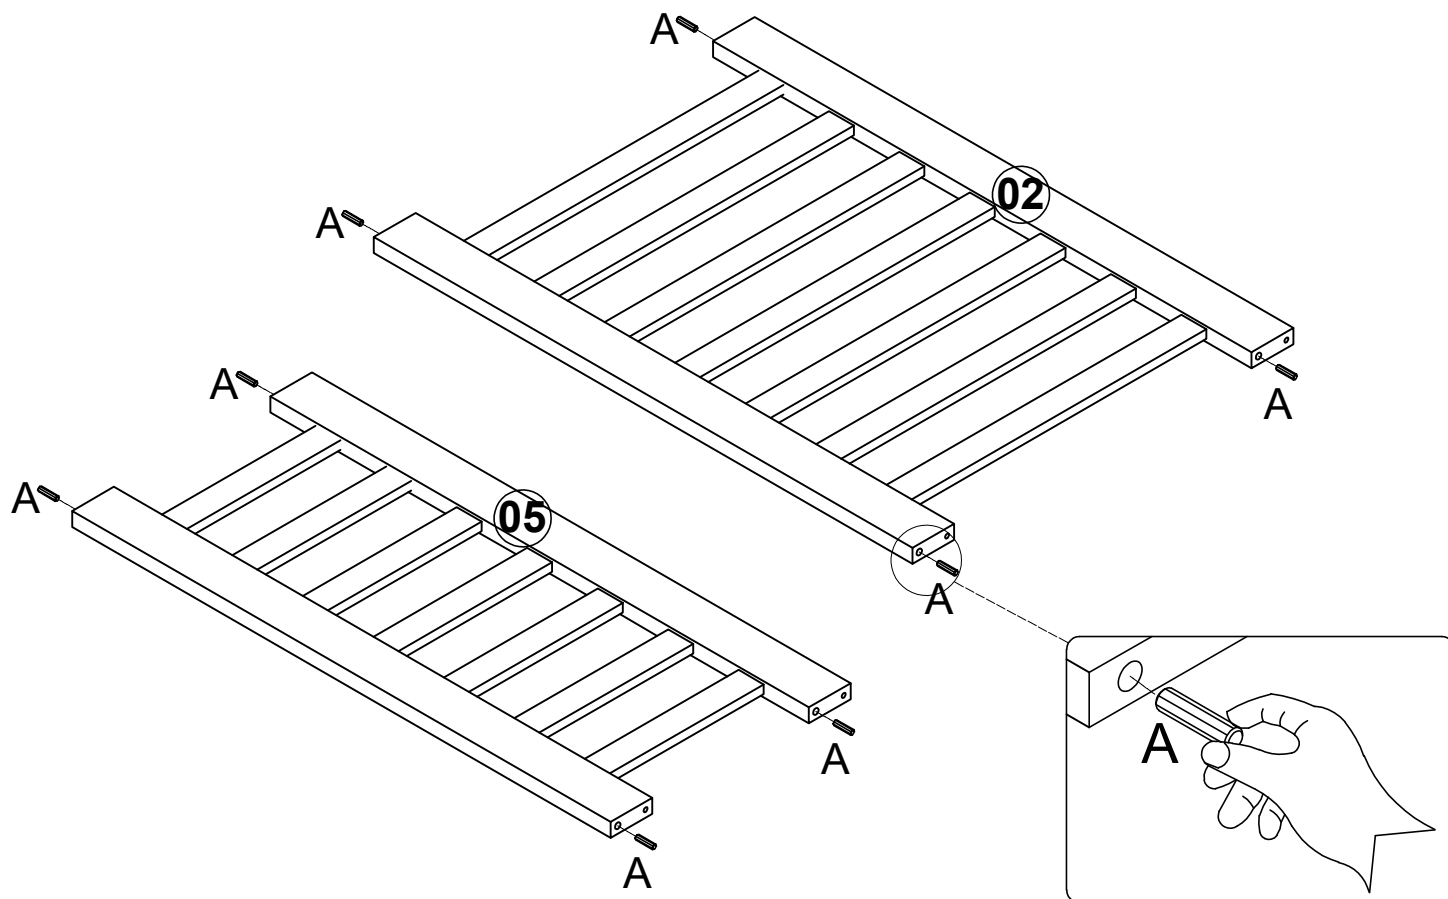


Step 02

B  **M6x70mm Bolt 08**

G  **M6 x 13 mm 08**

E  **01**


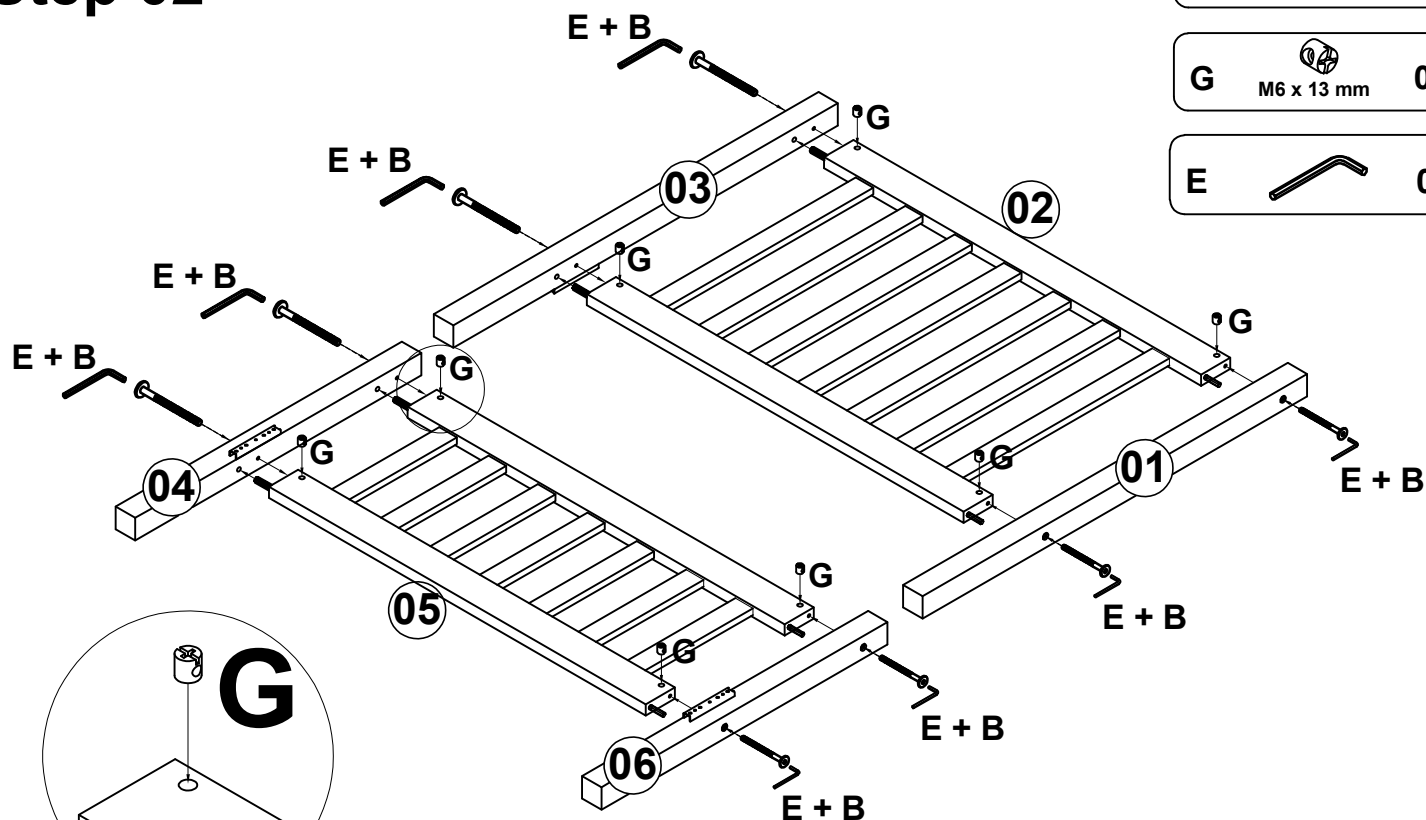


www.boltonfurniture.com


Step 03

D  **08**
M6x10mm Bolt

E  **01**

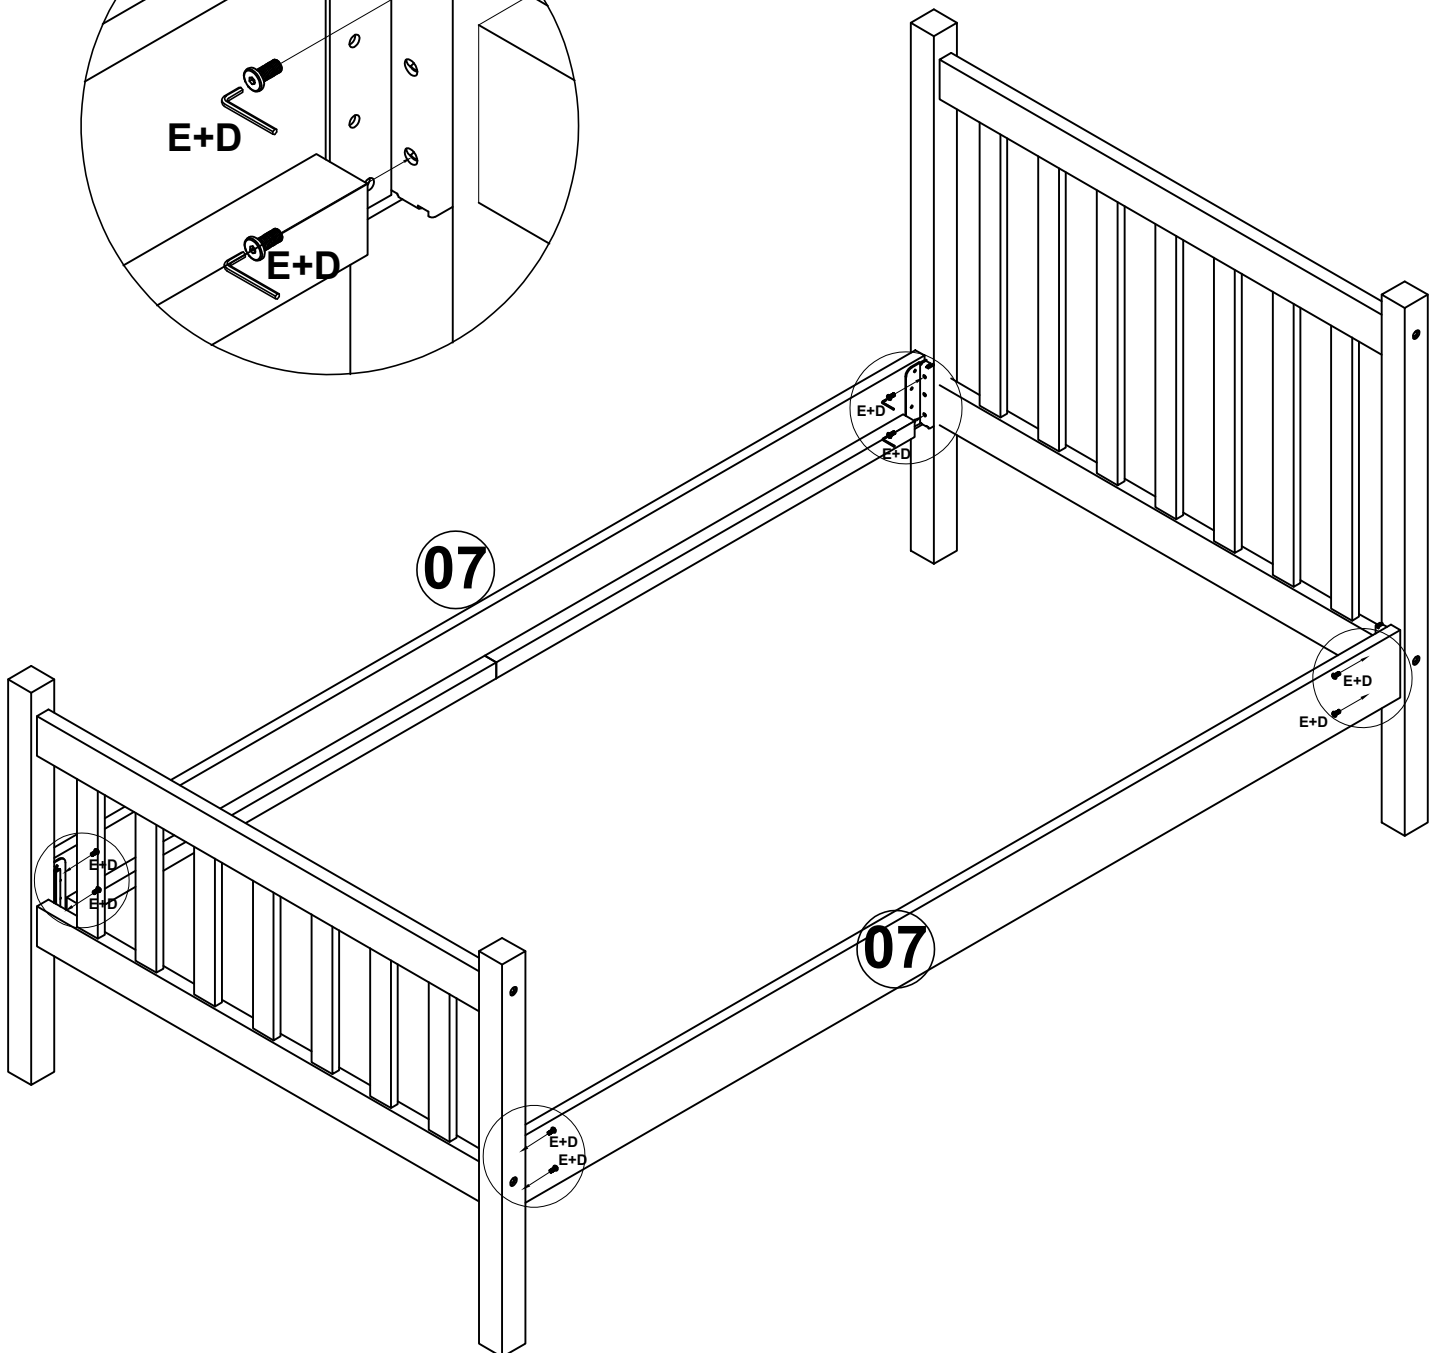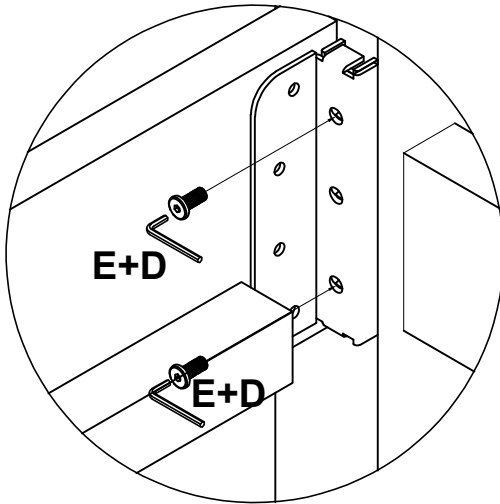

Step 04

C	 φ4x30mm Screw	28
F	 Spacer 73mm	02
	 (Not included)	01

