


1. Open the envelopes and remove the contents.



- 3. Fold on the indicated lines and secure the end tab into the slot. (See diagram below)
- \* Printed side should face out.

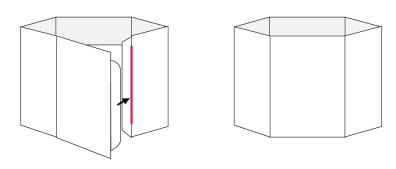

4. Fold the arms of the starburst center pot piece down. The black hexagon should face up. Slide this center piece inside the pot base created in step 3. *(See diagram below)* 

