

Aqua Non-Electric Bidet Toilet Attachment INSTALLATION INSTRUCTIONS

Swiss Madison®
well made forever


Prior to Installation:

- Inspect product to ensure no damages have occurred during shipping.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.
- Keep out of freezing temperatures.

Recommended Tools:

- Screwdriver
- Wrench

Included Parts:

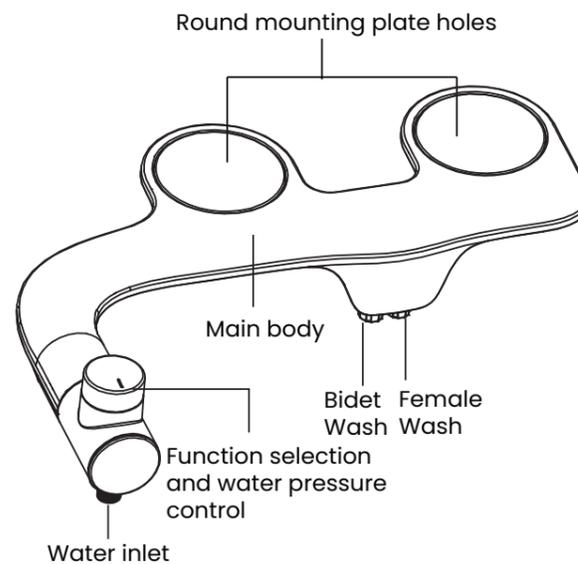

Round mounting Plates (2)



Non-slip mat (2)



Flexible hose



Adapter




Toilet Seat Bumpers (3)
not required for install



Teflon tape
not required for install

1. Remove Old Seat



- Remove existing toilet seat.
- Turn off water valve.
- Flush toilet to drain tank completely.

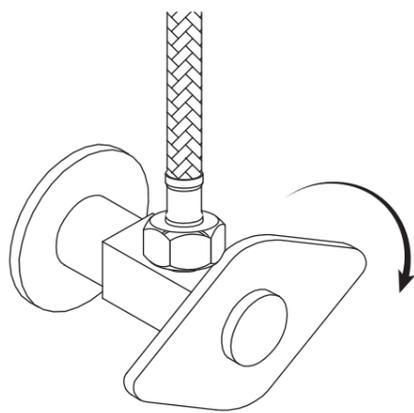

2. Connect Adapter


- Disconnect existing water pipe from toilet.
- Attach adapter to the toilet's water supply and then connect to the water valve. (Optional: You may choose to use Teflon tape while installing the adapter to the water supply line, but it is not required.)

NOTE: Overtightening the water valve can cause damage to the threads and result in water leakage. We recommend tightening the valve by hand and checking for any leakage. If additional force is needed to tighten, you may use a wrench and slowly make a quarter turn at a time until fully secured.

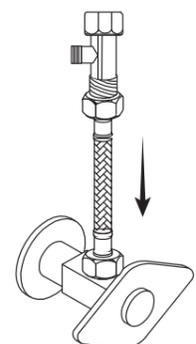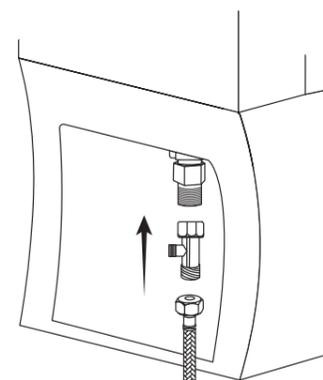


3. Install Bidet Attachment

- Insert the rubber non-slip mats into the bottom of the bidet and place the round mounting plates into the bidet attachment.
- Install the bidet attachment onto the toilet and adjust until it's in the proper position.

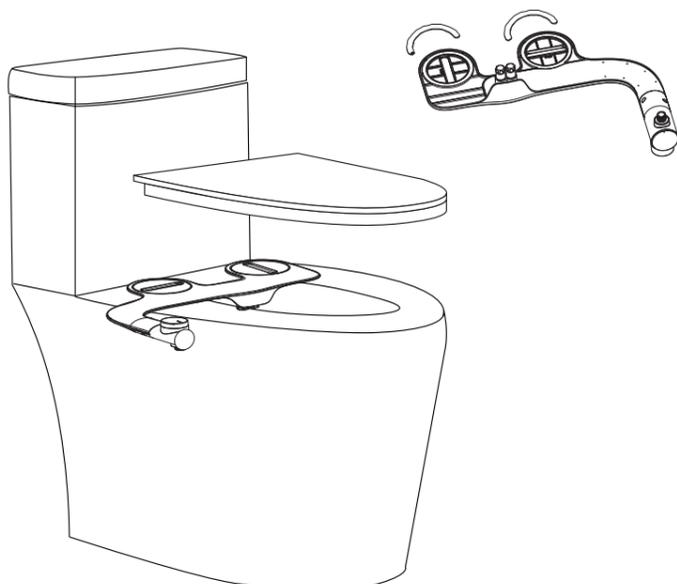

4. (OPTIONAL) Install Toilet Seat Bumpers

- Toilet seat bumpers are provided in this package in the event that the existing seat must be raised to be level with your new bidet attachment.
- To apply the bumpers, simply remove the protective film on the bottom of each bumper and stick the adhesive side directly to the bottom of your seat (recommended placement shown below).

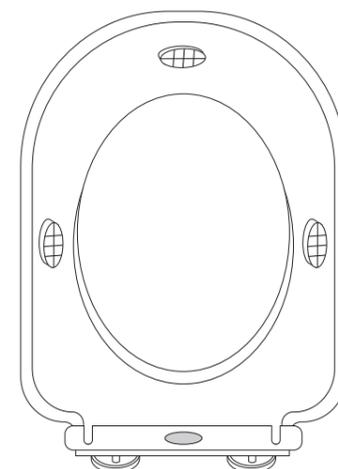


Aqua Non-Electric Bidet Toilet Attachment

USAGE INSTRUCTIONS

Swiss Madison®
well made forever

Use:

- Adjust the function selection and water pressure control knob to find a comfortable pressure. This is a manual bidet system. The on/off functions and water pressure will not adjust automatically. The user must operate features manually using the control knob.

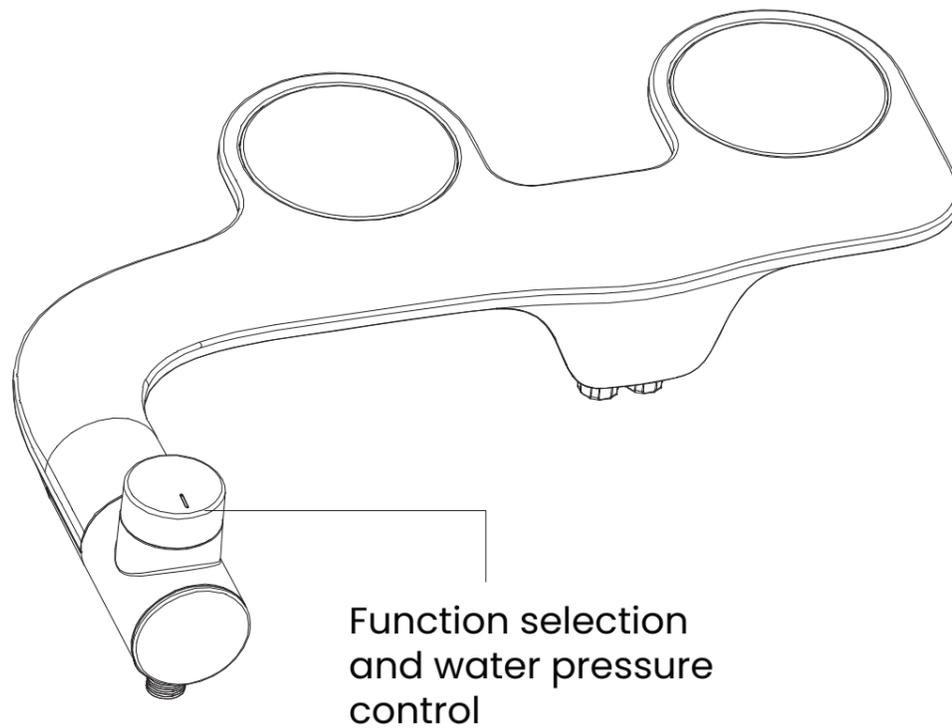

Troubleshooting:

- If your spray outlet hole is clogged for some reason, simply try to move the spray outlet up and down for a few times manually.

