ASSEMBLY INSTRUCTION


KINCAID
SOLID WOOD SINCE 1946

www.kincaidfurniture.com
Phone :828-728-3261.


537-130 GLENWOOD DRESSER
537-040 GLENWOOD MIRROR

I M P O R T A N T N O T E S :


- Place all wooden parts on a clean and smooth surface such as a rug or carpet to prevent the parts from being scratched .
- Check to be sure that you have all parts and hardware .
- Remove all wrapping materials, including staples and packing straps before you start to assemble .
- Do not tighten all screws and bolts until completely assembled .
- Keep all hardware out of the reach of children .

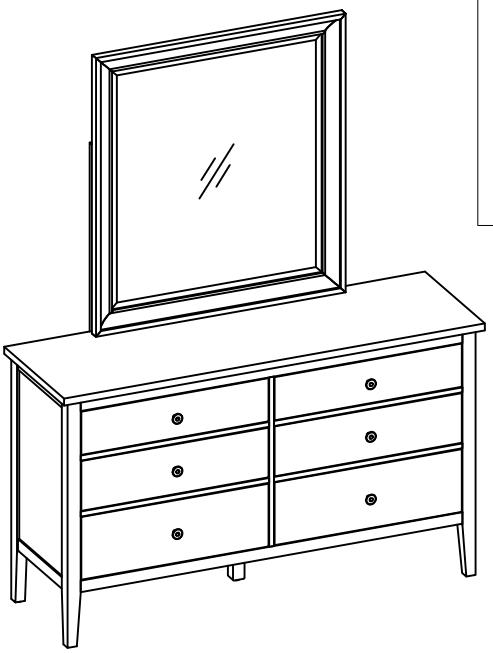

OPTION 1

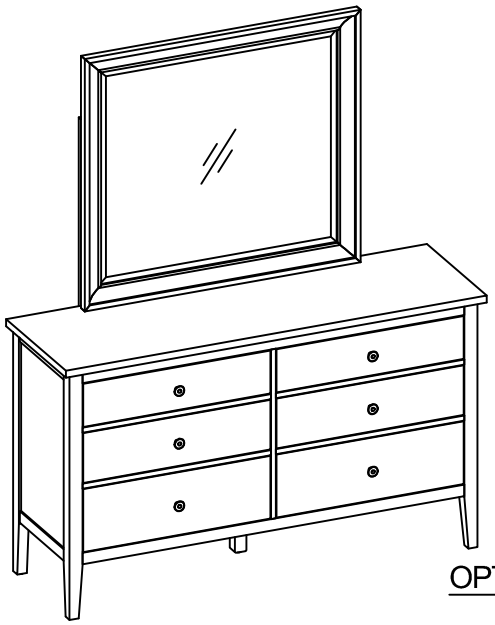

OPTION 2

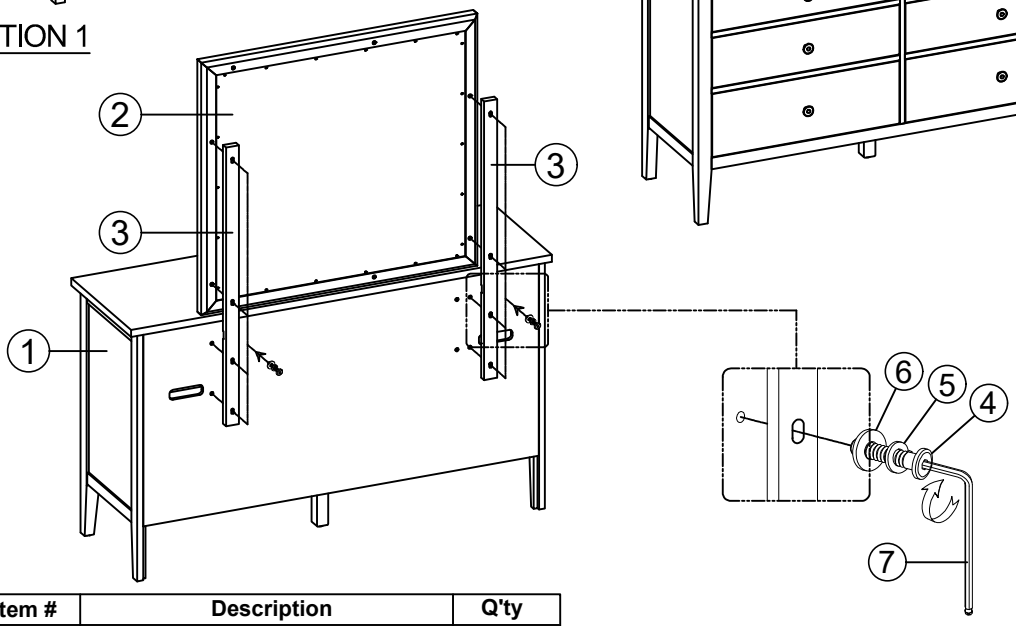

Item #	Description	Q'ty
1.	Dresser	1
2.	Mirror	1
3.	Support bar	2
4.	Bolt Ø6	8
5.	Lock washer Ø6	8
6.	Flat washer Ø6	8
7.	Allen key	1

MADE IN VIETNAM