

Swell Flush Mount 20"


SCHOOLHOUSE

REQUIRED TOOLS:

- Phillips Head Screwdriver

INCLUDED HARDWARE:

Wiring Kit (1x)

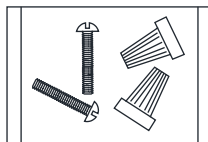

INSTALLATION INSTRUCTIONS

1. Install Canopy Bracket onto Junction Box using the provided Mount Screws from Wiring Kit.
2. Wire the Fixture to the Junction Box. Consult electrician if necessary.
3. Attach Canopy to Canopy Bracket using Side-Mount Screws.
4. Install the Bulb. (not included).
5. Install the Glass Shade.

