







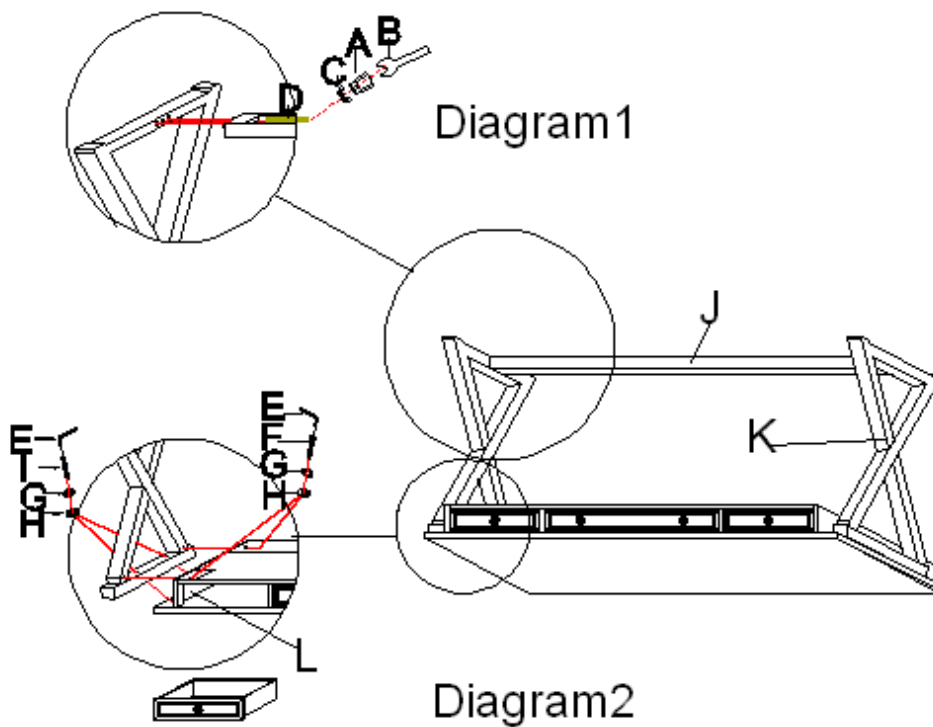
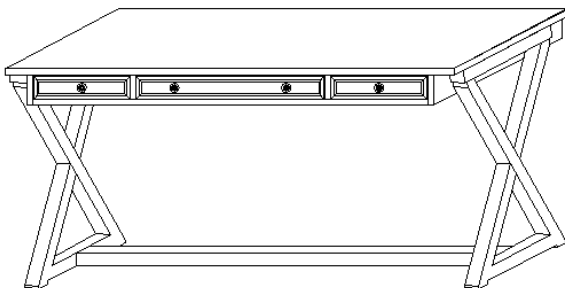


ASSEMBLY INSTRUCTION

Item#: 638-50003 Bennett X-Base Writing Desk

** Please make sure you have all parts indicated below prior to assembly.

NO.	HARDWARE LIST		QTY
A		NUT	2
B		SPANNER	1
C		CURVED WASHER	2
D		BOLT	2
E		ALLEN WRENCH	1
F		35mm BOLT	4
G		LOCK WASHER	8
H		FLAT WASHER	8
I		55mm BOLT	4



Assembly steps:

1. Pull out two side drawers and place desk top upside down on a soft surface to prevent from scratching top.
2. Insert one bolt(D) into hole of left and right X-bases(K), attach the end of stretcher(J) to bolts(D) on X-bases(K) using curved washer(C), nut(A), tighten securely with spanner (B)(see diagram 1).
3. Attach assembled X-base(K) to the top panel using bolts (I), lock washers (G), flat washers (H), and secure all bolts with allen wrench (E) in a clockwise direction (see Diagram 2).
4. Then secure assembled X-base with the end of side top by using allen wrench(E), bolts(F), lock washers(G) and flat washers(H) in a clockwise direction (see Diagram 2).
5. Turn the desk upright and put drawers back.

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.