
a m e r i c a n d r e w
• i n s p i r e d d e s i g n •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

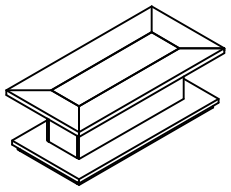

305-910

TOOLS REQUIRED:

Allen wrench (supplied, part # D)
Phillips Screwdriver （Not Provided)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Attach four side panels together, tighten Bolt (A), Lock Washer (B) and Flat Washer (C) by using Allen Wrench (D) as shown in Figure 1.
2. Turn the table top upside down on to a clean, soft surface. Attach the assembly to the table top, tighten Bolt (A),Lock Washer (B) and Flat Washer (C) by using Allen Wrench (D) as shown in Figure 2.
3. Attach the bottom panel to the side panels, tighten Bolt (A), Lock Washer (B) and Flat Washer (C) by using Allen Wrench (D) as shown in Figure 3.
4. Attach the casters (F) to bottom panel using screw (E) as shown in Figure 4.

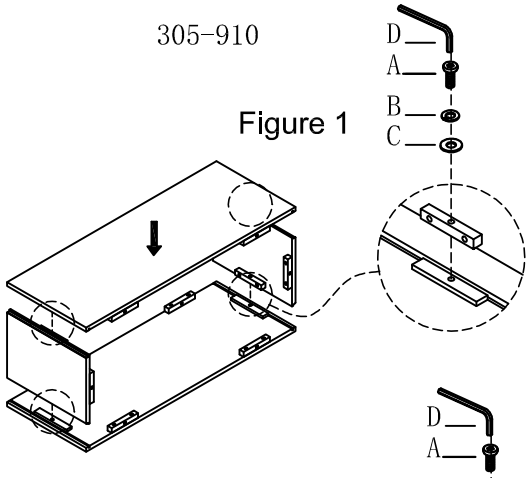


Figure 1

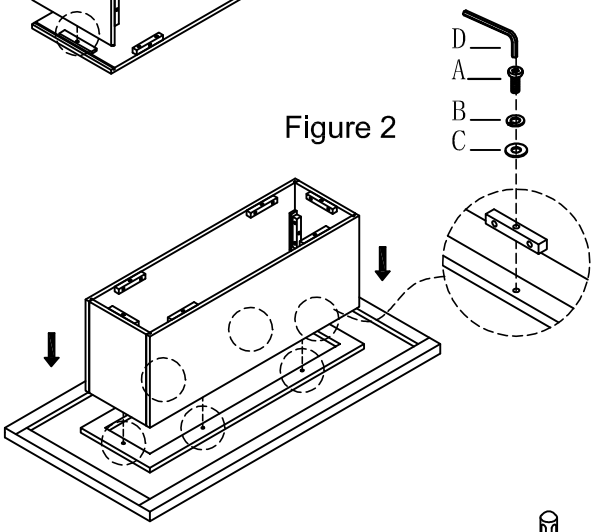


Figure 2

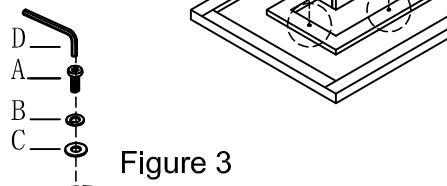
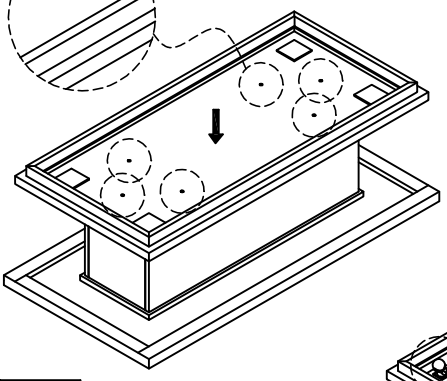


Figure 3




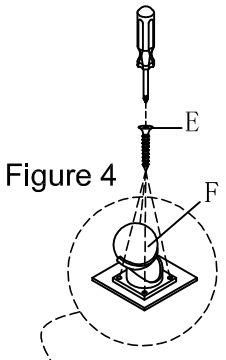


Figure 4

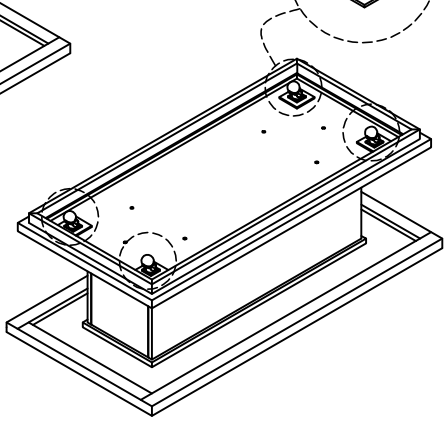

No.	Hardware List		Q'ty
A		Bolt (□5/16″x 1 1/2″)	16pcs
B		Lock Washer (□5/16″)	16pcs
C		Flat Washer (□5/16″*19mm)	16pcs
D		Allen Wrench (100*50*4mm)	1pc
E		Screw (Φ8x5/8″)	16pcs
F		Caster (Φ50*H64mm)	4pcs

Thank you for purchasing furniture from american drew!