NOTES:

• Instructions are applicable to sconce and surface mount versions.


REQUIRED TOOLS:

• Phillips Head Screwdriver

INCLUDED HARDWARE:



Wiring Kit (x1)

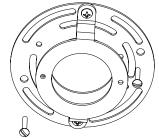

8-32 x 1" Screws (x2)

Circle Bracket Assembly (x1)

INSTALLATION INSTRUCTIONS

- 1. Detach Bracket Assembly from Scallop Fixture by removing 8-32 x 1" Decorative Mounting Screws with a flat head screwdriver (not included). Reserve screws for final step of installation.
 - a. Attach Bracket to the junction box using provided Screws in Wiring Kit.
- 2. Wire Scalloped Fixture to Junction Box using provided Wiring Kit. Ensure Wire Nuts are behind the fixture Mounting Bracket and inside the electrical Junction Box. Consult electrician if necessary.
- 3. Slip the fixture over the Bracket Assembly and align holes on fixture with the holes on the Bracket Stand-offs. Attach the fixture to the Bracket using reserved 8-32 x 1" Screws. Tighten securely.

