






MFI MODUS
FURNITURE
INTERNATIONAL

E. SLAT SUPPORT 1 PC

The diagram illustrates the assembly of the slat support. It features a perspective view of the cabinet with label B, a side view of the slat support with label E, a detail of a screw with label D, and a perspective view of the slat support with label C.


PCS

A line drawing of a bed frame. The headboard is at the top right, featuring a square frame with two diagonal cross-braces. The footboard is at the bottom left, featuring a rectangular frame with two drawers, each having a horizontal handle. The bed base consists of numerous parallel slats. The entire frame is supported by four legs.

1	ALLEN BOLT M8 x 30 MM	16 PCS	2	WASHER M8/19	16 PCS	3	ALLEN KEY (4MM)	02 PCS	4	SCREW M4 x 30MM	24 PCS
											
<p>TOOL REQUIRED</p> <p>PHILLS HEAD SCREW DRIVER NOT PROVIDED</p> <div data-bbox="927 1984 1187 2087">  </div>											


STEP 1:

ATTACH ONE SIDE RAIL (F) TO THE HEADBOARD (A) USING FOUR ALLEN BOLTS (1) AND FLAT WASHERS (2). ONLY FINGER TIGHTEN THE BOLTS!

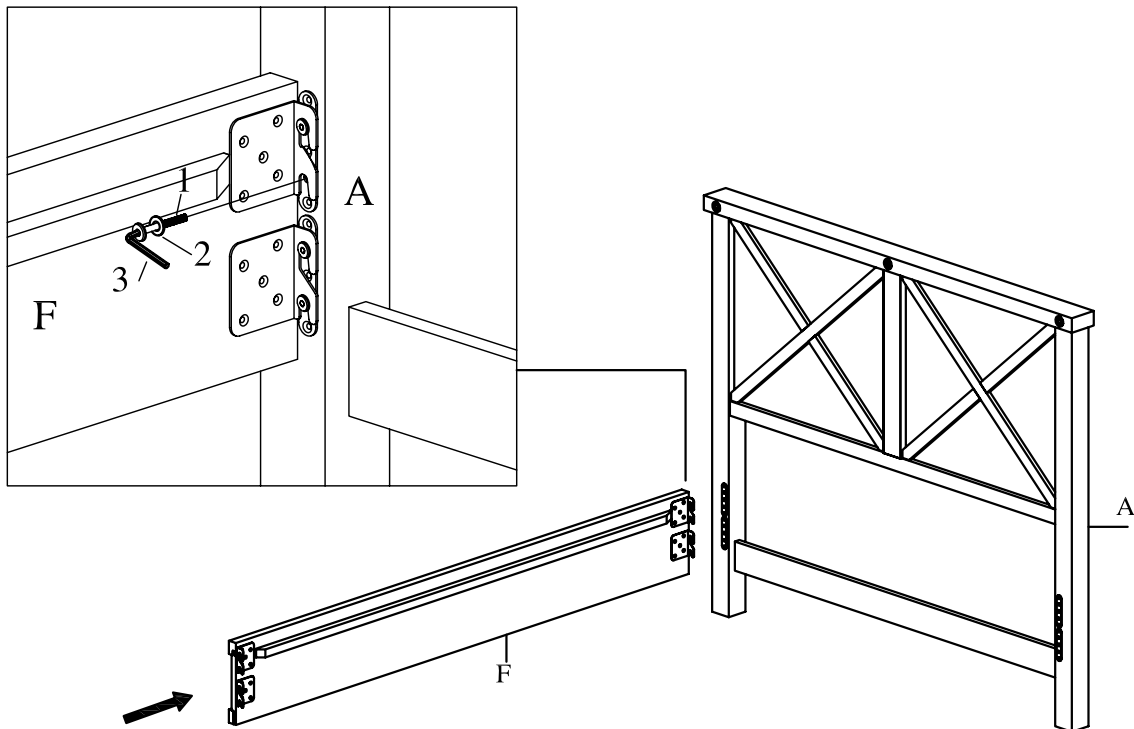


STEP 2:

ATTACH THE FOOTBOARD (B) TO THE ATTACHED SIDE RAIL WITH FOUR ALLEN BOLTS AND FLAT WASHERS. ONLY FINGER TIGHTEN THE BOLTS!

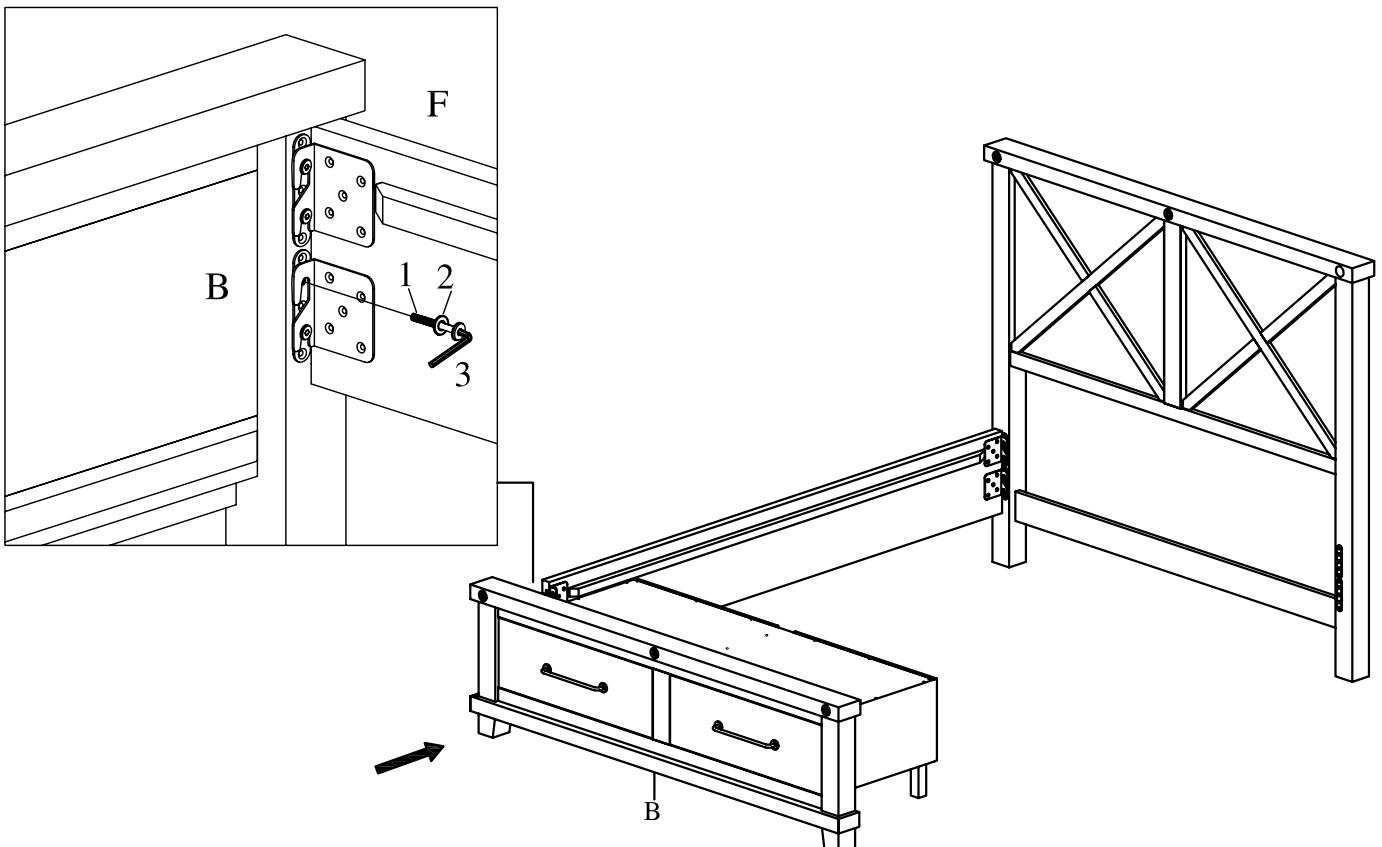


STEP 3:

ATTACH THE SECOND SIDE RAIL TO THE BED ASSEMBLY USING EIGHT ALLEN BOLTS AND FLAT WASHERS. TIGHTEN ALL BOLTS, INCLUDING THOSE FROM STEP 1 & 2, COMPLETELY WITH ALLEN KEY (3).

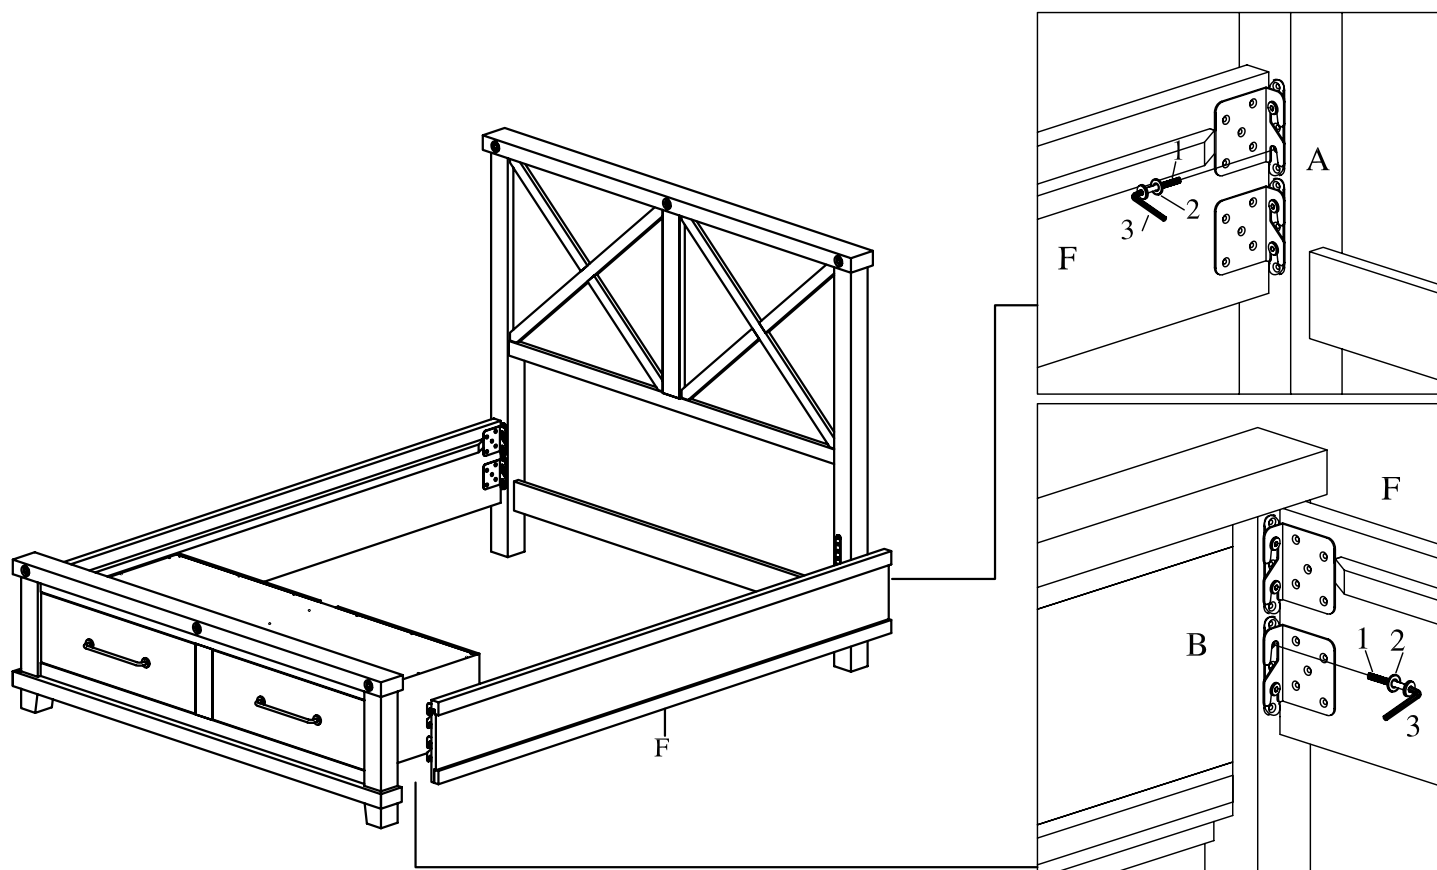


STEP 4:

LINING UP THE HOLES ON THE CENTER SLAT SUPPORT (E) WITH THE CORRESPONDING HOLES ON THE SLAT ROLL (C), SECURE THE TWO TOGETHER BY SCREWING IN THE CENTER SLAT SUPPORTS (D) CLOCKWISE.

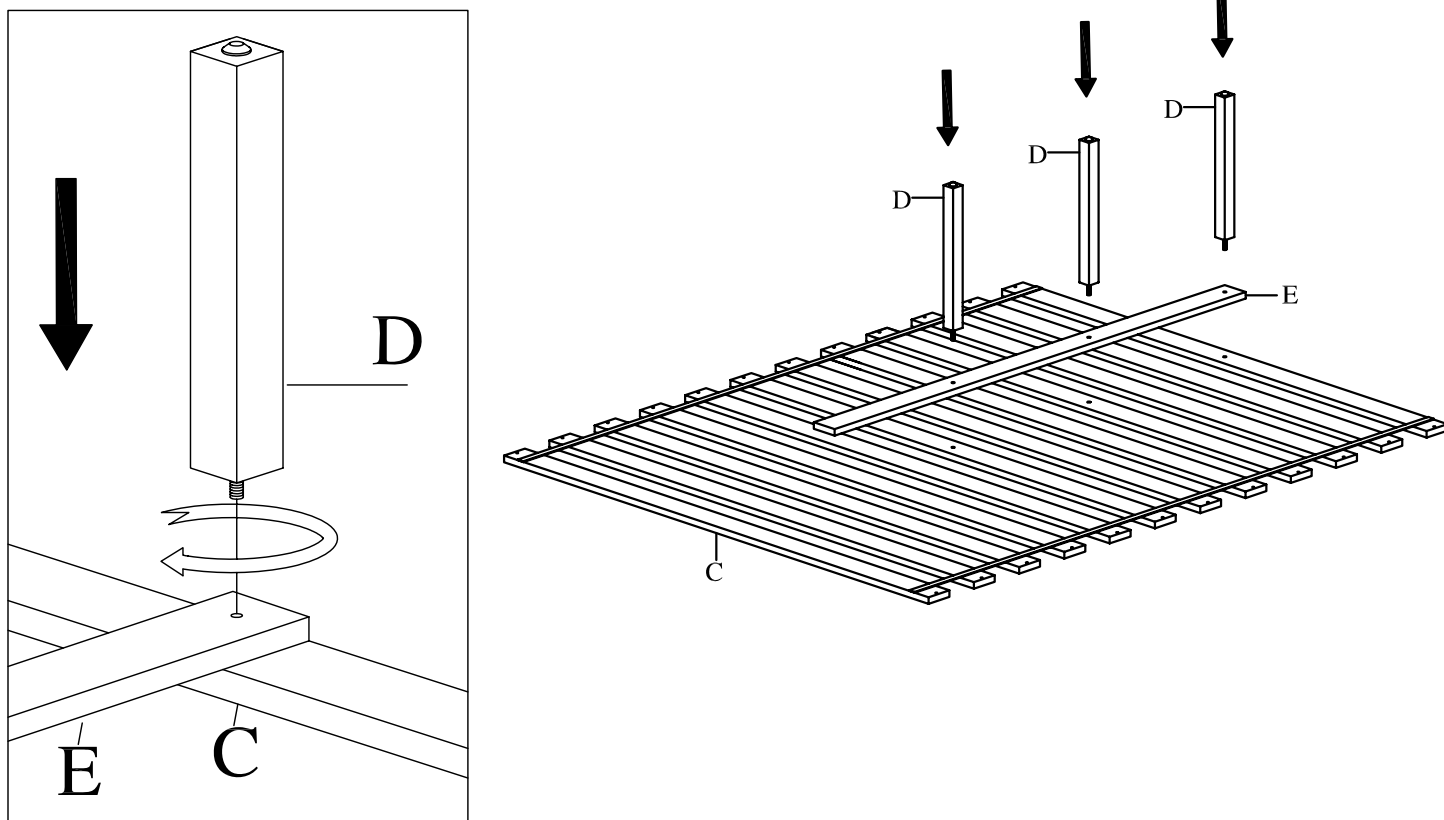

STEP 5:

WITH THE HELP OF A SECOND PERSON, PLASE THE SLAT ASSEMBLY ONTO THE BED ASSEMBLY. FOLLOWING THE ILLUSTRATION, CONNECT THE SLATS TO THE BED ASSEMBLY WITH THE WOOD SCREWS (4).

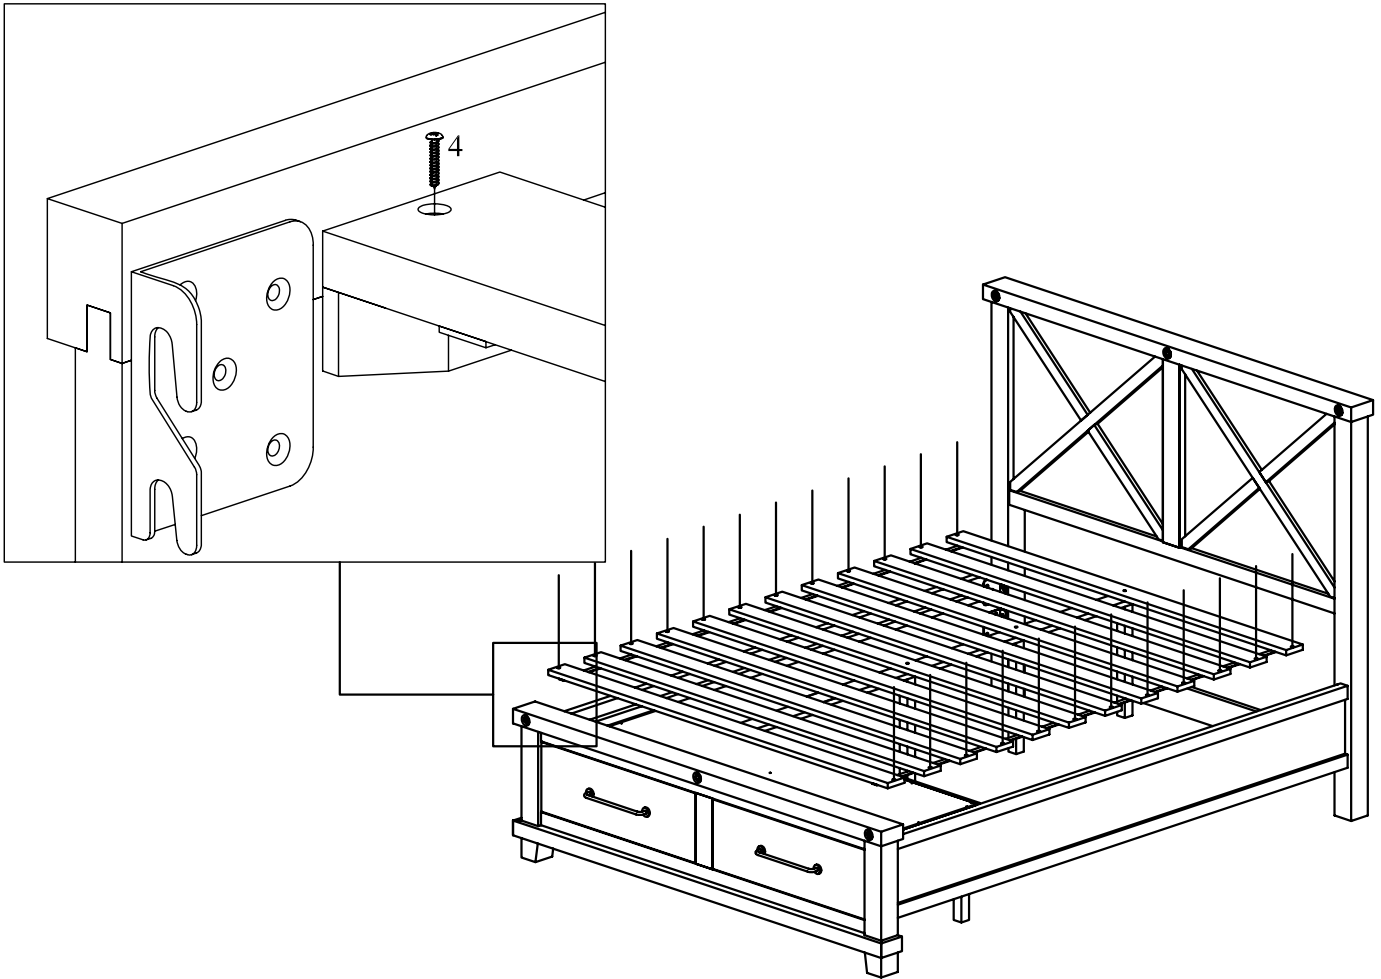

STEP 6:

ASSEMBLY COMPLETE

