


ASSEMBLY INSTRUCTION

ITEM# 3016-90866 6/0-6/6 Tufted Headboard-Bling

Caution: Please make sure you have all the parts indicated below prior to assembly.
This unit is heavy and can best be assembled with the help of two or more people.

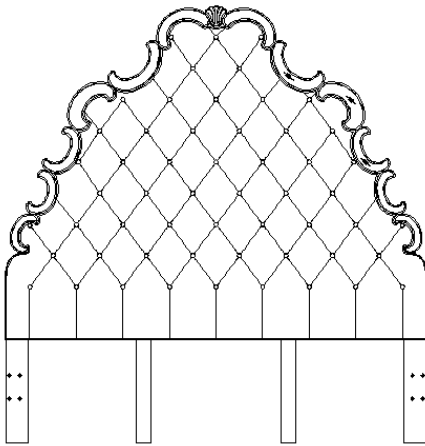

NO.	HARDWARE LIST		Q'TY
H		HOOK	2
I		PLASTIC ANCHOR	2
D		ALLEN WRENCH	1
E		BOLT	12
F		FLAT WASHER	12
G		LOCK WASHER	12

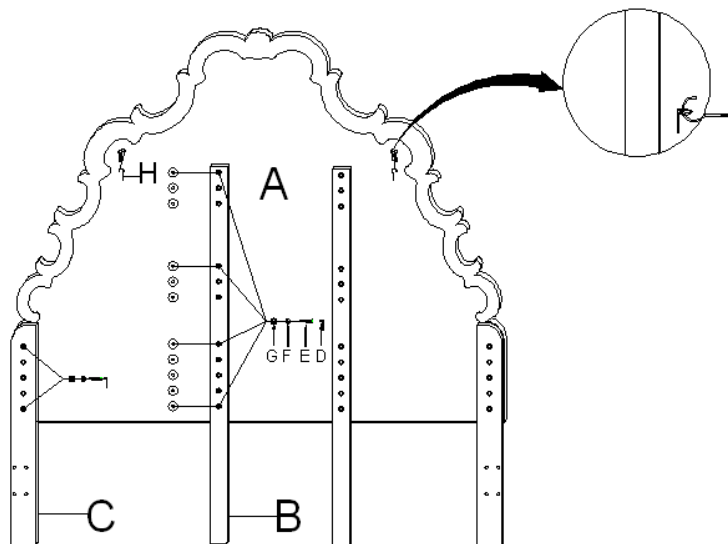


Diagram 1

Assembly steps:

1. Choose the designed height you want on headboard.

2. Attach side posts (C) to each side of headboard(A) back using bolts (E), lock washers (G) and flat washers (F). Secure bolt (E) by Allen wrench (D) as shown in diagram 1.
3. Attach middle posts (B) to center of headboard(A) back using bolts (E), lock washers (G) and flat washers (F). Secure bolt (E) by Allen wrench (D) as shown in diagram 1.
4. Adjust the headboard height by the reversed way as above loosening posts, adjust them and then secure them by the same way as above.
5. Place headboard in desired location. Mark wall with pencil.

- a. Drill two holes into the wall using 1/4" drill bit and insert the plastic anchors (I).
- b. Screw the hook (H) into the plastic anchor (I). Check and make sure the plastic anchor (I) is securely held in the wall.
- c. Set the headboard in place and hang the metal rings attached on back of headboard on to the hook (H).

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.