
american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

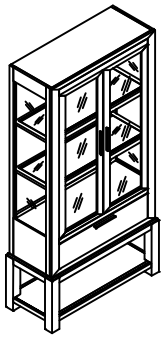

010 - 830

TOOLS REQUIRED:

Allen key (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Lay the cabinet body on a clean soft surface. Attach three Legs to the cabinet body. Make sure two pre-drilled holes on the legs align with insert nuts on the cabinet body. (See Figure 1).

Loosely tighten two legs with Flat washer (C), Lock Washer (B), Bolt (A) with Allen Key (D).

2. Attach Shelf and Front Leg to the cabinet body (See Figure 2).

3. Loosely tighten legs with Flat washer (C), Lock Washer (B), Bolt (A) with Allen Key (D). (See Figure 3) and (See Figure 4). Tighten all bolts with Allen Key (D)

4. Attach Glass Shelf into frame wood Shelf. (See Figure 5)

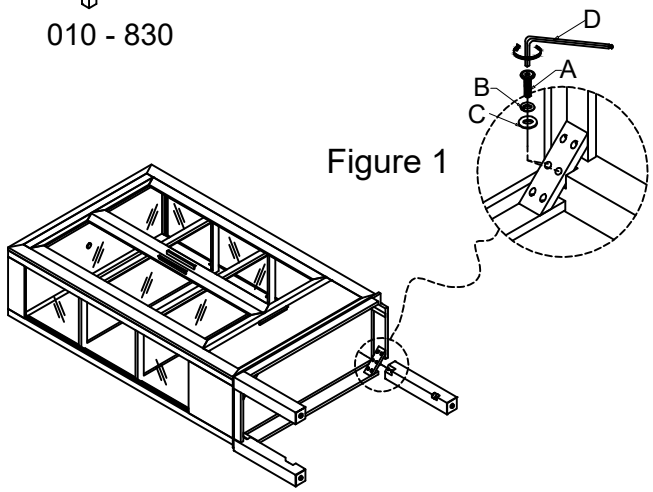


Figure 1

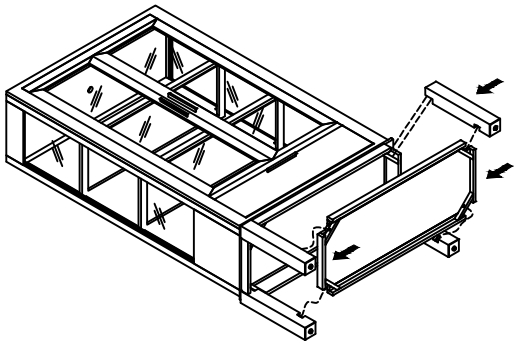


Figure 2

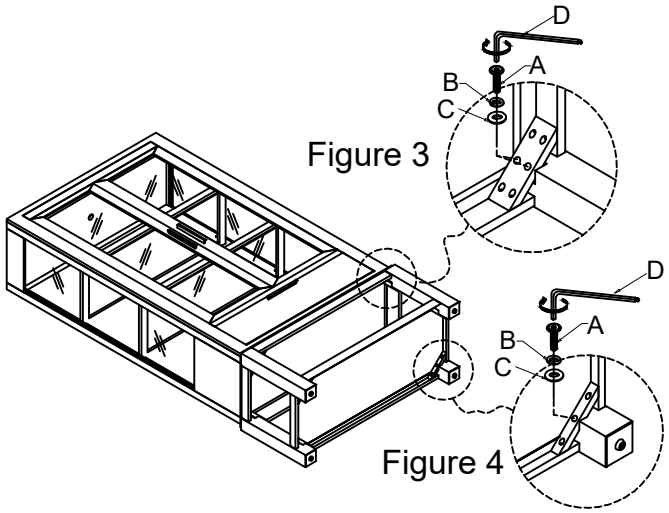


Figure 3

Figure 4

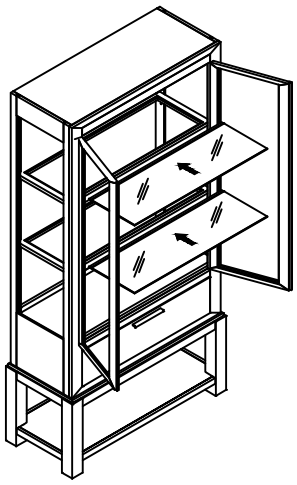


Figure 5

No.	Hardware List		Q'ty
A		Bolt Ø5/16 x 2"	12
B		Lock Washer Ø5/16"	12
C		Flat Washer Ø5/16"	12
D		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!