

Ray 8" Sconce + Surface Mount

SCHOOLHOUSE


NOTES:

- Canopy is optional.
Install without canopy for decreased projection or aesthetic preference.

REQUIRED TOOLS:

- Phillips Head Screwdriver

INCLUDED HARDWARE + TOOLS:

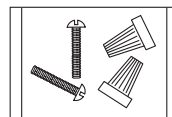


Wiring Kit (x1)



8-32 x 1" Screw (x2)



Pressure Fit Washers (x2)

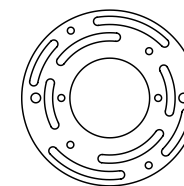

Circle Bracket (x1)

INSTALLATION INSTRUCTIONS

1. Canopy is optional and can be removed by pulling Screws out, releasing the Pressure Fit Screw Caps that are holding the canopy in place.
2. Wire fixture to Junction Box using provided Wiring Kit. Consult electrician if necessary.
3. Mount fixture to junction box.
4. Use included bulb before hooking the Glass Shade over the Shade Holder Tabs.

