
american drew
• inspired design •

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

923-701/B01

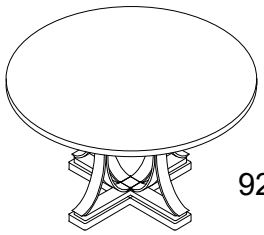

923-701

923-B01

TOOLS REQUIRED:


Allen key (supplied, part # L)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

Attach the Mounting plate to the base, using Bolt (A), Lock washers (B) and Flat washers (C). Tighten with Allen key (D).

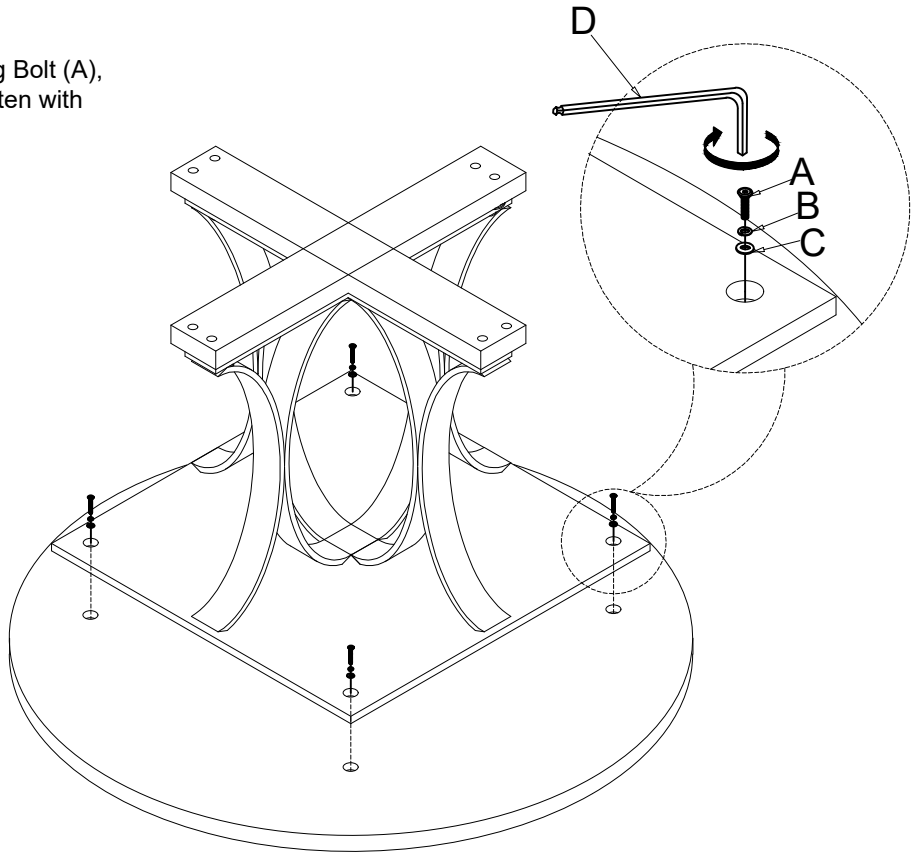

No.	Hardware List		Q'ty
A		Bolt Ø5/16"x1-1/4"	4
B		Lock Washer Ø5/16"	4
C		Flat Washer Ø5/16"	4
D		Allen Key 4mm	1

Thank you for purchasing furniture from american drew!