american drew
•inspired design•

Tel: 828-728-3261
www.americandrew.com

ASSEMBLY INSTRUCTIONS

750-305/307/313/314/316/317/325/327



750-305/307

750-313/316

750-314/317

750-325/327

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

1. Place the Footboard facing upward on a clean soft surface .

2. Screw hanger bolt on Bun foot into spring insert on bottom base. secure all bun feet and make sure they align together. see Figure 1.

NOTE: The insert has a spring which allows up to a 3/4 turn to align the square Bun Foot with the base shape.

THIS STEP IS FOR 750-325/327 ONLY:

3. Attach hanger bolt on Finial into the top of case. Tighten by turning the Finial side down. See Figure 2.

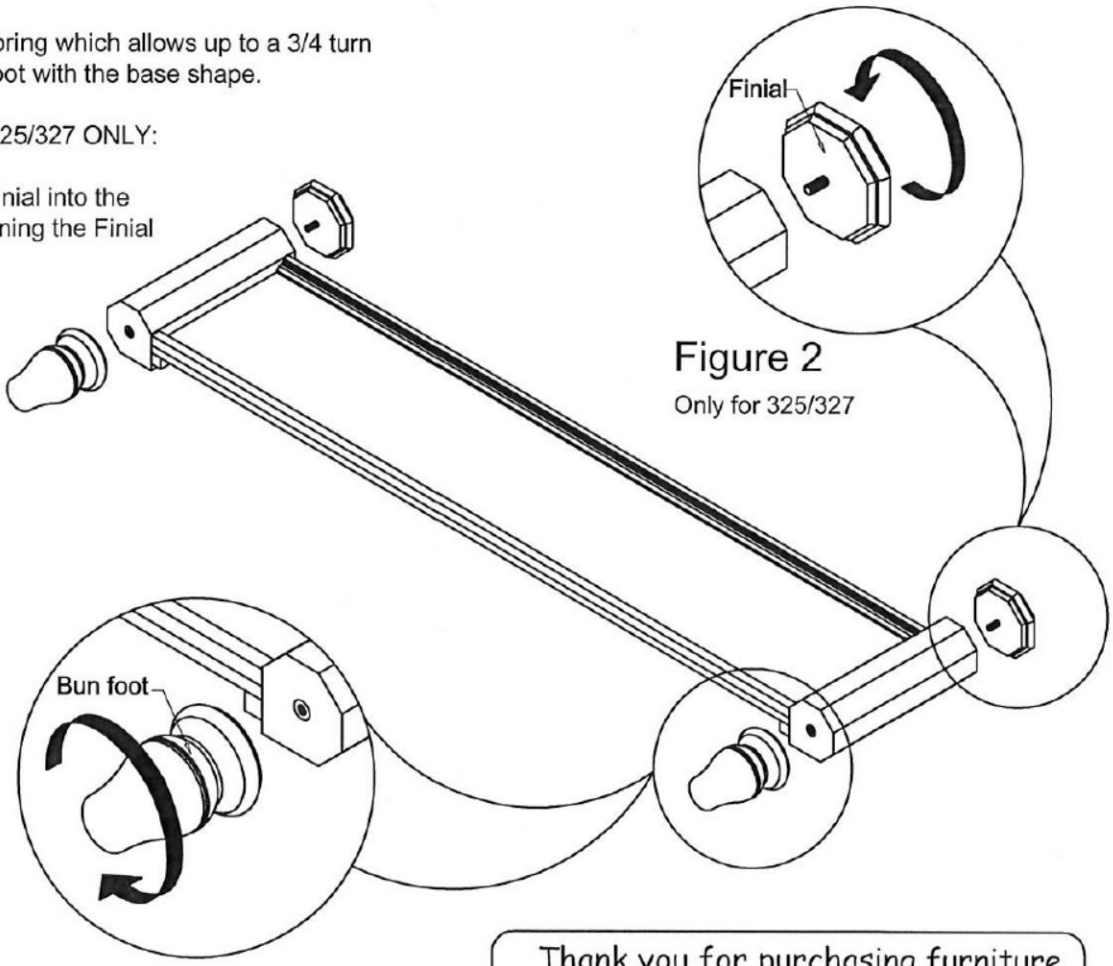


Figure 2
Only for 325/327

Figure 1

Thank you for purchasing furniture from american drew!