



**88 5531 43**  
Dresser

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the wood parts.


**We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.**

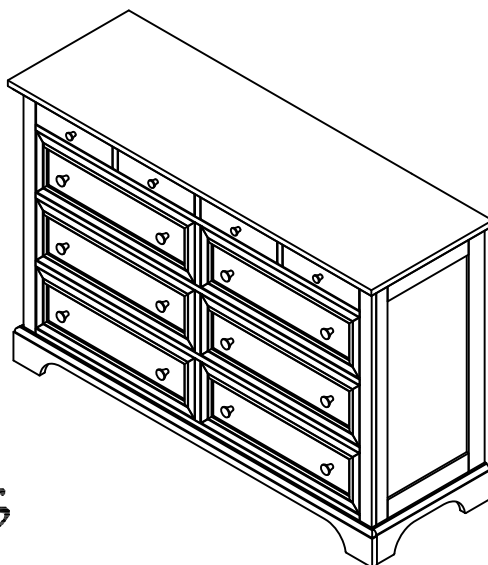

## Part List

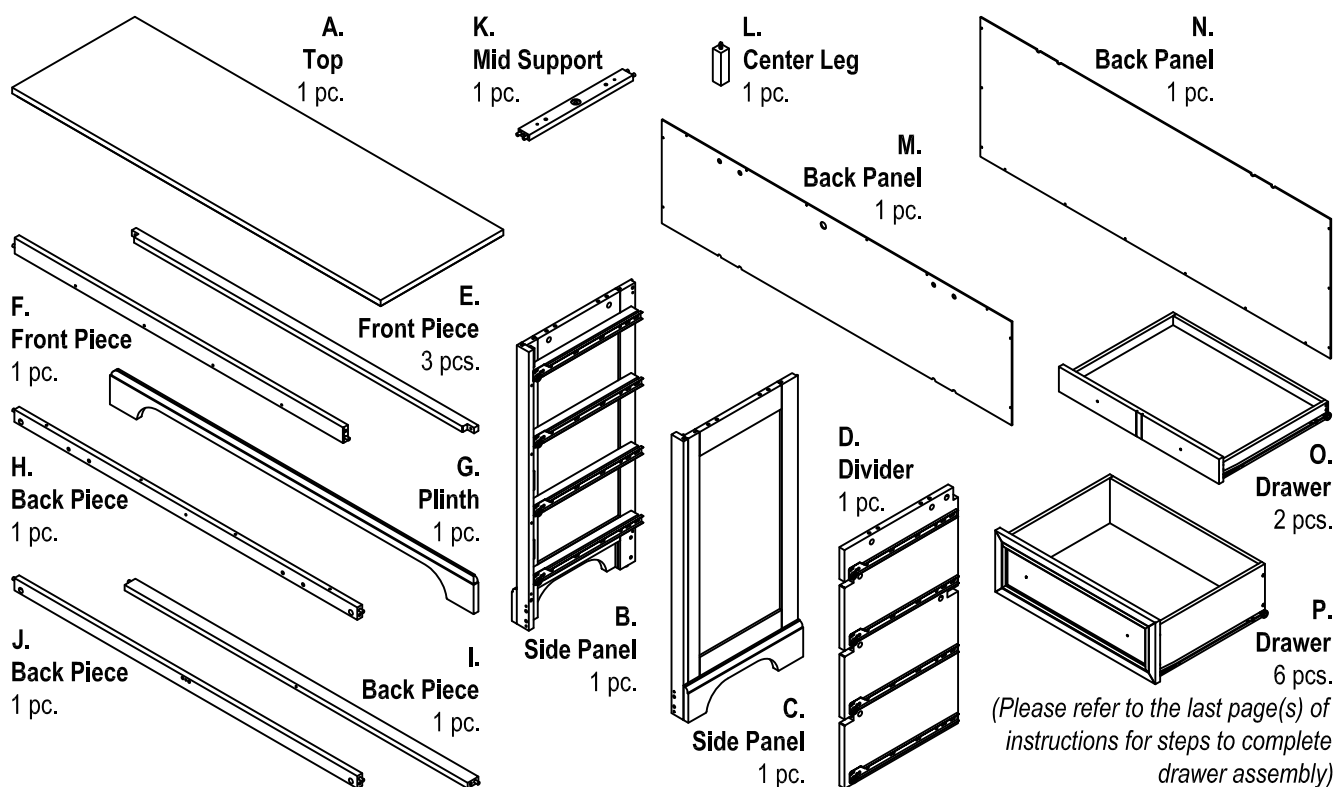


# Hardware List




**Cam Lock Screw**  
27 pcs. (+1 extra)



**Cam Lock**  
27 pcs. (+1 extra)




1 1/2" Round Head  
Screw (M4x38)  
4 pcs. (+1 extra)



1 1/4" Round Head  
Screw (M4x32)  
11 pcs. (+1 extra)



**1/2" Round Head  
Screw (M3x13)**  
29 pcs. (+1 extra)



**1 1/4" Flat Head  
Screw (M3x32)**  
88 pcs. (+1 extra)



**3/4" Flat Head  
Screw (M3x19)**  
48 pcs. (+1 extra)



**Machine Screw**  
**(5/32"x3/4")**  
16 pcs.



**Large Pull Handle**  
12 pcs.



**Small Pull Handle**  
4 pcs.



**Wooden Dowel**  
12 pcs. (+1 extra)



**Flat Washer**  
8 pcs. (+1 extra)



**Anchor**  
1 pc. (+1 extra)



**Tipping Restraint**  
1 pc.

**Tools Required For Assembly :** Phillips screwdriver


**Tools Recommended For Assembly :** Level

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319

## Assembly Instructions 2/9


### IMPORTANT

- \* Do not tighten up all the screws until each part is properly assembled.
- \* Use a soft cloth between these parts and the floor.
- \* After assembly, item must be level to work properly. Use the included adjustable levellers to level.

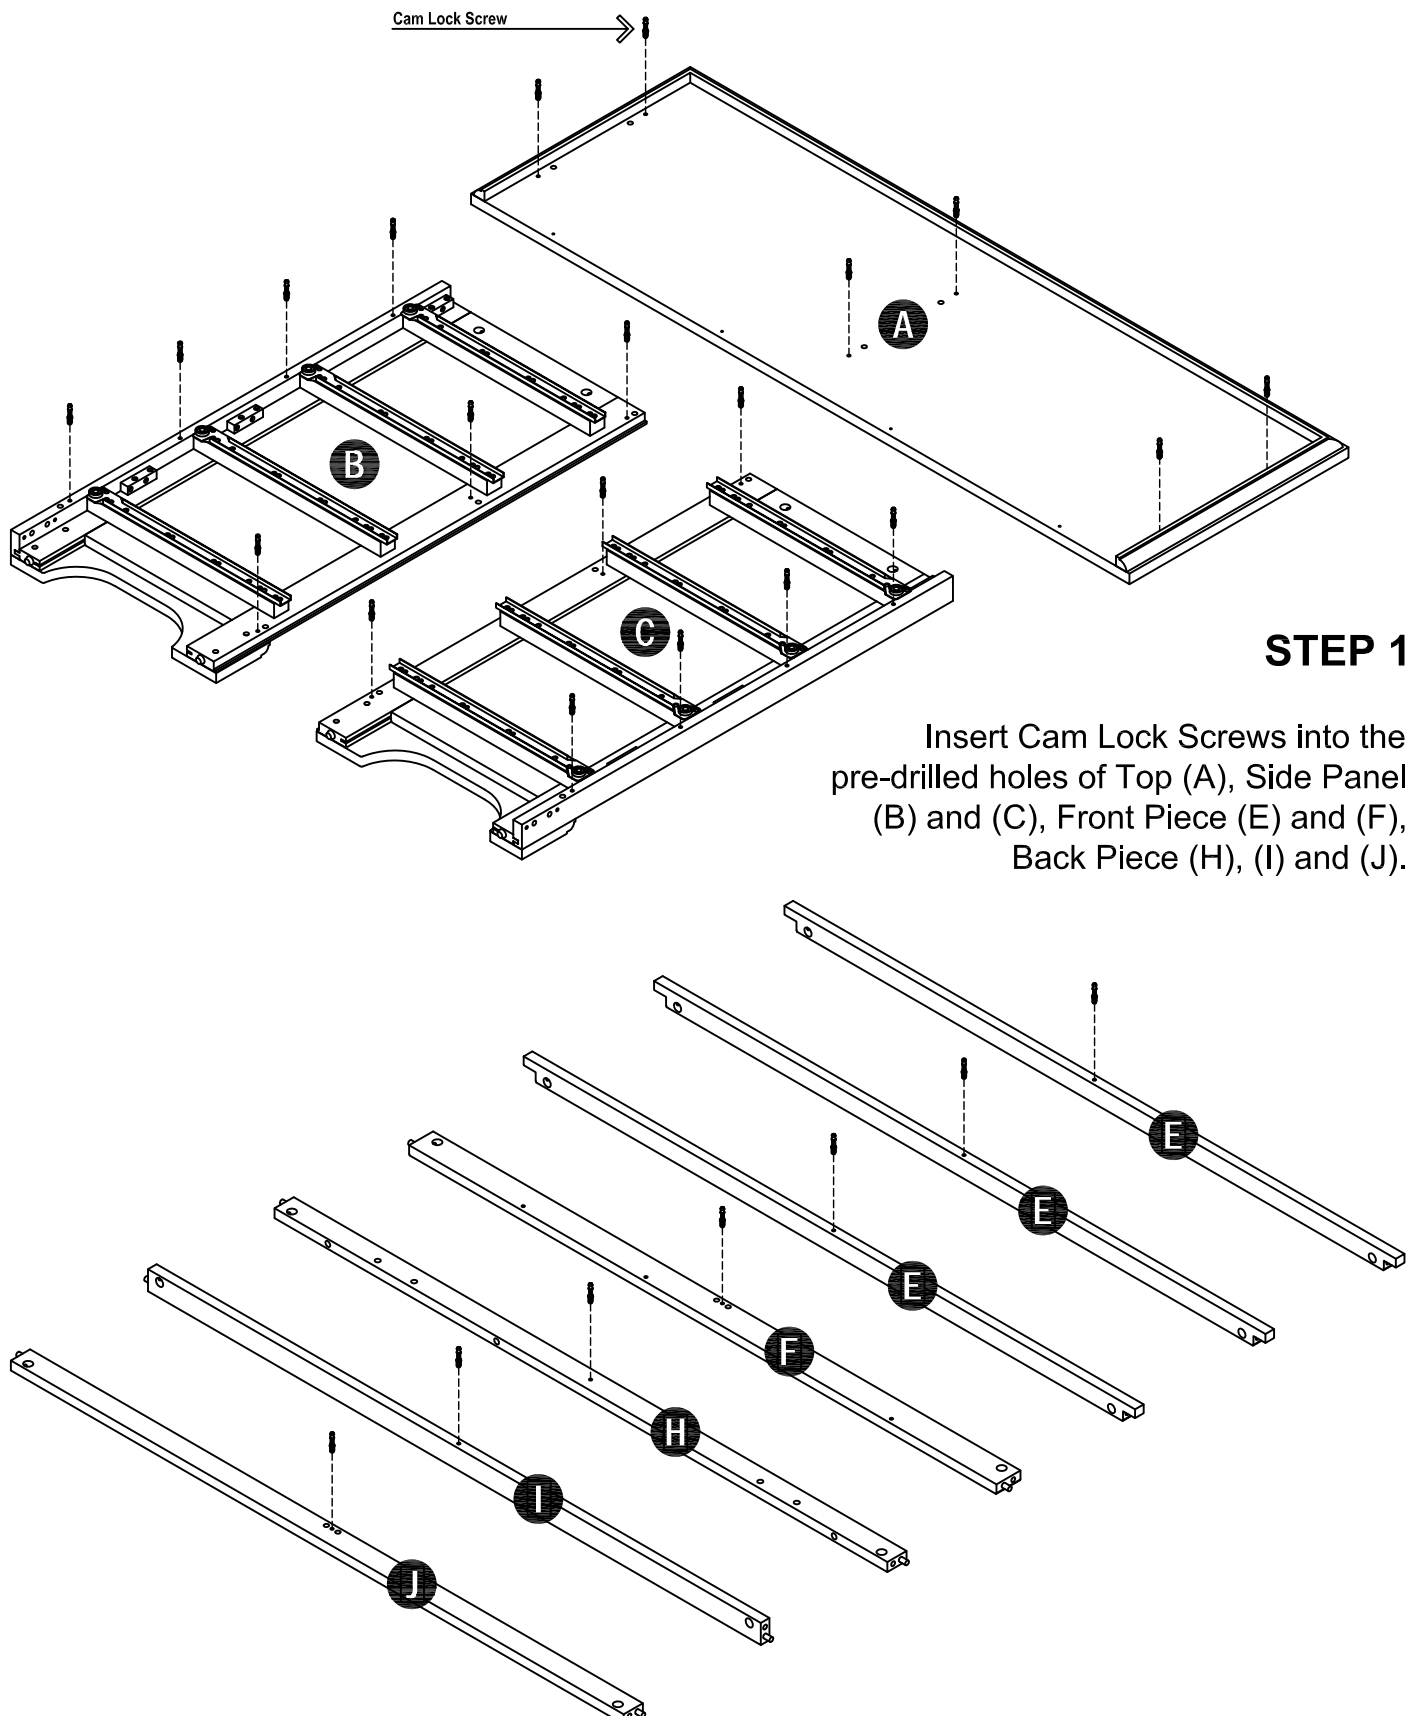


## STEP 2

Attach Mid Support (K) to Divider (D) with 1 1/4" Round Head Screws and Wooden Dowel.

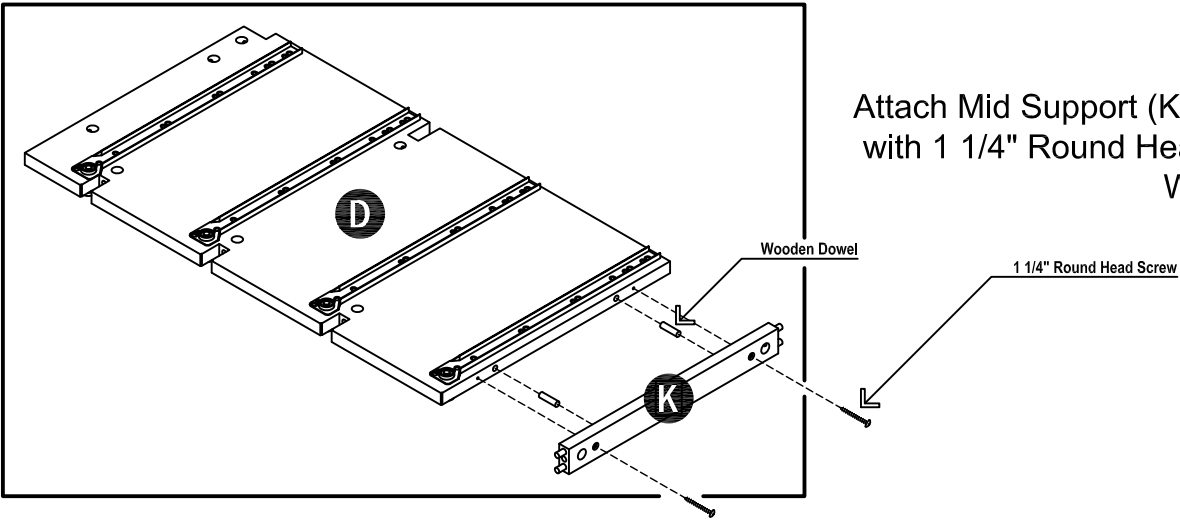

## STEP 3

Attach Front Piece (E) and (F),  
Back Piece (H), (I) and (J) to unit  
with Cam Locks.  
(See Figure 1)


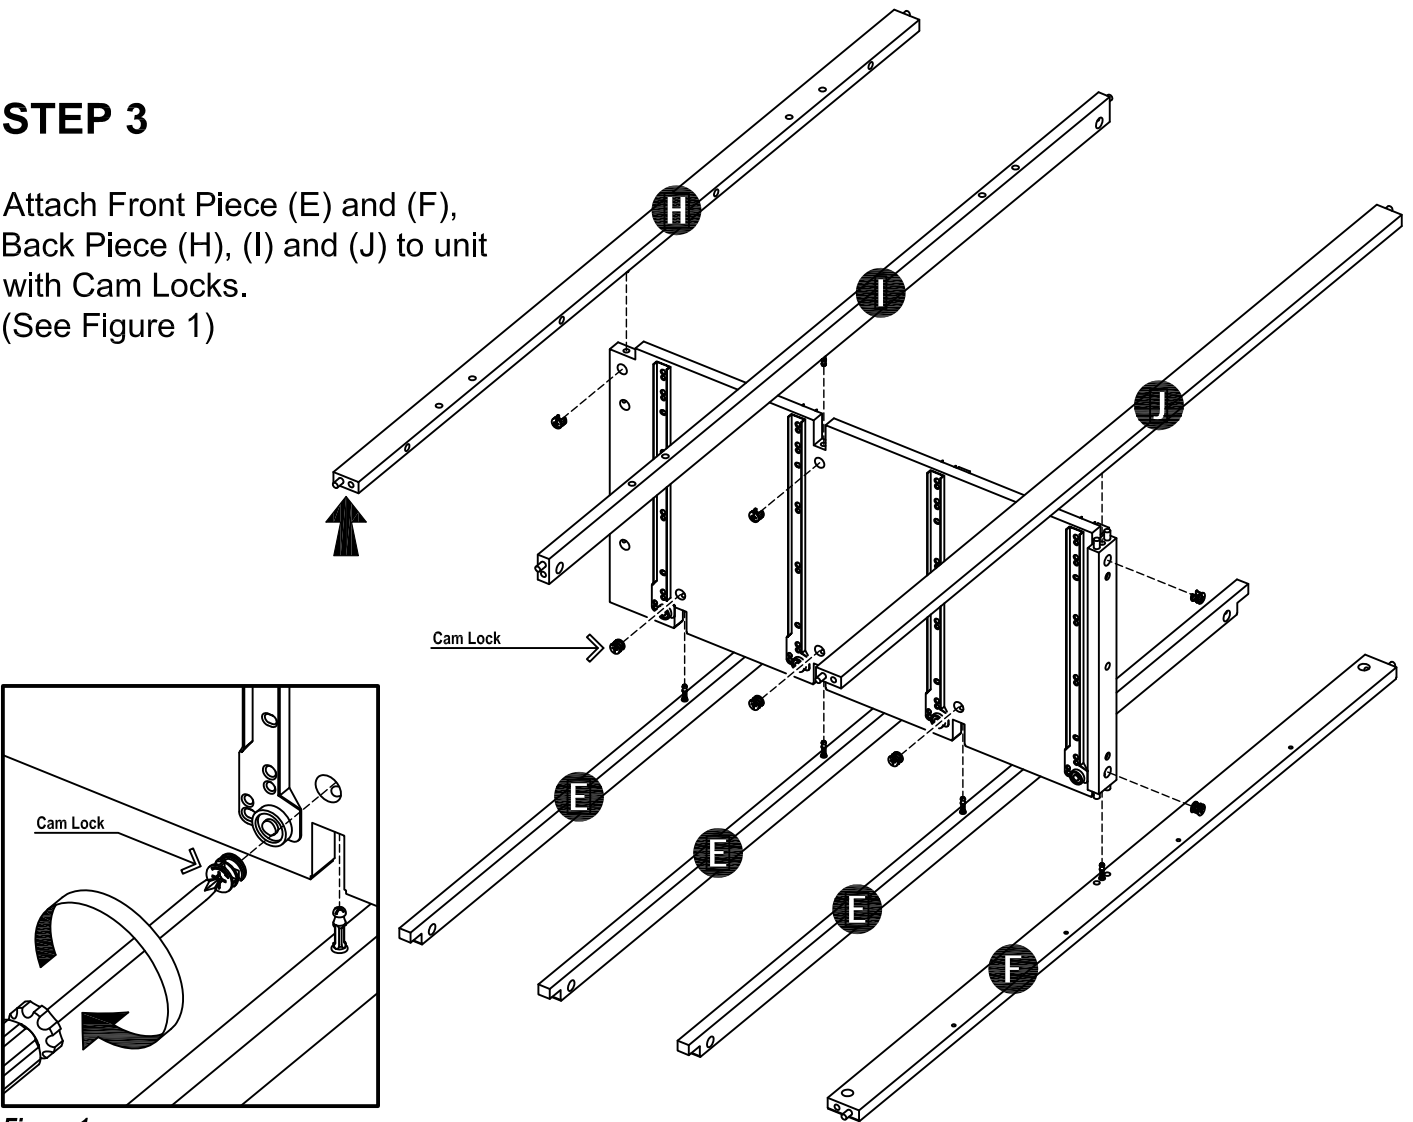


**Figure 1**

**STEP 4**

Attach Side Panel (B) and (C) to unit with Cam Locks.

Attach Center Leg (L) to unit.

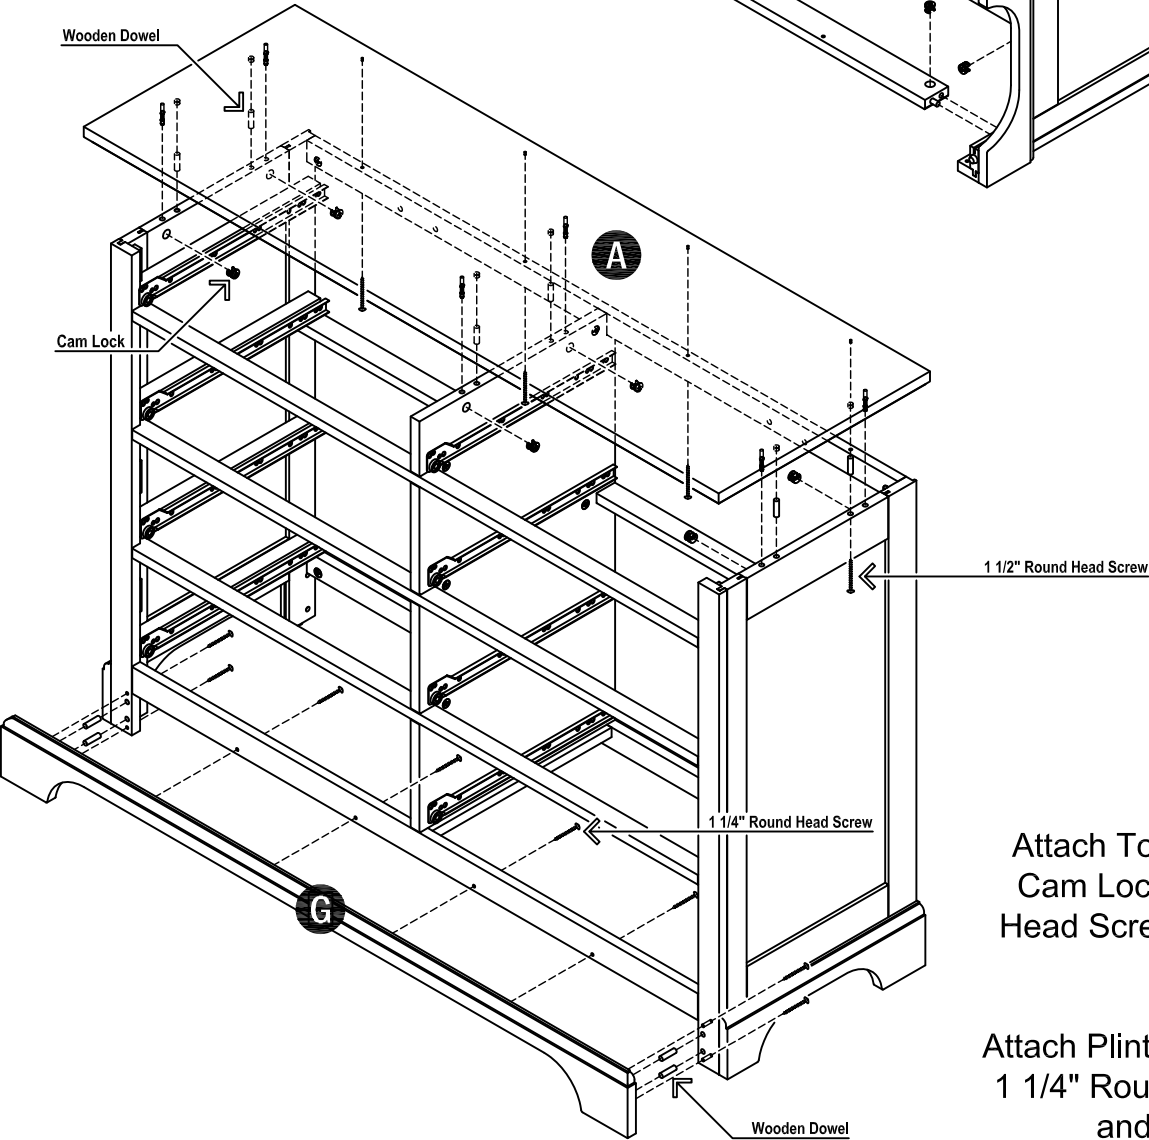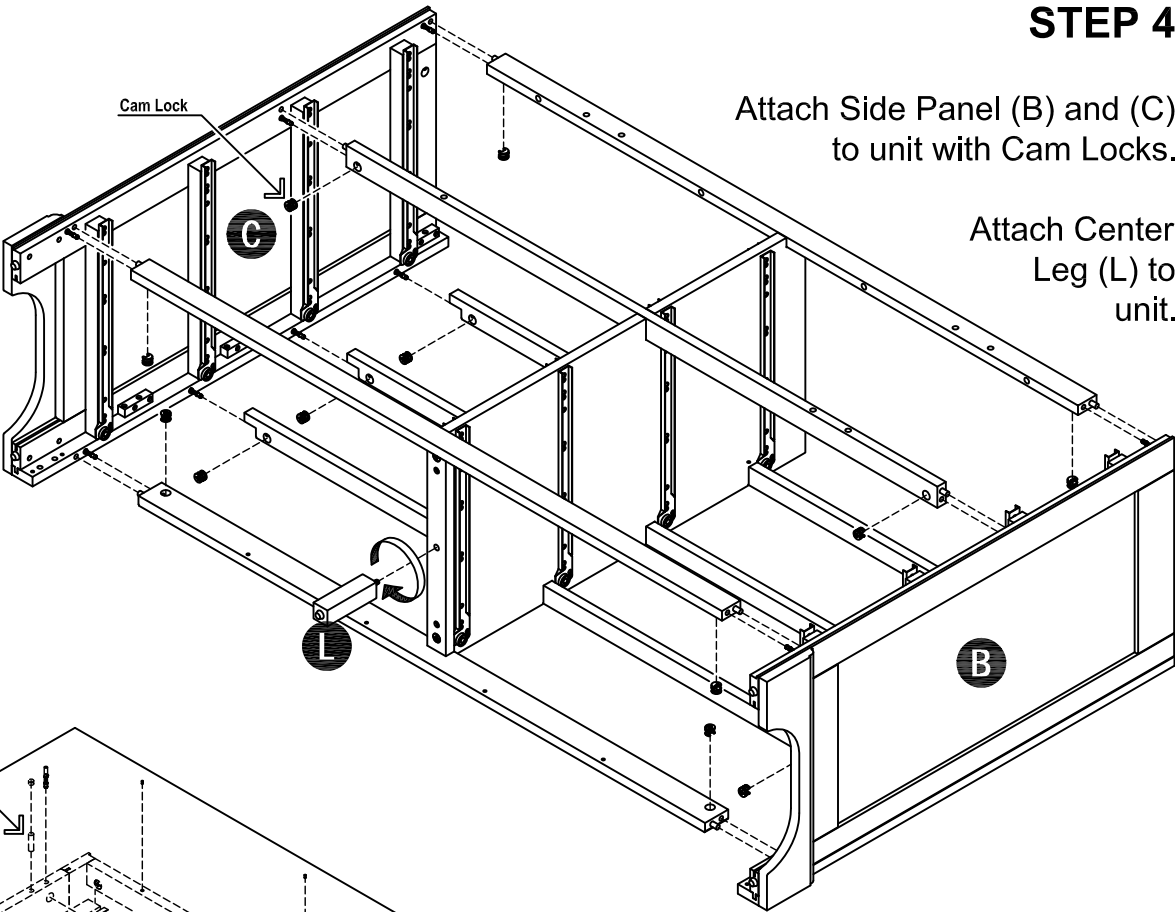

**STEP 5**

Attach Top (A) to unit with Cam Locks, 1 1/2" Round Head Screws and Wooden Dowel.

Attach Plinth (G) to unit with 1 1/4" Round Head Screws and Wooden Dowel.

STEP 6

To level the unit, adjust the adjustable levelers on the bottom of the legs.


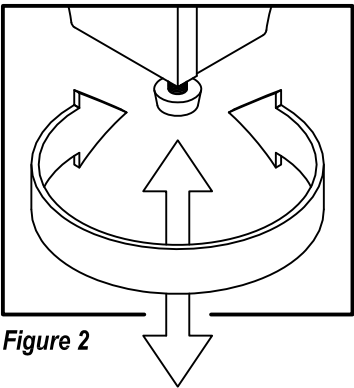



Figure 2

**Note: Unit must be level to work properly.**  
(See Figure 2)

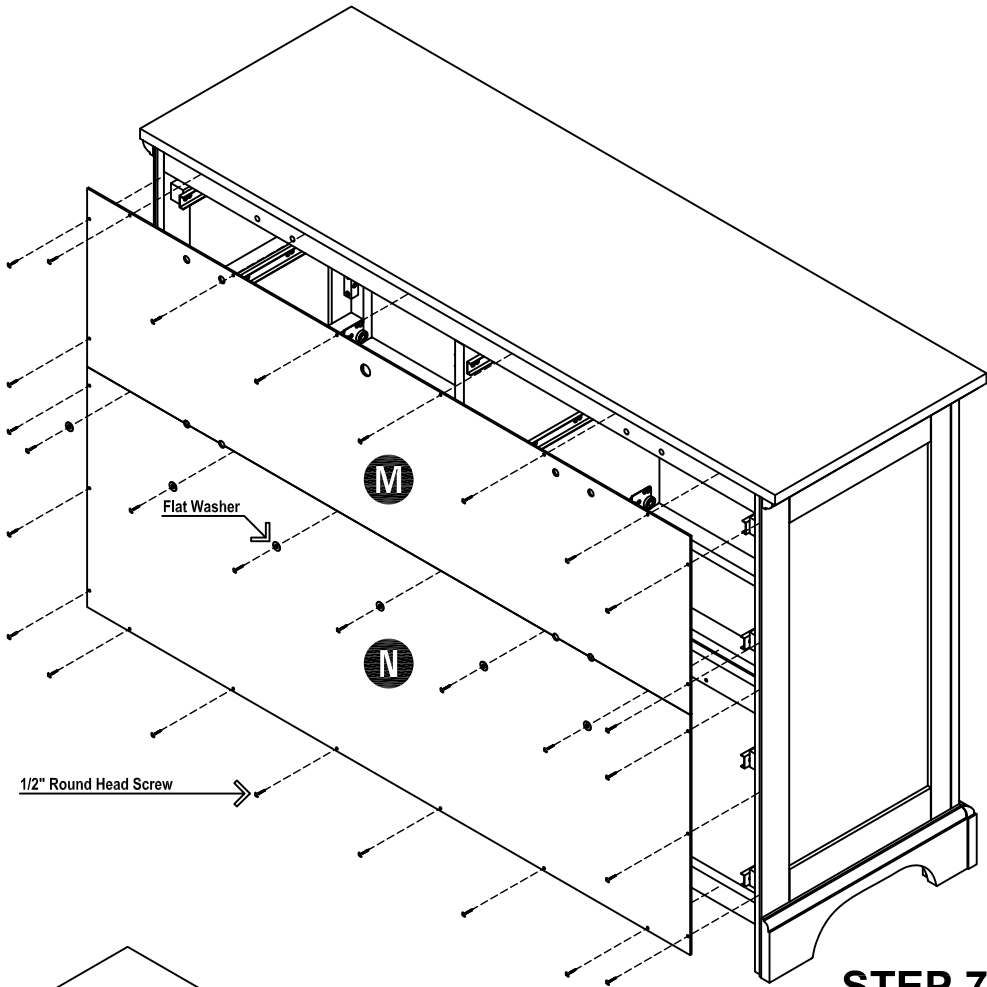

STEP 7

Attach Back Panel (M) and (N) to unit using 1/2" Round Head Screws and Flat Washers.

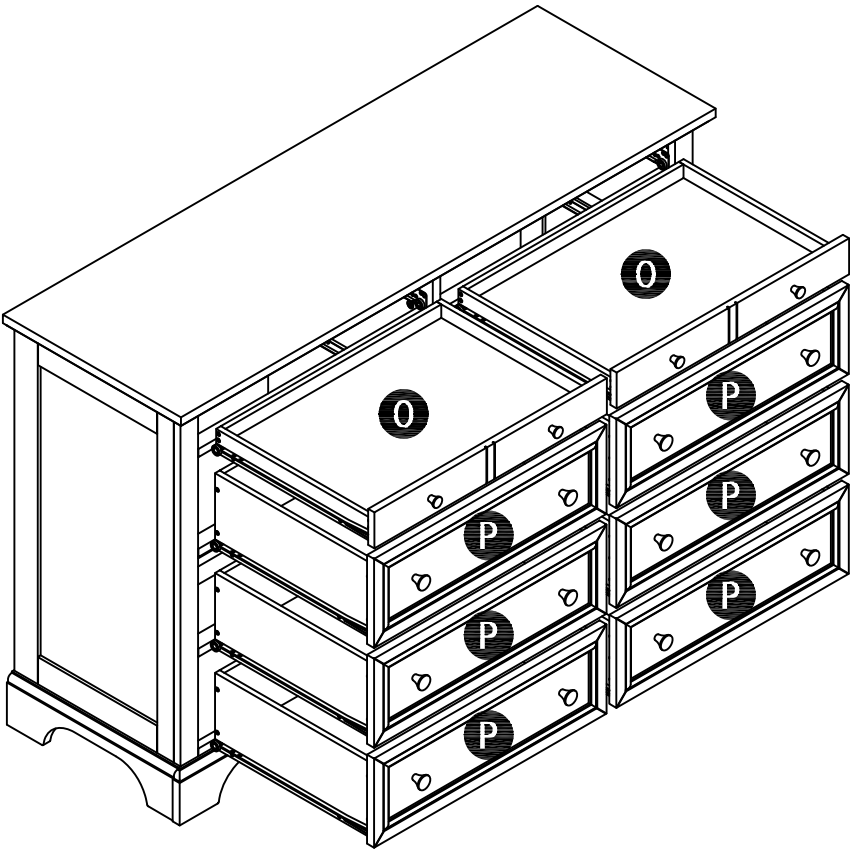



STEP 8

Slide Drawers (O) and (P) into place.

Note: Follow the steps on the next page to use 3/4" Flat Head Screws to complete drawer assembly.

STEP 9

Loosen slightly the two screws pre-installed on the back of the drawer fronts.

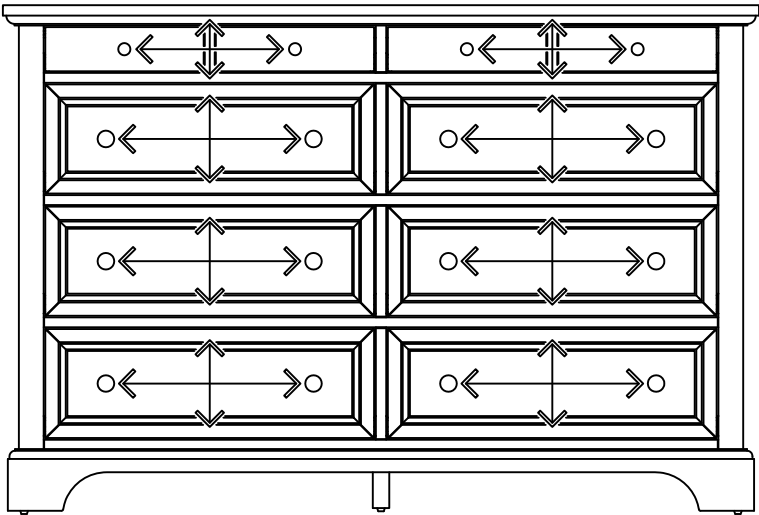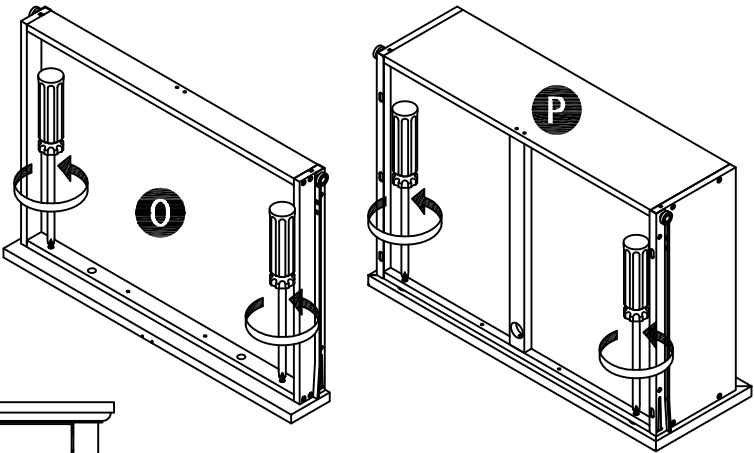


STEP 10

Insert the drawers into the main body, then adjust the drawer front panels left or right and up or down until the drawer gaps look proportional.

STEP 11


Pull the drawers open slowly and re-tighten the screws from Step 9. Make sure the front panels do not move and lock the drawer front panels into position with 3/4" Flat Head Screws.

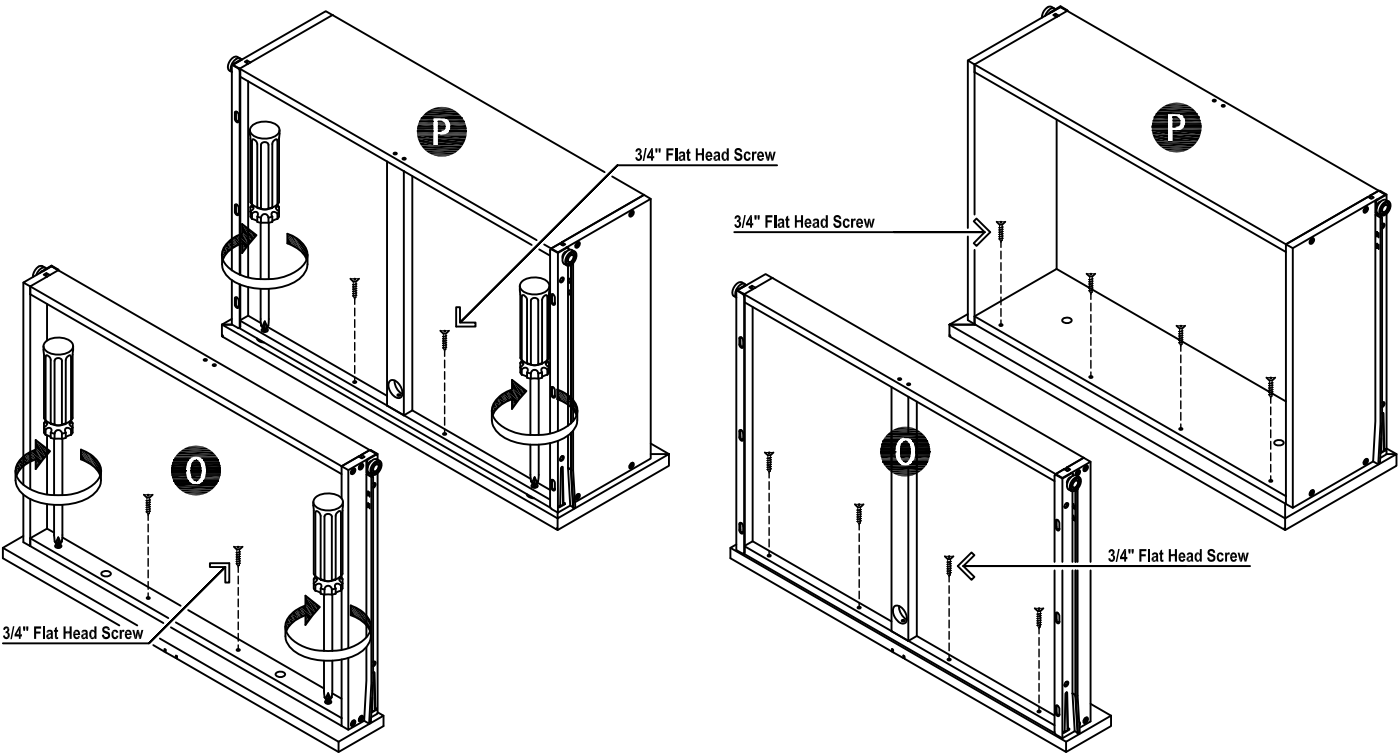


**Note:** These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

# ATTENTION!


For safety reasons, please follow these instruction to prevent the unit from tipping over.

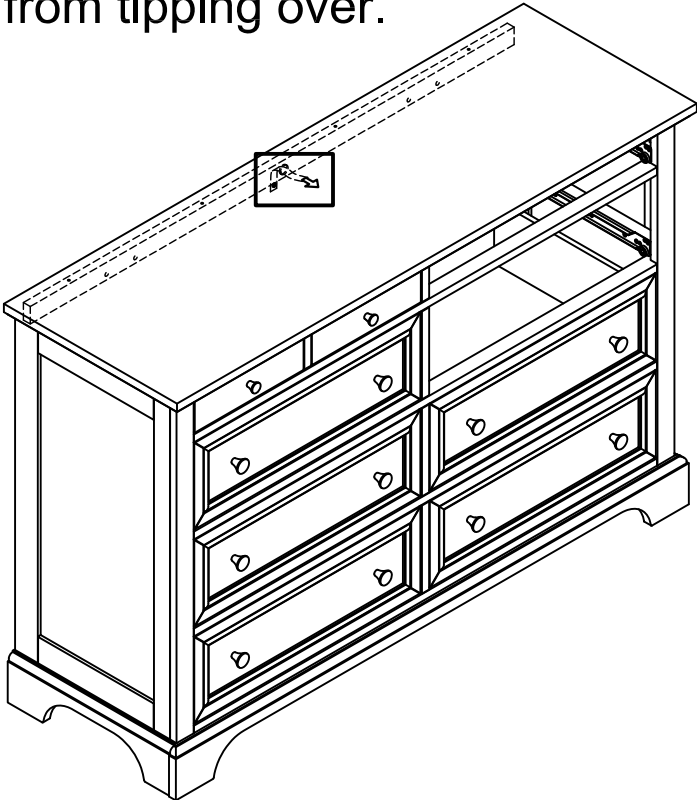


Remove Drawers (O) and (P) from unit.

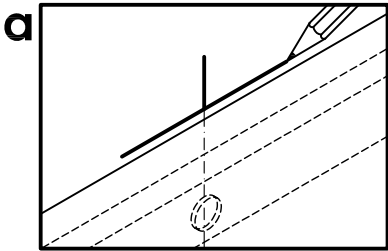


Place the unit on the wall at desired location. Mark with pencil to show the position of the hole.

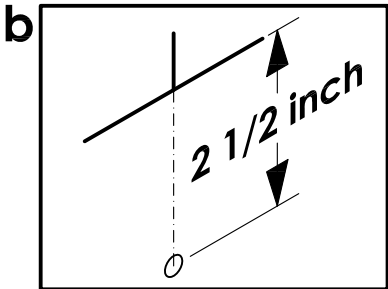


Move unit. Drill a 1/2" hole in the wall, 2 1/2 inches down and directly below the mark.

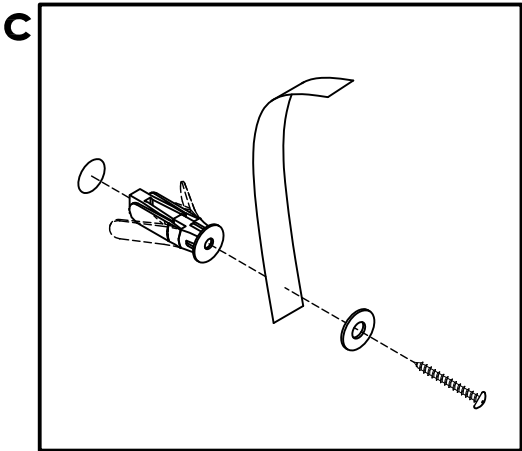


Attach Tipping Restraint to the wall using 1 1/4" Round Head Screw, Flat Washer and Anchor.

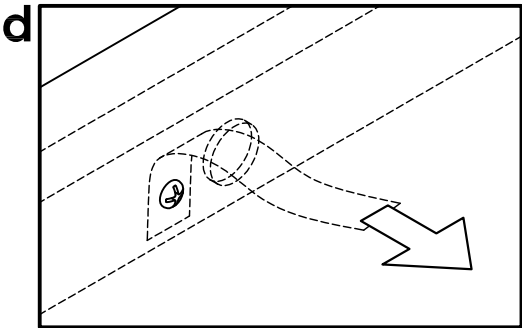

Insert Tipping Restraint to unit through the groove of Back Piece (G).

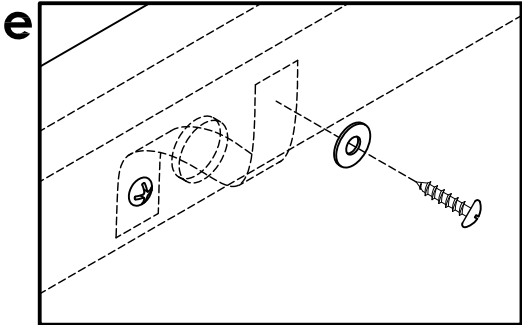


Screw Tipping Restraint to unit using 1/2" Round Head Screw and Flat Washer.

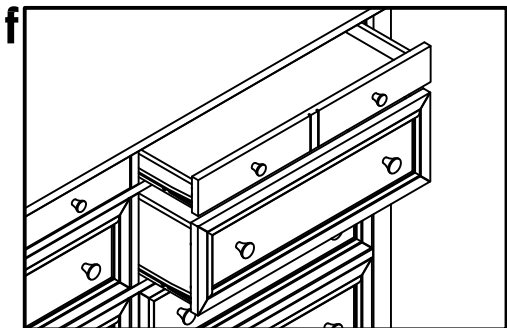

Insert drawers (O, P) into unit.



# Drawer (O)

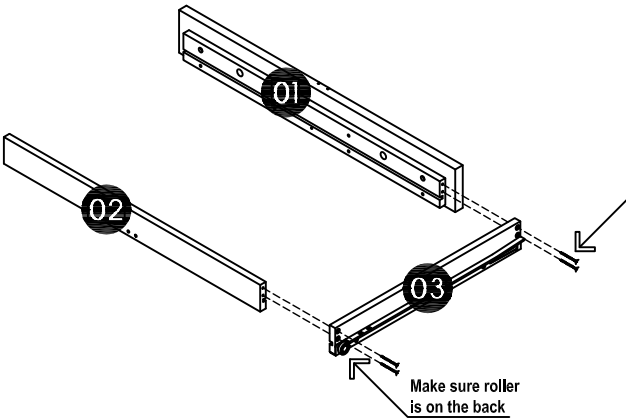


## STEP 1

Attach Side Part (O3) to Front Part (O1) and Back Part (O2) with 1 1/4" Flat Head Screws.

## STEP 2



Insert Base Part (O5) into the groove.

Attach Side Part (O4) to unit with 1 1/4" Flat Head Screws.

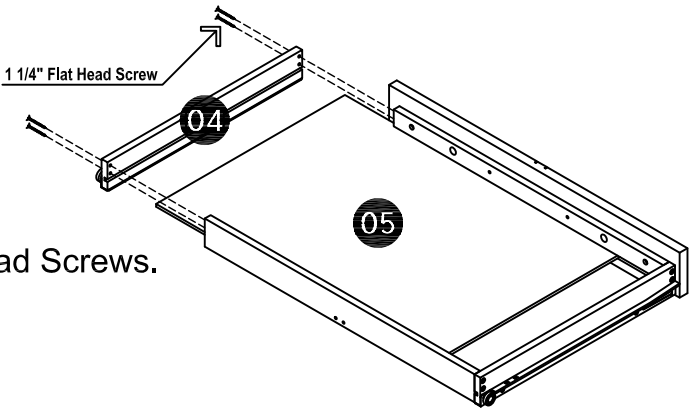

## STEP 3

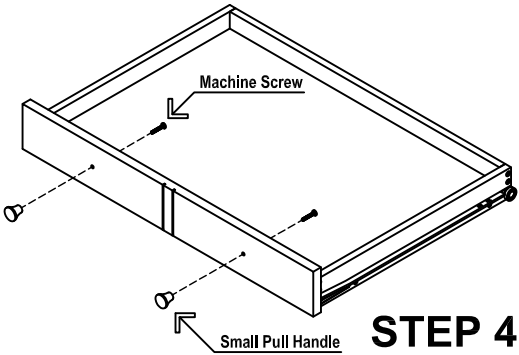
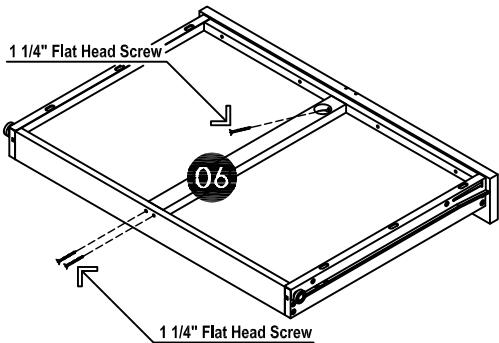




Attach Base Part (O6) to unit with 1 1/4" Flat Head Screws.



## STEP 4


Attach Small Pull Handles with Machine Screws.

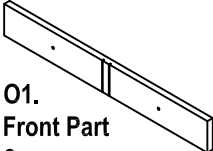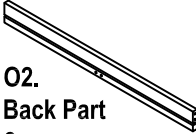Note: Drawer assembly is not complete until 3/4 inch Flat Head Screws are used in a later step.

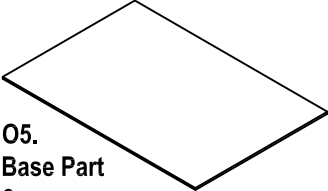
Part List						
						
O1. Front Part 2 pcs.	O2. Back Part 2 pcs.	O3. Side Part 2 pcs.	O4. Side Part 2 pcs.	O5. Base Part 2 pcs.	O6. Base Part 2 pcs.	



# Drawer (P)

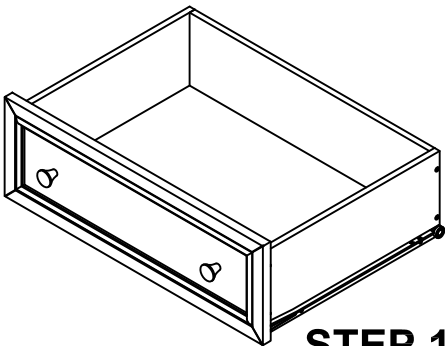

STEP 1

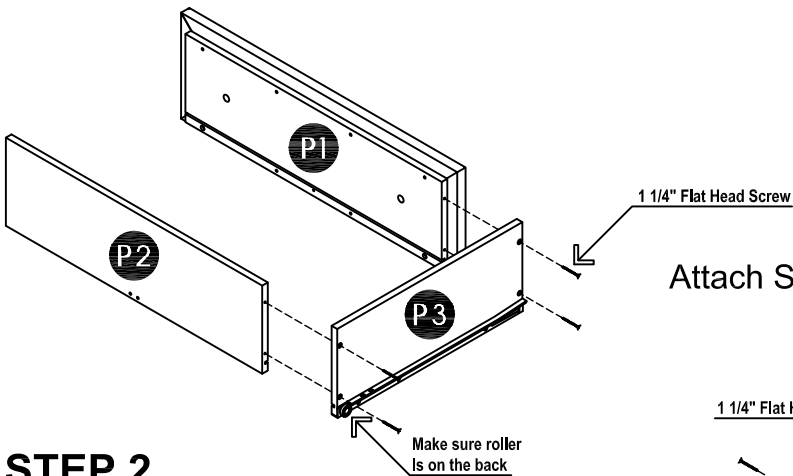


Attach Side Part (P3) to Front Part (P1) and Back Part (P2) with 1 1/4" Flat Head Screws.

STEP 2



Insert Base Part (P5) into the groove.

Attach Side Part (P4) to unit with 1 1/4" Flat Head Screws.

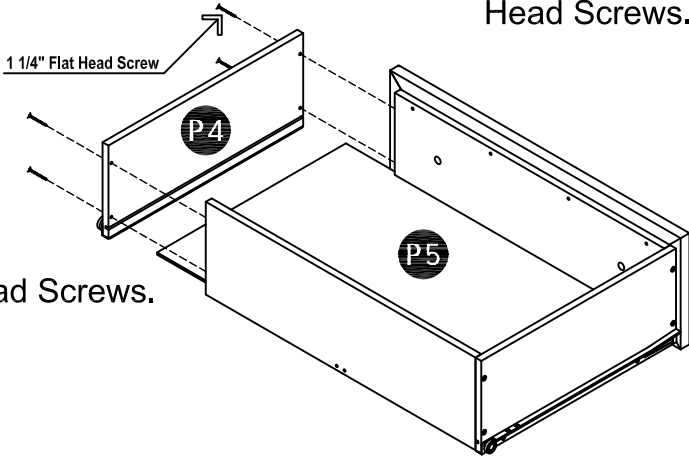

STEP 3

Attach Base Part (O6) to unit with 1 1/4" Flat Head Screws.

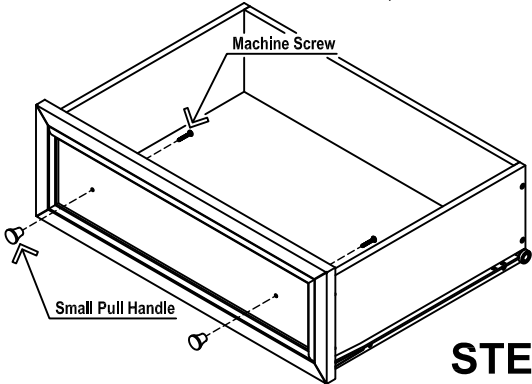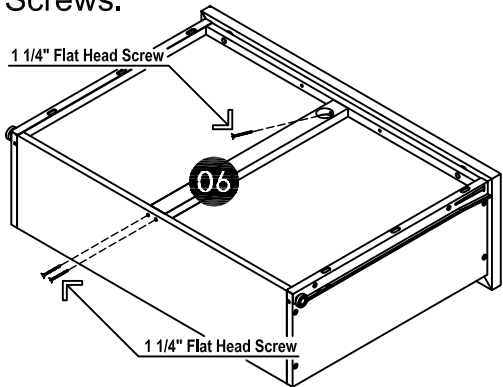


STEP 4


Attach Small Pull Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.


## Part List

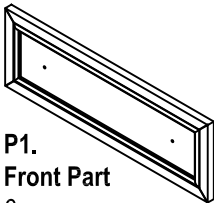


P1.  
Front Part  
6 pcs.

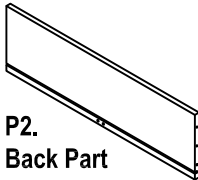


P2.  
Back Part  
6 pcs.

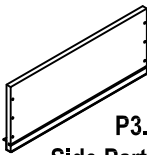


P3.  
Side Part  
6 pcs.

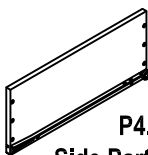

P4.  
Side Part  
6 pcs.

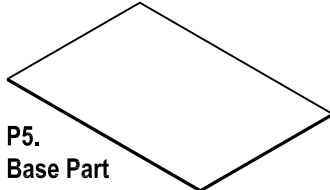

P5.  
Base Part  
6 pcs.

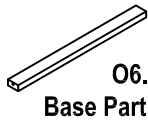

O6.  
Base Part  
6 pcs.

# VERY IMPORTANT !!

## CARE INSTRUCTIONS

### NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE FINISH.

### NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES PART TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT  
WRITE  
DIRECTLY  
ON  
SURFACE.




**PREVENT  
MARKING**

DO NOT  
PLACE IN  
DIRECT  
SUNLIGHT.



**PREVENT  
FADING**

DO NOT USE  
COMMERCIAL  
WAXES AND  
POLISHES.

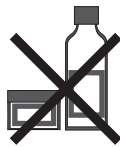

**PREVENT  
YELLOWING**

DO NOT  
PLACE HOT  
OBJECTS  
ON SURFACE.



**PREVENT  
FINISH DAMAGE**

DO NOT  
USE  
RUBBER  
BASED  
PLACE MATS.



**PREVENT  
DISCOLORING**

## TO CLEAN

USE A SOFT CLOTH MOISTENED IN LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

[www.homestyles-furniture.com/customer\\_service](http://www.homestyles-furniture.com/customer_service)

**Home Styles Consumer Assistance:** [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319