


# Assembly Instructions, #9261 Claudette Three Shelf Bookcase

## Note:

A packet with complete set of hardware can be found by pulling the red ribbon that's easily visible upon opening the box.

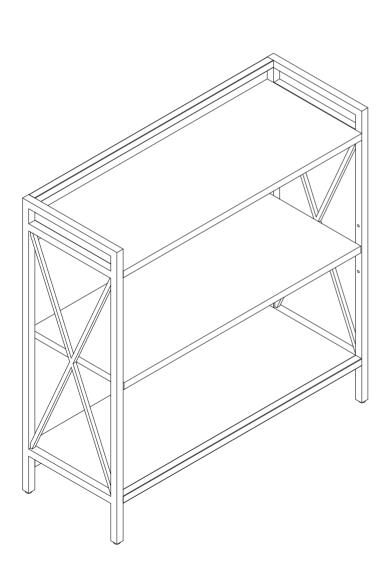


Pails List			
А	Left Side Frame		1
В	Right Side Frame		1
С	Back Gallery		1
D	Top Panel		1
Е	Bottom Panel		1
F	Adjustable Shelf		1
G	Bolts	<i>))))))))</i>	4
н	Flat Washers	$\bigcirc$	4
I	Allen Wrench		1
J	Shelf Supports		2
к	Screws	<0000	16
L	Anti-tipping Kit		1

## Parts List


#### Step 1

- 1.1) Lay the left side frame (A) on a soft surface, insert the back gallery (C) into left side frame's tube, fasten with 1 bolt and flat washer.
- **1.2)** Fit the metal part of the bottom panel (E) to the left side panel's tube, fasten with 1 bolt and flat washer.
- 1.3) Fasten the top panel and bottom panel (D and E) to the left side frame's tabs. Fasten with 2 screws at the bottom of each panel first, and 2 each at the back. Make sure not to leave any gap between the panel's ends and metal frame while tightening the screws.

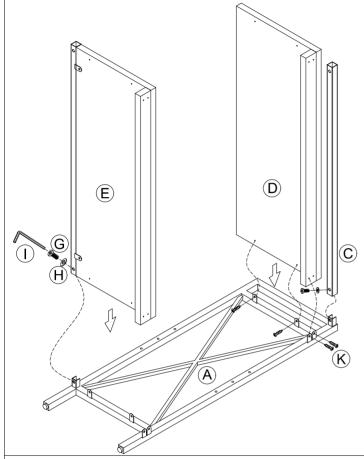


#### Step 3

- 3.1) Place the assembled piece upright. Screw-in shelf supports (J) to the threaded holes on the inner face of the side frames.
- 3.2) Place the adjustable shelf (F) above the shelf supports, centering with even gaps between ends and the metal frames both sides.

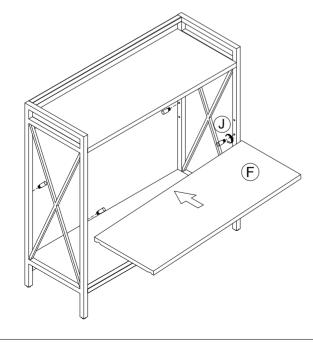

### Step 2


- **2.1)** Insert the tubes of the right side frame (B) to the ends of back gallery (C) and bottom shelf (E).
- 2.2) Push to make sure both tubes are properly inserted. Fasten with 2 bolts and washers (1 at lower end of back gallery, 1 at lower front of bottom shelf). Fasten the top panel and bottom panel (D and E) to the right side frame's tabs with 2 screws at the bottom of each panel first, and 2 each at the back. Make sure not to leave any gap between the panel's ends and metal frame while tightening the screws.

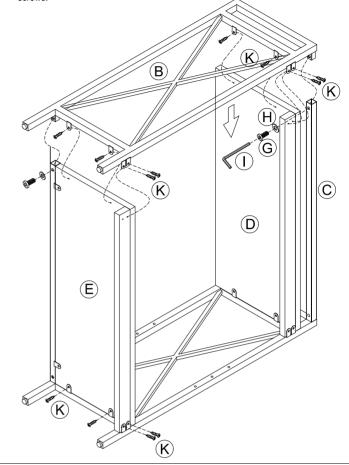

#### Step 4

- 4.1) Adjust levelers at the bottom of legs if needed.
- 4.2) Fasten one part of the anti-tipping kit onto the pre-drilled holes at back panel and another part into the wall. Loop the strap through the holes of the fastened parts and pull its end to tighten.

**Furniture Tipping Restraint** 

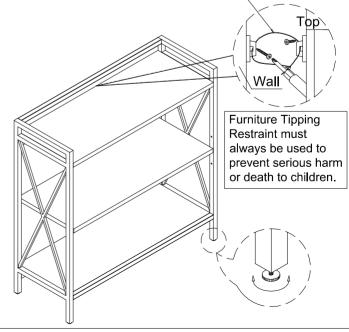

----2/2----