

REQUIRED TOOLS

- Flat Head Screwdriver


INCLUDED HARDWARE + TOOLS




Screw Gaskets (x2)



8-32 x 0.75" Screws
(x2)

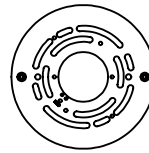

Circle Bracket (x1)

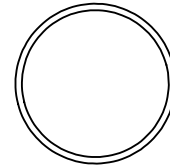

Canopy Gasket (x1)



Wiring Kit (x1)

ASSEMBLY INSTRUCTIONS

1. Detach Circle Bracket from fixture by removing 8-32 x 0.75" Screws and Screw Gaskets. Reserve Screws and Gaskets for final step of installation.
2. If installing indoors, skip to step 3. If installing outdoors or in a wet location, attach included Canopy Gasket by removing the film on the gasket to reveal adhesive backing. Carefully position the Canopy Gasket so that it aligns with the lip on the back of the fixture Canopy. Press firmly to adhere the Canopy Gasket to the fixture Canopy.
3. Attach Circle Bracket to junction box using included Wiring Kit Screws.
4. Wire the fixture to the junction box. Consult electrician, if necessary.
5. Attach fixture to Circle Bracket by lining up canopy mounting holes with Threaded Circle Bracket Standoffs using 8-32 x 0.75" Screws. If installing outdoors or in a wet location, install Screws with Screw Gaskets. Tighten Screws until the Canopy Gasket is compressed against Canopy and mounting surface.
6. Install Bulb and Shade.

