

TOOL REQUIRED PHILLIPS HEAD SCREW DRIVER (NOT PROVIDED)


12 | FLAT WASHER (M8)

**14** | ALLEN BOLT (M6X40)

15 | WOOD SCREW (Ø8X30)

**16** | WOOD DOWEL (Ø10X30)

13 ALLEN KEY



8 PCS


1 PC

5 PCS


10 PCS


4 PCS



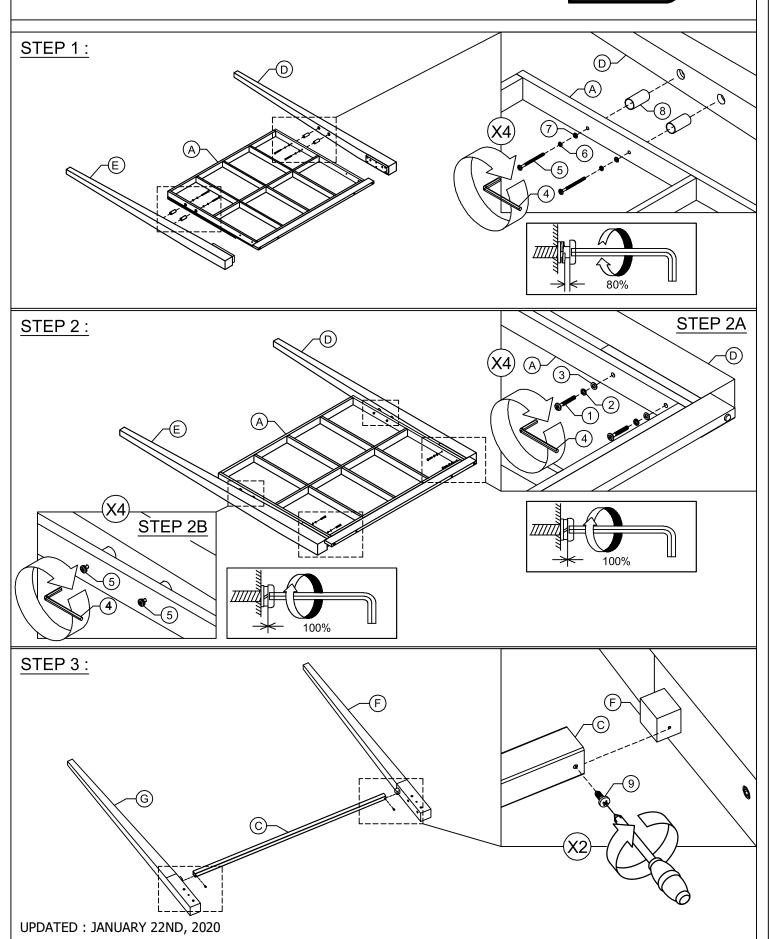



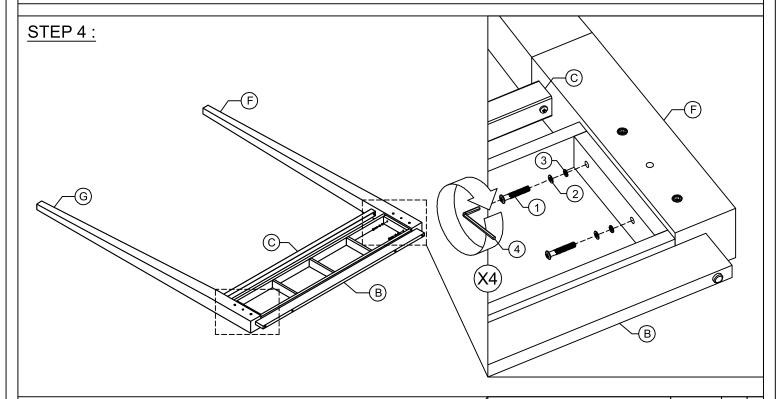

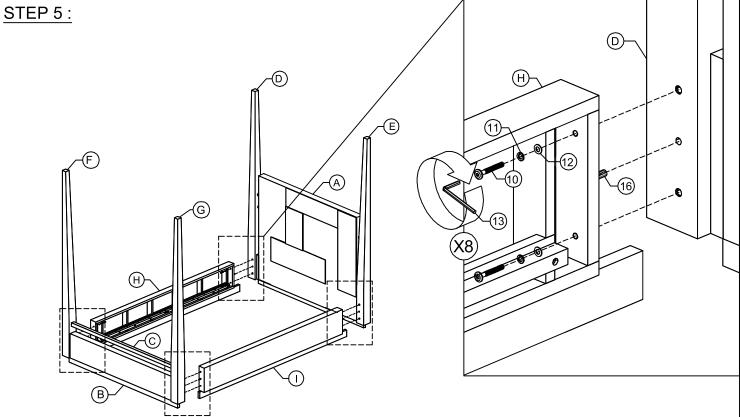





#### **STOP**

- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.



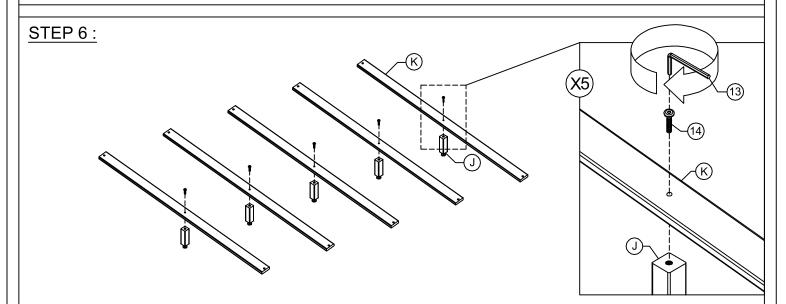

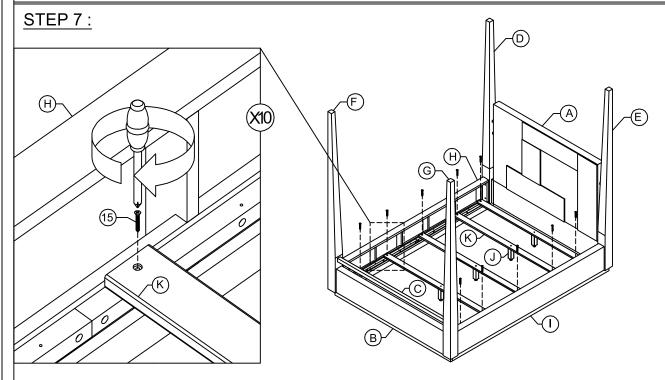

## INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each slat support (J).


Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support.



- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.

  Dragging can damage the slat support.
- Readjust levelers after moving your bed.



#### DESTINATION FULL / QUEEN POSTER BED

#### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

J. SLAT SUPPORT 5 PCS 14. ALLEN BOLT M6X40MM 5 PCS K. BED SLAT 5 PCS 15. WOOD SCREW Ø8X30MM 10 PCS

#### STEP 1:


USE ALLEN KEY (13) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

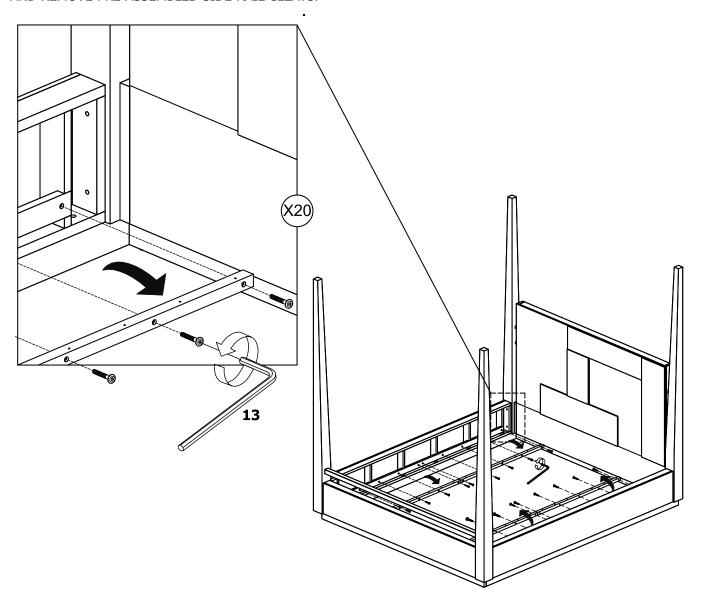

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.




#### **BOX #1**

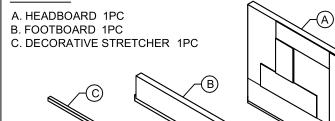


#### **BOX #2**


D. LEFT HEADBOARD POST 1PC E. RIGHT HEADBOARD POST 1PC F. LEFT FOOTBOARD POST 1PC G. RIGHT FOOTBOARD POST 1PC

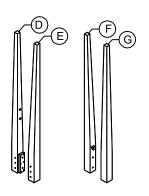

#### **BOX #3**

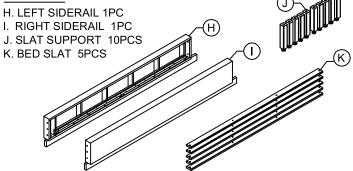

#### ASSEMBLY COMPLETE

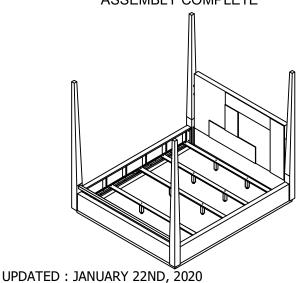

#### HARDWARE BOX #1

	1	ALLEN BOLT (M8X50)		8 PCS
	2	SPRING WASHER (M8)	0	8 PCS
	თ	FLAT WASHER (M8)	0	8 PCS
	4	ALLEN KEY		1 PC
	5	ALLEN BOLT (M6X100)	0	4 PCS
	6	SPRING WASHER (M6)	0	4 PCS
	7	FLAT WASHER (M6)	0	4 PCS
	8	DECORATIVE SPACER (Ø25X60)	$\Diamond$	4 PCS
	9	PAN HEAD SCREW (Ø8X12)	9	2 PCS


#### HARDWARE BOX #3

	10	ALLEN BOLT (M8X50)		8 PCS		
	11	SPRING WASHER (M8)	0	8 PCS		
	12	FLAT WASHER (M8)	0	8 PCS		
	13	ALLEN KEY		1 PC		
	14	ALLEN BOLT (M6X40)		10 PCS		
	15	WOOD SCREW (Ø8X30)	0	10 PCS		
	16	WOOD DOWEL (Ø10X30)		4 PCS		


TOOL REQUIRED PHILLIPS
HEAD SCREW DRIVER
(NOT PROVIDED)






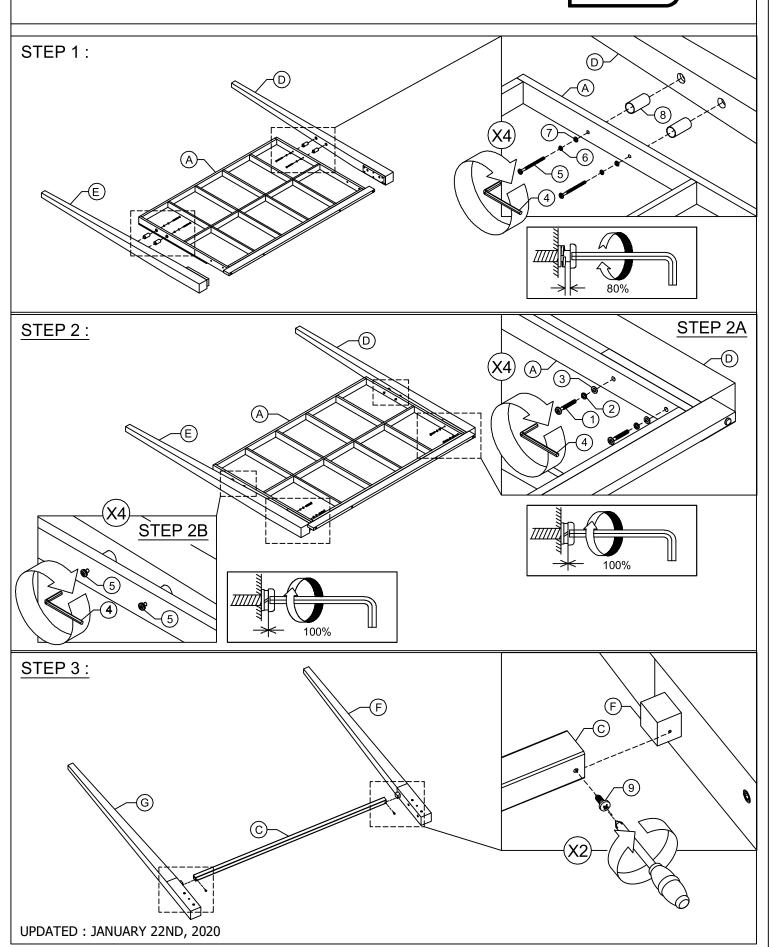



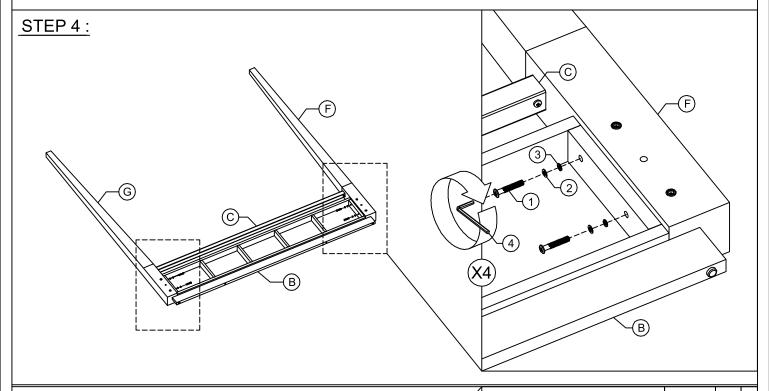

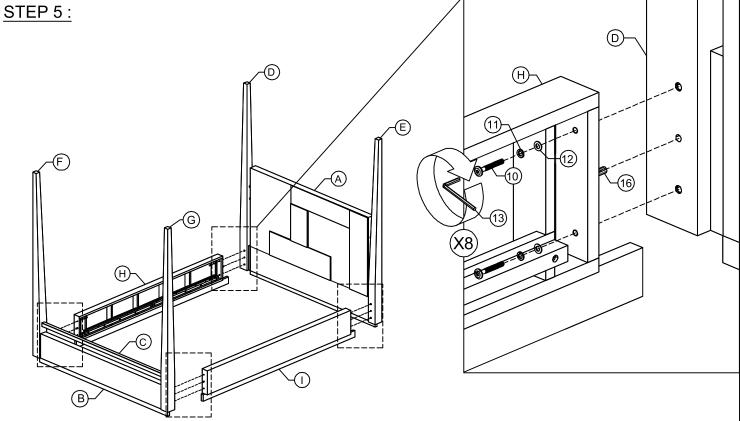


# A

#### STOP


- IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.



#### STEP 6:

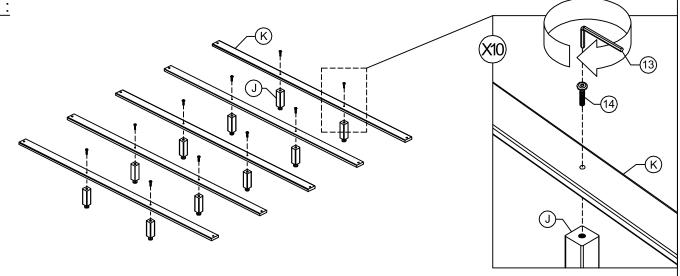

#### <u>STEP 7:</u>

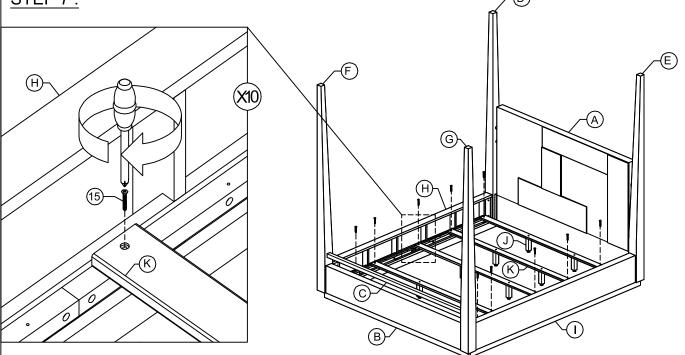

### INSTRUCTIONS FOR ADJUSTING LEVELER:

Position the bed in your space and locate the leveler under each slat support (J).


Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each slat support is applying equal, upward pressure on the bed slat support.

UPDATED: JANUARY 22ND, 2020

#### MAINTENANCE INSTRUCTION:

- Remove box spring and mattress before moving your bed.
- Lift your bed when moving it.
   Dragging can damage the slat support.
- Readjust levelers after moving your bed.



#### DESTINATION KING / CAL KING POSTER BED

#### APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

#### THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

J. SLAT SUPPORT 10 PCS 14. ALLEN BOLT M6X40MM 10 PCS K. BED SLAT 5 PCS 15. WOOD SCREW Ø8X30MM 10 PCS

#### STEP 1:

USE ALLEN KEY (13) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

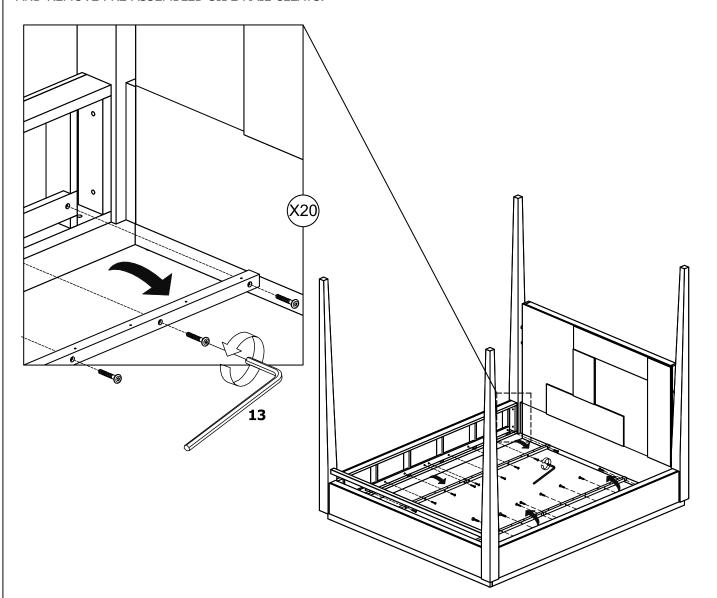

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.