


# SIMPLIHOME®

## Lowry / Mitchell / Fulton

---

Sideboard Buffet with Wine Rack

Model # AXCLRY-12DCB

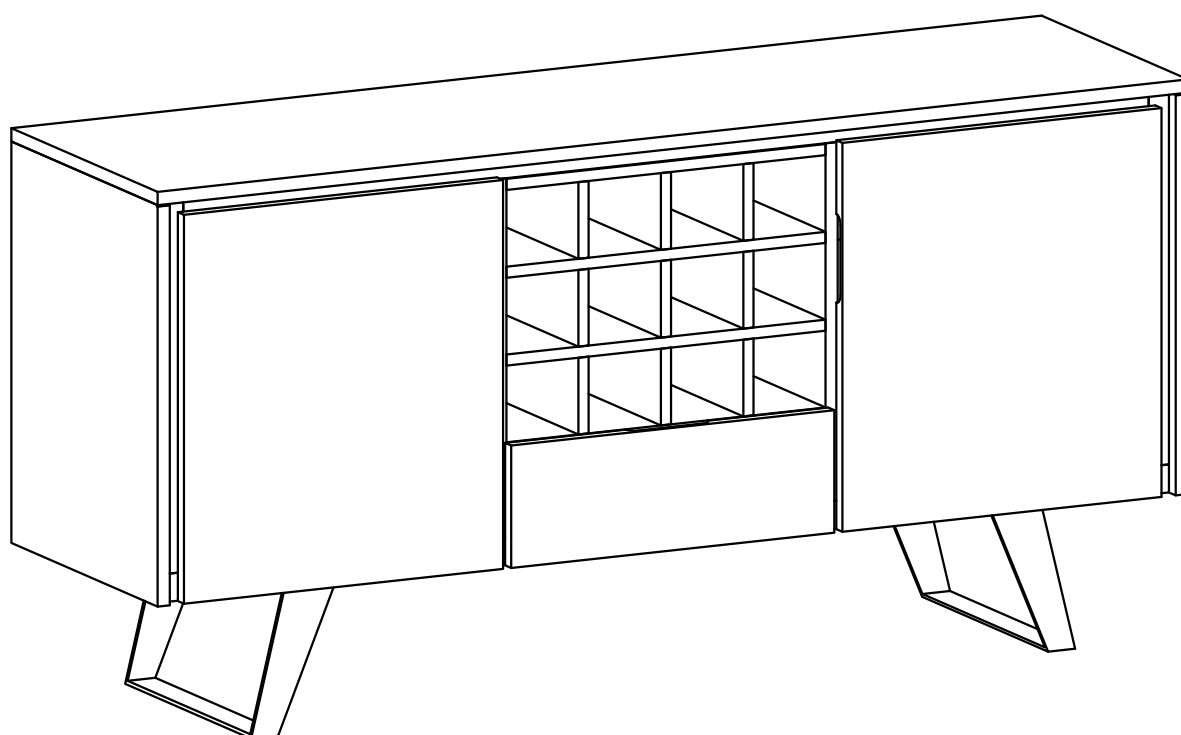

# SIMPLIHOME

## Great quality is a right.

Thank you for shopping with Simpli Home,  
America's top brand for high-value furniture.



## It's time to register your product warranty.

It's quick and easy. And you'll be happy you did.



- ✓ Activate your **1-year** warranty
- ✓ Automatic entry to win a **\$500** gift certificate
- ✓ Earn instant rewards and **save**

[simpli-home.com/product-registration](https://simpli-home.com/product-registration)

# SIMPLIHOME

## Review your product and collect rewards!

Thank you for your purchase! We hope you enjoy it. We'd love your feedback. Please share a review and get instant rewards!




*[simpli-home.com/product-review](https://simpli-home.com/product-review)*



## Share photos and get your cash back!



Send us images or share them on social and qualify for instant rewards. You may even receive store credit on your entire purchase!

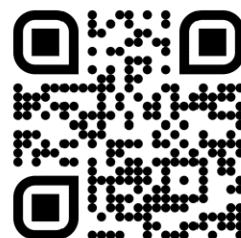

*[simpli-home.com/share-images](https://simpli-home.com/share-images)*

# SIMPLIHOME®

## For Fastest Customer Service:



1. Open your phone's camera.
2. Point your phone's camera at the QR code to scan.
3. Click on the pop up.
4. You'll be taken to our customer service page.
5. Fill the form with your order information and issue.
6. Submit form.
7. A customer service associate will contact you.

### Other ways to contact us...



#### Email Us

[customerservice@simpli-home.com](mailto:customerservice@simpli-home.com)



#### Visit Us

Visit our site directly at  
[www.simpli-home.com](http://www.simpli-home.com)



#### Call Us

1-866-518-0120  
Monday to Friday  
9am to 5pm EST

**\*If you've purchased from a retailer and you wish to return the product, please contact the retailer directly.**

**IMPORTANT** : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

## **Safety Information**

**CAUTION:** Injuries and damage can occur from furniture tip over if product is not properly anchored to the wall. Use the Furniture Anti-Tipping Restraint provided with the product. Consult our assembly instructions for help.

If the Furniture Anti-Tipping Restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

**WARNING:** This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

**May require 2 people for ease of assembly.**

## Care & Maintenance

**This furniture is designed for indoor use.**

Damage to furniture can come from temperature changes in relative humidity (RH) in our homes. Humid air oxidizes metal which results in rusting, corrosion, tarnishing and roughness. Wood absorbs water as relative humidity rises and falls, and in doing so it swells and shrinks.


To protect against the humidity effect, the metal is powder coated. The powder coat layer protects the metal from oxidizing, corrosion, tarnishing and scratching and keeps it looking good for years to come. The wood is sealed and lacquered to protect against humidity.

**To help protect your furniture, follow these steps:**

- Use a humidifier, preferably one with an automatic control system that can sense the humidity level and adjust itself accordingly
- Dust with soft dry cloth
- Wipe up spills promptly
- Clean with a dry cloth
- Do not use abrasive cleaners, chemical solvents, strong detergents, cleaners with bleach, and furniture polish
- Use soft felt base coasters, placemats to help prevent scratches
- Keep furniture out of direct sunlight, which can cause cracking or roughness on the protective layer
- If it can be avoided, do not put furniture near heating vents
- Keep the furniture 3 to 4 inches away from the wall, giving heat and air space to circulate.


## Part Description

A

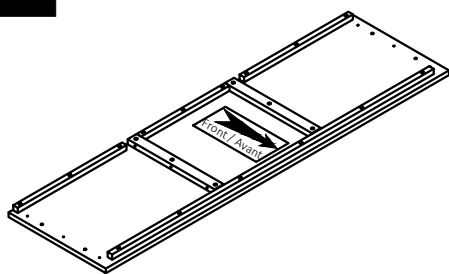


TOP  
QTY 1

B

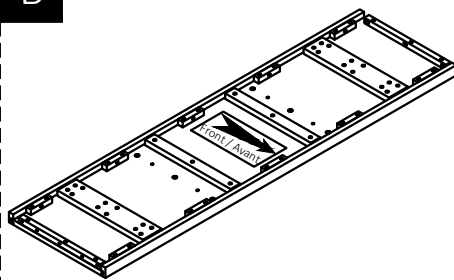


BOTTOM FRAME  
QTY 1

CL

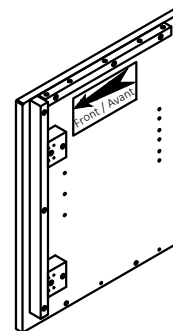


LEFT SIDE  
QTY 1

CR

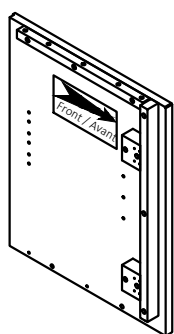


RIGHT SIDE  
QTY 1

DL

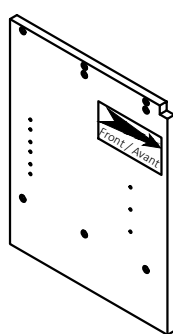


LEFT DIVIDER  
QTY 1

DR

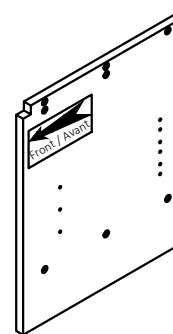


RIGHT DIVIDER  
QTY 1

E

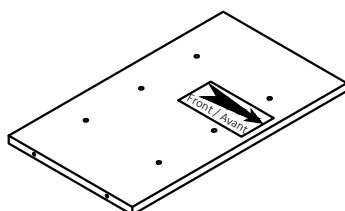


TOP SHELF  
QTY 1

F

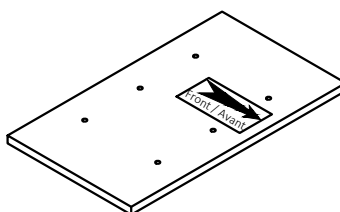


MIDDLE SHELF  
QTY 2

G

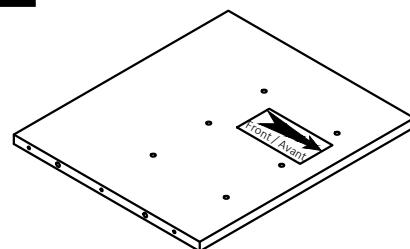


BOTTOM SHELF  
QTY 1

H

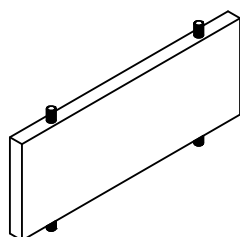


DIVIDER  
QTY 9

IL

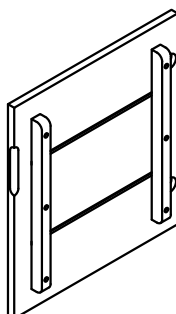

LEFT DOOR  
QTY 1


IR

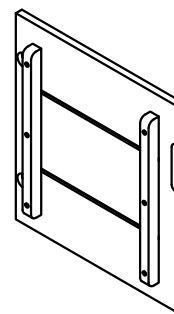

RIGHT DOOR  
QTY 1

## Part Description

K

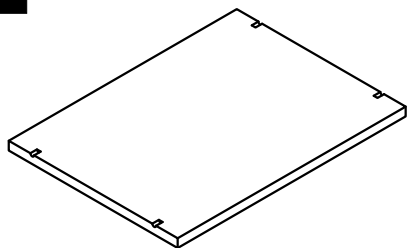


SHELF  
QTY 2

L




TOP BACK PANEL  
QTY 1

M

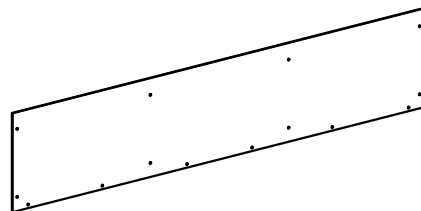


BOTTOM BACK PANEL  
QTY 1

N

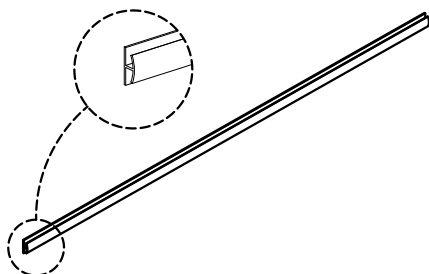


JOINING STRIP  
QTY 1

O

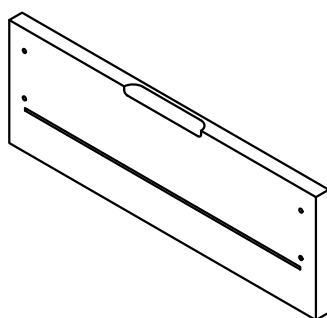


DRAWER FRONT  
QTY 1

PL

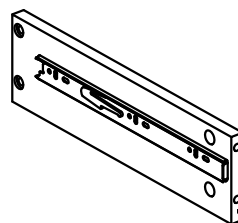


LEFT DRAWER SIDE  
QTY 1

PR

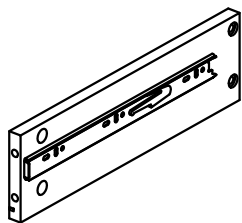


RIGHT DRAWER SIDE  
QTY 1

Q

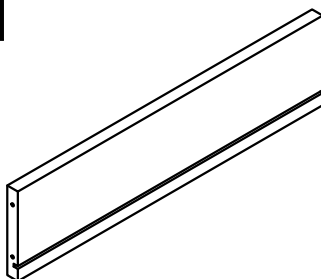


DRAWER BACK  
QTY 1

R

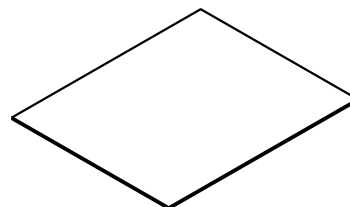

DRAWER BOTTOM  
QTY 1

S

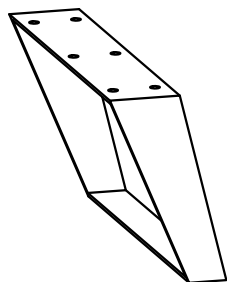


LEG  
QTY 2




## Hardware Description

1




ALLEN KEY BOLT  
M8 x 20 mm  
QTY 12

2




LOCK WASHER  
Ø12 / Ø8 x 1.5 mm  
QTY 12

3

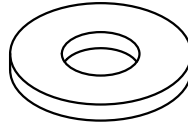


WASHER  
Ø19 / Ø8 x 1 mm  
QTY 12

4




ALLEN KEY SCREW  
M6 X 30mm  
QTY 38

5




ALLEN KEY  
QTY 1

6




PHILLIPS SCREW  
ROUND HEAD  
M4 X 15mm  
QTY 28

7

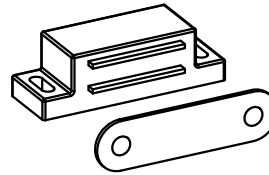


MAGNET AND PLATE  
QTY 2 SETS

8




SHELF SUPPORT  
QTY 12

9



PHILLIPS SCREW  
M3 X 15mm  
QTY 8

10




PHILLIPS SCREW  
M4 X 15mm  
QTY 24

11




WOOD DOWEL  
Ø8 X 30mm  
QTY 16

12

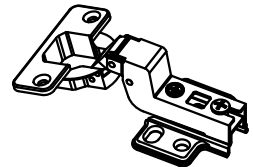

ADJUSTABLE HINGE  
QTY 4 SETS


13

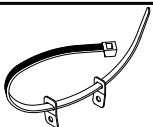


- a. M4X25mm-QTY2 (1 is extra)
- b. M4X15mm-QTY1
- c. M4X25mm-QTY1

FURNITURE TIP OVER  
RESTRAINT  
QTY 1 SET


14




CAM LOCK PIN  
CAM LOCK  
QTY 4 SETS

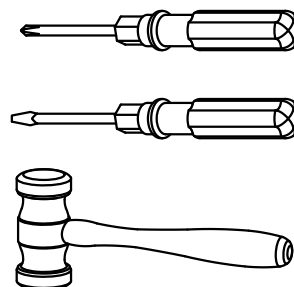

Required -  
Flathead screwdriver  
Phillips screwdriver  
Rubber mallet  
**Not Included**

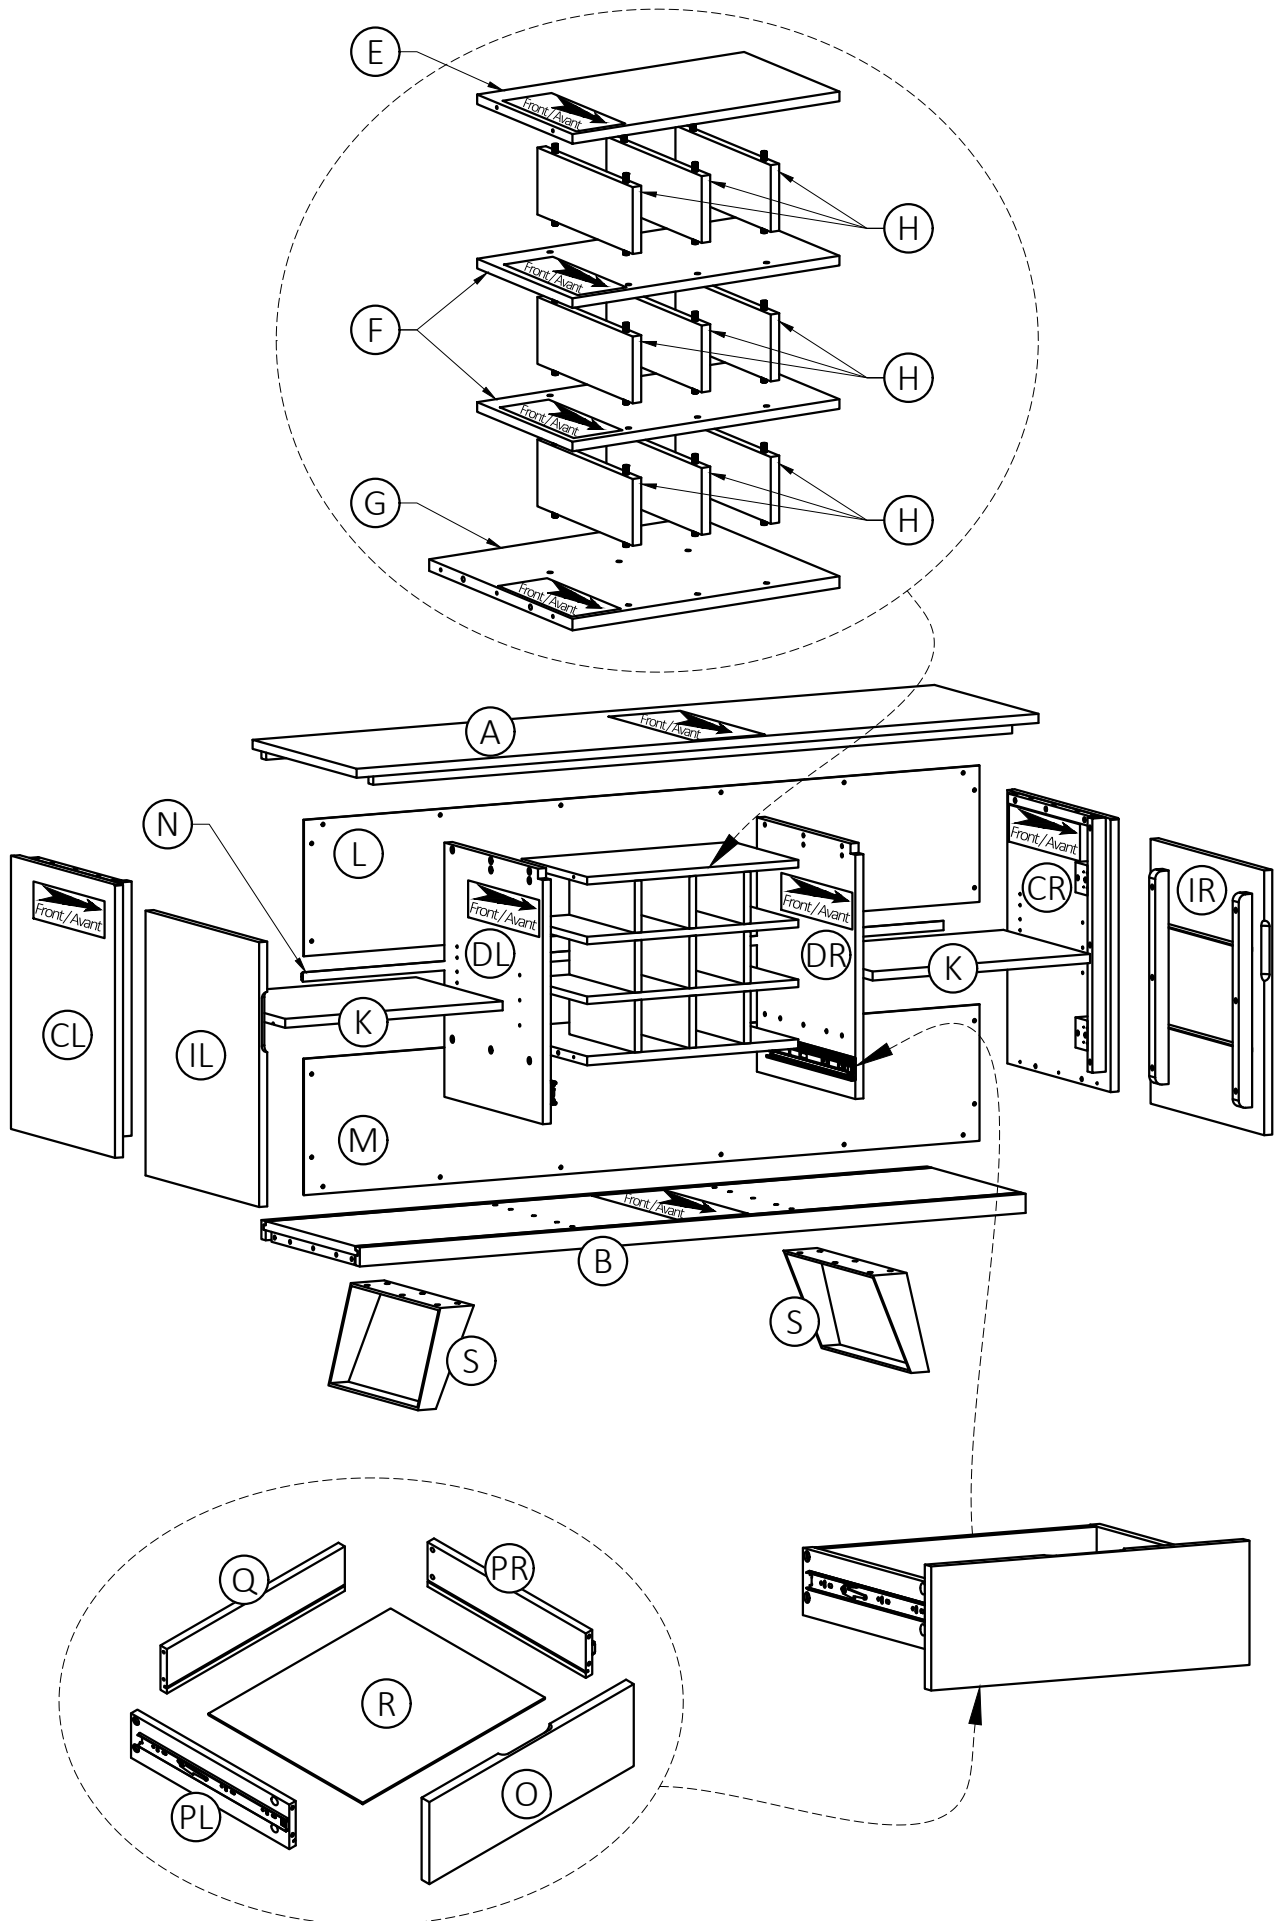


## Step 1

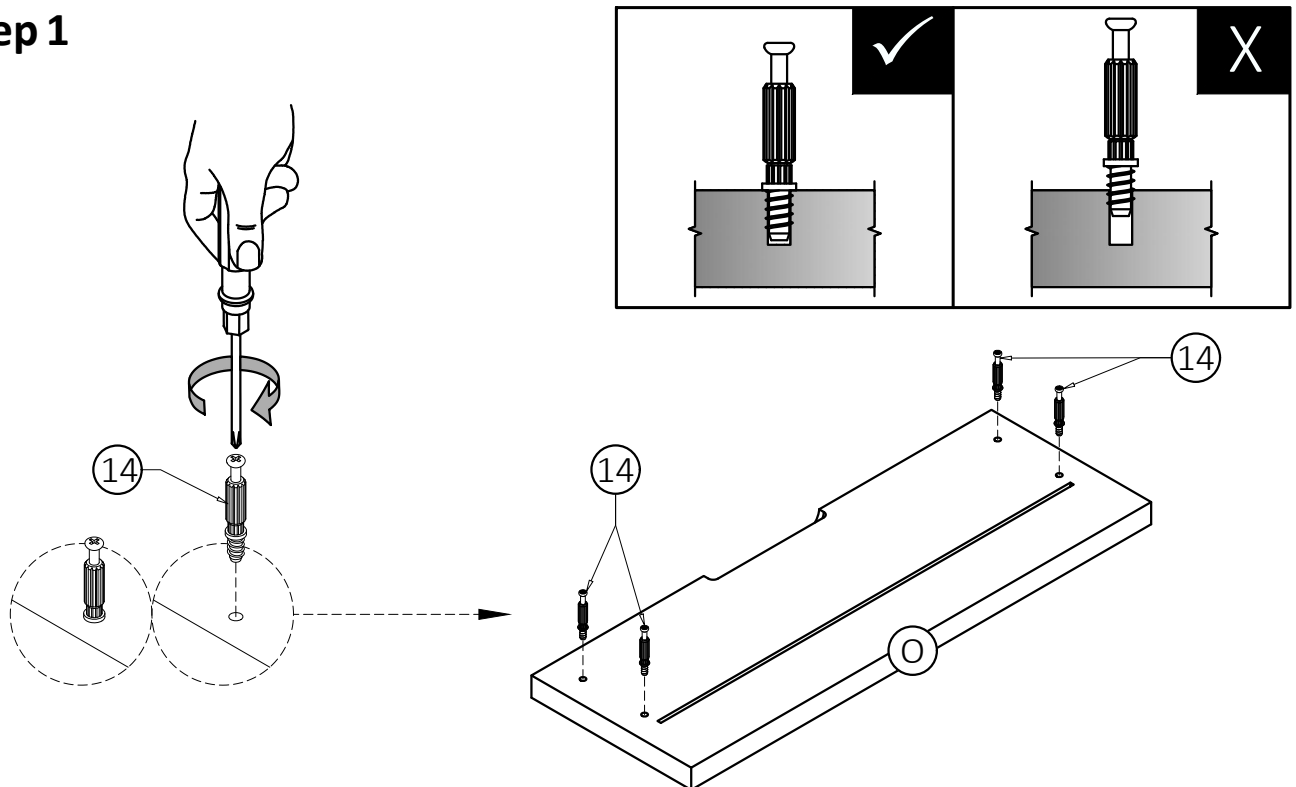


1. Attach four Cam Lock Pins (14) into pre-drilled holes on Drawer Front (O).
2. Use Phillips screwdriver to secure Cam Lock Pins. Do not over-tighten.

## Step 2

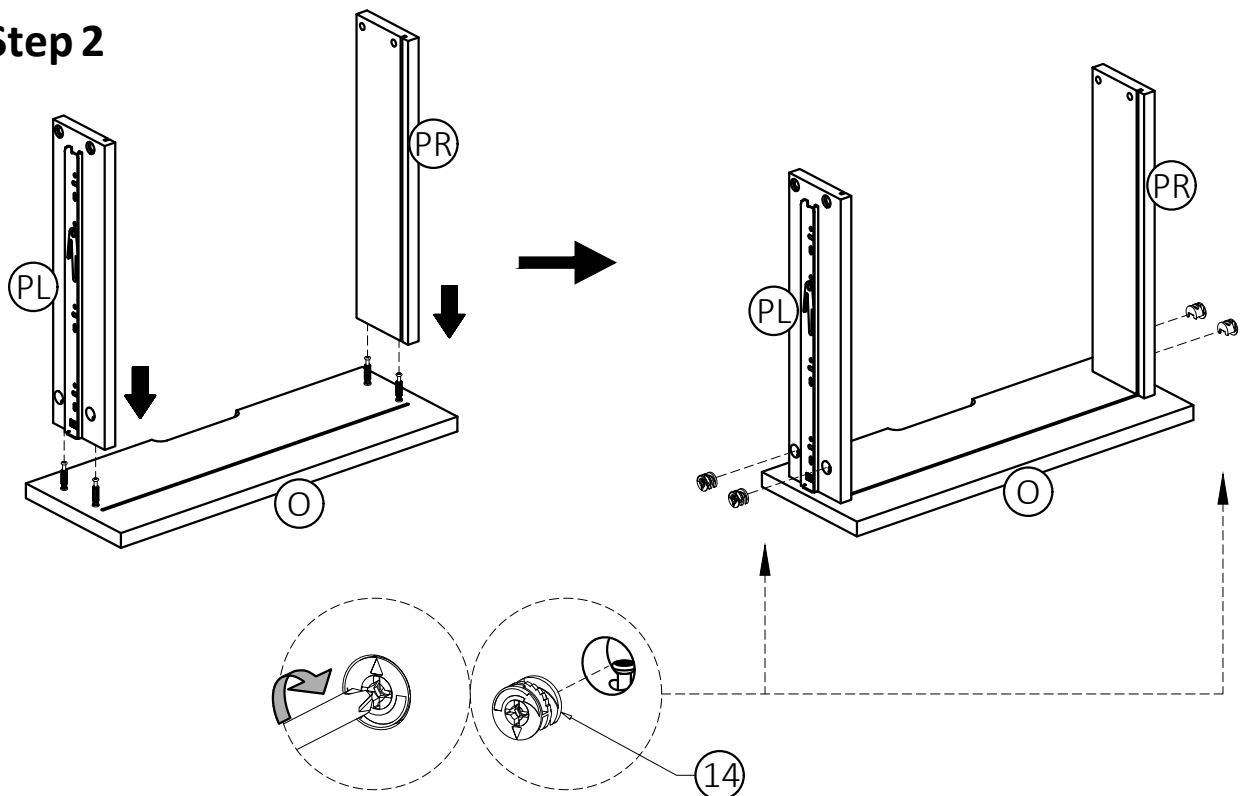


1. Align Cam Lock Pins with guide holes and attach Drawer Sides (PL, PR) to Drawer Front (O).
2. Insert two Cam Locks (14) into guide holes on each Drawer Side (PL, PR).
3. Use Phillips screwdriver to secure Cam Locks. Do not over-tighten.


## Step 3

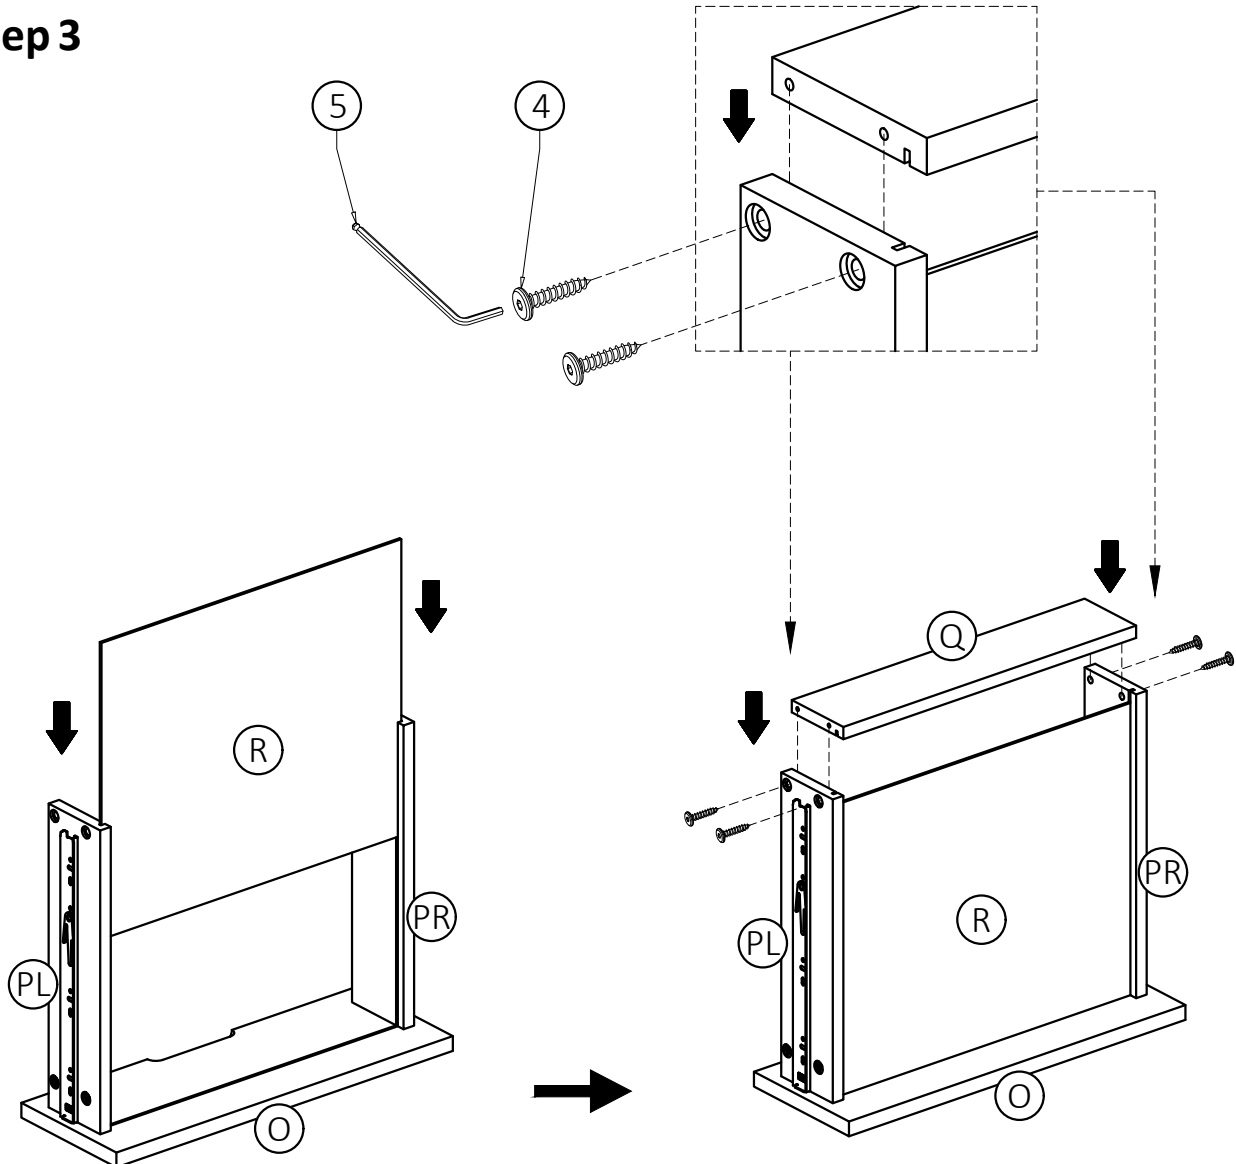

1. Slide Drawer Bottom (R) firmly into slots on Drawer Sides (PL, PR) and Drawer Front (O).
2. Align Drawer Back (Q) with Drawer Bottom (R) and press firmly into slot .
3. Attach Drawer Back using two Phillip Screws (4) through guide holes on each Drawer Side (PL, PR).
4. Use Allen Key (5) to tighten Screws. Do not over-tighten.

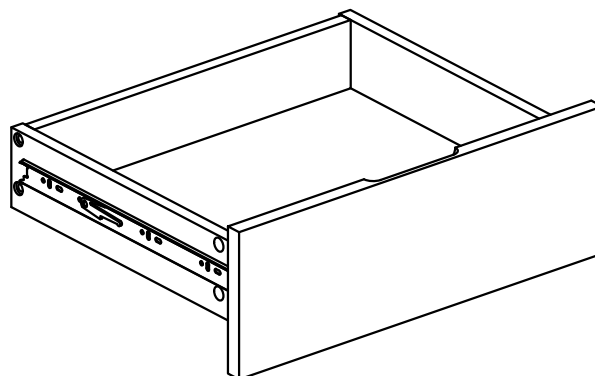


## Step 4

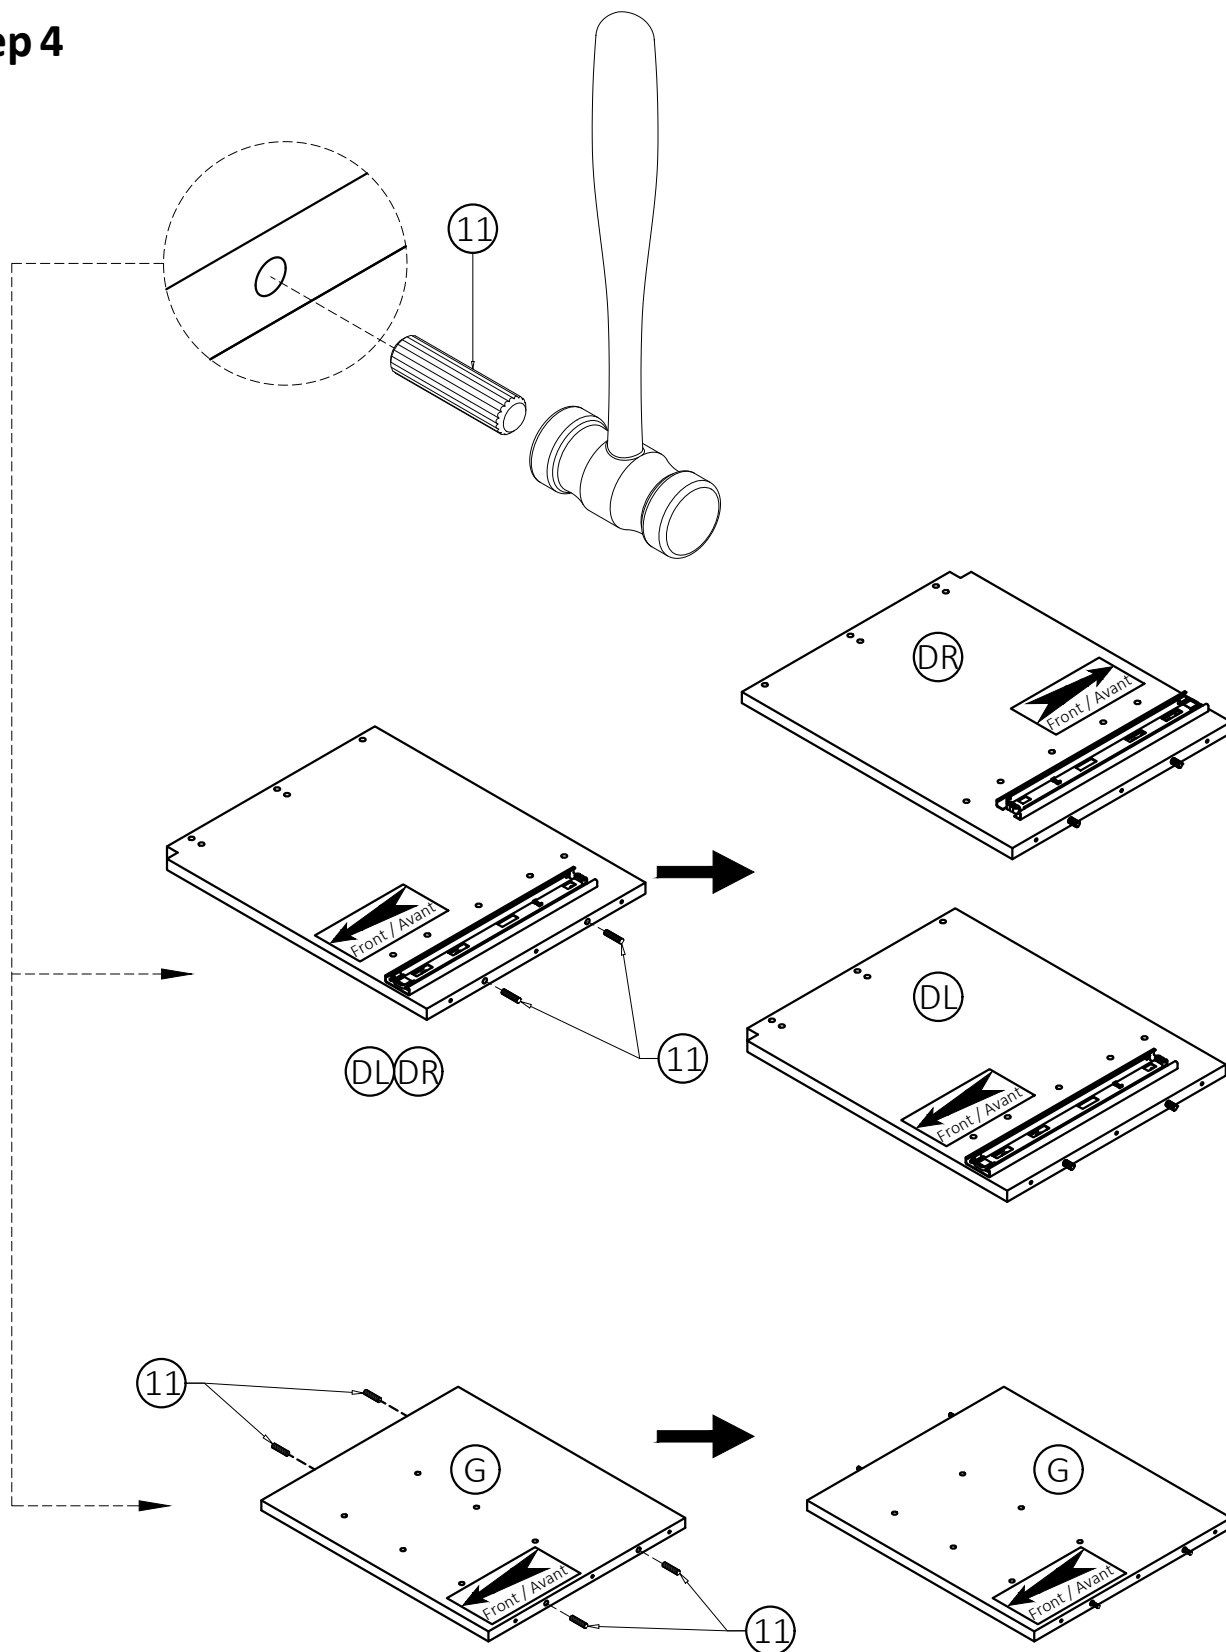


1. Insert Wood Dowels (11) into guide holes on each part (DL, DR, G).
2. Use rubber mallet to tap Dowels (11) into bottom of holes securely.  
1/2 length of Dowels should be exposed.

## Step 5

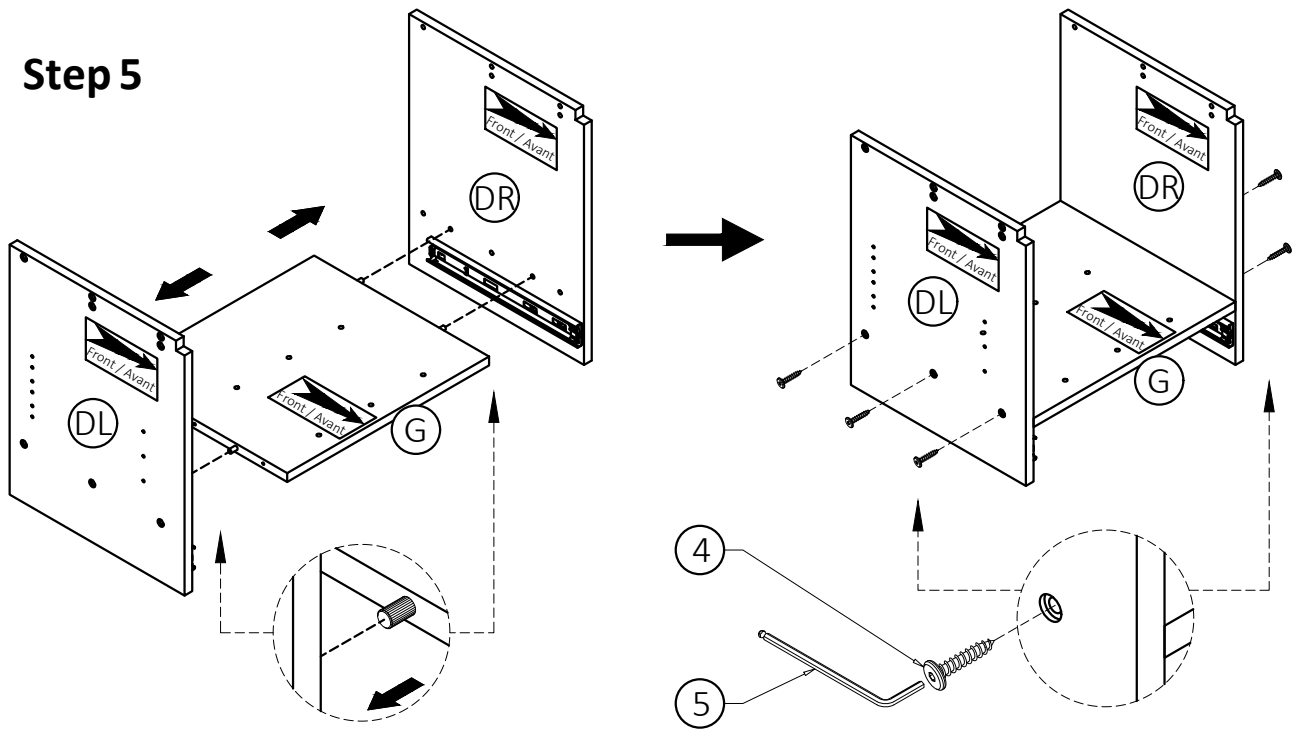


1. Align Wood Dowels with guide holes on Dividers (DL), (DR) and attach Bottom Shelf (G) to Dividers (DL), (DR).
2. Use three Allen Key Screws (4) to attach each Divider (DL), (DR) through guide holes.
3. Use Allen Key (5) to tighten Screws. Do not over-tighten.

## Step 6

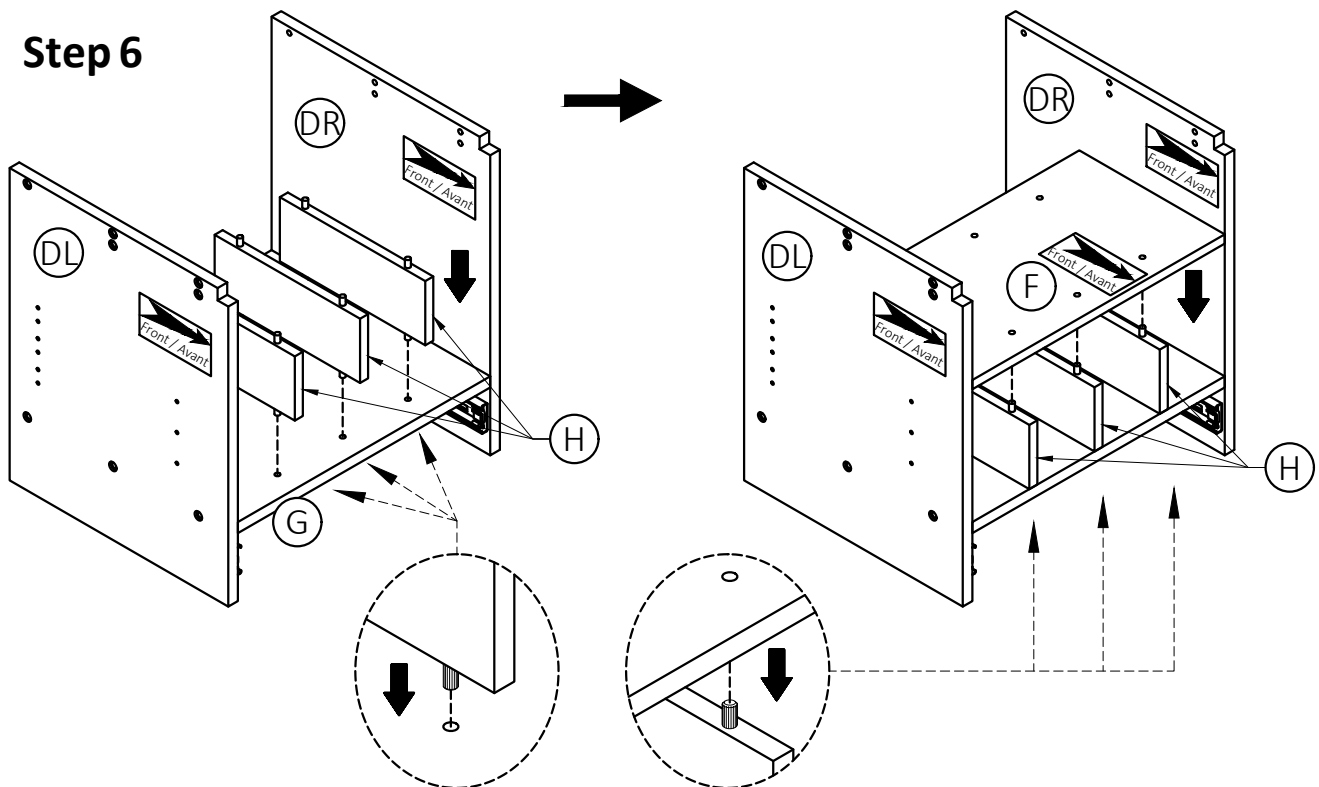


1. Align Wood Dowels with guide holes on Bottom Shelf (G) and attach three Dividers (H) to Bottom Shelf (G).
2. Align Wood Dowels with guide holes on Middle Shelf (F) and attach Middle Shelf (F) to three Divider (H).

## Step 7

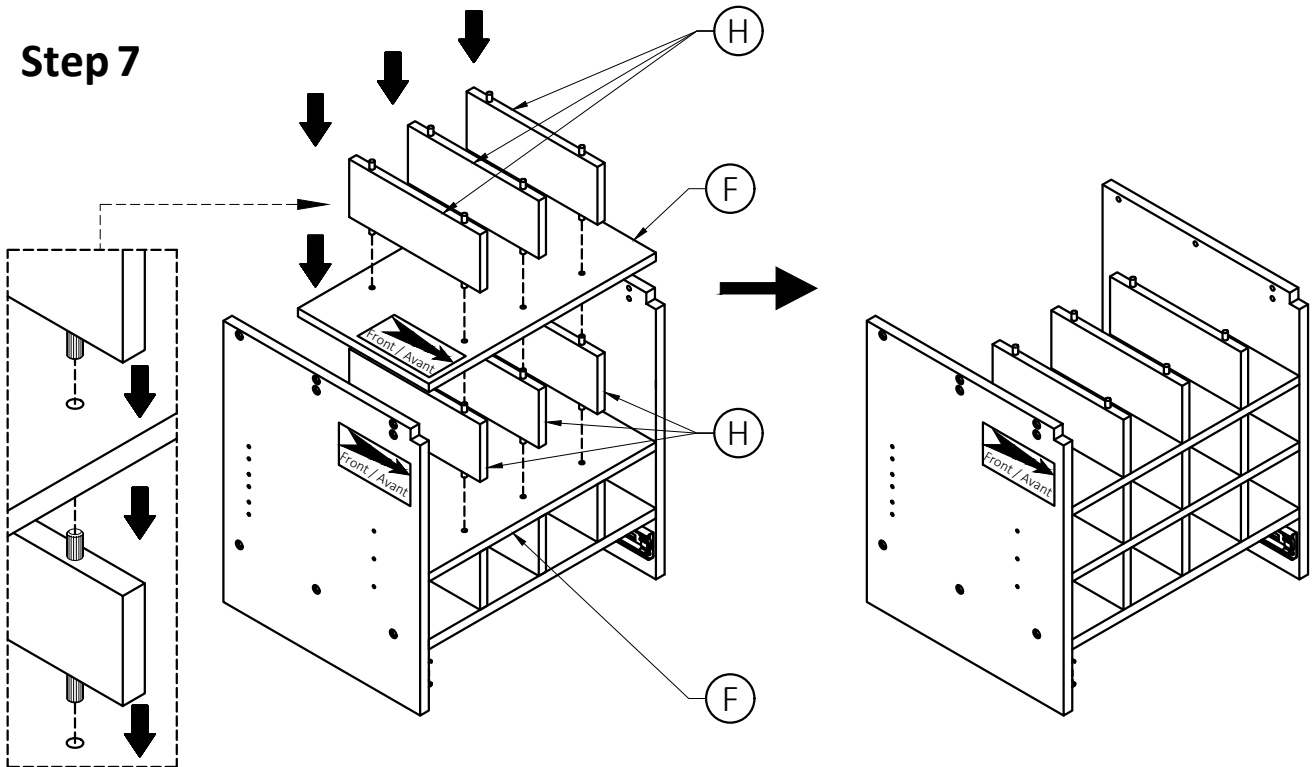


1. Repeat Step - 6 for the rest parts (H) and (F).

## Step 8

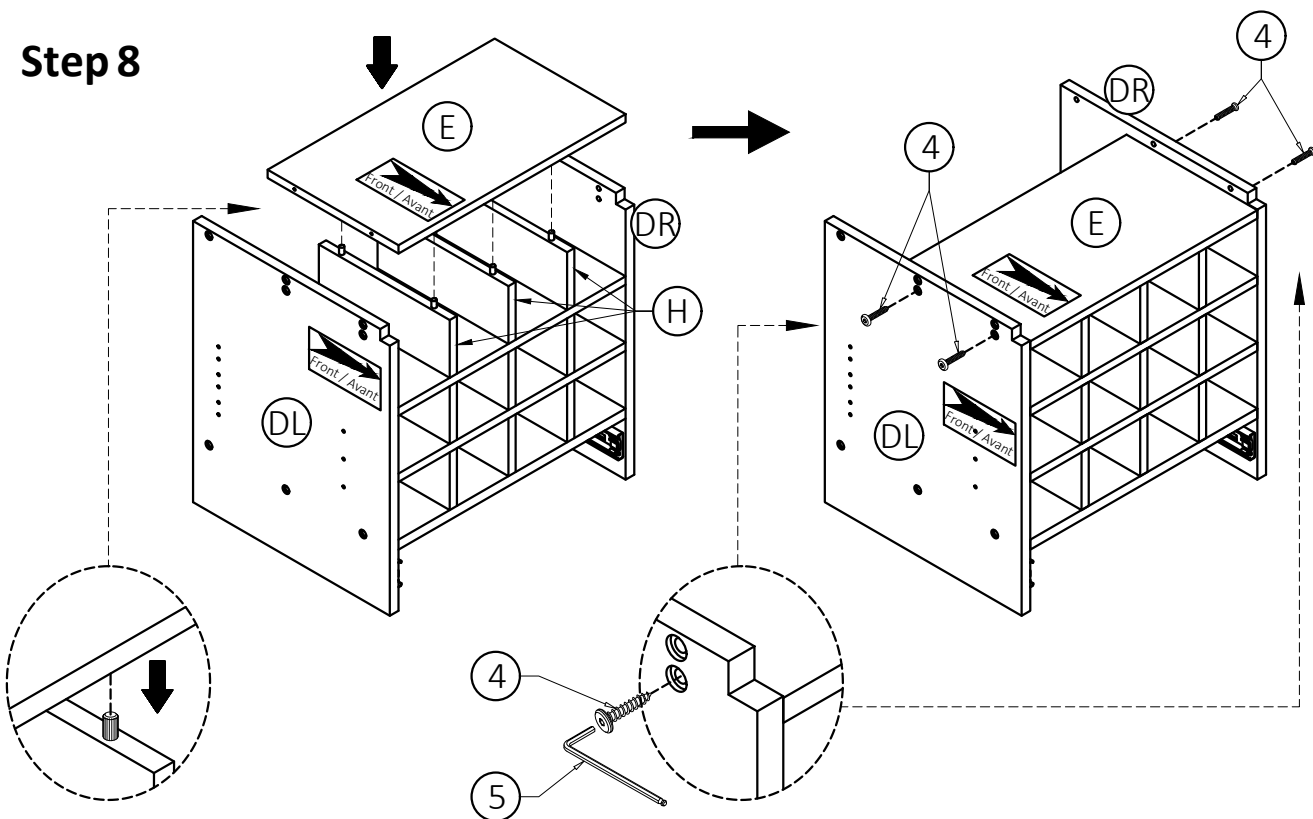

1. Align Wood Dowels with guide holes on Top Shelf (E) and attach Top Shelf (E) to Dividers (H).
2. Use three Allen Key Screws (4) to attach Top Shelf (E) through guide holes.
3. Use Allen Key (5) to tighten Screws. Do not over-tighten.


## Step 9

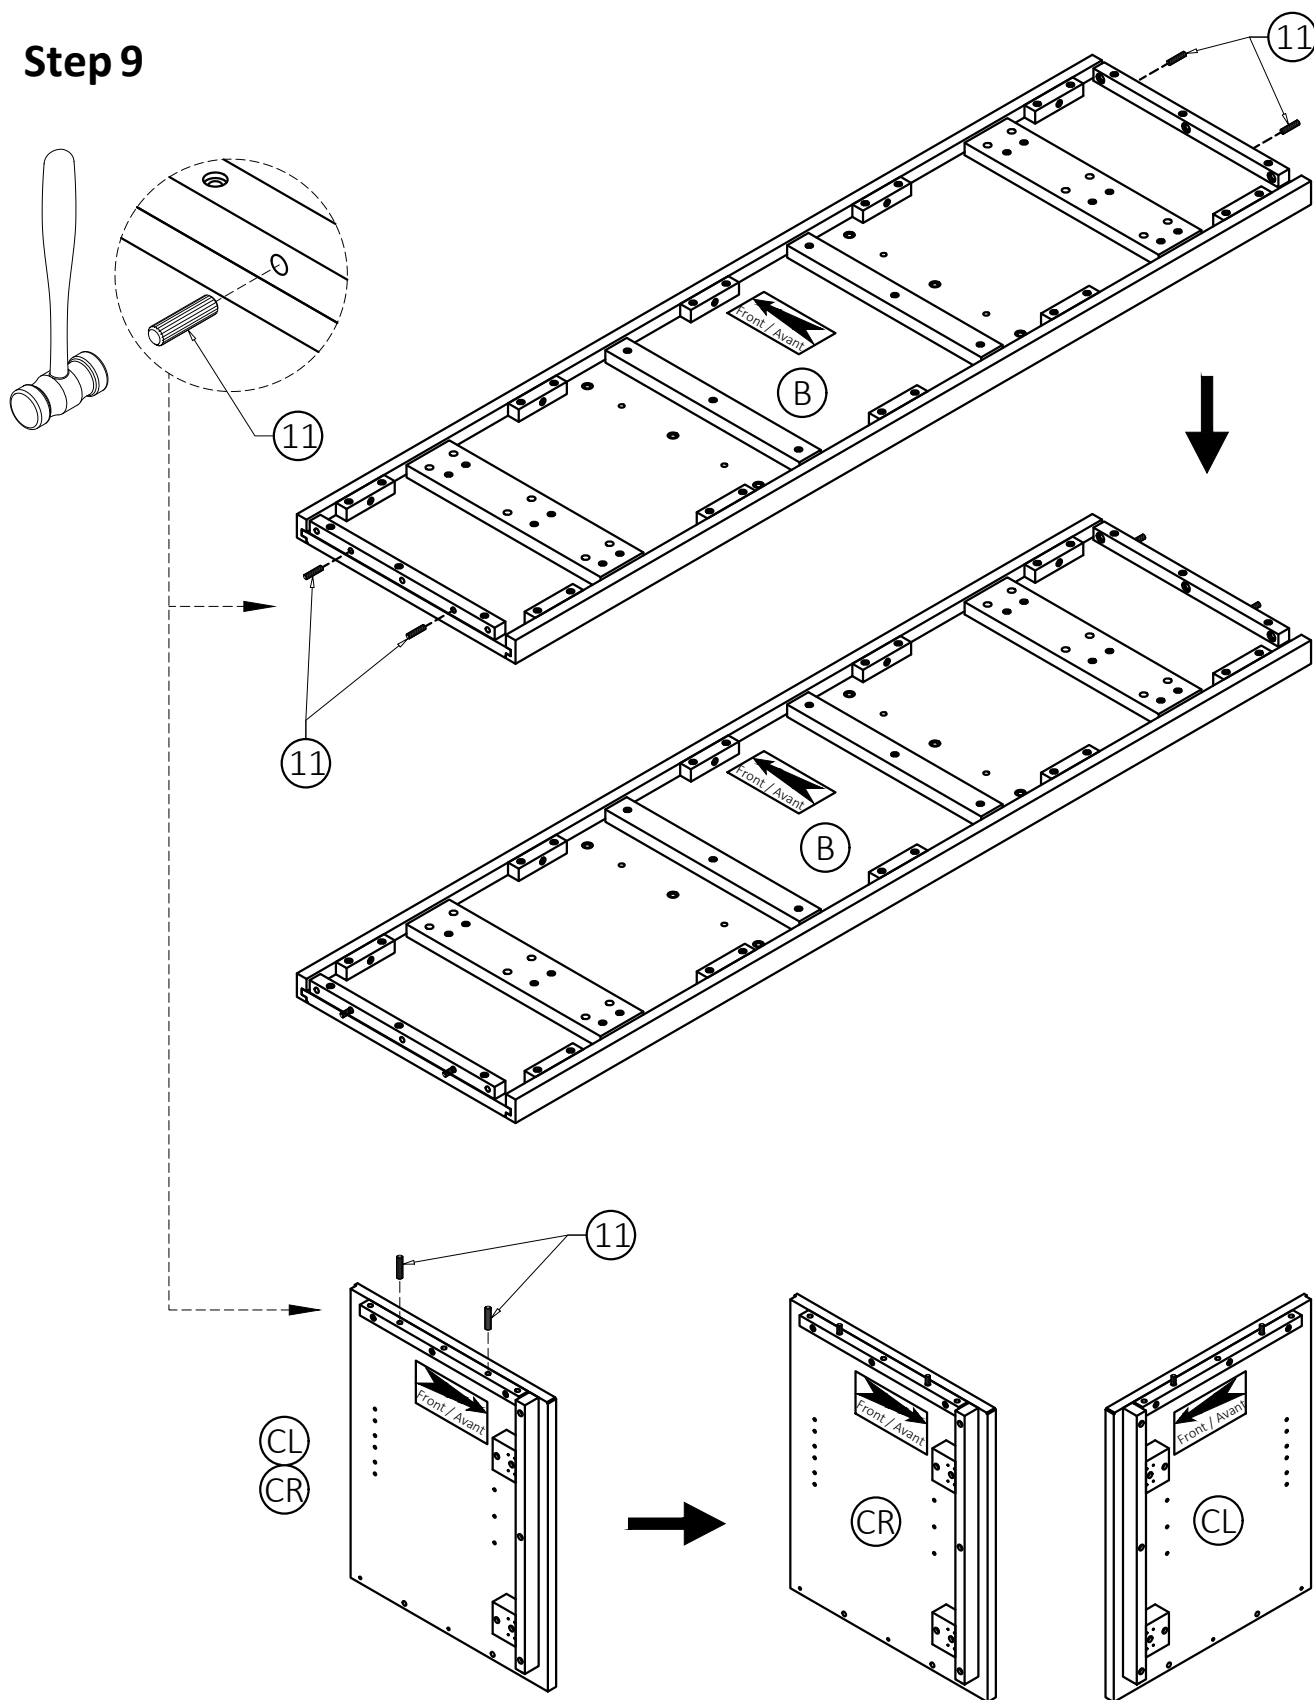


1. Insert Wood Dowels (11) into guide holes on each part (B), (CL), (CR).
2. Use rubber mallet to tap Dowels (11) into bottom of holes securely. 1/2 length of Dowels should be exposed.



## Step 10

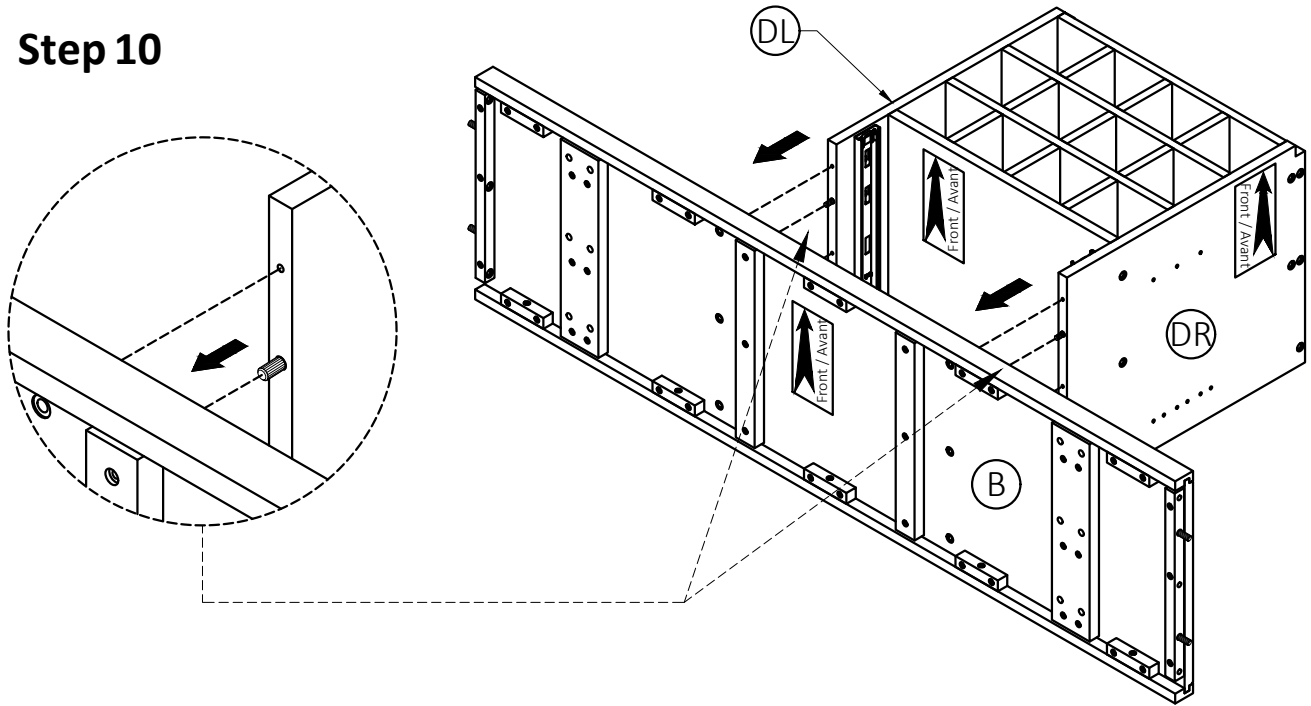


1. Align Wood Dowels with guide holes on Bottom Frame (B) and attach Dividers (DL, DR) to Bottom Frame (B).

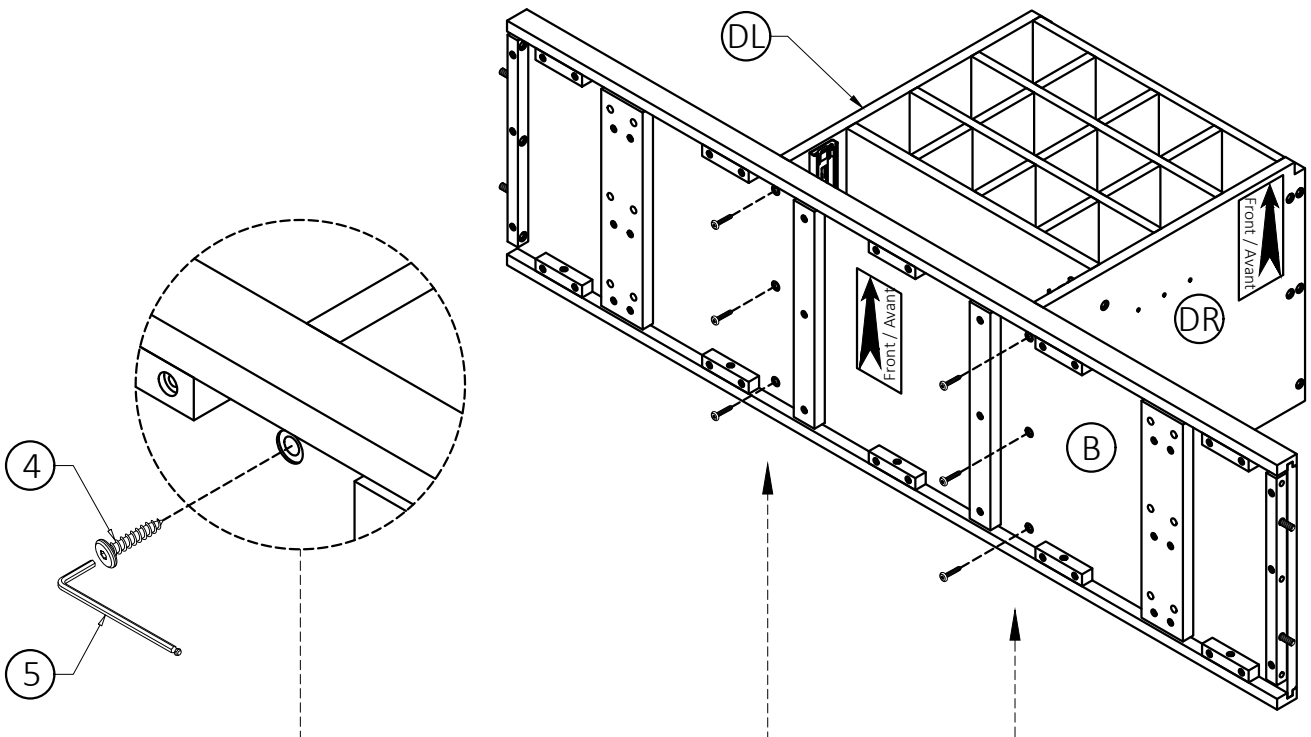


2. Use six Allen Key Screws (4) to attach Bottom Frame (B) through guide holes.
3. Use Allen Key (5) to tighten Screws. Do not over-tighten.

## Step 11

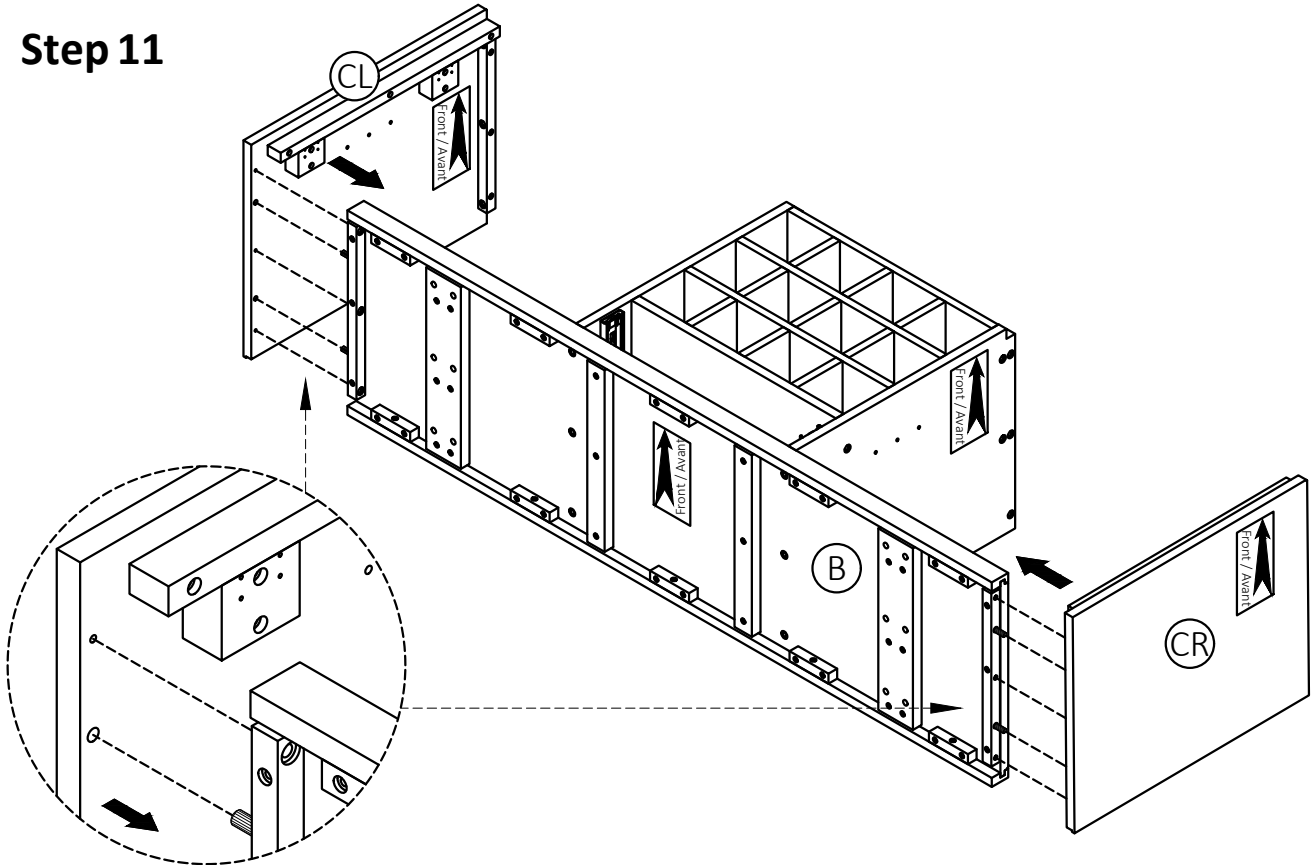


1. Align Wood Dowels with guide holes on sides (CL), (CR) and attach Sides (CL), (CR) to Bottom Frame (B).

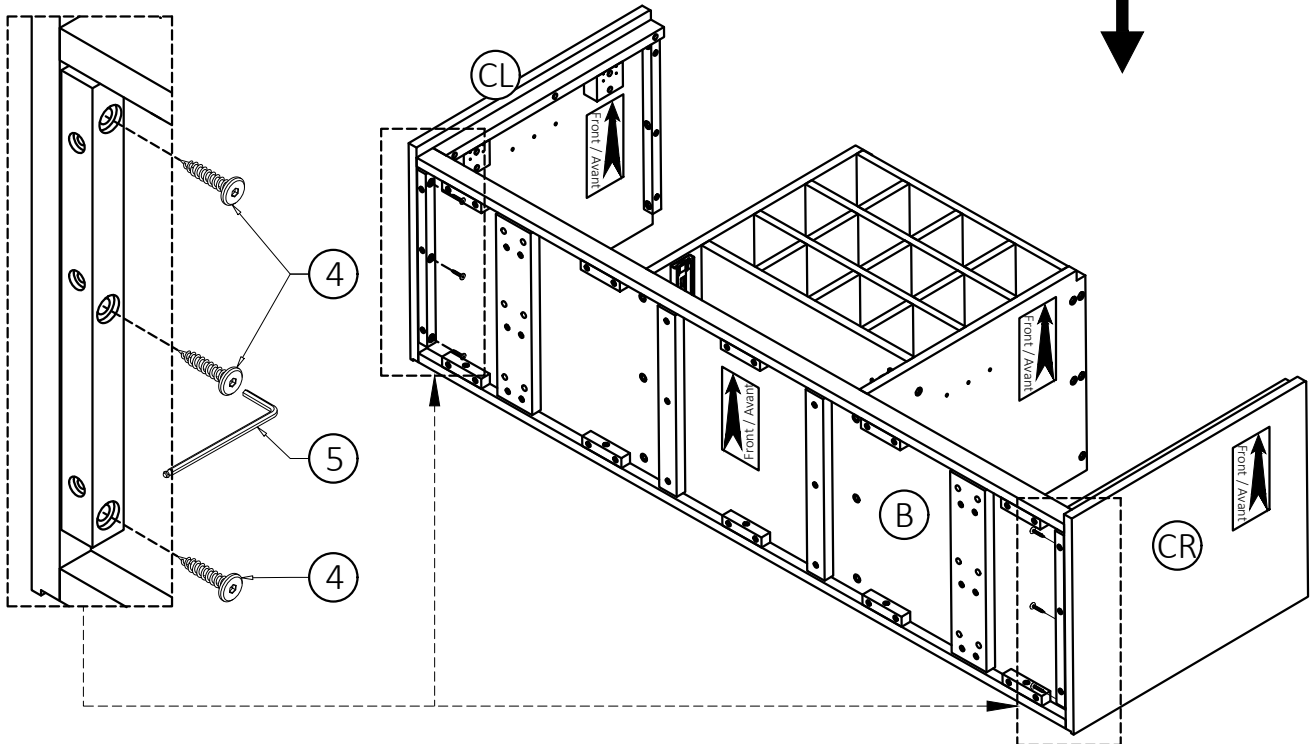




2. Use six Allen Key Screws (4) to attach Bottom Frame (B) through guide holes.
3. Use Allen Key (5) to tighten Screws. Do not over-tighten.

## Step 12

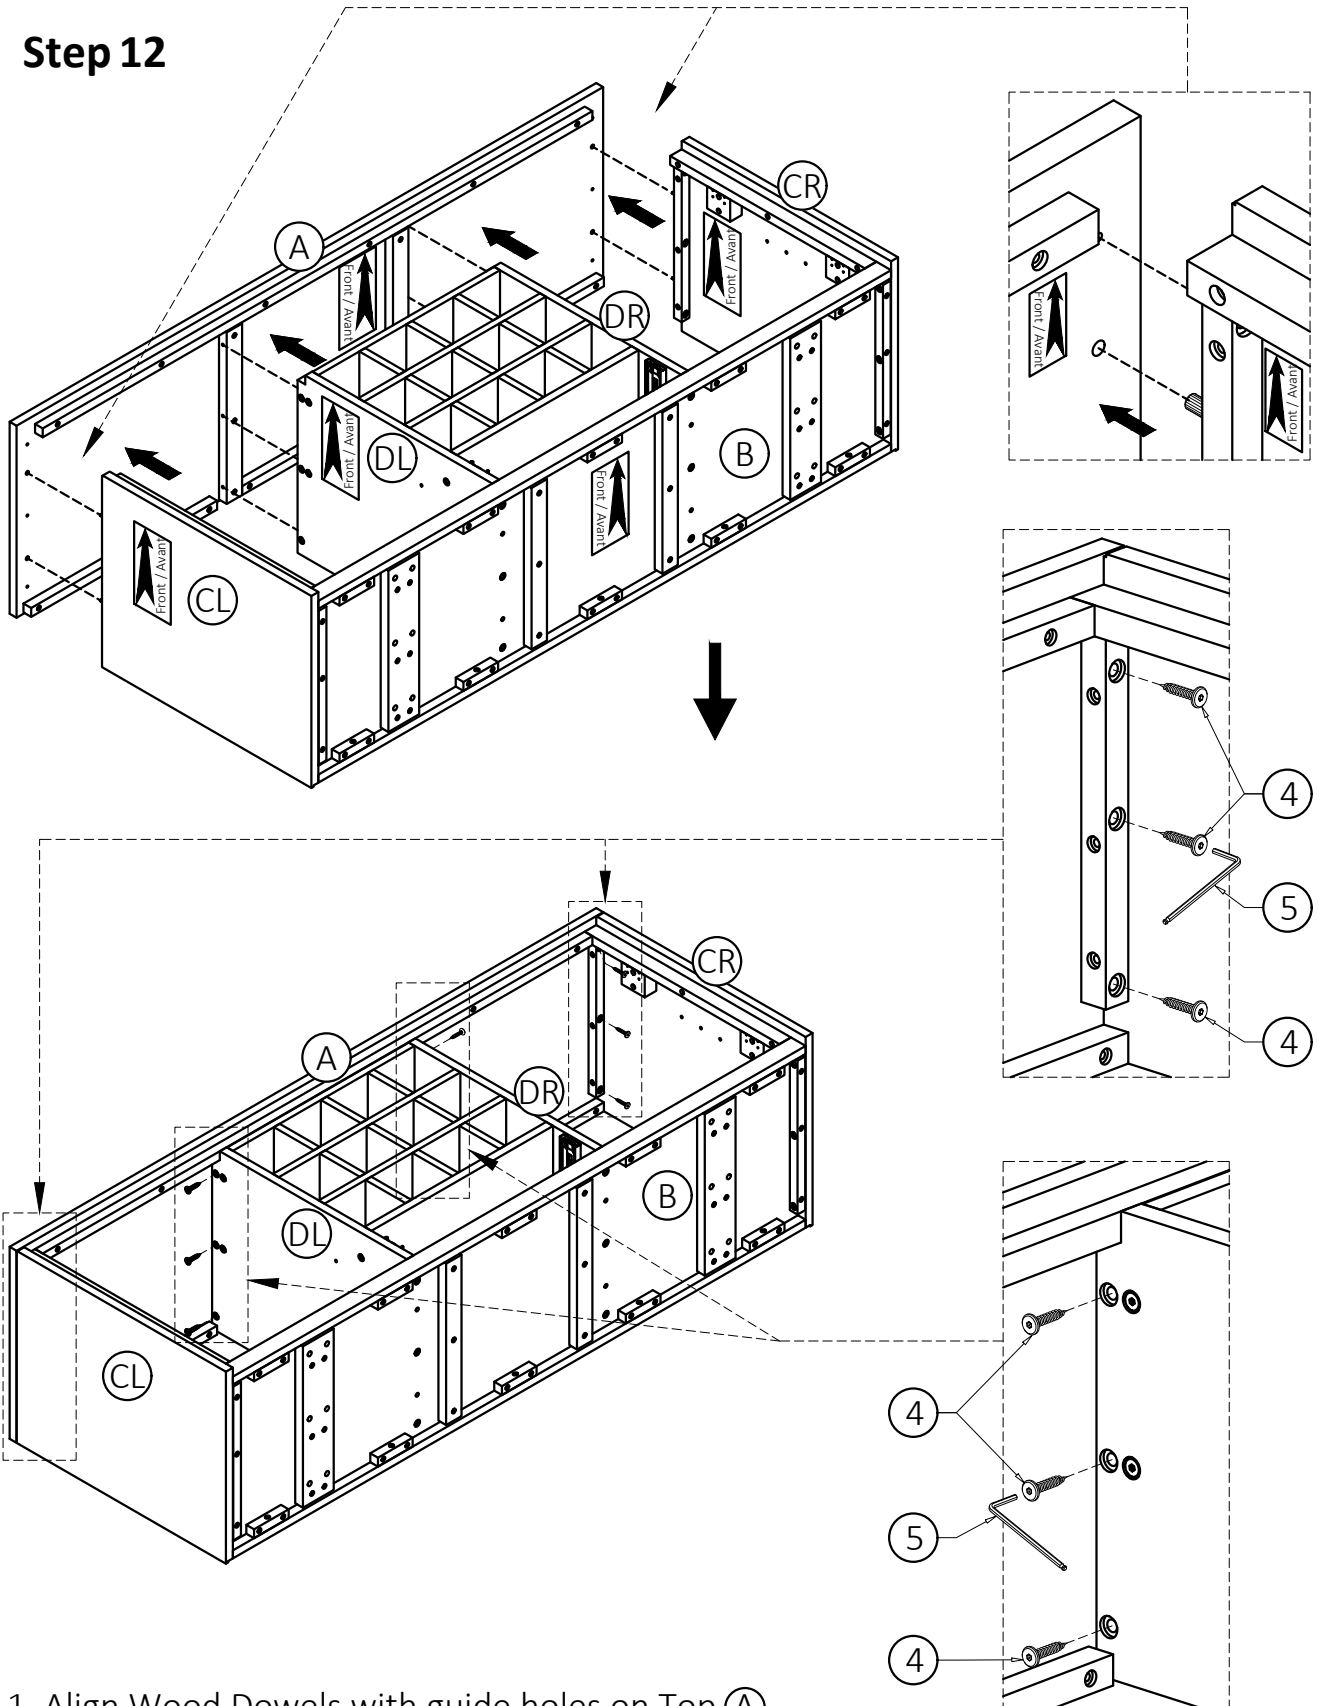

1. Align Wood Dowels with guide holes on Top (A) and attach parts (CL), (CR), (DL), (DR) to Top (A).
2. Use three Allen Key Screws (4) to attach each part (CL), (CR), (DL), (DR) through guide holes.
3. Use Allen Key (5) to tighten Screws. Do not over-tighten.


## Step 13

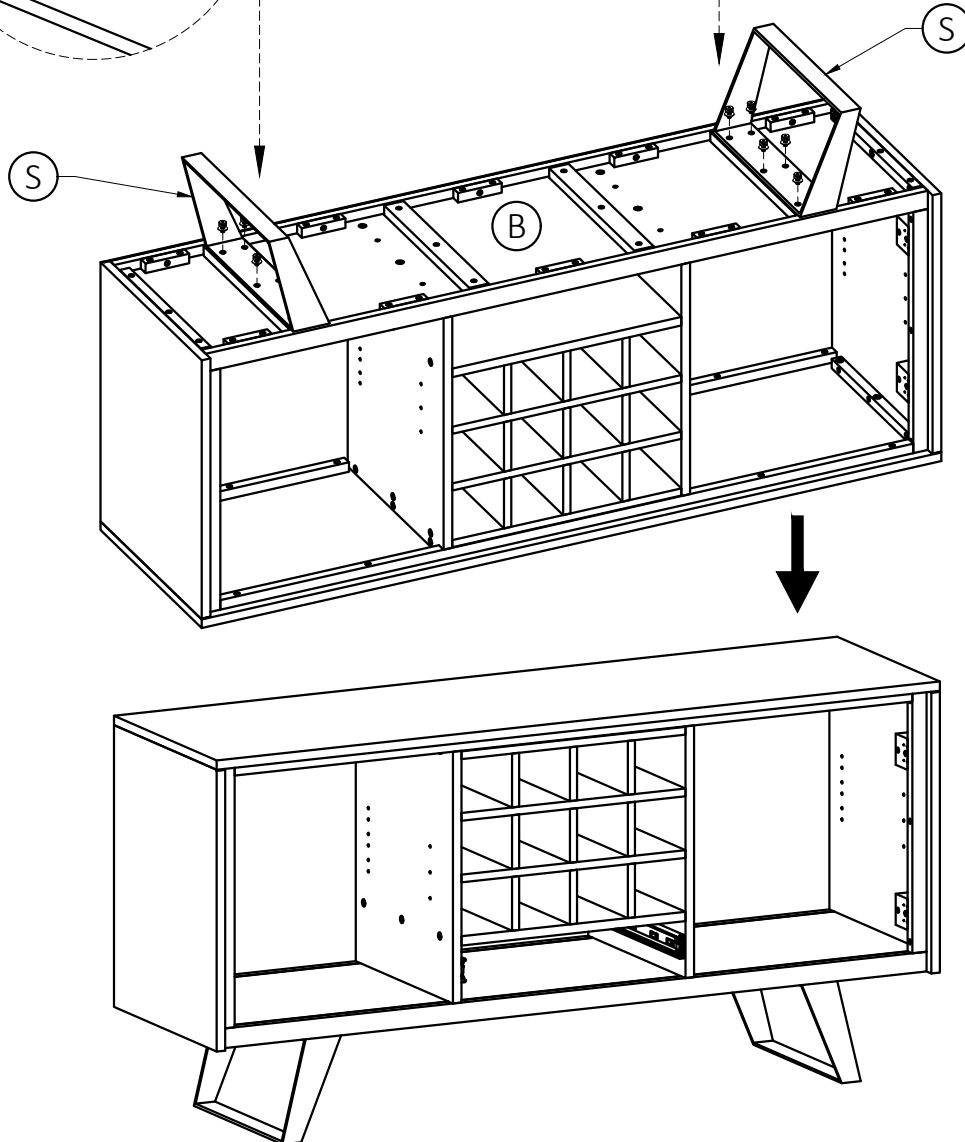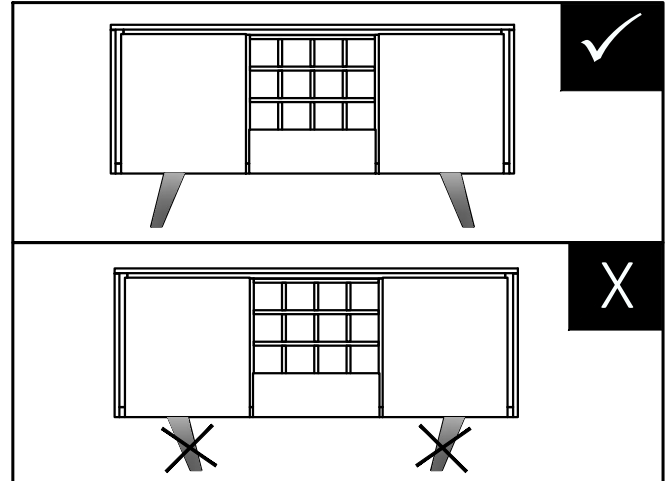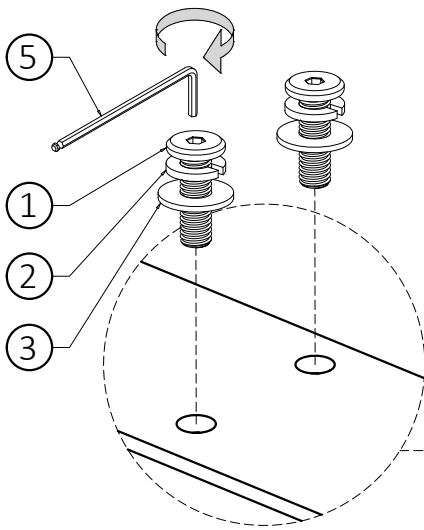






1. Attach Legs (S) to Bottom Frame (B).
2. Use twelve Allen Key Bolts (1), twelve Lock Washers (2) and twelve Washers (3) to secure part (B) and (S) (six Bolts, six Lock Washers and six Washers on each Leg).
3. Use Allen Key (5) to tighten Bolts. Do not over-tighten.

## Step 14

Warning Label




NOTE: The screwdriver is not included in the hardware pack.

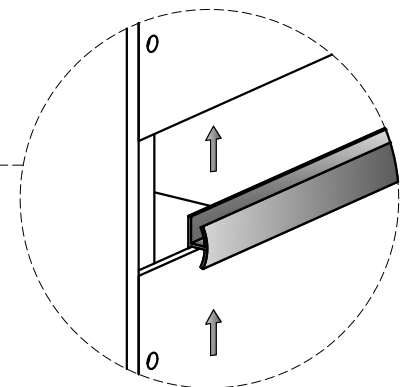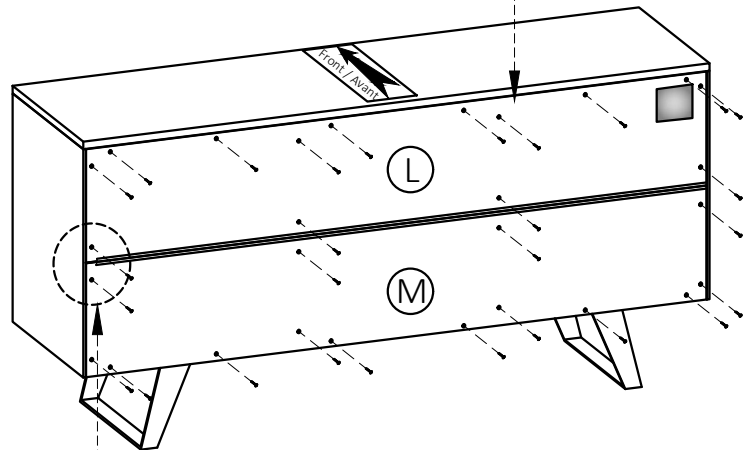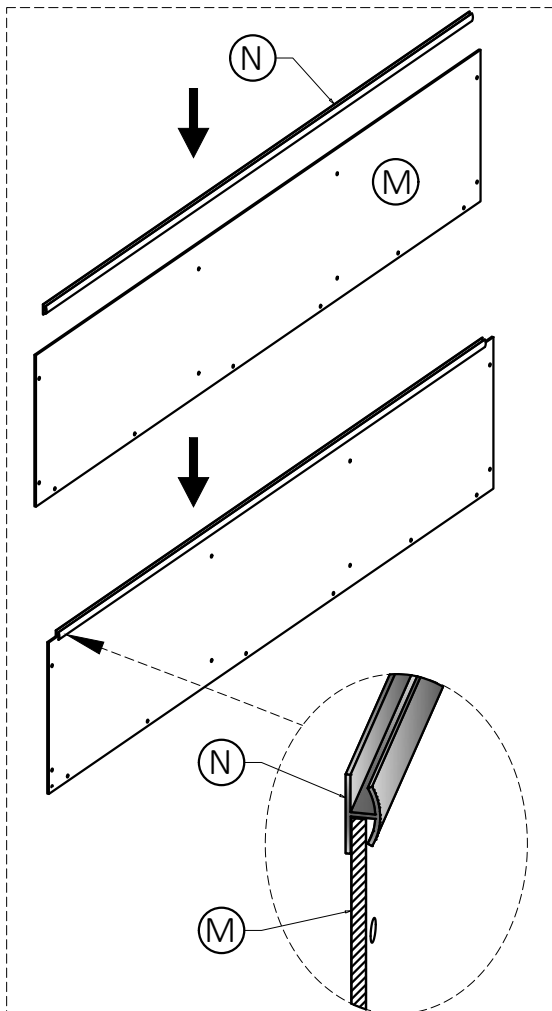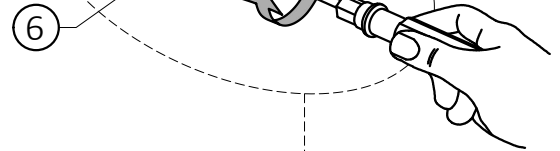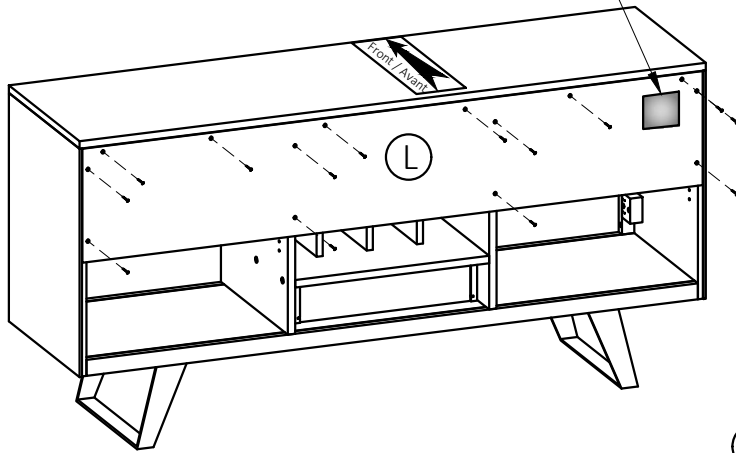


1. Attach the Top Back Panel (L) to back frame by using Phillips Screws (6).  
Only 1st top row of screws to be screwed in advance.
2. Insert the Bottom Back Panel (M) into the slot of Plastic Joining Strip (N).
3. Insert the entire set of Step 2 into bottom edge of Top Back Panel (L) and attach both panels (L), (M) with screws (6).

## Step 15


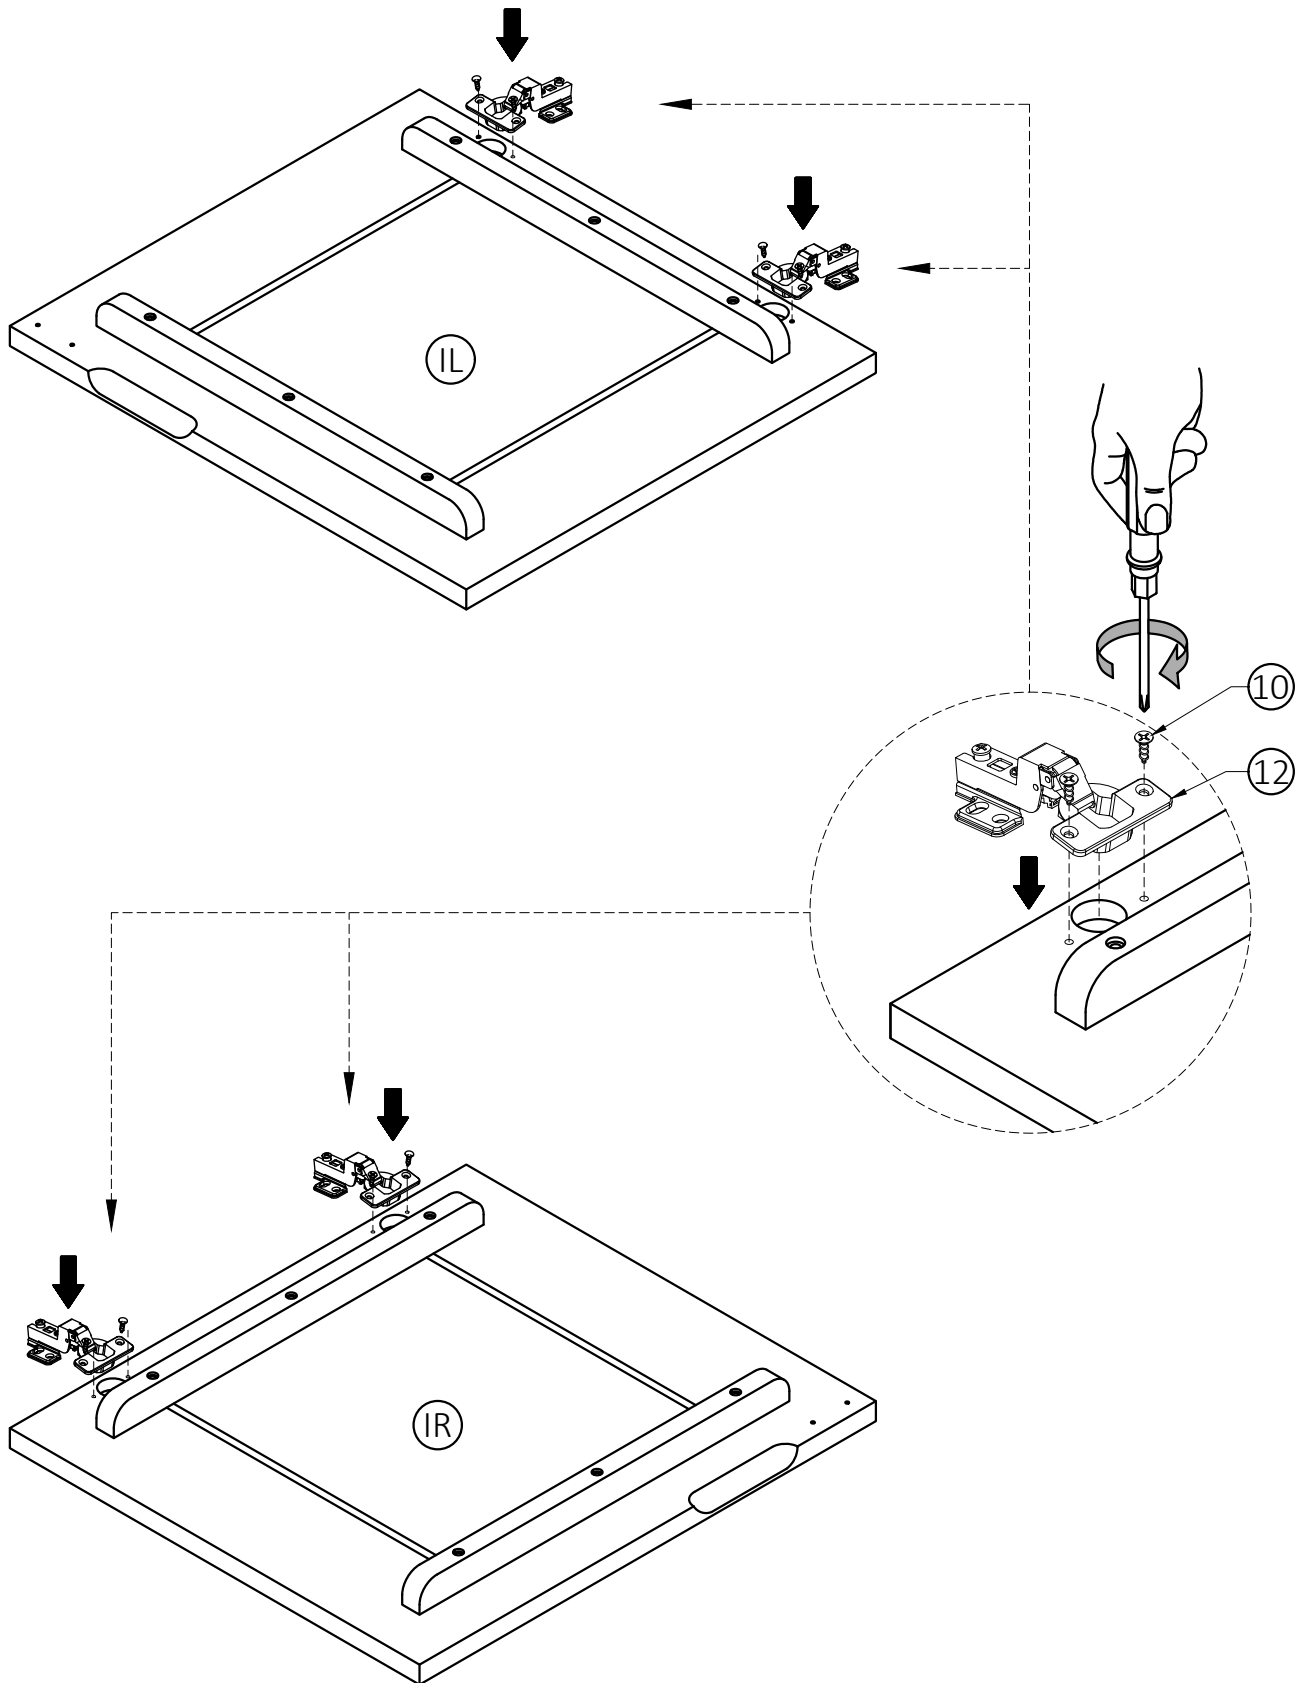


1. Attach Adjustable Hinges (12) to Doors (IL), (IR) using Phillips Screws (10) into guide holes on Doors (IL), (IR).

## Step 16

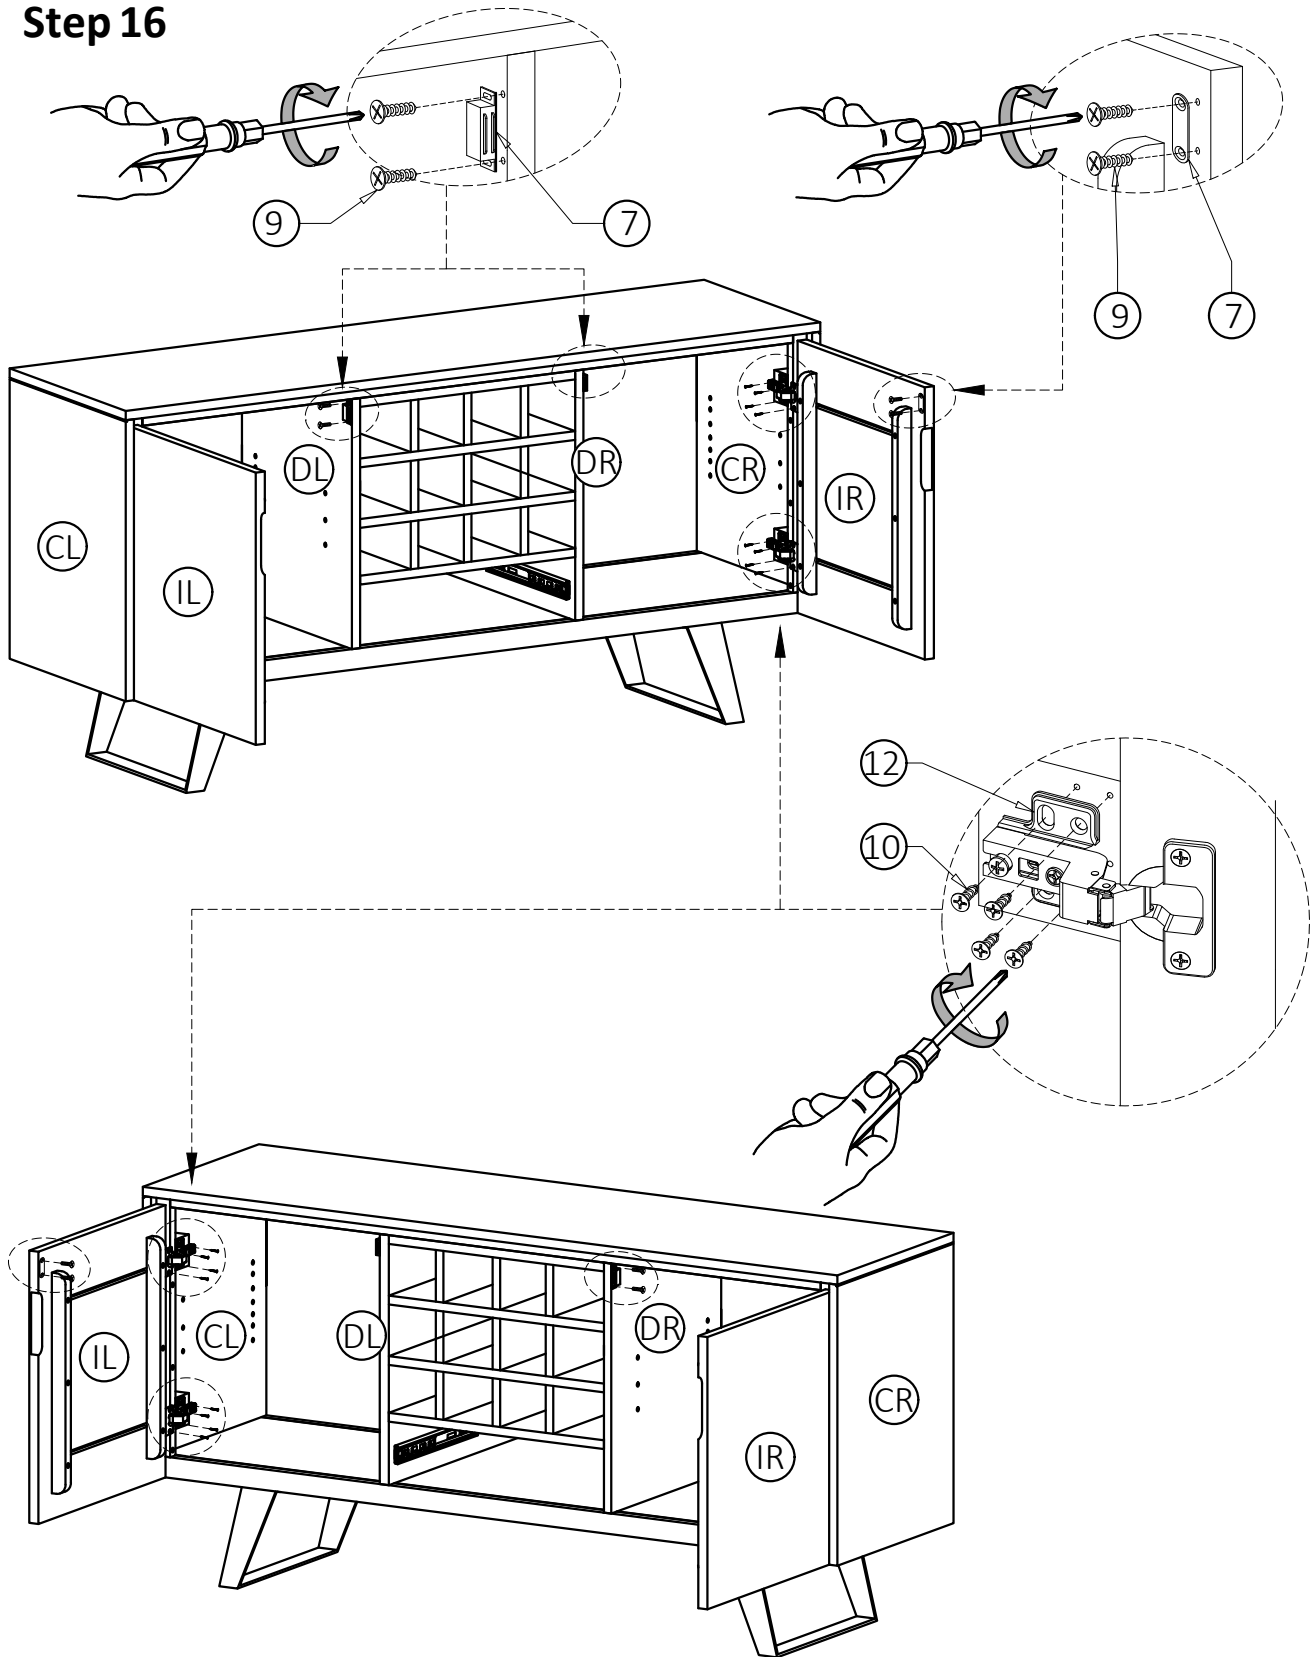

1. Attach Adjustable Hinges (12) on Doors (IL, IR) to Sides (CL, CR) using Phillips Screws (10) into guide holes on Sides (CL, CR).
2. Attach Magnets (7) using Phillips Screws (9) into guide holes on Left Divider (DL) and Right Divider (DR).
3. Use Phillips screwdriver to snugly tighten screw.

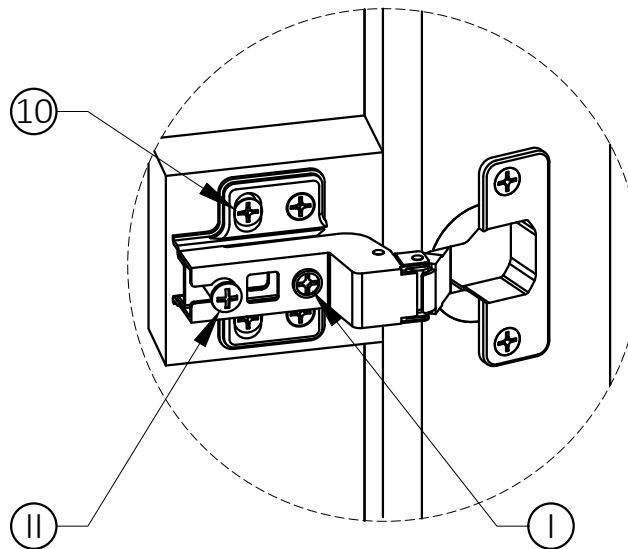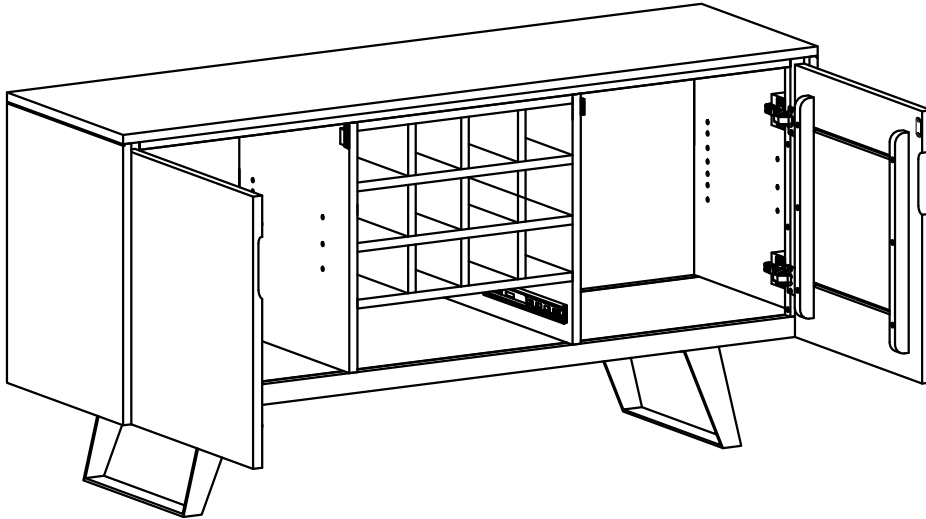**Step 17****IMPORTANT NOTE:**

Tighten the Screw marked ② to fasten hinge. The door may need to be adjusted so that all the spaces between the door and the unit sides are equal.

To adjust, follow instructions:

1. Side adjustment 4 mm

To move the door towards the side panel, loosen screw ① and tighten screw ②.

To move the door away from the side panel, loosen screw ② and tighten screw ①.

2. Depth adjustment 4 mm


Loosen screw ② ( just one turn ), adjust door to desired position, re-tighten screw .

3. Height adjustment

Loosen screw ⑩, adjust door to desired position, re-tighten screw .




## Step 18

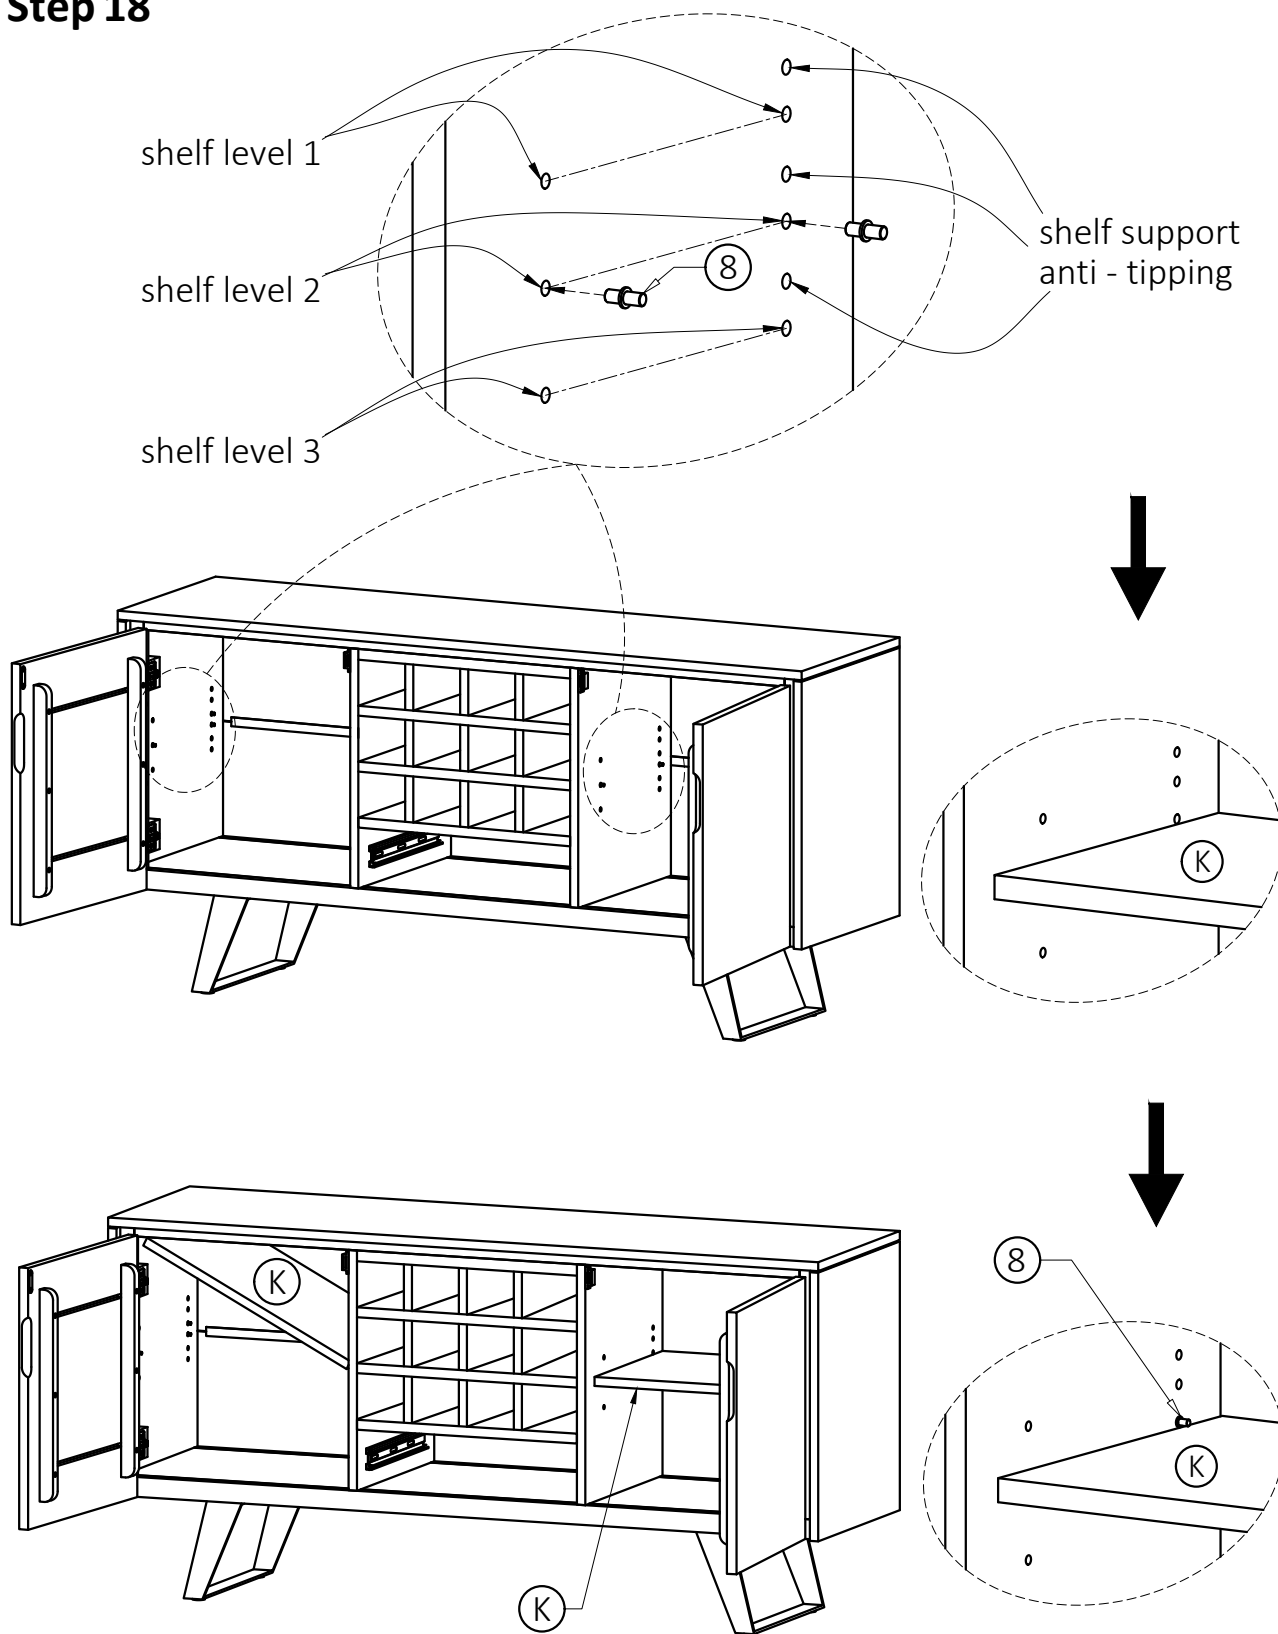

1. Use four Shelf Supports (8) for each Shelf (K) in desired location .
2. Two Shelf Supports (8) may be used on back top of each Shelf (K) as a tipping restraint.

## Step 19

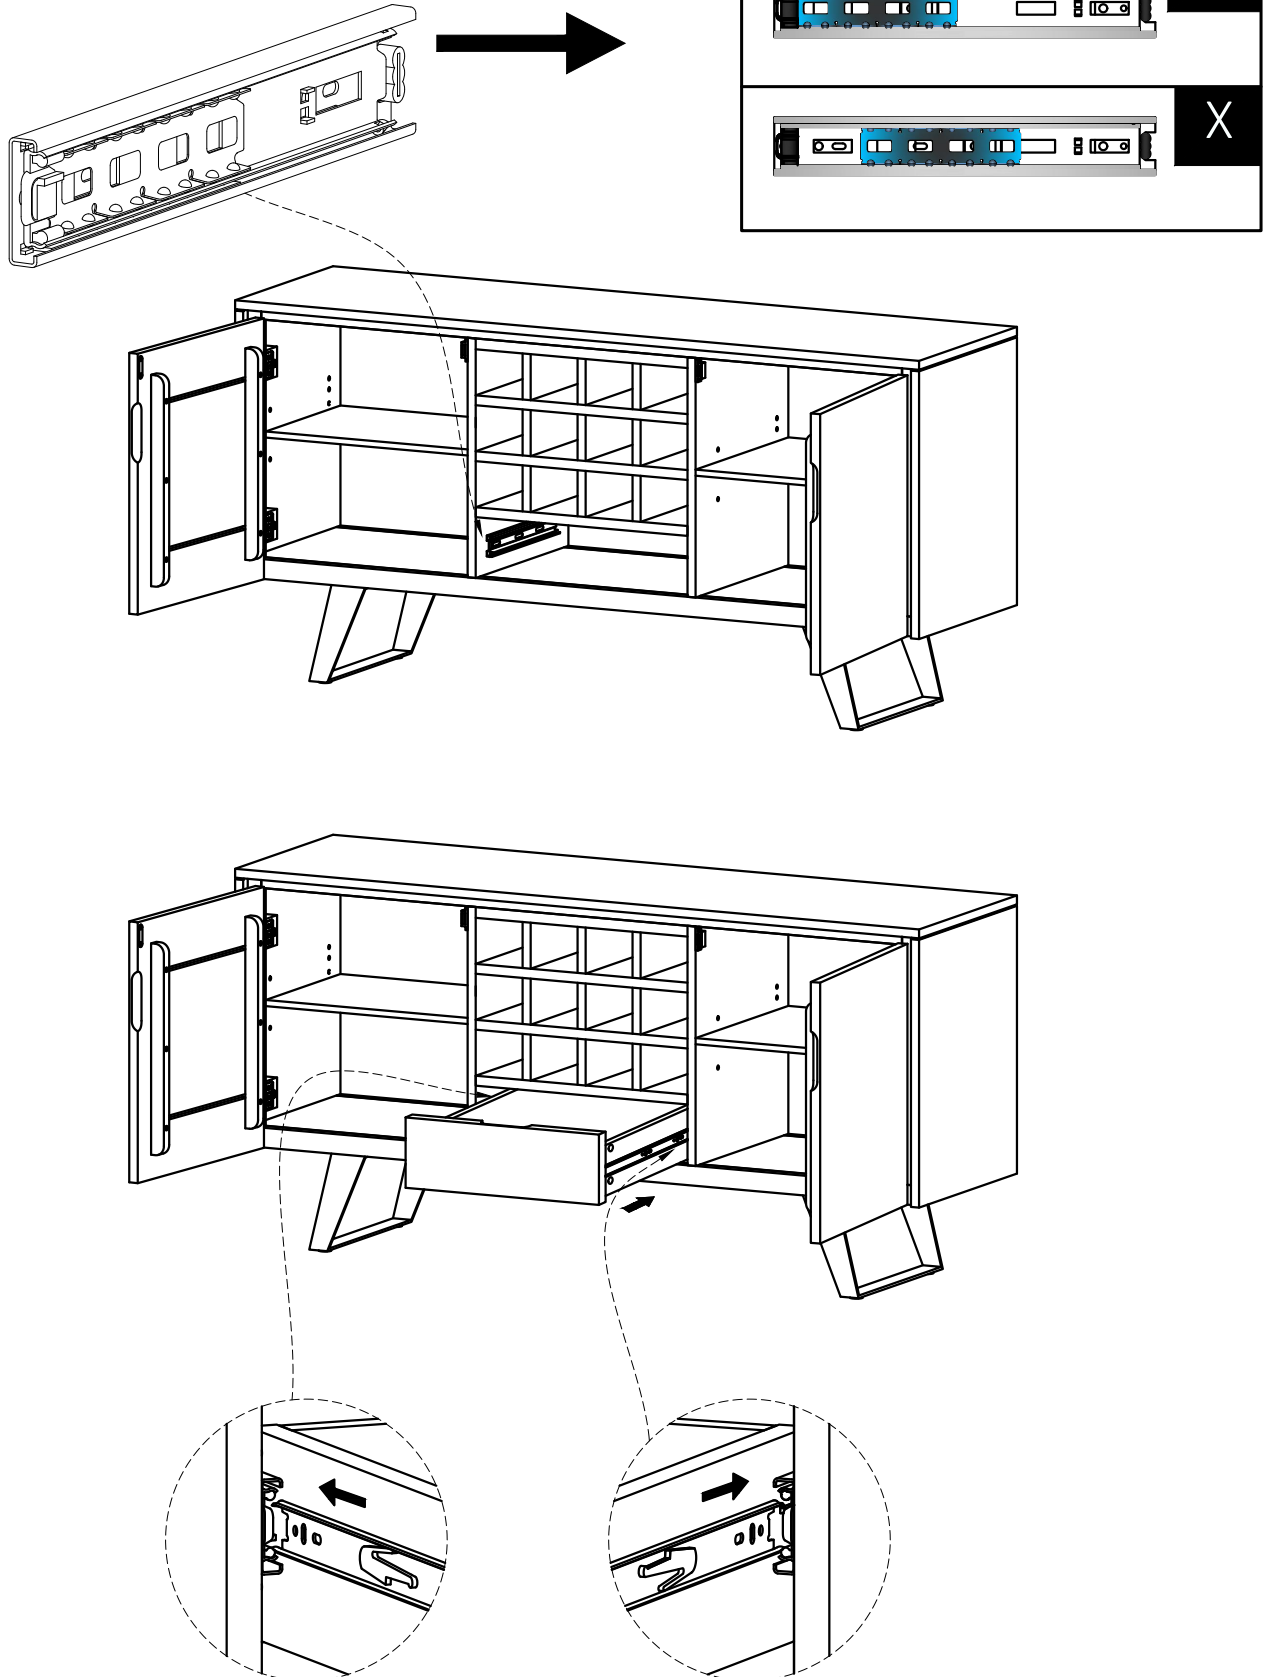


1. Insert assembled drawer into glides on assembled sideboard.

## Furniture Tip Over Restraint Assembly


### **WARNING**

Serious or fatal crushing injuries can occur from furniture tip-over.  
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

### Step 20




**NOTE:** The screwdriver is not included in the hardware pack.

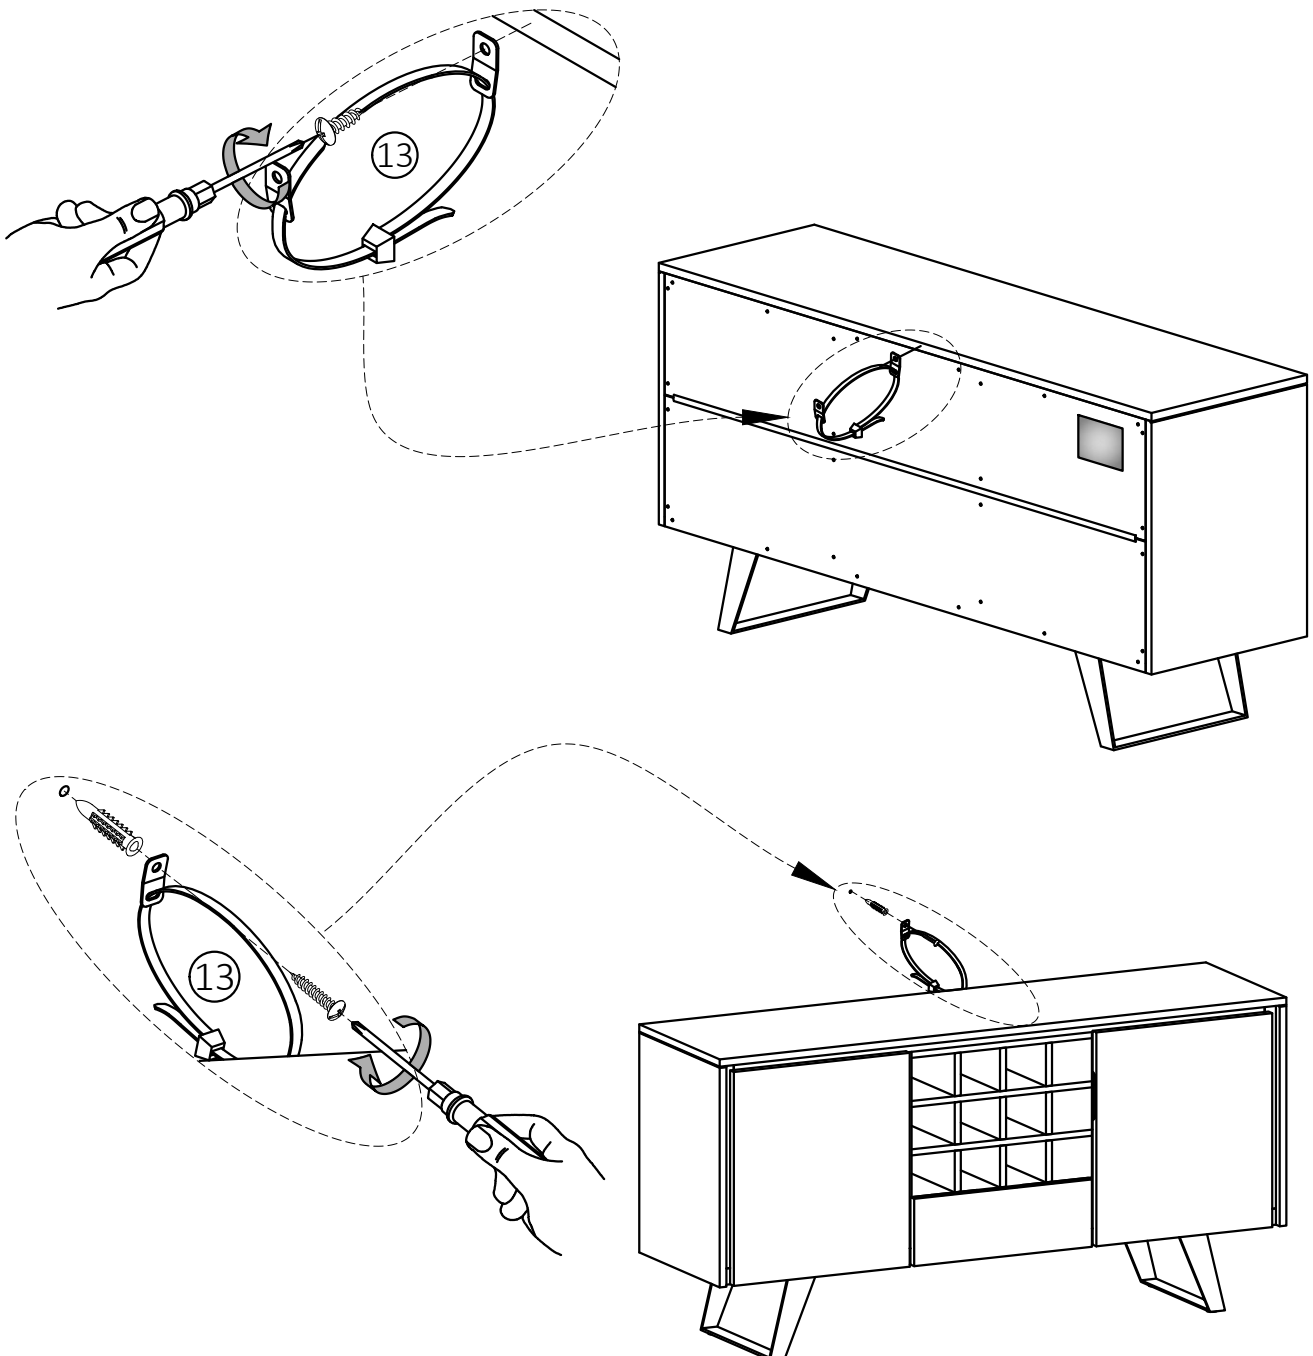


## Furniture Anti-Tipping Restraint Instructions


1. Attach one of the mounting brackets securely to the back edge of the furniture. Use the shorter screw.

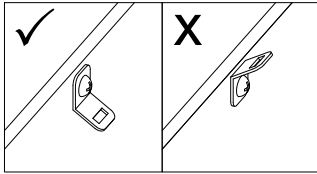

2. Determine where furniture is to be placed and mark location on the wall for mounting bracket screw hole approximately 2 inches below the bracket mounted to the furniture.

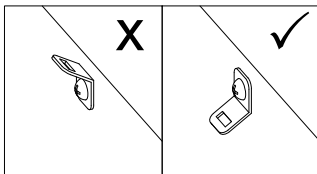

3. Drill a 3/16 inch hole in the wall. Press the plastic anchor into the hole and gently tap until the flange on the anchor is against the wall surface.
4. Position the bracket over the anchor and use the longer screw to securely attach the bracket to the wall.
5. Place the furniture so the back edge is in line with the bracket on the wall.
6. Lace an end of the nylon zip-tie strap down through each bracket. Bring both ends together and slide the smooth side upright through the square-shaped end and pull through to create the "locked" position.
7. Check to make sure the strap is securely laced and locked to the brackets.

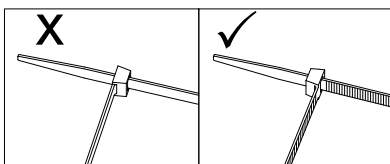

- **DO NOT** put a TV or other heavy objects on top of furniture not intended for use with a TV
- **DO NOT** place heavy objects in top drawers or on top shelves
- **DO NOT** let children climb or hang on drawers, doors or shelves