

Tapered Nylon Anchors




Installation Instructions

20•21•22•23•121•122•123•RD2•RD2TP•RD2HX•RD2HXTP•1AK•1AKTP
RD3•RD3TP•RD3HX•RD3HXTP•RD3DD•RD3DDTP•K6CO•K6COTP
K6HX•K6HXTP•K7DC•K7DCTP•2AK•2AKTP•2AKHX•2AKHXTP
2AKDD•2AKDDTP•K14C•K14CTP•K14CHX•K14CHXTP
K14CDD•K14CDDTP•3AK•3AKTP


*Not Recommended for use in overhead applications

Installation Guidelines

Drill a hole into the base material to the depth of embedment required. The tolerances of the drill bit used should meet the requirements of ANSI Standard B212.15.

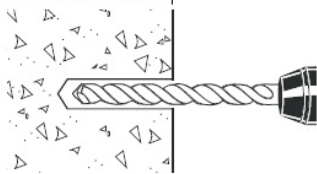

Blow the hole clean of dust and other material. Tap the anchor into the hole until it is flush with the surface of the base material.

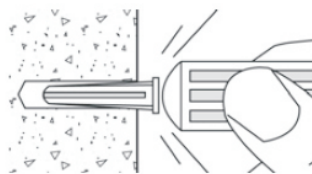

Position the fixture, then insert the proper size screw through the fixture into the top of the anchor and tighten. Be sure screw thread fully engages the anchor body.

