
# STATE CHAIR Assembly Instructions

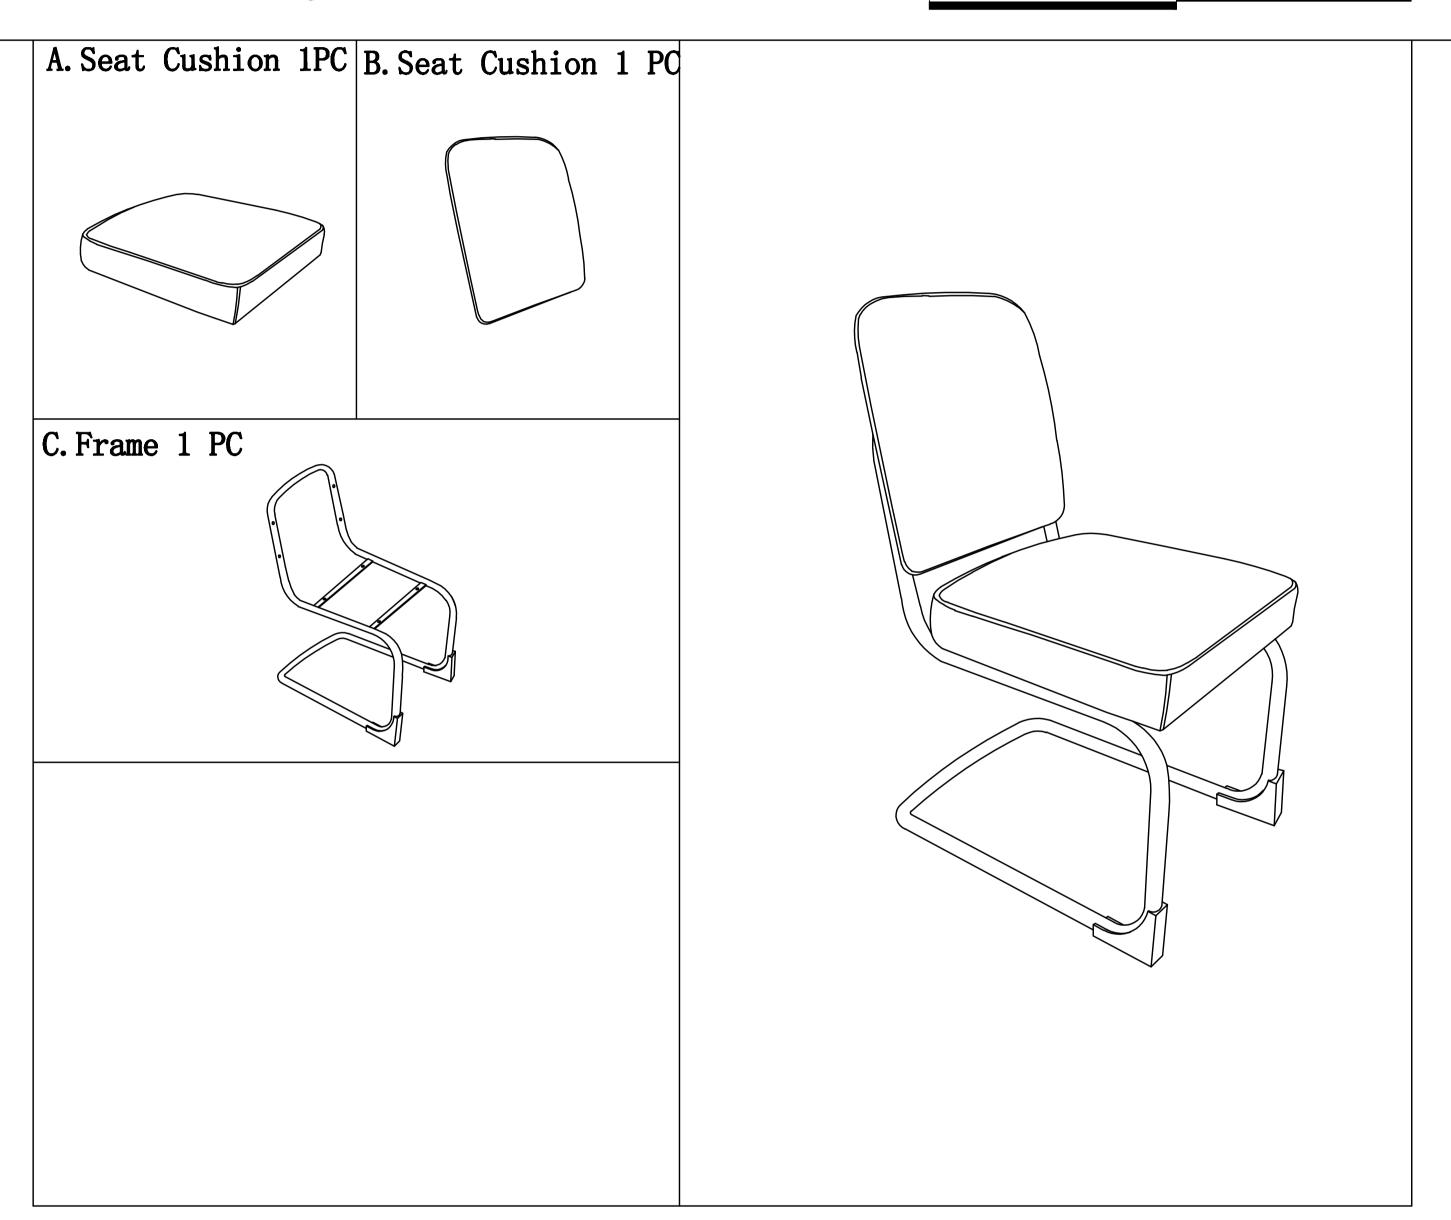



# Hardware packed in box

D	Threaded Bolt M6*20MM	4PCS	E	Lock Washer M6	4PCS	F	Washer M6	4PCS	G	Threaded Bolt M6*45MM	4PCS	Н	Allen Key (4MM)	01PCS

#### Important Note: This bag includes parts to assemble 1 complete State Chair

## STEP 1:

Attach seat cushion(A) to the frame(C), using four M6\*20mm bolts(D), four lock washer(E) and four M6 washers(F). Tighten using the provided Allen key(H).

## **STEP 2:**

Attach back cushion(B) to the frame(C), using four M6\*45mm bolts(G). Tighten using the Allen Key(H).

