
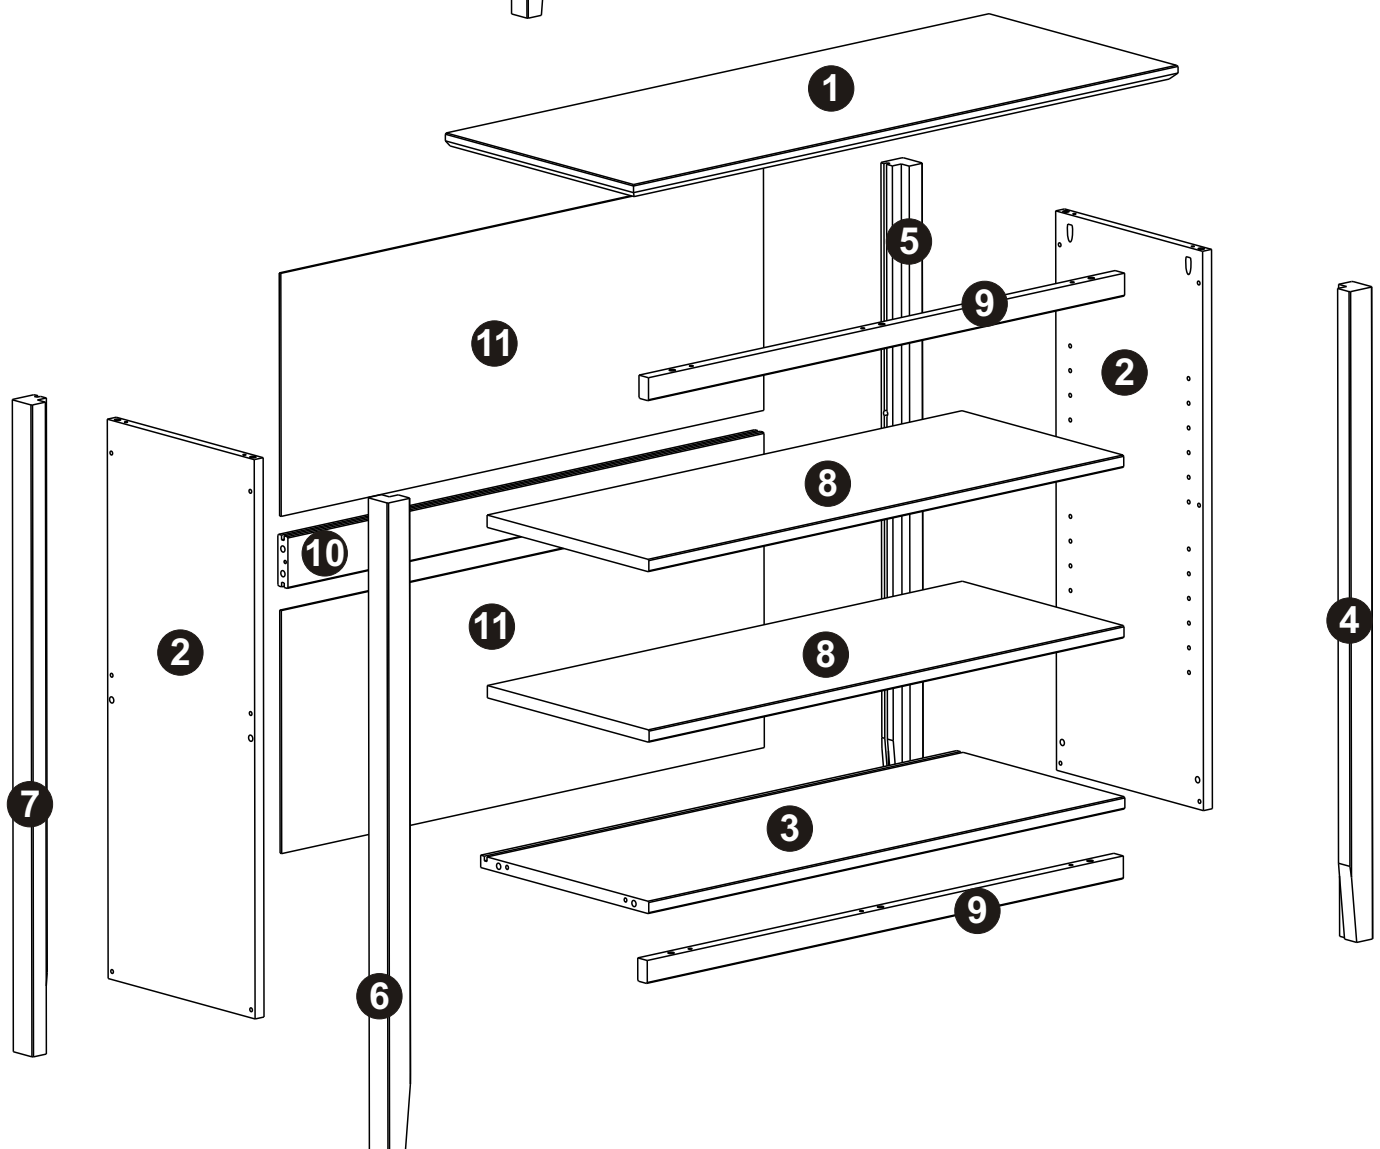
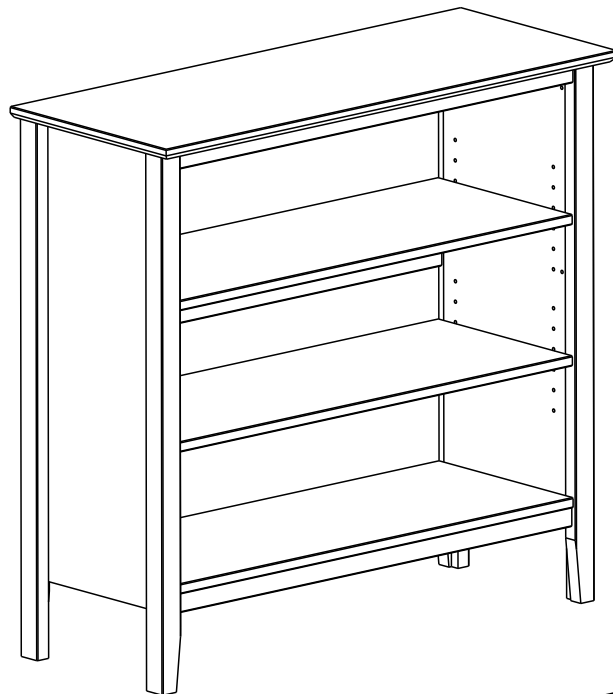











ASSEMBLY INSTRUCTIONS UNDER WINDOW BOOKCASE / TALL BOOKCASE




A	 Ø8x30mm	18
B	 Ø8x20mm	04
C	 Ø4x30mm	18
D	 Ø4,0x30mm	16
E	 Ø3,5x16mm	20
F	  	01
G		12
H		08
I	 Ø3,5x30mm	02

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at ''www.boltonfurniture.com''.


Tools Required




Hammer

* These tools are not
supplied by the
manufacturer


01

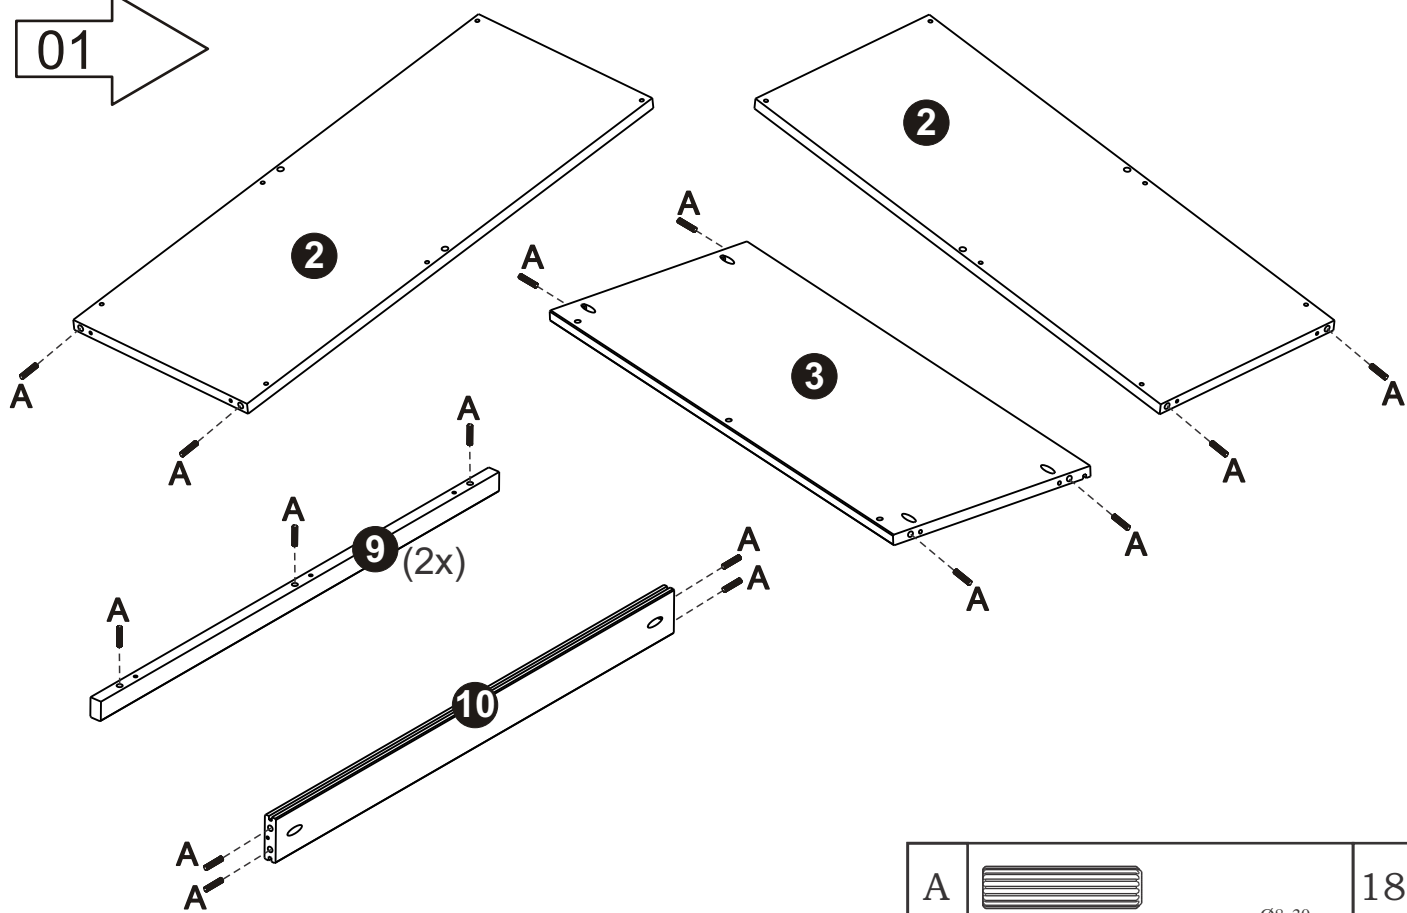

02

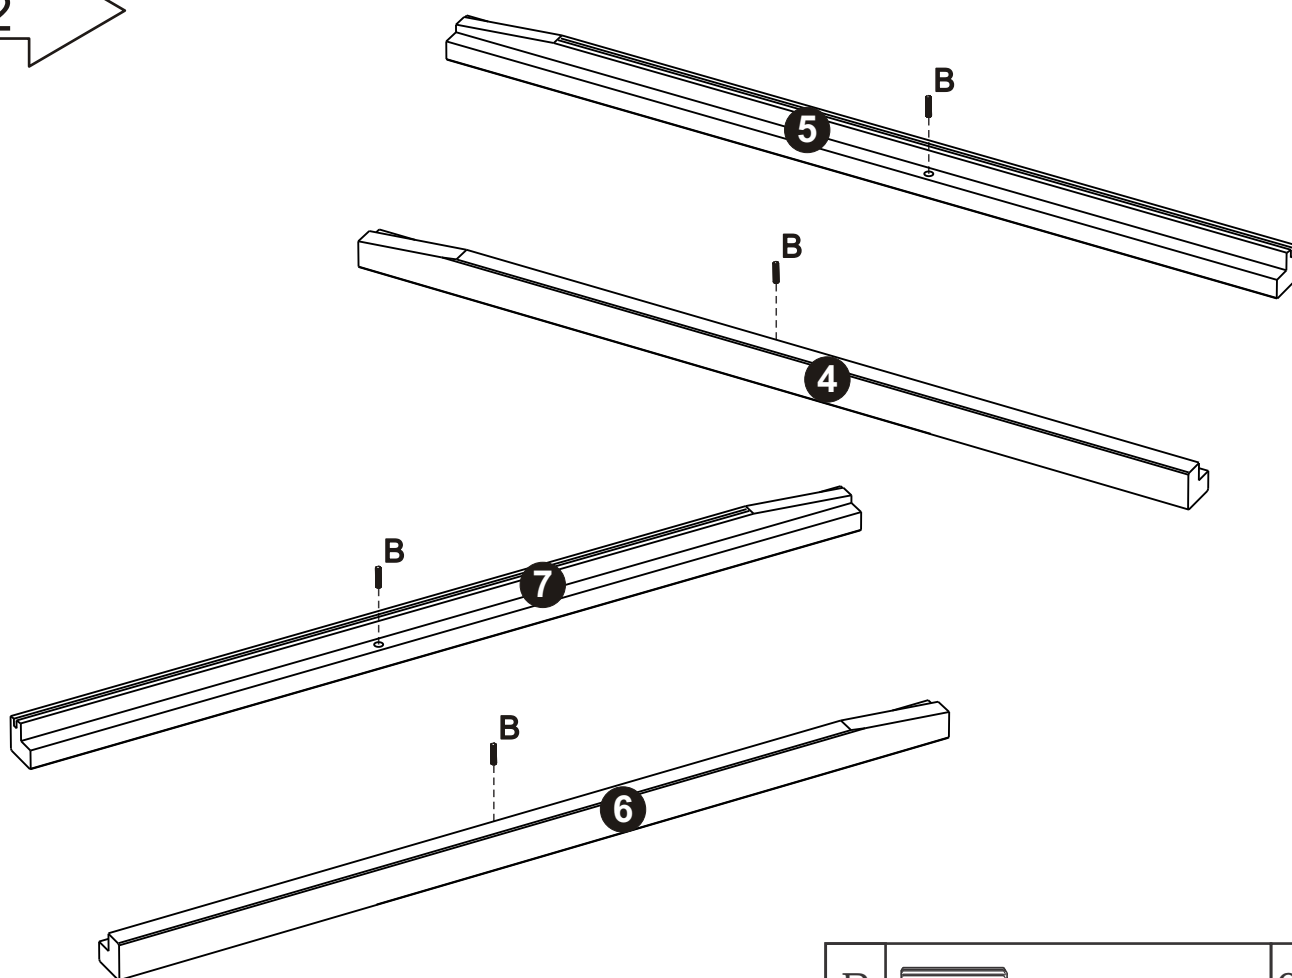



03

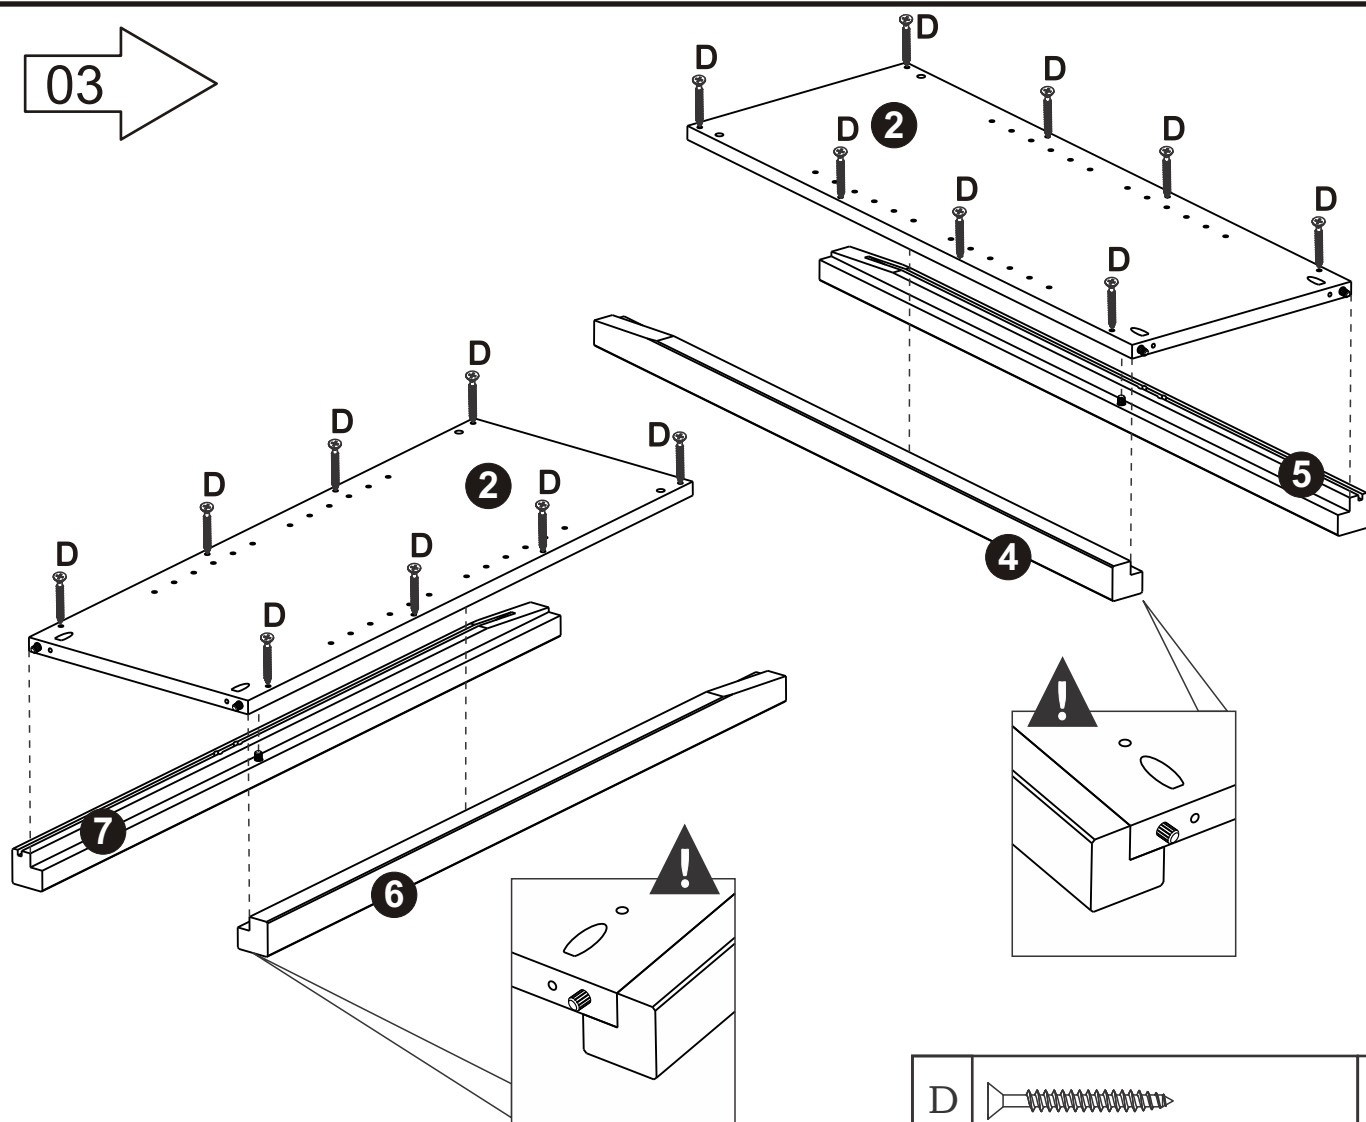



D		16
Ø4,0x30mm		

04

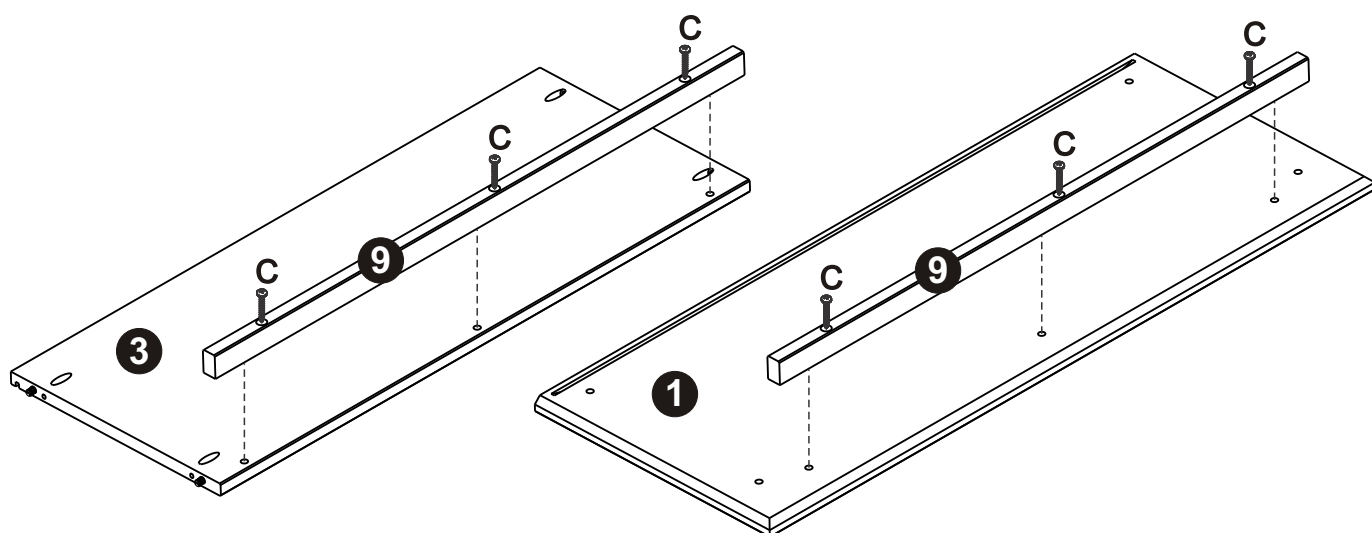


C		06
Ø4x30mm		


05

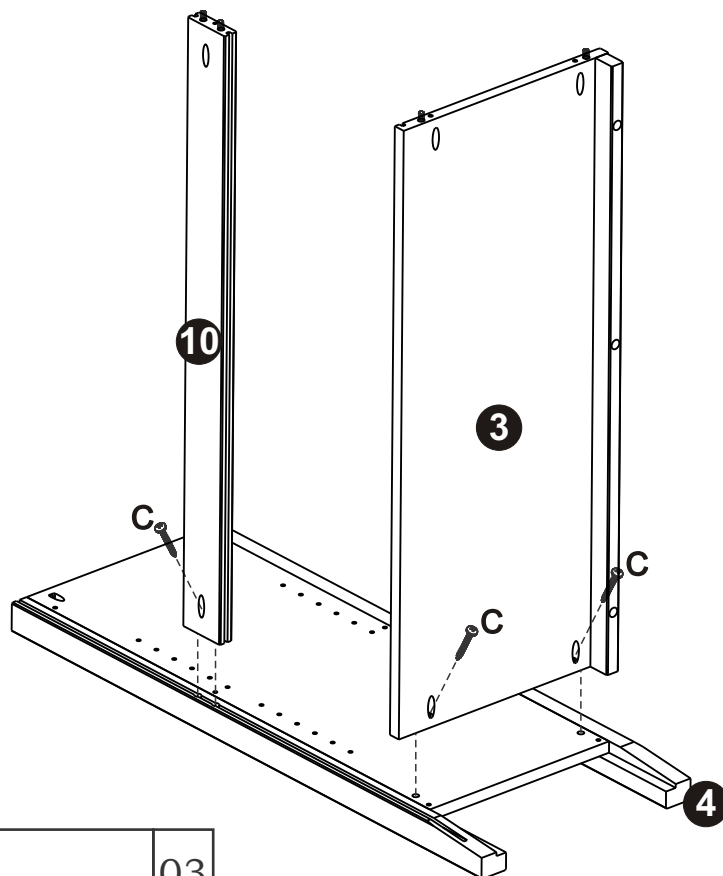

06

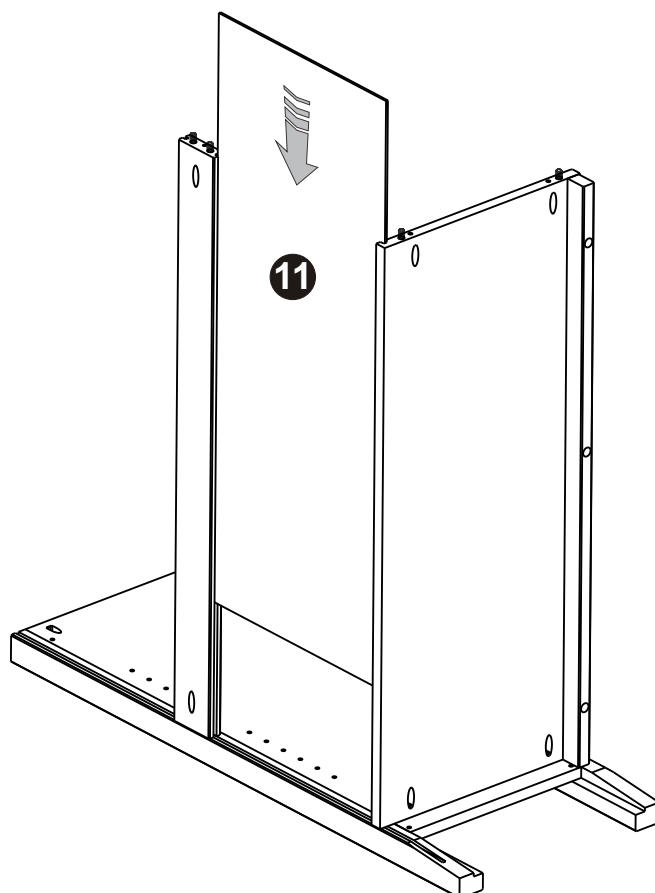


07

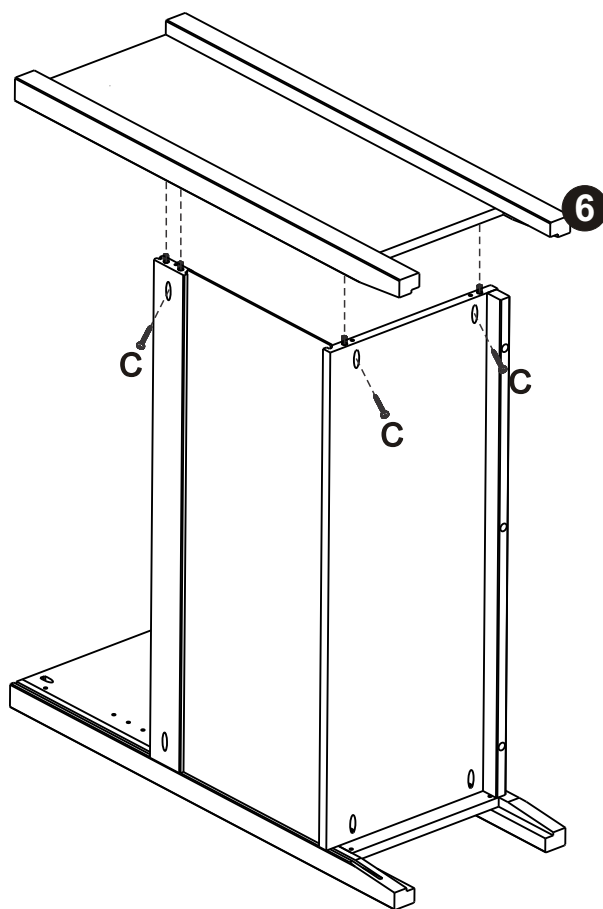


C		03
Ø4x30mm		

08


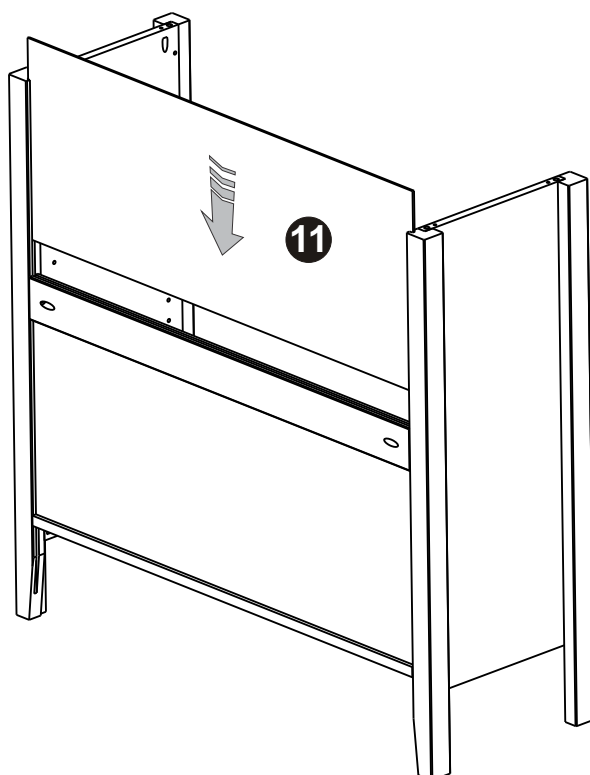


09

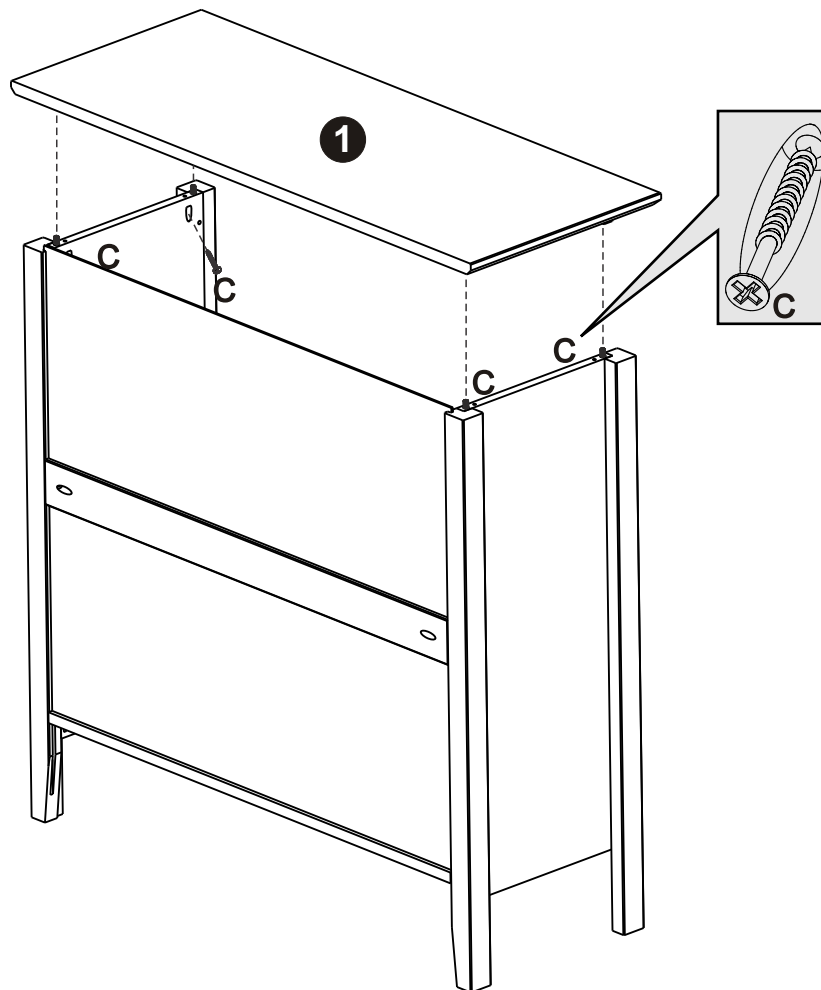



C		Ø4x30mm	04
---	---	---------	----

10

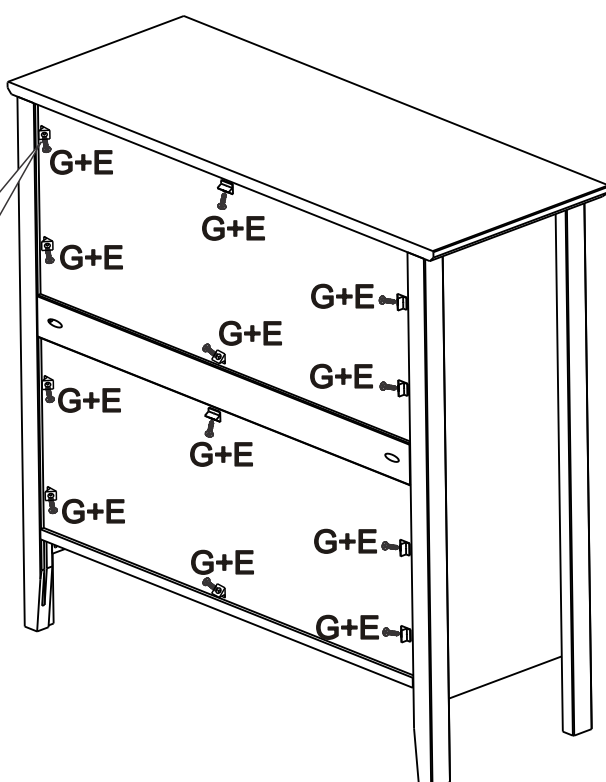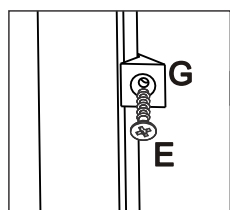

E		Ø3,5x16mm	12
G			12

11

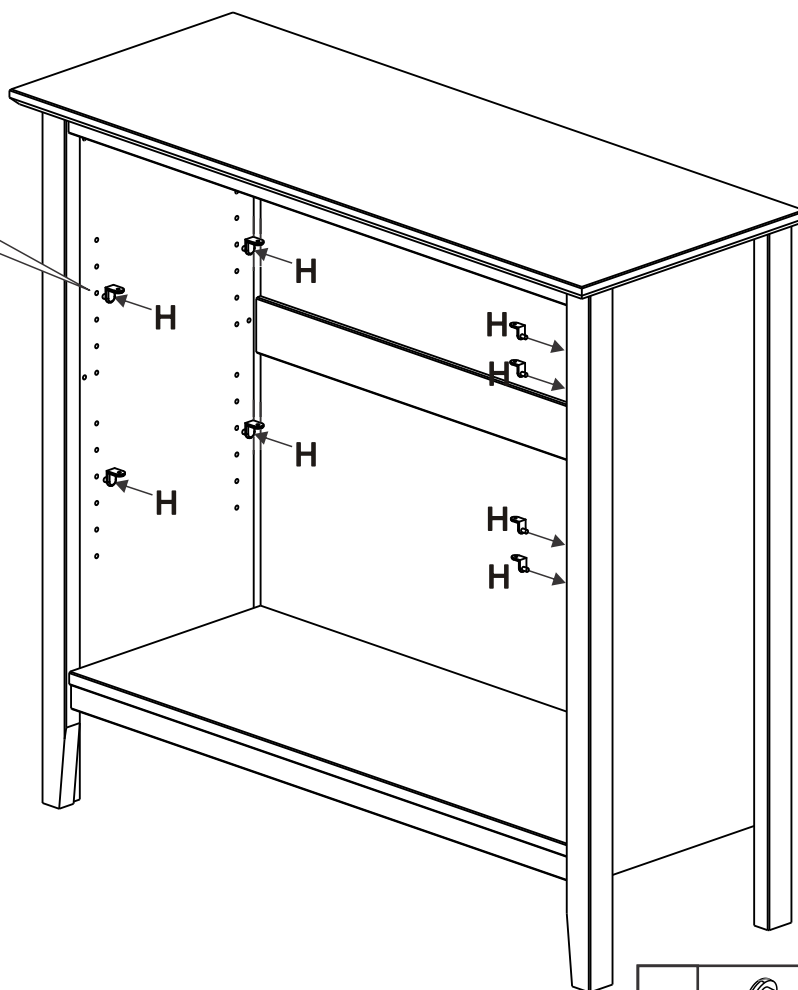
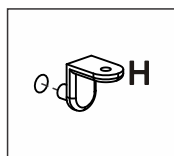


H



08

12

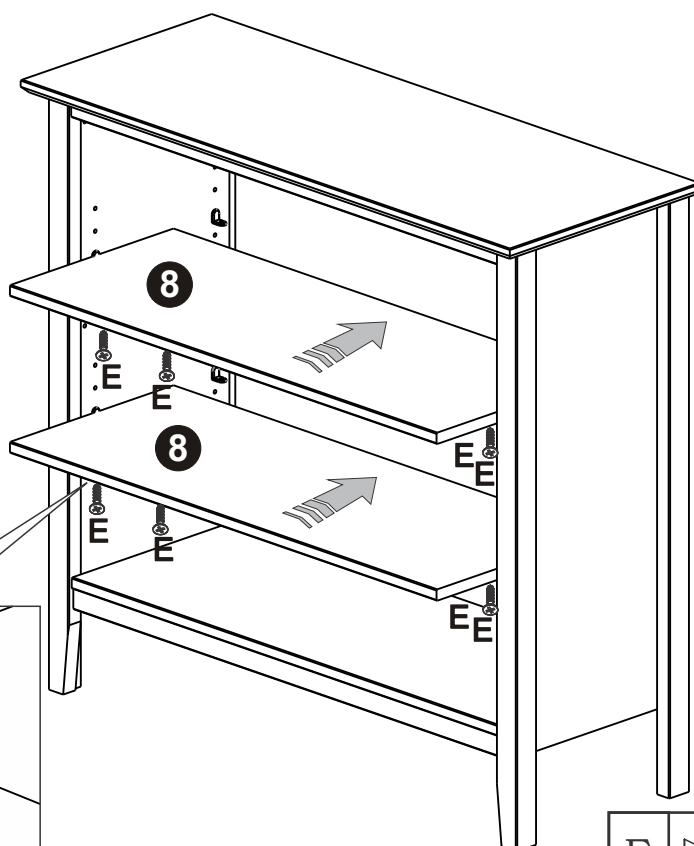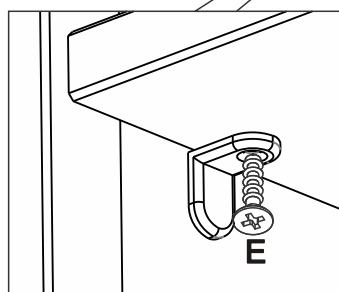


E







Ø3,5x16mm

08

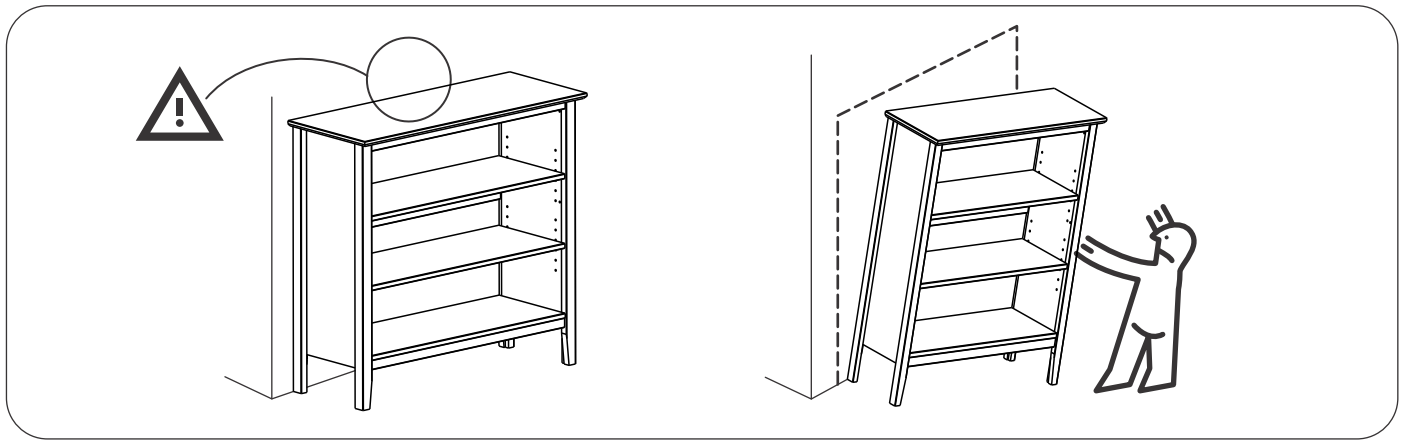

Secure to Stud behind Wallboard.

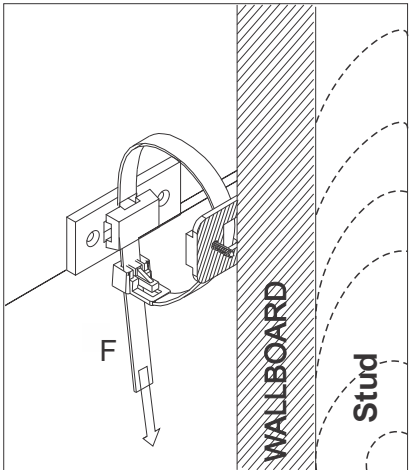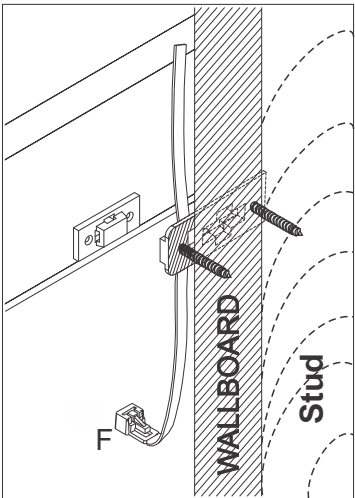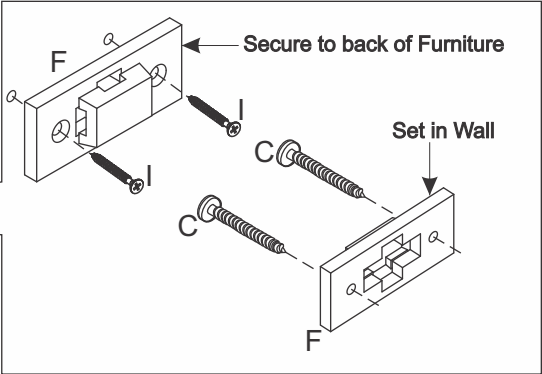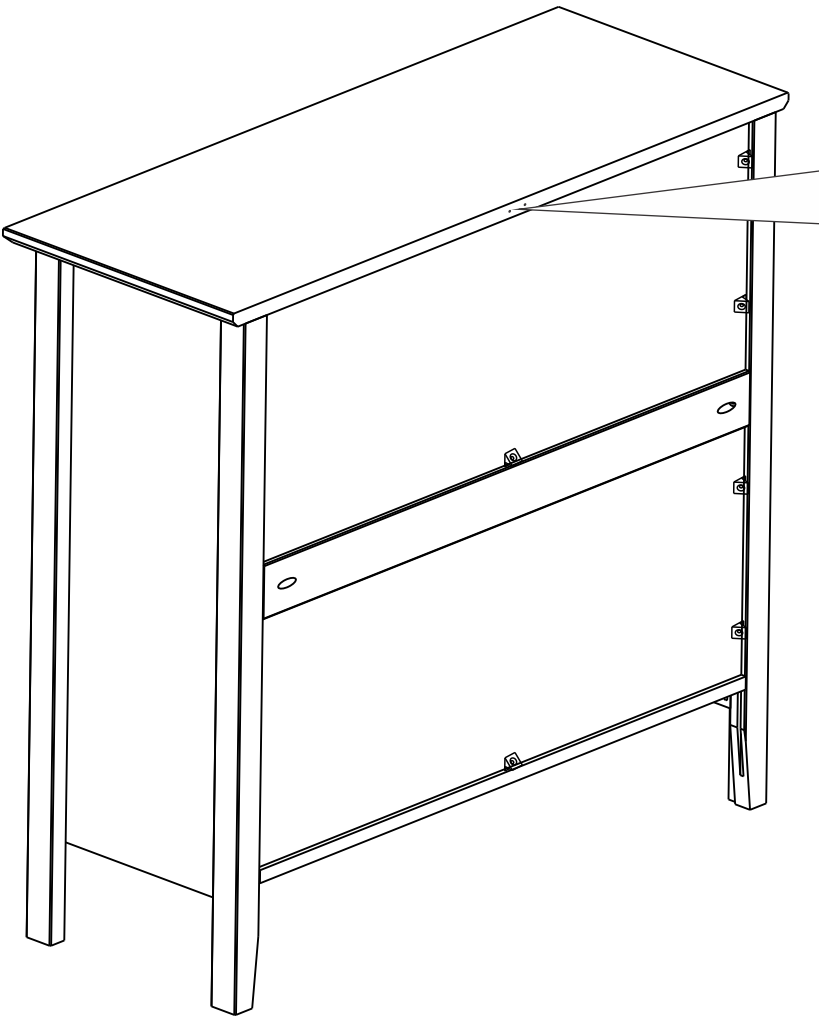

Secure to Stud behind Wallboard!

C - 4,0x30 Screw
Qty. 02

F - Plastic wall bracket
Qty. 02

I - 3,5x30 Screw
Qty. 02

F - Nylon strap 140mm
Qty. 01