
american drew®
· inspired design ·

ASSEMBLY INSTRUCTIONS

309-304B/309-306B HEADBOARD

Tel: 828-728-3261
www.americandrew.com

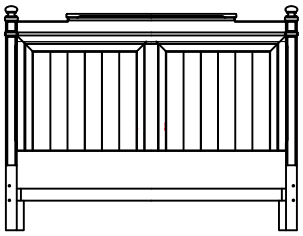


TOOLS REQUIRED:

Allen Wrench (supplied, part # D)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. CAUTION: Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

Figure 1

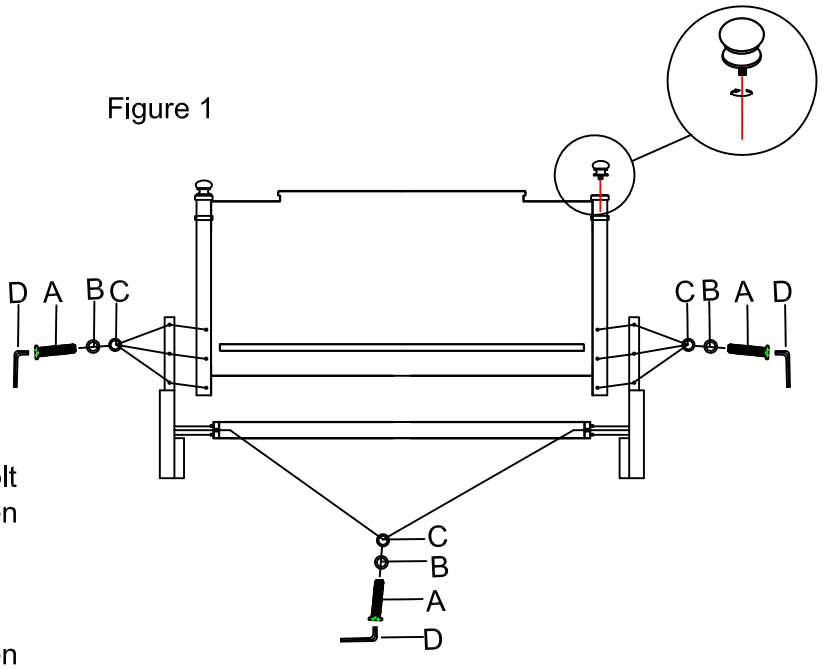

INSTRUCTIONS:


1.Attach one post to headboard panel using Bolt (A), Lock washer (B),Flat washer (C) and tighten with Allen Wrench(D). As shown on Figure 1 .

2.Attach the bottom rail to side post using Bolt (A), Lock washer (B),Flat washer (C) and tighten with Allen Wrench(D). As shown on Figure 1 .

3. Repeat 1 & 2 steps to attach the other post.

4.Attach the finials to headboard post by turning it. As shown on Figure 1 .

HARDWARE LIST

NO	DRAWING	DESCRIPTION	SIZE	Q'ty
A		Bolt	5/16"x2"	8pcs
B		Lock washer	ϕ5/16"x3/4"	8pcs
C		Flat washer	ϕ5/16	8pcs
D		Allen Wrench	100x50x4mm	1pc

Thank you for purchasing furniture from american drew!