


BOX #2

B. FOOTBOARD 1 PC D. SLAT ROLL 1 SET BED HARDWARE BOX

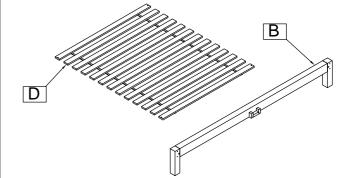

HARDWARE KIT PACKED IN BOX #2


No.	DESCRIPTION	IMAGE	QUANTITY
1	METAL DOWEL (8x40mm)		8 PCS
2	ALL- THREAD BOLT (5/16"x80mm)		4 PCS
3	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
4	SPANNER		1 PC
5	WOOD SCREW (4x30mm)	()mmm	6 PCS
6	ALLEN KEY		1 PC

BOX #3:

C. SIDE RAIL 2 PCS

E. CENTER SLAT SUPPORT 1 PC

F. SUPPORT LEG 4 PCS

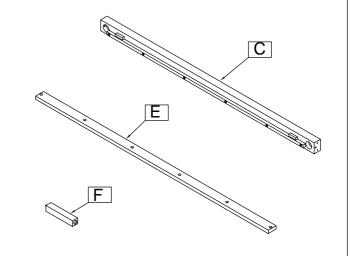











Not provided


ASSEMBLE ON A SOFT SURFACE

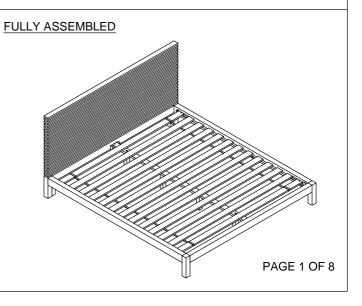




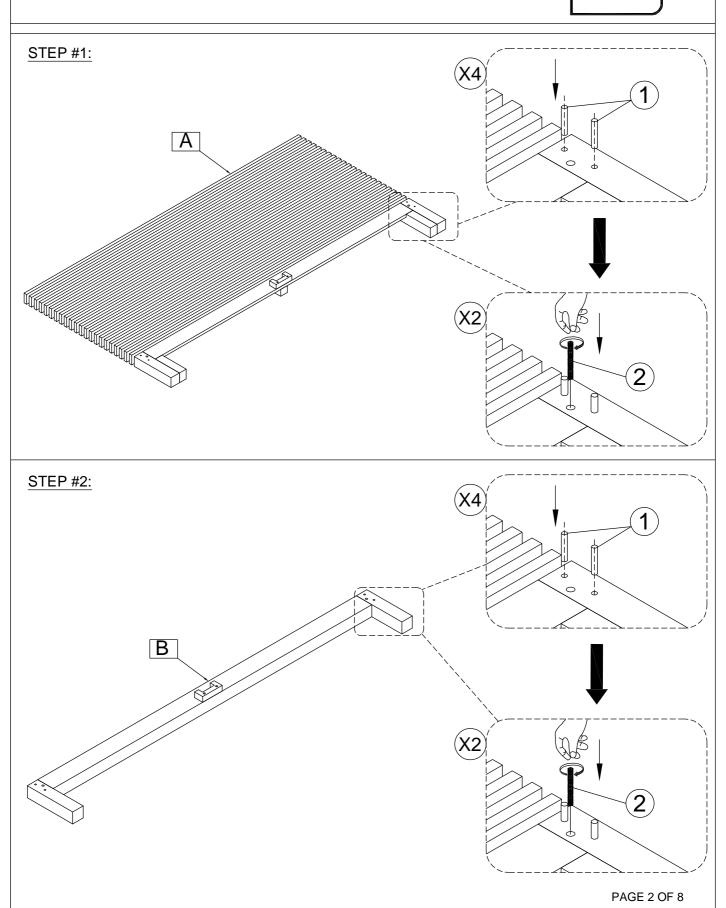




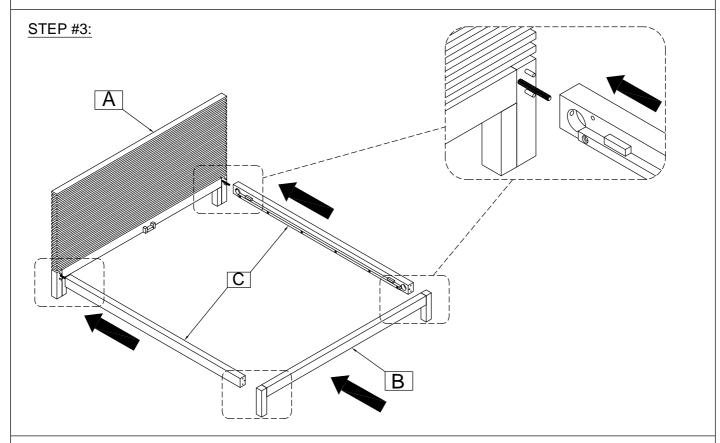

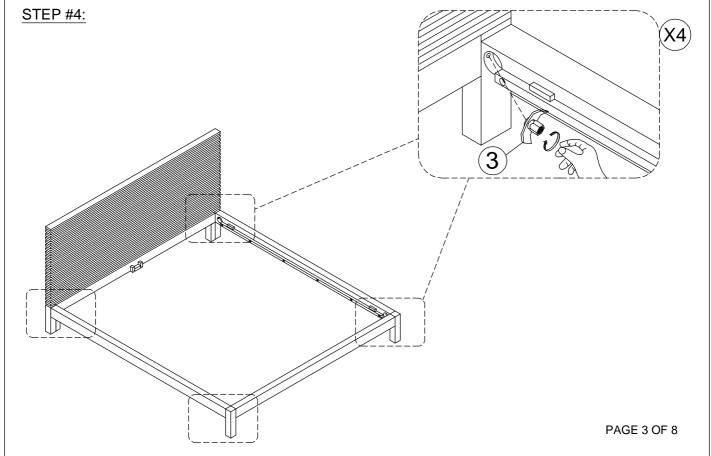




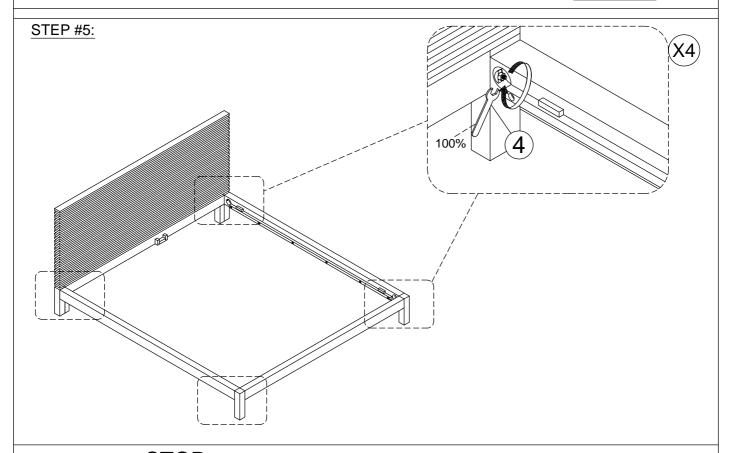




STOP

- * IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- * IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.

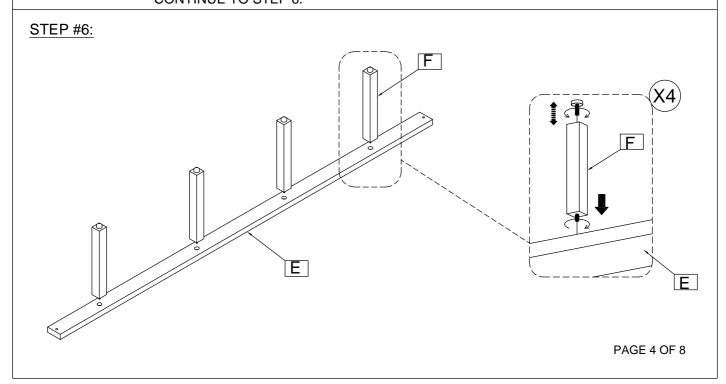





STEP #7:

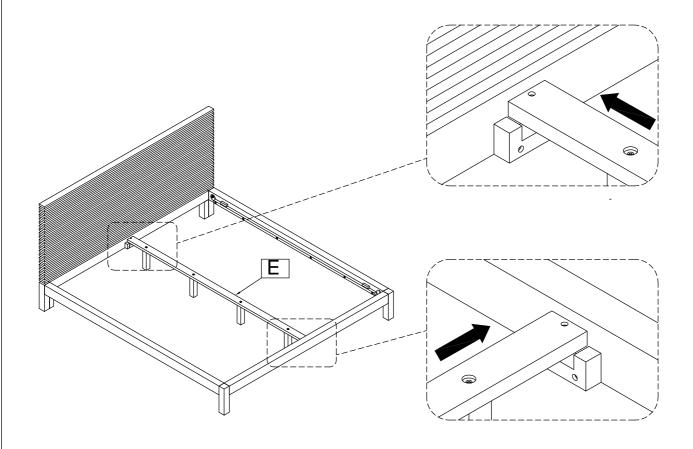




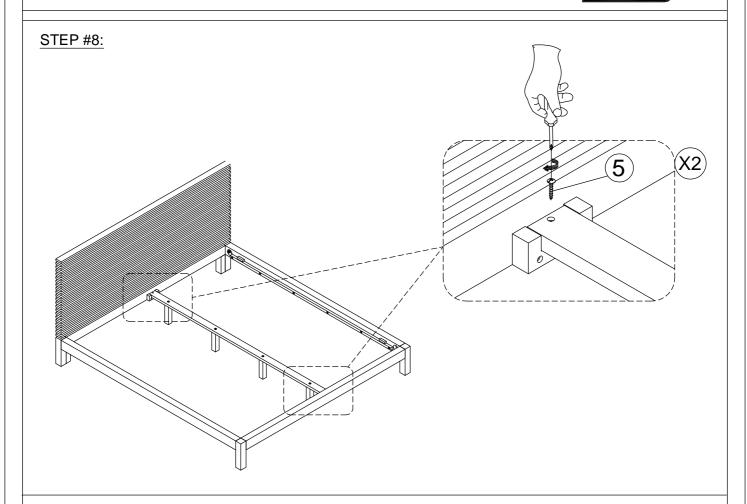

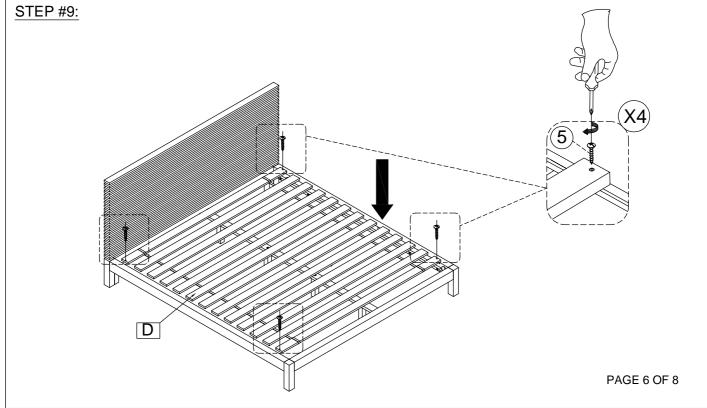




STEP #10:

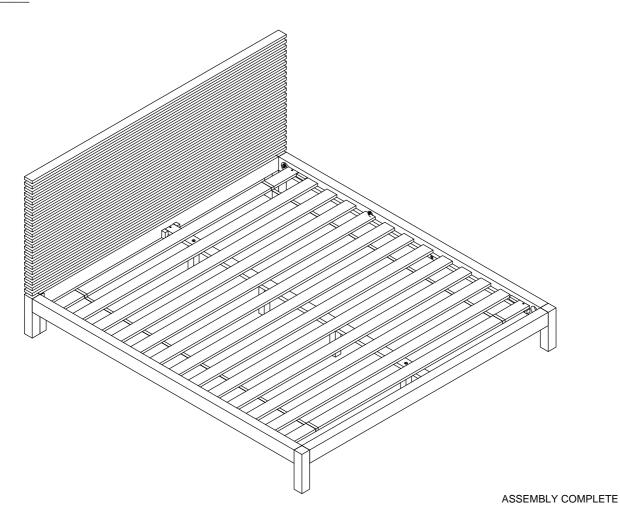

INSTRUCTIONS FOR ADJUSTING LEVELER:

- POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG.
- TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT.



MAINTENANCE INSTRUCTIONS:

- PERIODICALLY CHECK ALL FITTINGS AND TIGHTEN IF NECESSARY, AS THEY CAN LOOSEN OVER TIME.
- ALWAYS REMOVE BOX SPRING AND MATTRESS BEFORE MOVING THE BED.
- LIFT THE BED WHEN MOVING IT. DRAGGING THE BED CAN DAMAGE THE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING THE BED.

PAGE 7 OF 8



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY. PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:


D. SLAT ROLL 1 SET

5. WOOD SCREW (4x30MM) 6 PCS

E. CENTER SLAT SUPPORT 1 PC

F. SUPPORT LEG 4 PCS

STEP 1: USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

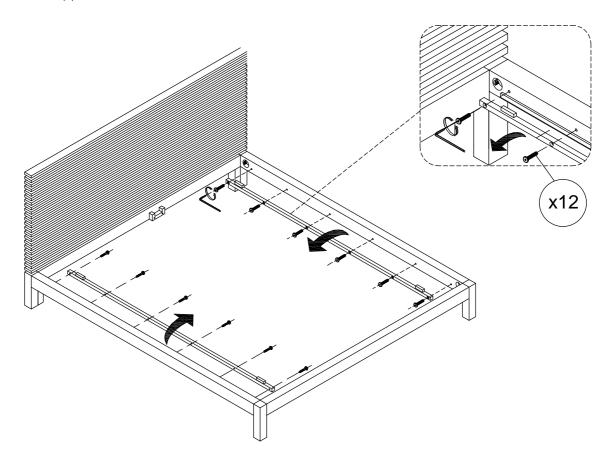


NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


PAGE 8 OF 8



A. LEFT SPREAD PANEL WING W/DRAWER 1 PC B. RIGHT SPREAD PANEL WING W/DRAWER 1 PC

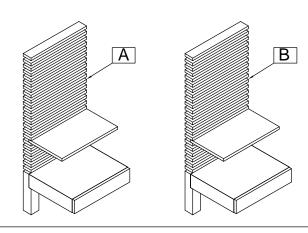


HARDWARE KIT PACKED IN BOX				
No.	DESCRIPTION	IMAGE	QUANTITY	
1	METAL BRACKET (3x17x60mm)	60	8 PCS	
2	METAL BRACKET (3x60x100mm)		2 PCS	
3	ALLEN BOLT (1/4"x20mm)		24 PCS	
4	LOCK WASHER (1/4"x2mm)		24 PCS	
5	FLAT WASHER (6x19mm)	0	24 PCS	
6	ALLEN KEY		1 PC	

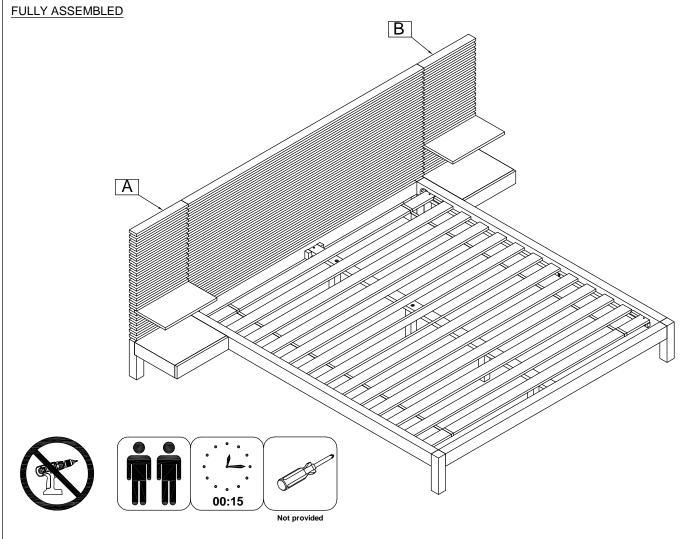


ASSEMBLE ON A SOFT SURFACE


PAGE 1 OF 3




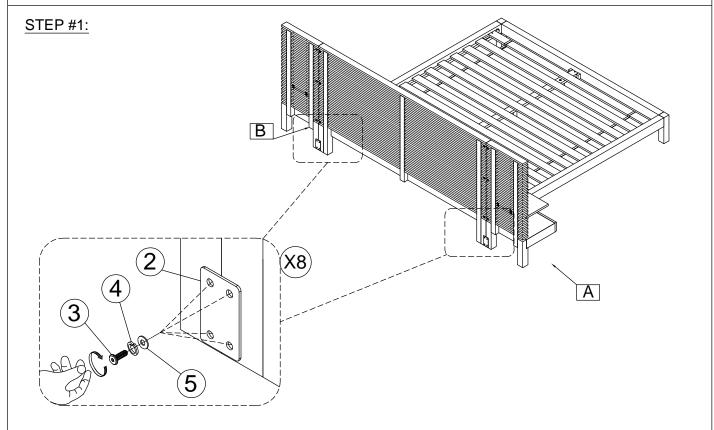

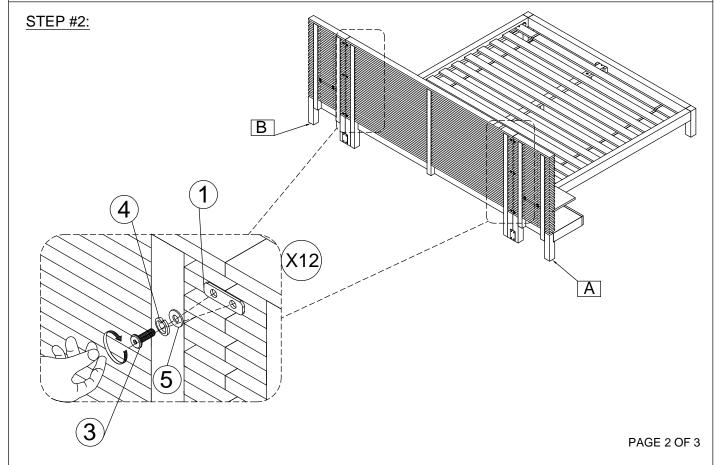




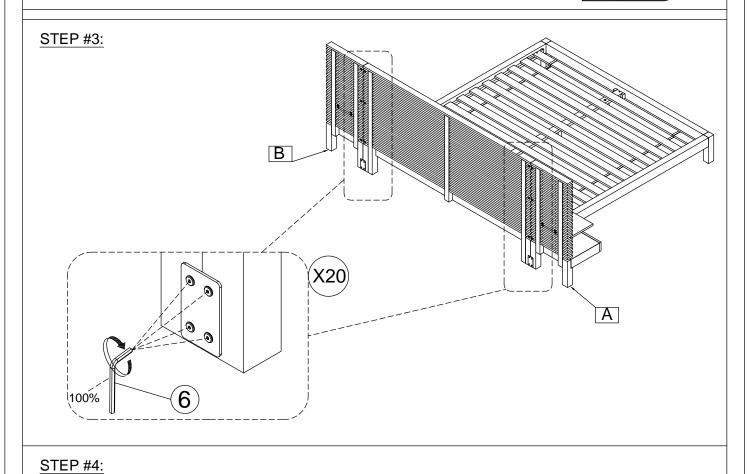

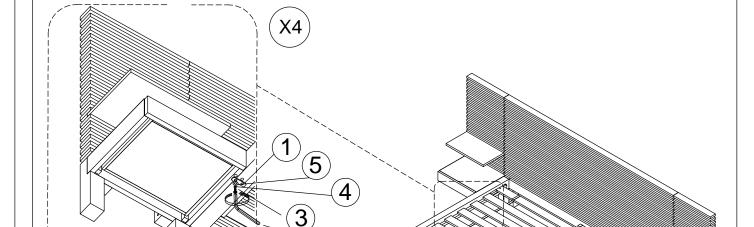


ASSEMBLY COMPLETE PAGE 3 OF 3



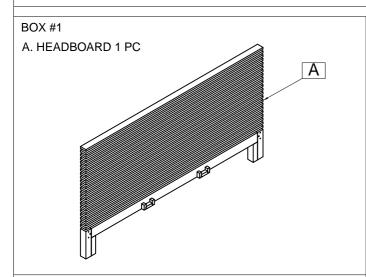

BOX #2

B. FOOTBOARD 1 PC D. SLAT ROLL 1 SET BED HARDWARE BOX

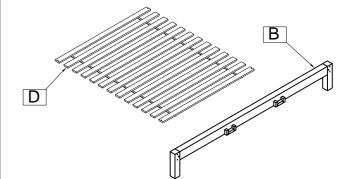


HARDWARE KIT PACKED IN BOX #2

No.	DESCRIPTION	IMAGE	QUANTITY
1	METAL DOWEL (8x40mm)		8 PCS
2	ALL- THREAD BOLT (5/16"x80mm)		4 PCS
3	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
4	SPANNER		1 PC
5	ALLEN BOLT (1/4"x50mm)		12 PCS
6	LOCK WASHER (5/16"x2mm)		12 PCS
7	FLAT WASHER (8x19mm)	0	12 PCS
8	WOOD SCREW (4x30mm)	6 mmm-1->	8 PCS
9	ALLEN KEY		1 PC

BOX #3:

- C. SIDE RAIL 2 PCS
- E. CENTER SLAT SUPPORT 2 PCS
- F. MATTRESS SPACER 2 PCS
- G. SUPPORT LEG 8 PCS

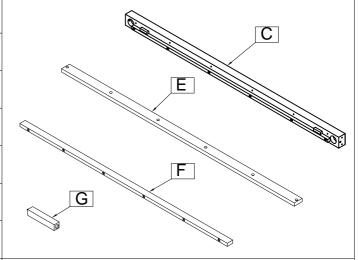











Not provided


ASSEMBLE ON A SOFT SURFACE

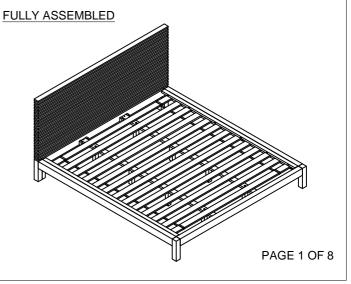




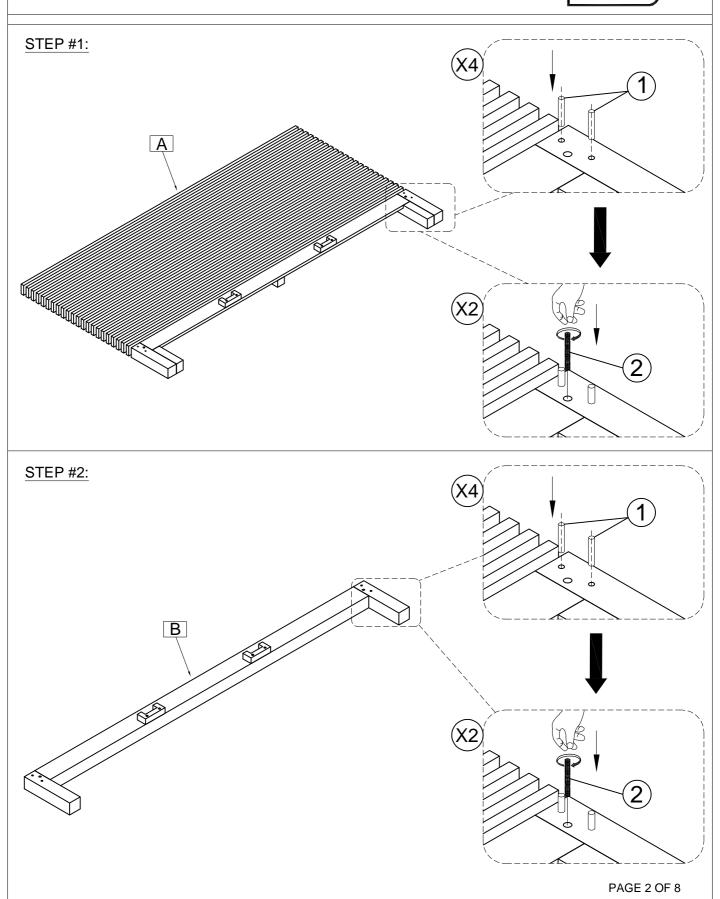




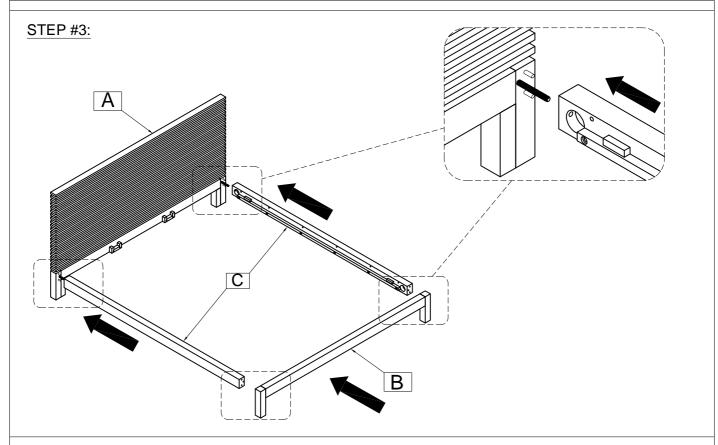

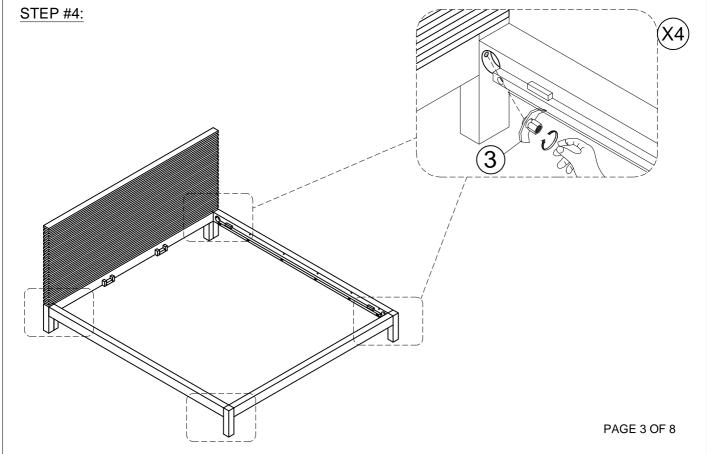




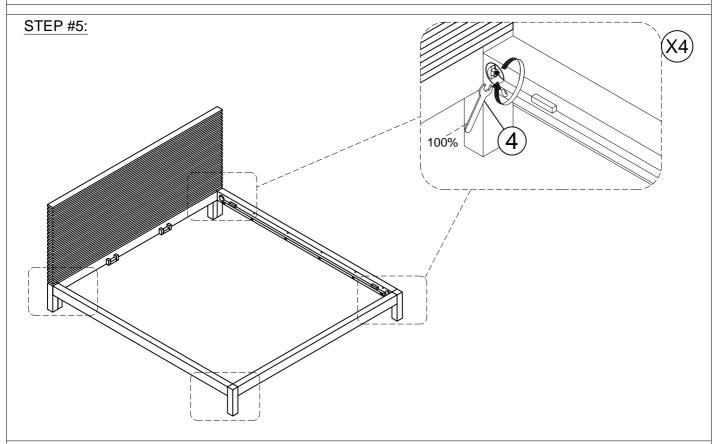





STOP

- * IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- * IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.

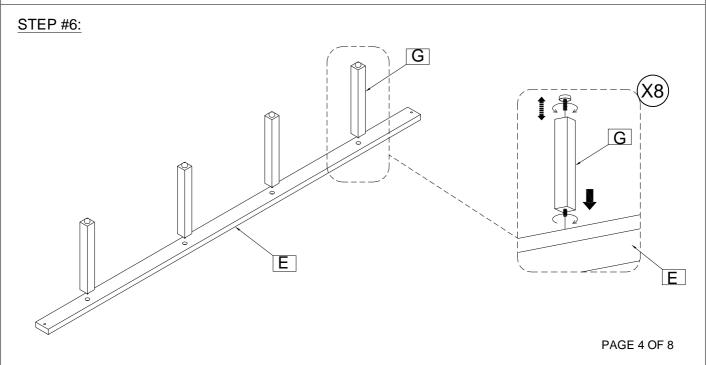




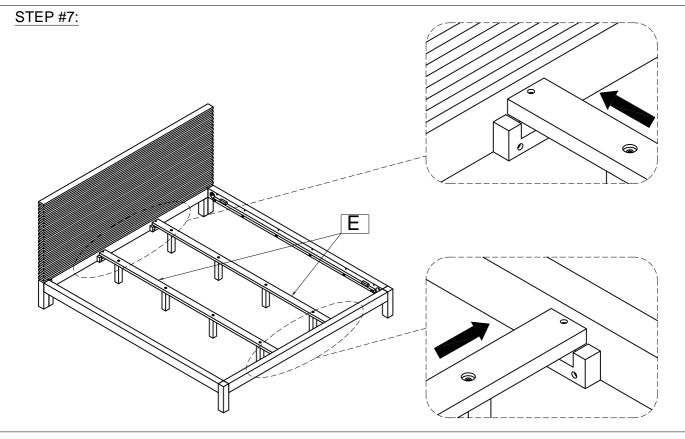


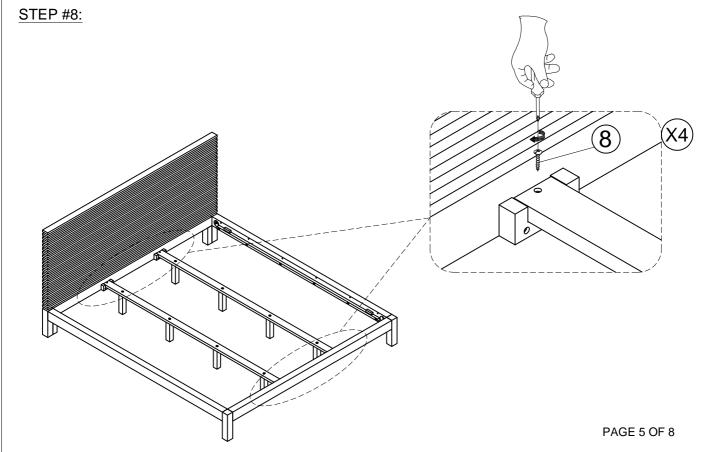



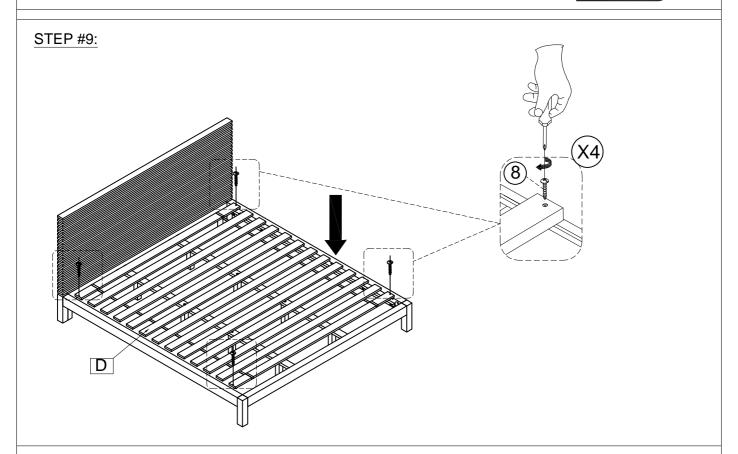


STEP #10:

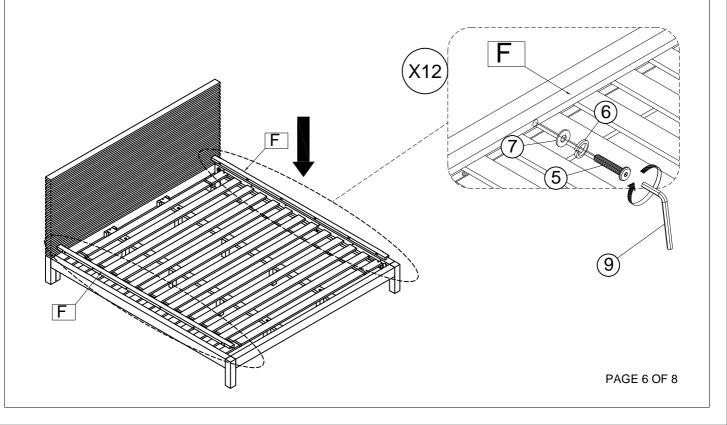




STEP #11:

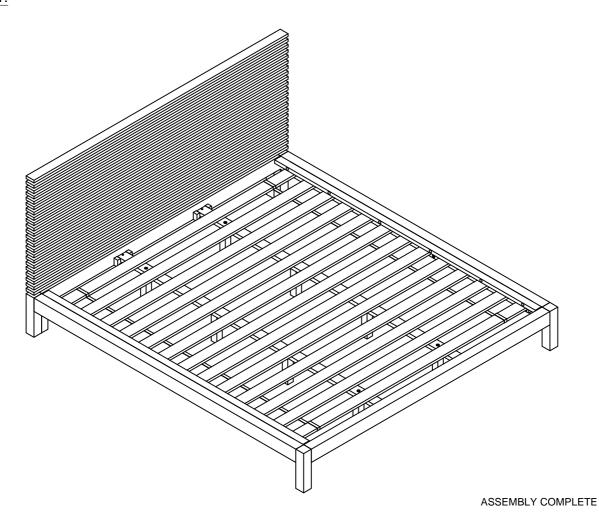

INSTRUCTIONS FOR ADJUSTING LEVELER:

- POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG.
- TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT.



MAINTENANCE INSTRUCTIONS:

- PERIODICALLY CHECK ALL FITTINGS AND TIGHTEN IF NECESSARY, AS THEY CAN LOOSEN OVER TIME.
- ALWAYS REMOVE BOX SPRING AND MATTRESS BEFORE MOVING THE BED.
- LIFT THE BED WHEN MOVING IT. DRAGGING THE BED CAN DAMAGE THE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING THE BED.

PAGE 7 OF 8



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY. PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

- D. SLAT ROLL 1 SET
- E. CENTER SLAT SUPPORT 2 PCS
- F. MATTRESS SPACER 2 PCS
- G. SUPPORT LEG 8 PCS

- 5. ALLEN BOLT (1/4"x50mm) 12 PCS
- 6. LOCK WASHER (5/16"x2mm) 12 PCS
- 7. FLAT WASHER (8x19mm) 12 PCS
- 8. WOOD SCREW (4x30MM) 8 PCS

STEP 1:

USE ALLEN KEY (9) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

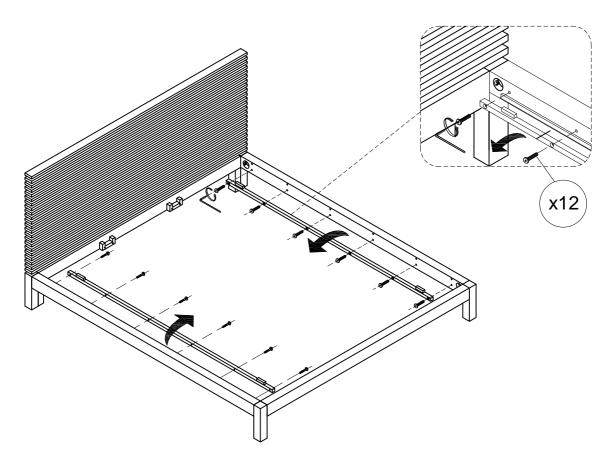


NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


PAGE 8 OF 8



A. LEFT SPREAD PANEL WING W/DRAWER 1 PC B. RIGHT SPREAD PANEL WING W/DRAWER 1 PC

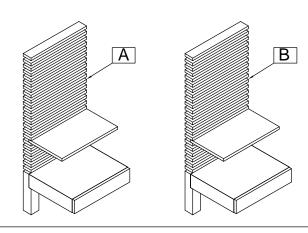


HARDWARE KIT PACKED IN BOX				
No.	DESCRIPTION	IMAGE	QUANTITY	
1	METAL BRACKET (3x17x60mm)	60	8 PCS	
2	METAL BRACKET (3x60x100mm)		2 PCS	
3	ALLEN BOLT (1/4"x20mm)		24 PCS	
4	LOCK WASHER (1/4"x2mm)		24 PCS	
5	FLAT WASHER (6x19mm)	0	24 PCS	
6	ALLEN KEY		1 PC	

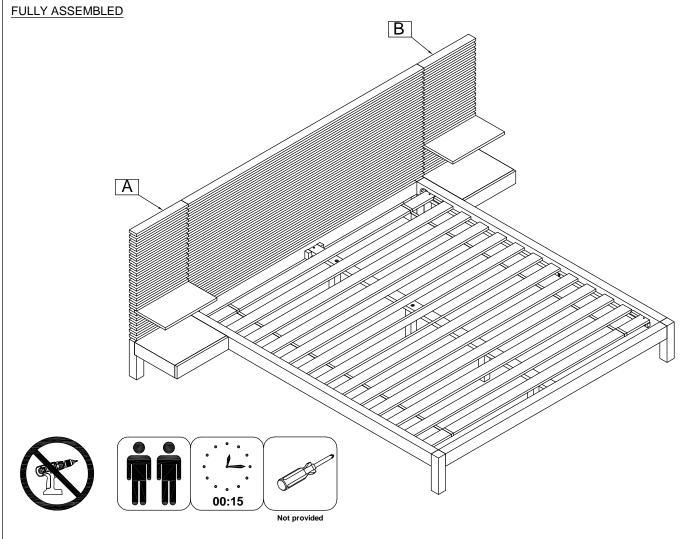


ASSEMBLE ON A SOFT SURFACE


PAGE 1 OF 3




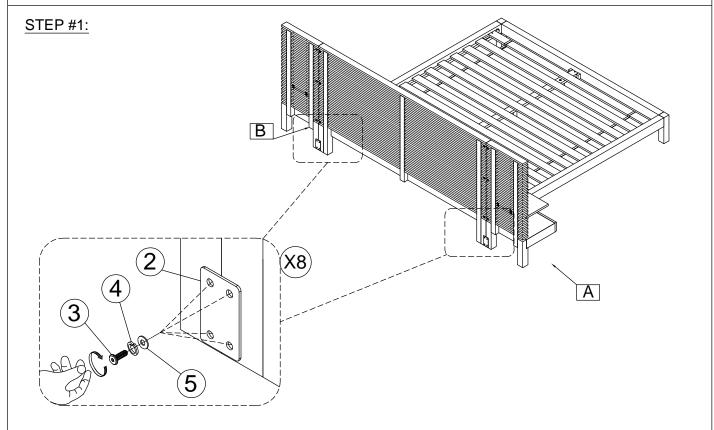

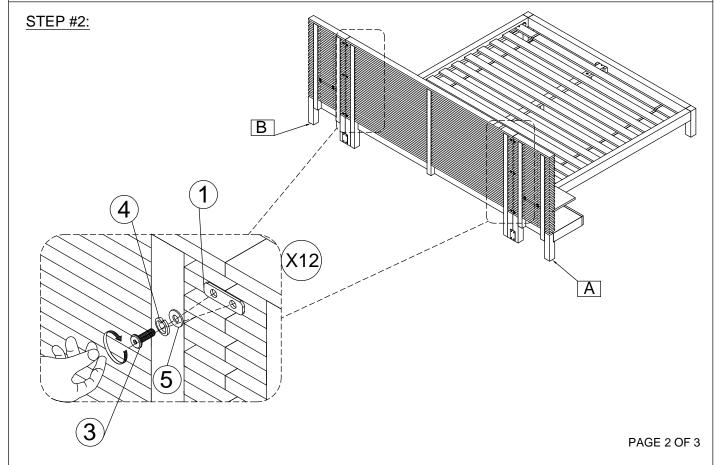




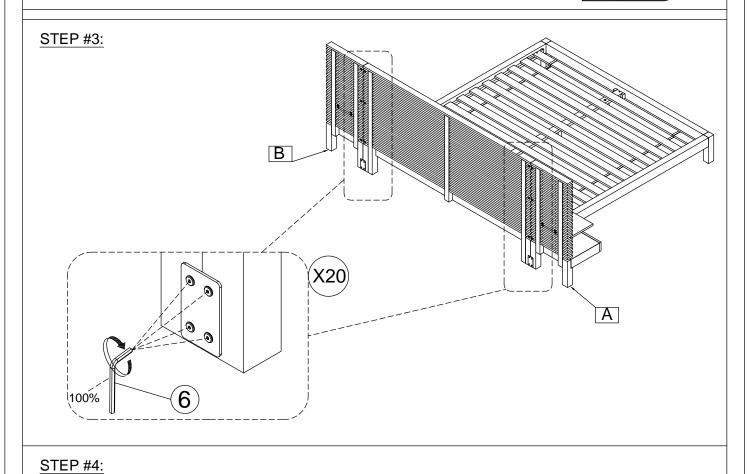

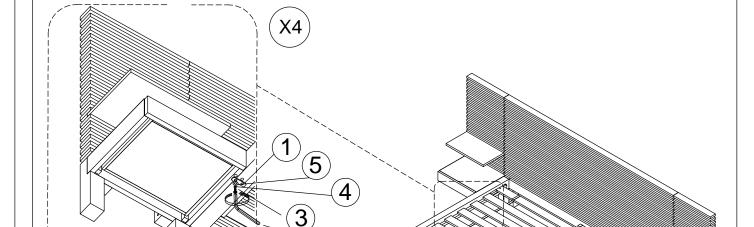


ASSEMBLY COMPLETE PAGE 3 OF 3



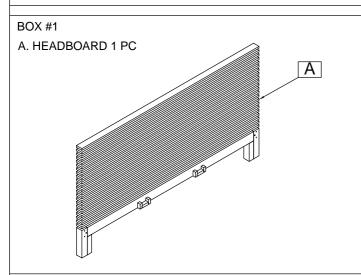

BOX #2

B. FOOTBOARD 1 PC D. SLAT ROLL 1 SET BED HARDWARE BOX

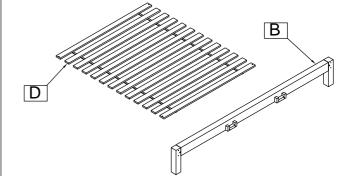

HARDWARE KIT PACKED IN BOX #2


No.	DESCRIPTION	IMAGE	QUANTITY
1	METAL DOWEL (8x40mm)		8 PCS
2	ALL- THREAD BOLT (5/16"x80mm)		4 PCS
3	THREADED HALF MOON WASHER NUT (5/16")		4 PCS
4	SPANNER		1 PC
5	WOOD SCREW (4x30mm)	(f)	8 PCS
6	ALLEN KEY		1 PC




ASSEMBLE ON A SOFT SURFACE

BOX #3:

- C. SIDE RAIL 2 PCS
- E. CENTER SLAT SUPPORT 2 PCS
- F. SUPPORT LEG 8 PCS

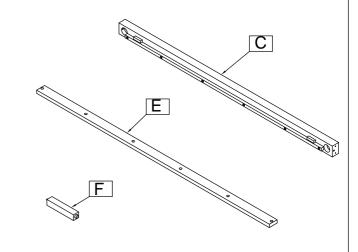


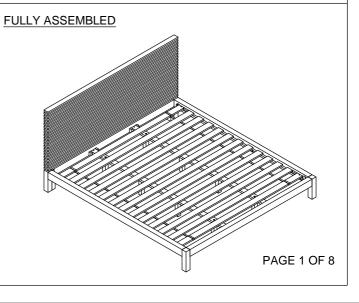









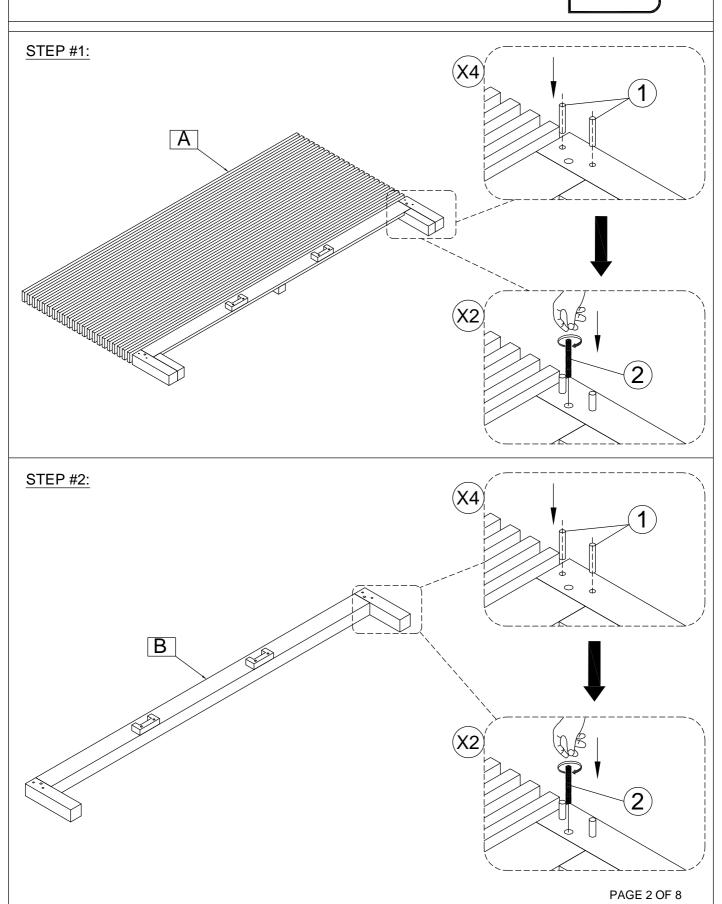




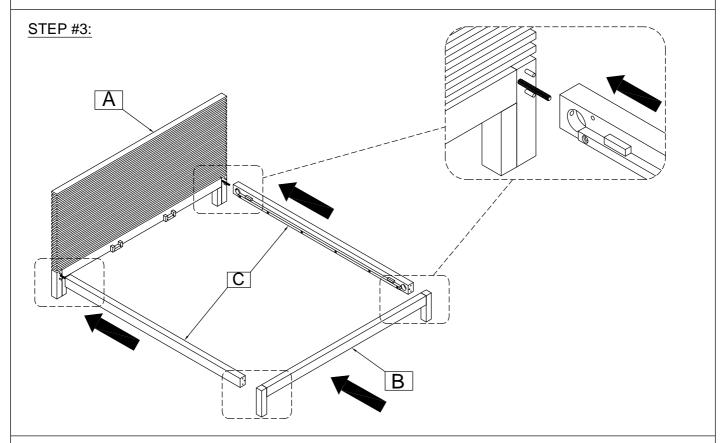

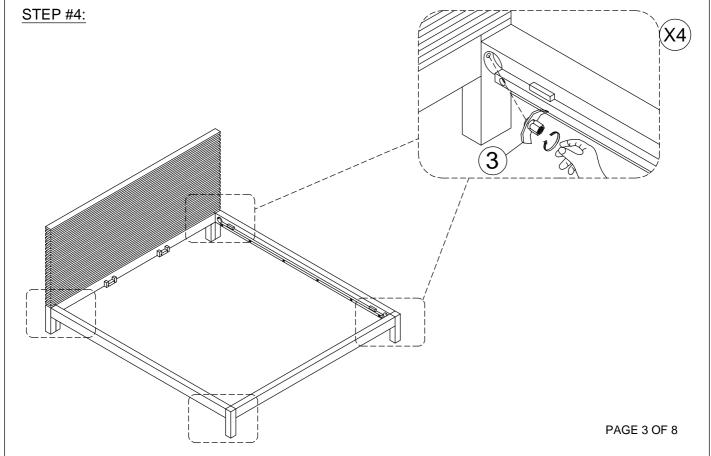




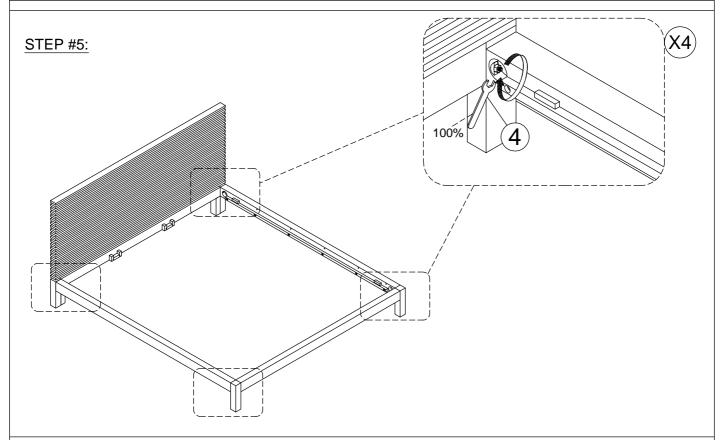




STOP

- * IF USING BED FRAME WITH ADJUSTABLE MATTRESS BASE, SKIP TO APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- * IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION CONTINUE TO STEP 6.

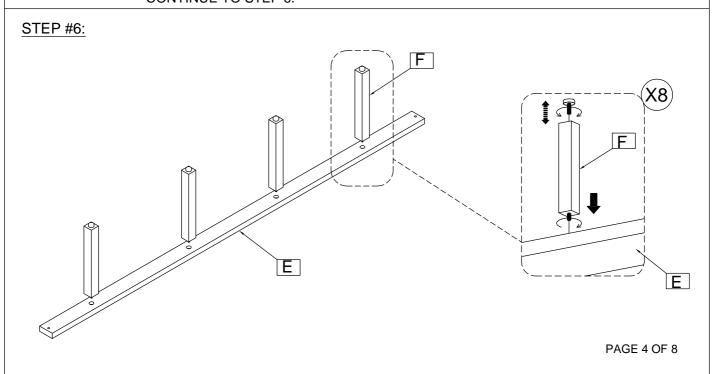





STEP #7:

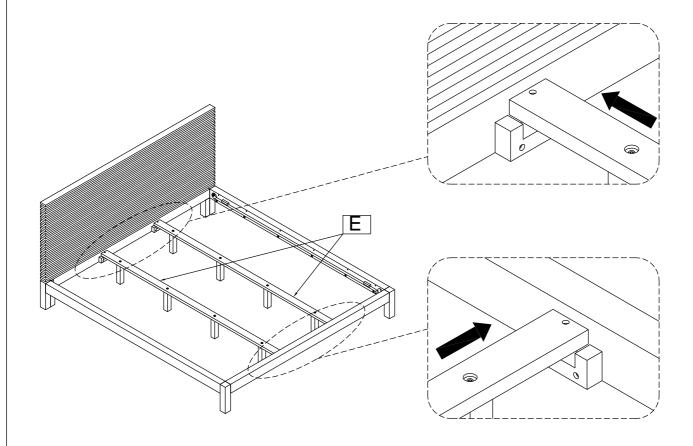




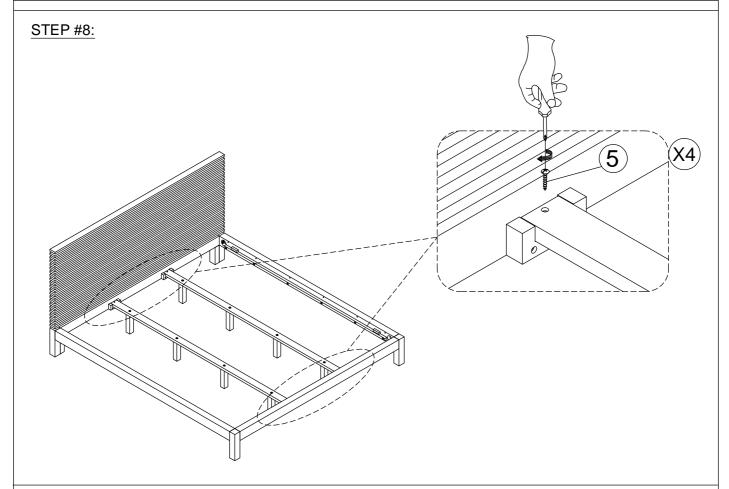

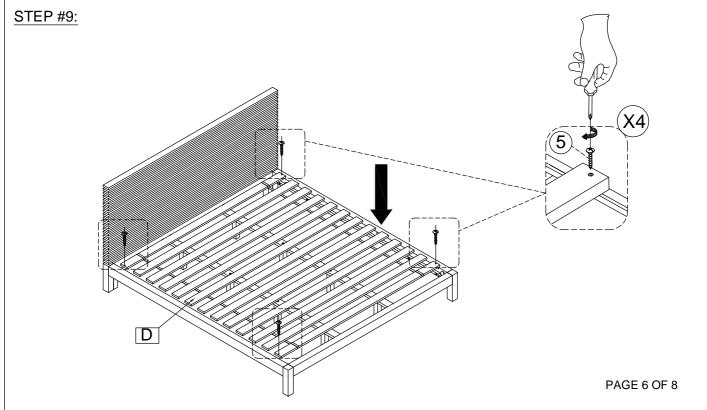



STEP #10:

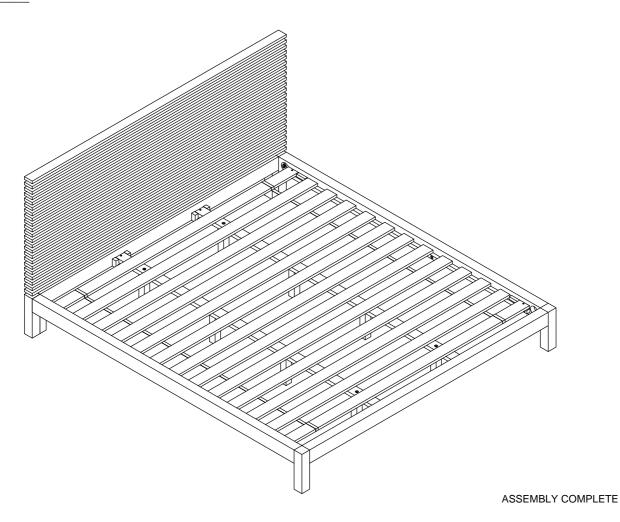

INSTRUCTIONS FOR ADJUSTING LEVELER:

- POSITION THE BED IN YOUR SPACE AND LOCATE THE LEVELER UNDER EACH SUPPORT LEG.
- TURN THE LEVELER COUNTER- CLOCKWISE TO EXTEND THE LEVELER AND CLOCKWISE TO RETRACT IT.
- ADJUST EACH LEVELER UNTIL EACH SUPPORT LEG IS APPLYING EQUAL, UPWARD PRESSURE ON THE BED SUPPORT SLAT.



MAINTENANCE INSTRUCTIONS:

- PERIODICALLY CHECK ALL FITTINGS AND TIGHTEN IF NECESSARY, AS THEY CAN LOOSEN OVER TIME.
- ALWAYS REMOVE BOX SPRING AND MATTRESS BEFORE MOVING THE BED.
- LIFT THE BED WHEN MOVING IT. DRAGGING THE BED CAN DAMAGE THE CENTER SUPPORT.
- READJUST LEVELERS AFTER MOVING THE BED.

PAGE 7 OF 8



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY. PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

D. SLAT ROLL 1 SET


5. WOOD SCREW (4x30MM) 8 PCS

E. CENTER SLAT SUPPORT 2 PCS

F. SUPPORT LEG 8 PCS

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

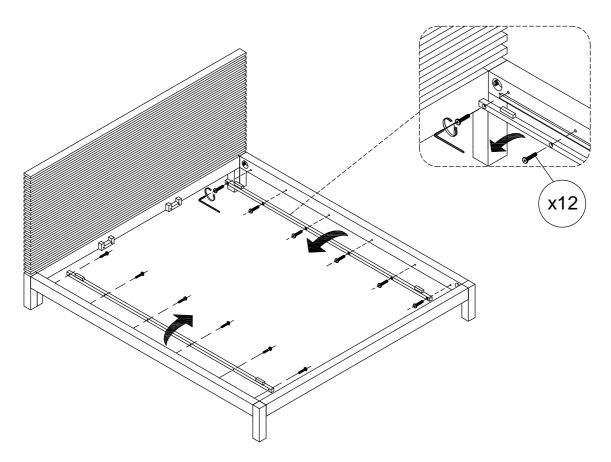


NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION


PAGE 8 OF 8



A. LEFT SPREAD PANEL WING W/DRAWER 1 PC B. RIGHT SPREAD PANEL WING W/DRAWER 1 PC

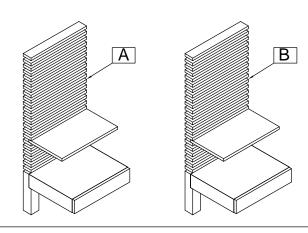


HARDWARE KIT PACKED IN BOX				
No.	DESCRIPTION	IMAGE	QUANTITY	
1	METAL BRACKET (3x17x60mm)	60	8 PCS	
2	METAL BRACKET (3x60x100mm)		2 PCS	
3	ALLEN BOLT (1/4"x20mm)		24 PCS	
4	LOCK WASHER (1/4"x2mm)		24 PCS	
5	FLAT WASHER (6x19mm)	0	24 PCS	
6	ALLEN KEY		1 PC	

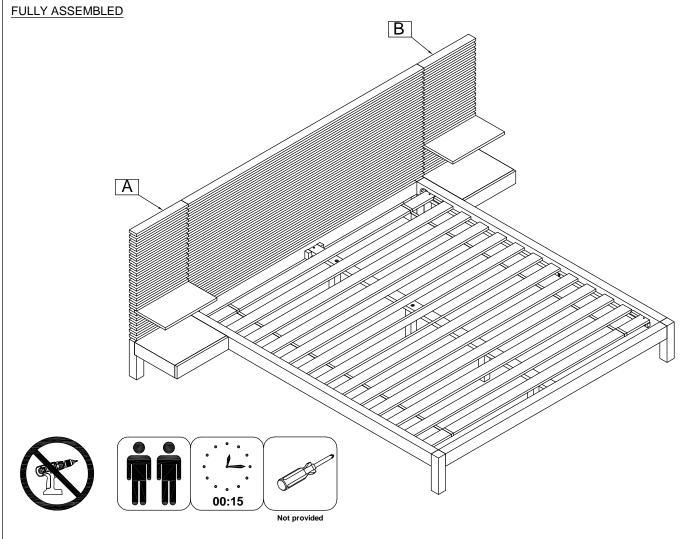


ASSEMBLE ON A SOFT SURFACE


PAGE 1 OF 3




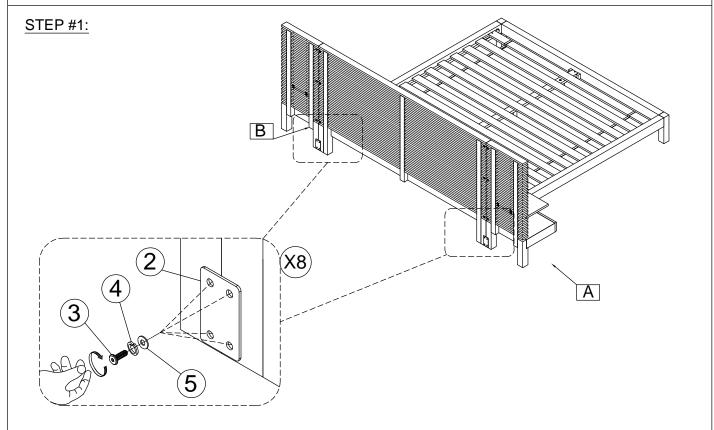

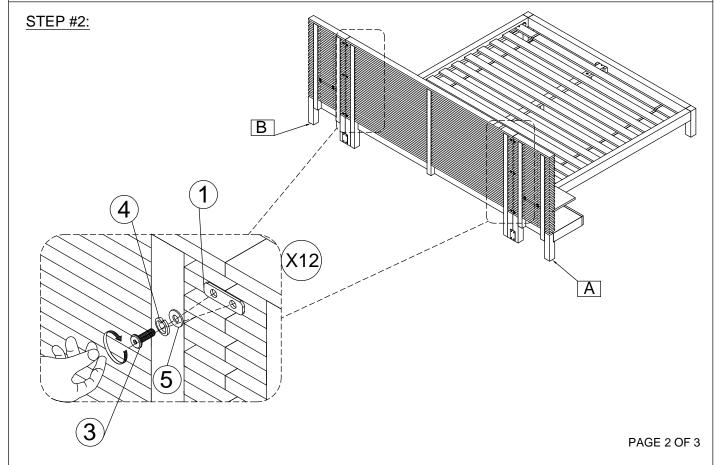



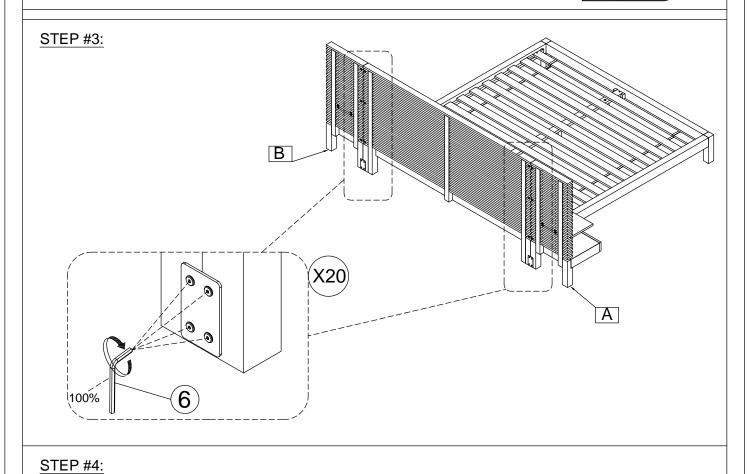

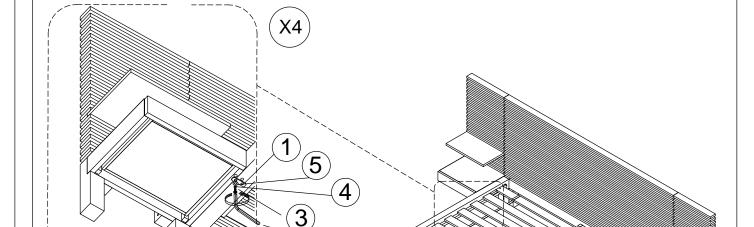

ASSEMBLY COMPLETE PAGE 3 OF 3