
KINCAID®

SOLID WOOD SINCE 1946

www.kincaidfurniture.com
phone :828-728-3261.

ASSEMBLY INSTRUCTION


020-637 Anna Arm Chair

HARDWARE LIST				
A		Long Bolt	Ø5/16"*3-1/8"	4 PCS
B		Short Bolt	Ø5/16"*1-3/4"	3 PCS
C		Nut	Ø5/16"	4 PCS
D		Lock Washer	Ø5/16"	11 PCS
E		Large Flat Washer	Ø5/16"*19D	11 PCS
F		Small Bolt	Ø1/4"*1-3/4"	2 PCS
G		Small Lock Washer	Ø1/4"	2 PCS
H		Allen key	100*50*4mm	1 PC
I		Spanner Wrench	12MM	1 PC
K		Wood Plug	Ø13*10 mm	2 PCS

PART LIST		
1	Chair Back	1 PC
2	Seat Frame	1 PC
3	Front Leg	2 PCS
4	Left Arm	1 PC
5	Right Arm	1 PC


IMPORTANT NOTES

. Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
. Check to be sure that you have all parts and hardware.
. Remove all wrapping materials,including staples and packing straps before you start to assemble.
. Do not tighten all screws and bolts until completely assembled.
. Keep all hardware out of the reach of children

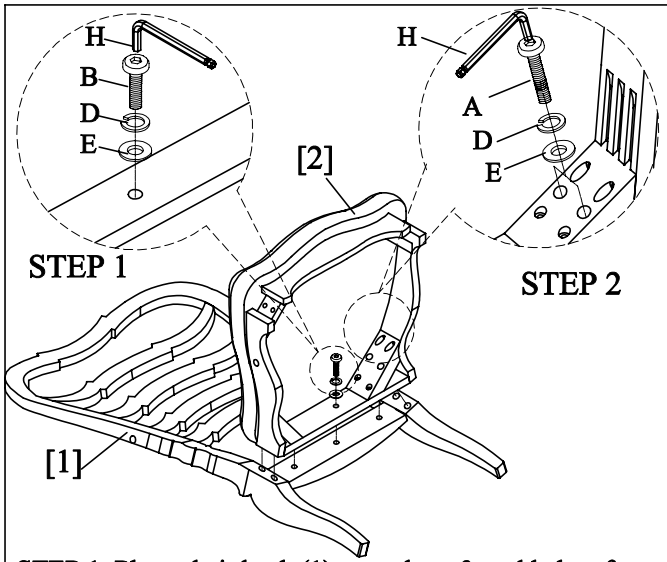

STEP 1. Place chair back (1) on a clean & padded surface then attach seat frame (2) to the chair back using bolt (B), lock washer(D), flat washer (E), and tighten with allen key (H). Important: Do not over-tighten.

STEP 2. Attach back assembly to the seat frame (2) using bolt(A), lock washer (D), flat washer (E), and tighten with allen key (H). Important: Do not over-tighten.

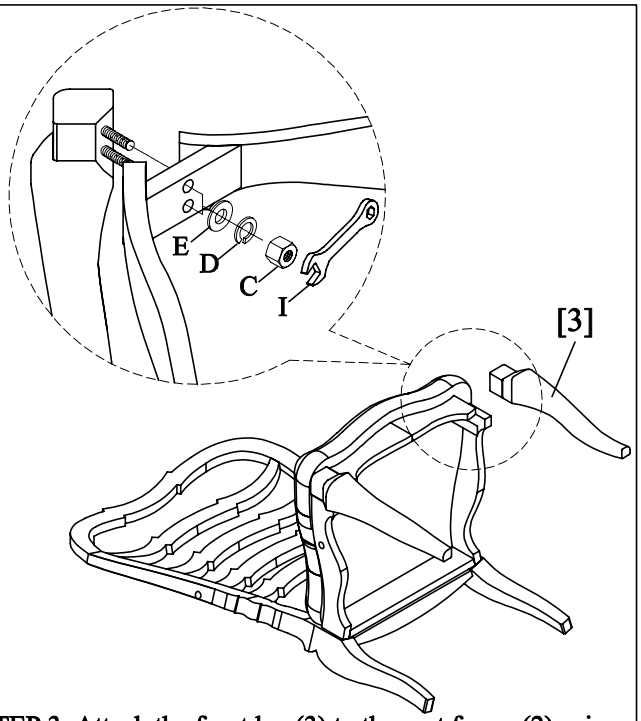

STEP 3. Attach the front leg (3) to the seat frame (2) using nut (C), lock washer (D), flat washer (E), and tighten with Spanner Wrench (I). Important: Do not over-tighten.


MADE IN VIETNAM

KINCAID®
SOLID WOOD SINCE 1946

www.kincaidfurniture.com
phone :828-728-3261.

ASSEMBLY INSTRUCTION

020-637 Anna Arm Chair

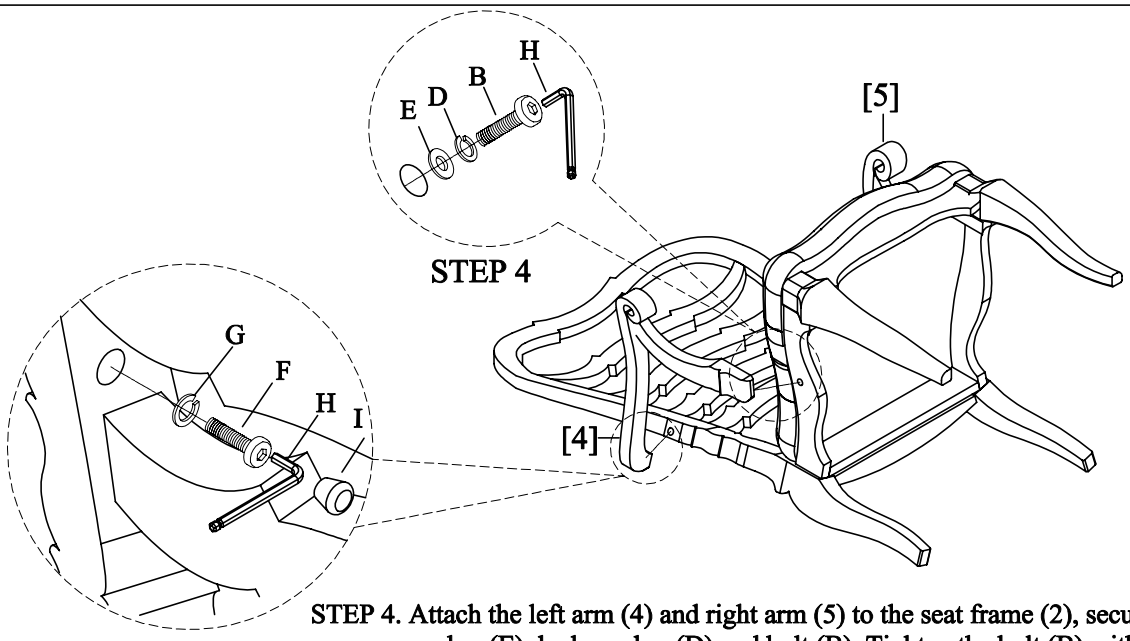


STEP 4. Attach the left arm (4) and right arm (5) to the seat frame (2), secure with flat washer (E), lock washer (D) and bolt (B). Tighten the bolt (B) with allen key (H).

STEP 5

STEP 5. Attach the left arm (4) and right arm (5) to chair back side, secure with lock washer (G) and bolt (F). Tighten the bolt (F) with allen key (H). Then Plug the wooden Plug (K) to the back leg

STEP 6. To ensure chair is stable, tighten bolts (A,B,F) and nuts (C) using the allen key (H), Spanner Wrench (I) while applying downward pressure to the seat.

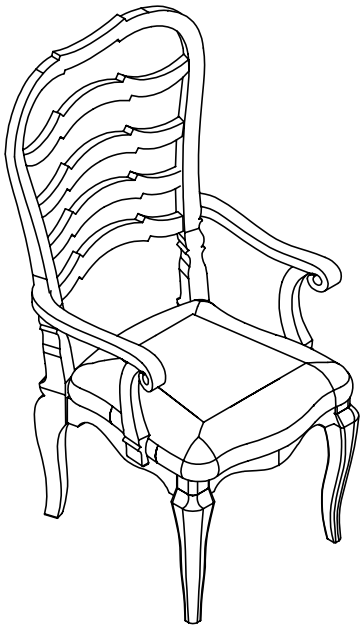

MADE IN VIETNAM