

Freestanding Vanity

INSTALLATION INSTRUCTIONS

Swiss Madison®
well made forever



@SwissMadison
#WellMadeForever





PRIOR TO INSTALLATION:

- Inspect product to ensure no damages have occurred while in shipping.
- Observe all plumbing and building codes in accordance with your state and local requirements.
- Floor must be level prior to installation of vanity.
- All dimensions are nominal! Be sure to measure your vanity prior to installation.
- The step-by-step guidelines in the installation instructions are a general reference. Should there be any discrepancies, Swiss Madison cannot be held liable. It is recommended to install all Swiss Madison products by hiring a licensed professional.
- Read installation and maintenance instructions thoroughly before installing. Be sure to use proper tools and always wear proper personal safety accessories for your protection.

If you have any questions or concerns please contact us:
 1-434-623-4766
info@swissmadison.com

SUGGESTED TOOLS & MATERIALS:



Safety Glasses




Allen Wrench




Screwdrivers




Silicone



Drop Cloth



Level



Adhesive



Drill




Gloves

INCLUDED PARTS:



Vanity Base

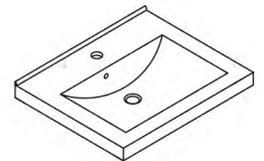

Vanity Sink




Hardware

Parts for Reference:




1. Left side panel
2. Right side panel
3. Bottom panel & leg
4. Rear top bar
5. Rear bottom bar
6. Front top bar
7. Front middle bar
8. Front middle bar
9. Front bottom bar
10. Top False drawer surface
11. Middle drawer surface
12. Bottom drawer surface
13. Bottom drawer left side panel
14. Bottom drawer right side panel
15. Bottom drawer back panel
16. Bottom drawer front panel
17. Bottom drawer bottom panel
18. Middle drawer left side panel
19. Middle drawer right side panel
20. Middle drawer back left panel
21. Middle drawer back right panel
22. Middle drawer middle left panel
23. Middle drawer middle right panel
24. Middle drawer middle front panel
25. Middle drawer front panel
26. Middle drawer bottom panel

- A. Cam bolt
- B. Cam lock
- C. Wooden dowel
- D. Screw (40mm) & plastic anchor
- E. Screw (14mm)
- F. Screw for drawer (25mm)
- G. Undermount slide
- H. Screw (16mm)
- I. Handle (top)
- J. Metal bracket
- K. Adjustable feet

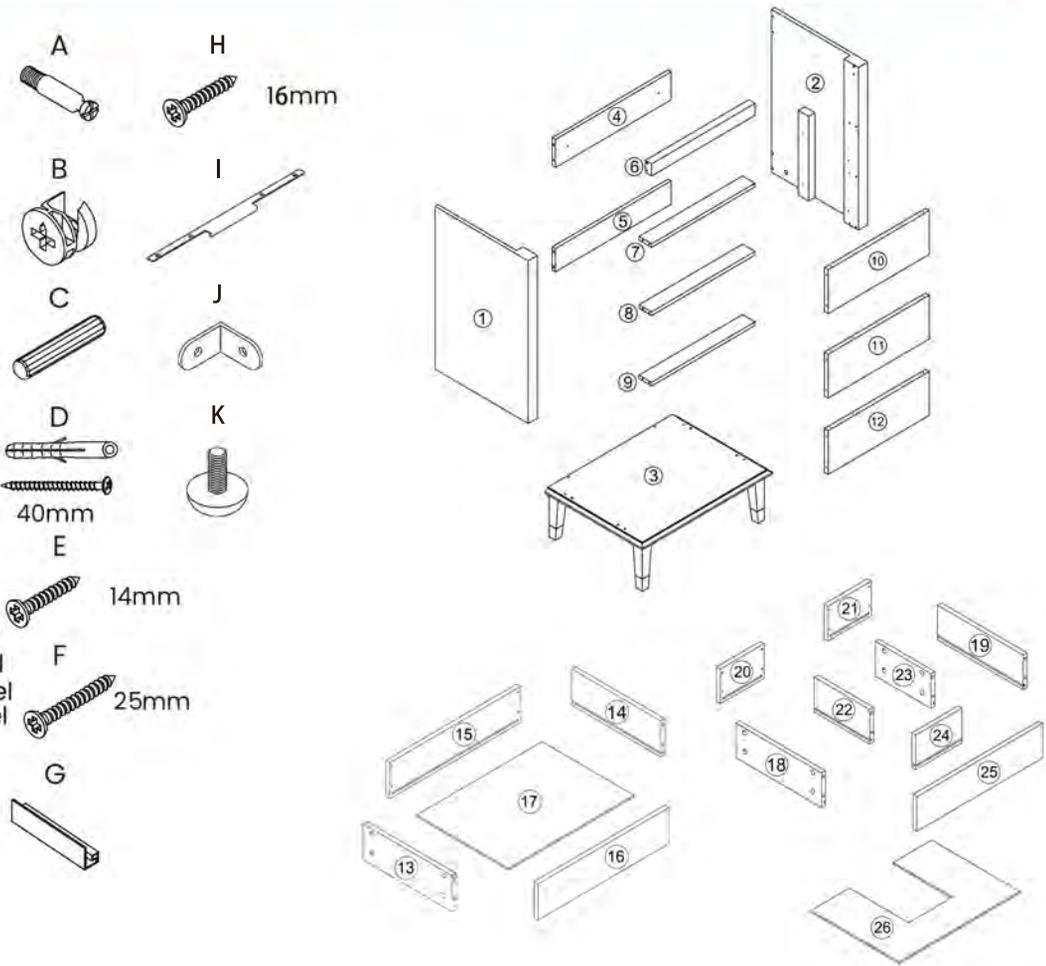



1. Install Side Panel Slides

- Screw 11 cam bolts (A) into the left side panel (1). Repeat for the right side panel (2).
- Insert 6 cam bolts (A) and 4 wooden dowels (C) into the Bottom panel & leg (3).
- Insert 2 wooden dowels (C) into the front top bar (6).

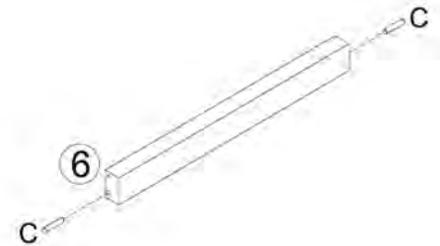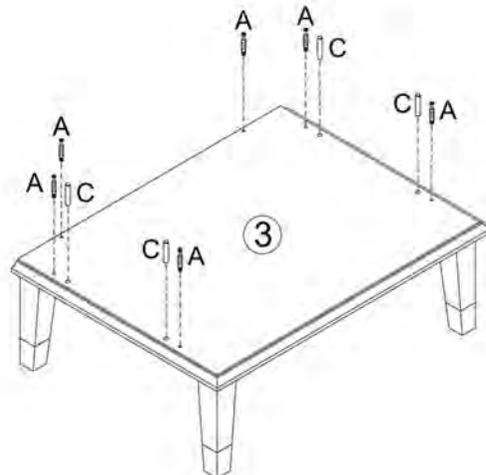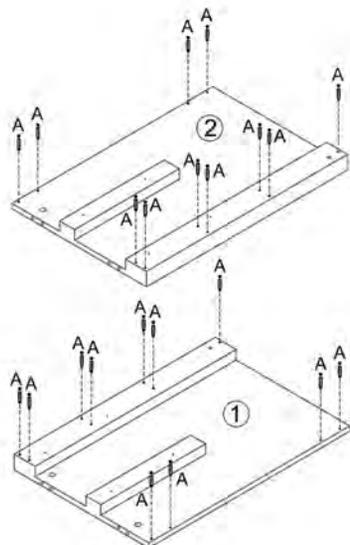


2. Assemble frame

- Attach the rear top bar (4) to the left side panel (1) Use 2 cam locks (B) to secure in the place.
- Attach the rear bottom bar (5) to the left side panel (1) Use 2 cam locks (B) to secure in the place.
- Attach the front top bar (6) to the left side panel (1) and secure using 1 cam locks (B).
- Attach the Front middle bar (7) to the left side panel (1) and secure using 2 cam locks (B).
- Attach the Front middle bar (8) to the left side panel (1) and secure using 2 cam locks (B).
- Attach the Front bottom bar (9) to the left side panel (1) and secure using 2 cam locks (B).
- Repeat the process to the right side panel (2) using an additional 11 cam locks (B).

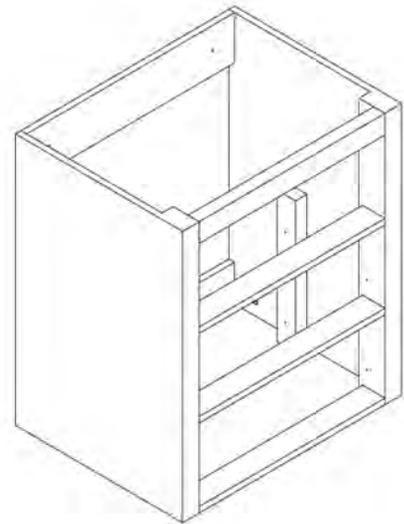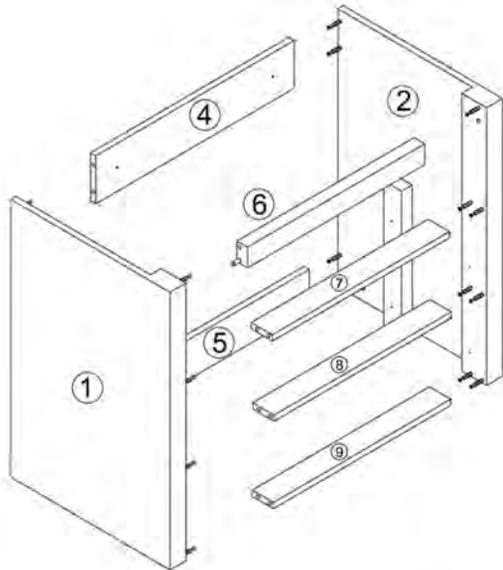


3. Assemble bottom panel & leg

- Connect the vanity frame to the Bottom panel & leg (3) Use 6 cam locks (B) to secure in the place.
- Screw 2 Adjustable feet (K) into the bottom panel & leg (3).

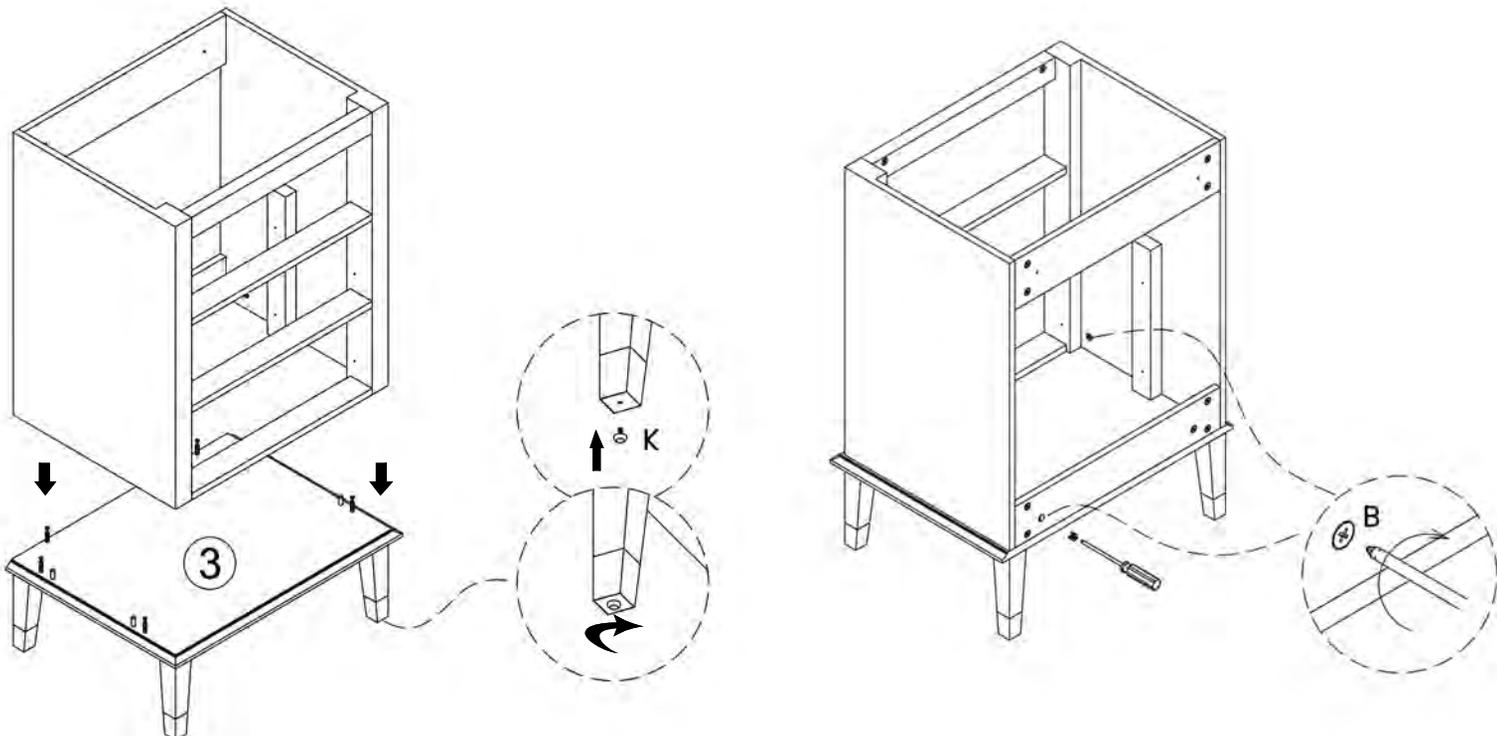


4 Assemble bottom drawer box

- Screw 4 cam bolts (A) into the drawer back panel (15)
- Insert the drawer bottom panel (17)
- Screw 4 cam bolts (A) into the drawer front panel (16)
- Use 16 cam locks (B) to connect and secure all panels in place as shown.

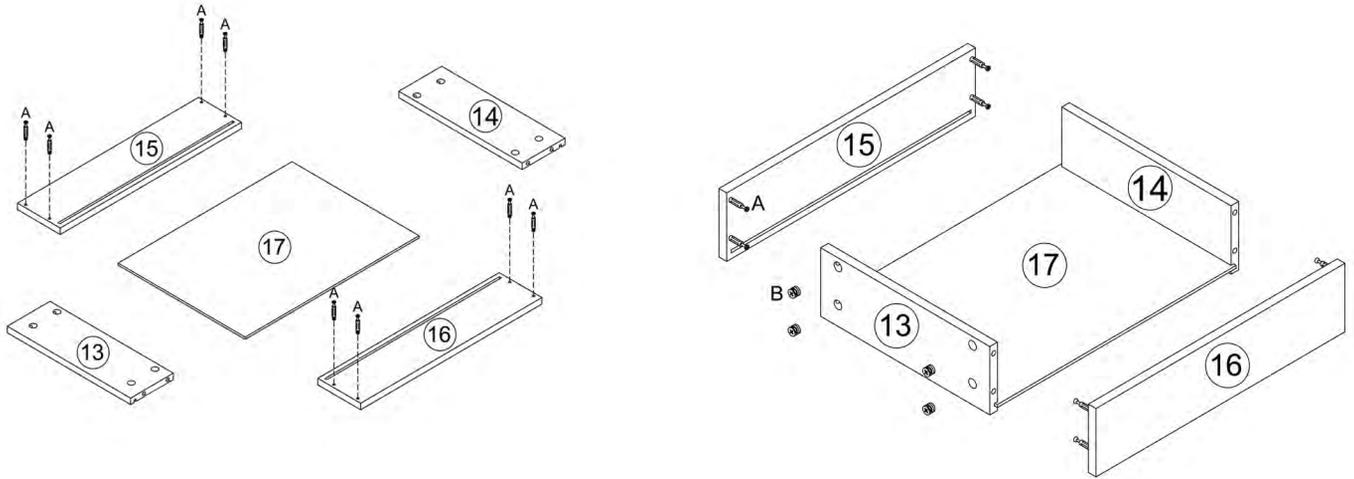


5 Assemble middle drawer box

- Screw 4 cam bolts (A) each into the drawer back left panel (20) & drawer back right panel (21)
- Screw 4 cam bolts (A) into the drawer middle front panel (24)
- Insert drawer bottom panel (26)
- Screw 4 cam bolts (A) into the drawer front panel (25)
- Use 32 cam locks (B) to connect and secure all panels in place as shown.

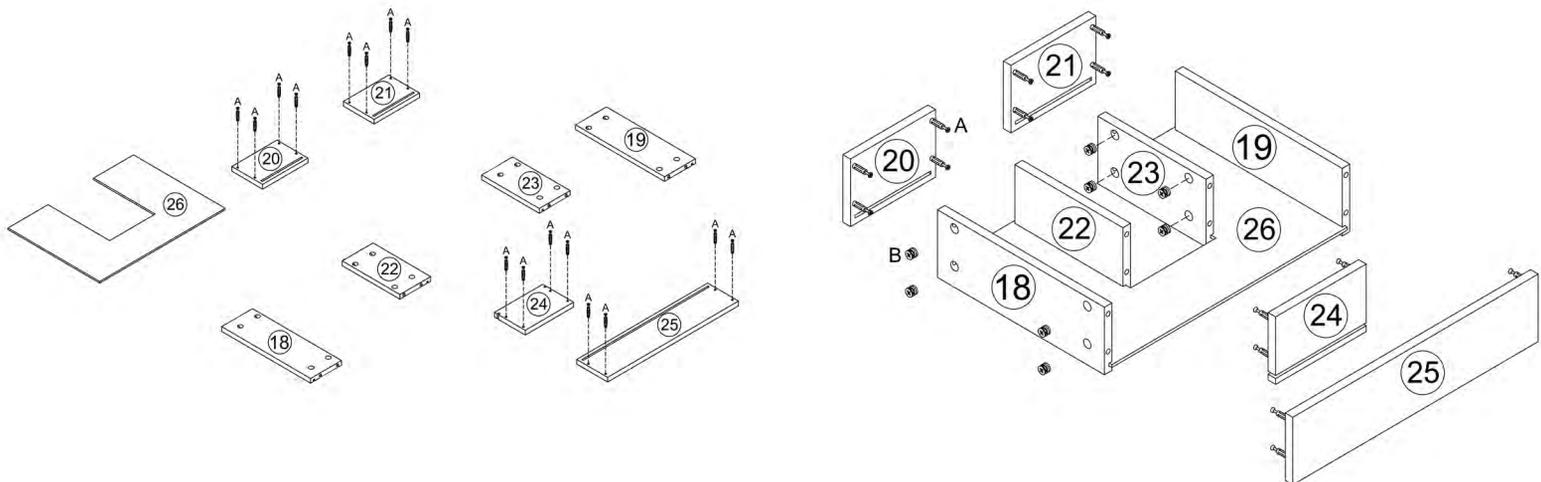


6. Install handle

- Attach the drawer front panel (16) to the drawer surface (12) with 4 screws (F) as shown.
- Repeat the process to the the drawer front panel (25) to the drawer surface (11) with 4 screws (F).

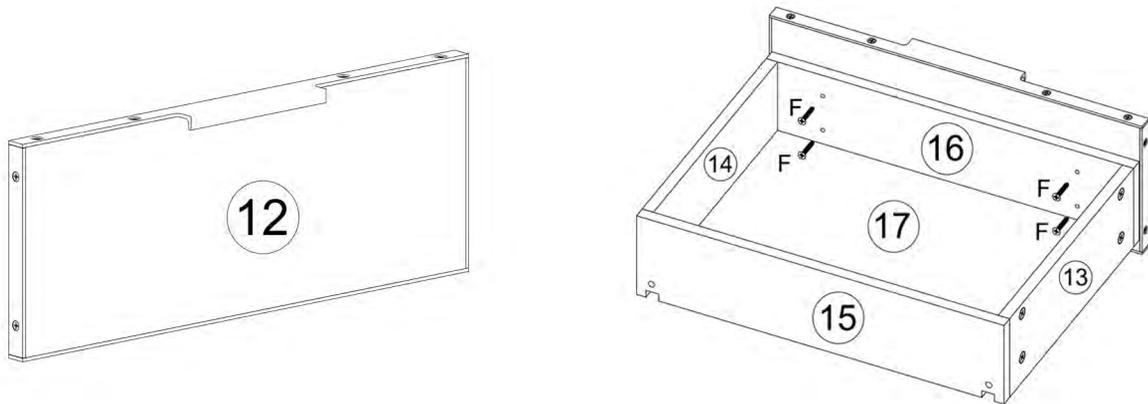


7. Install slides

- Install 2 undermount slides (G) to the side panel(1) & (2) using 2 screws (E) each per slide as show.
- Install 4 Metal bracket (J) to the side panel(1) & (2) using 4 screws (E) each per slide as show.

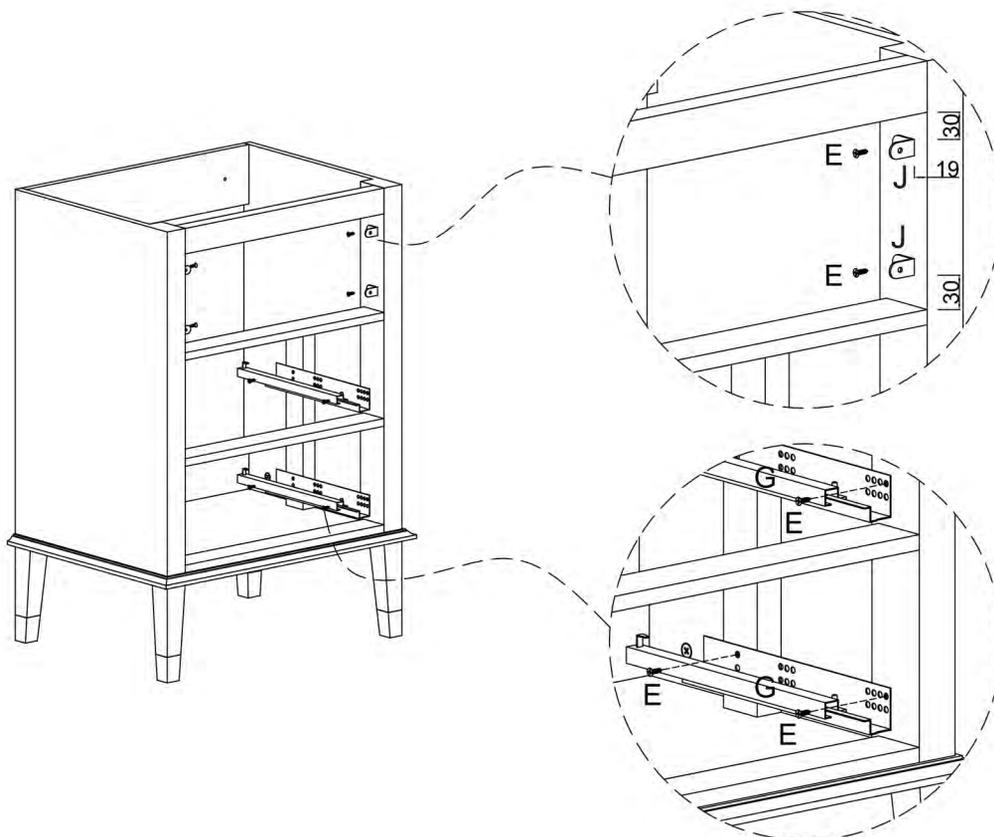


8. Install top False drawer surface

- Connect the Top False drawer surface (10) to the side panel (1) & (2) Use 4 screws (E) to secure in the place.
- P.S.To allow a 2mm gap at the bottom of the drawer surface (10) , please place a 2mm piece of paper at the bottom of the installation. Accessory boxes or inner wrapping paper can be used.

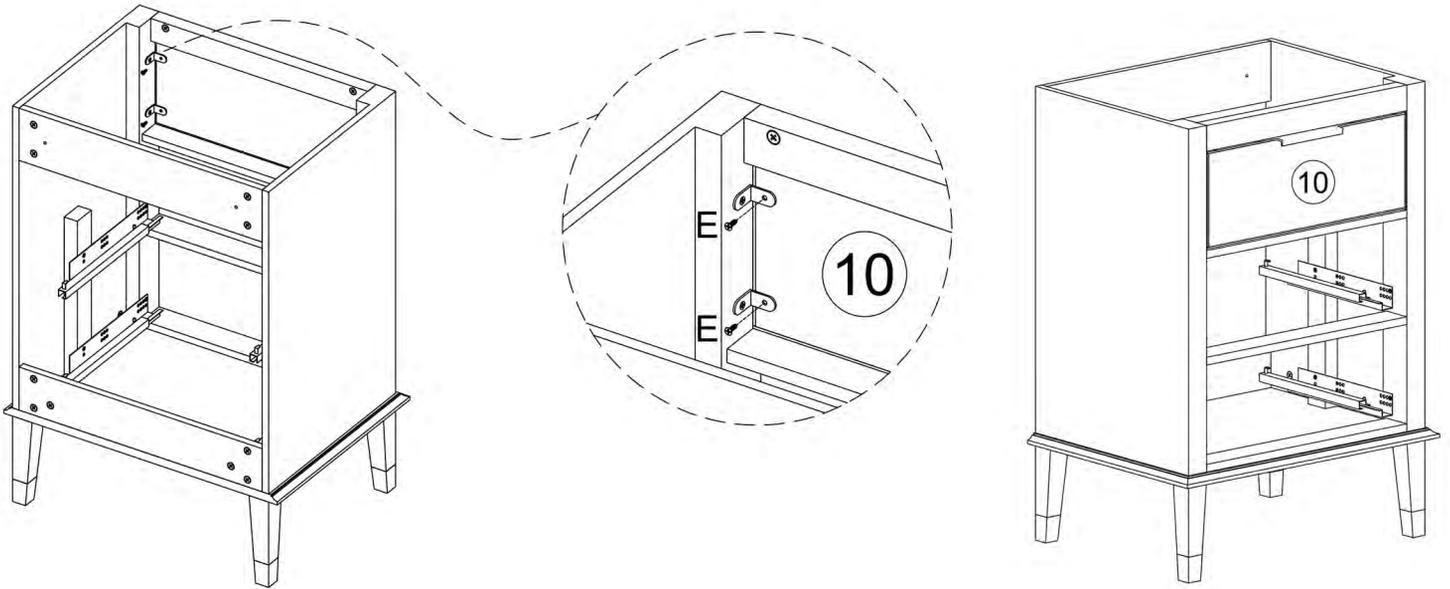


9. Install drawer box

- Insert the drawer box and hook the slides (G)
- Tighten the 2 screws (E) each on the bottom of the drawer box to secure the slides (G).
- Repeat entire process for the middle drawers (11).

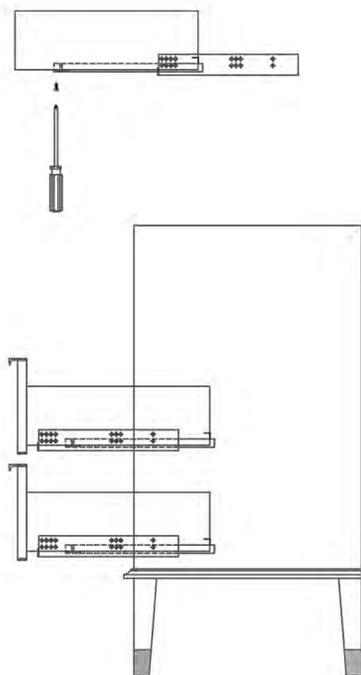


Drawer Removal (if applicable)

1.Remove

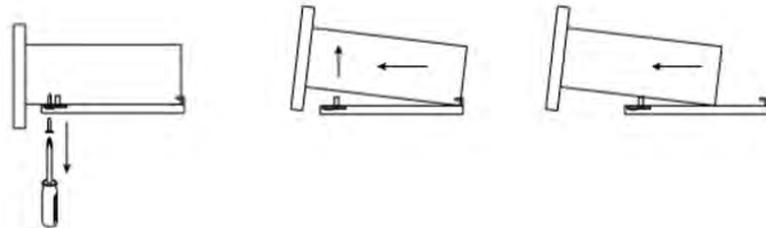


2.Install

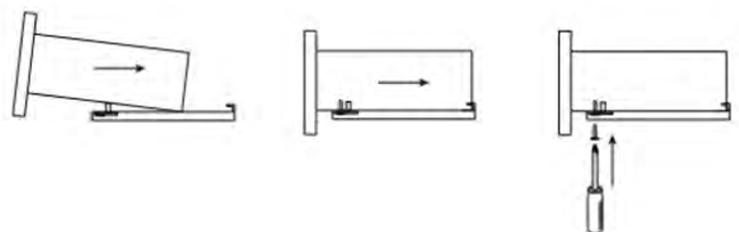

10. Secure vanity to wall

- Attach 2 screws (D) to the rear top bar (4) .
- Mark desired mounting location on wall and ensure placement is level.

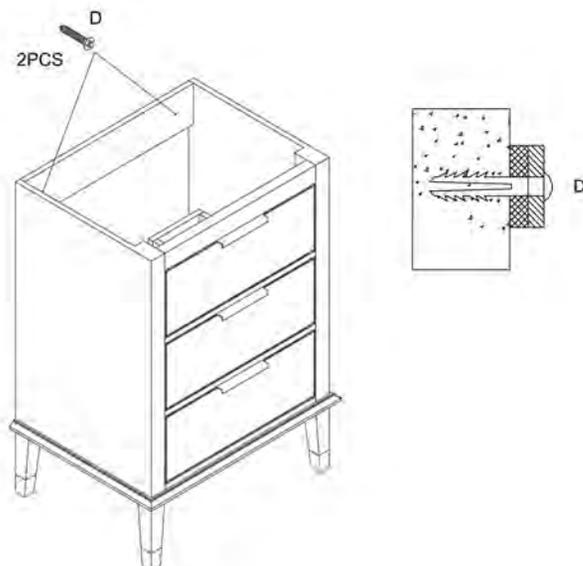

Option 1: Securing to Drywall


- Position cabinet against wall in desired location.
- Using a pencil, make a mark on the wall through the holes in each bracket.
- Move cabinet away from the wall. Create a pilot hole in each mark on the wall, then insert the plastic anchor.
- Place cabinet against the wall, insert a screw into each hole in the wall, then tighten to plastic anchors to secure the vanity.

Option 2: Securing to Drywall & Wood Stud


- Position cabinet against wall in desired location, be sure desired mounting location aligns with existing wood studs.
- Insert screw through the holes. then tighten through the drywall into the wood stud. Repeat this step for the other metal bracket to secure the vanity.

11. Vanity Top Installation

- Install faucet and drain according to manufacturer's installation instructions. Do not overtighten, this may cause the sink to crack.
- Set the vanity top on top of the vanity base, checking the location of the p-trap and drain.
- Remove vanity top from vanity base. Apply a thin bead of silicone around the vanity base and set the vanity top carefully in place.
- Remove excess silicone with a wet cloth.

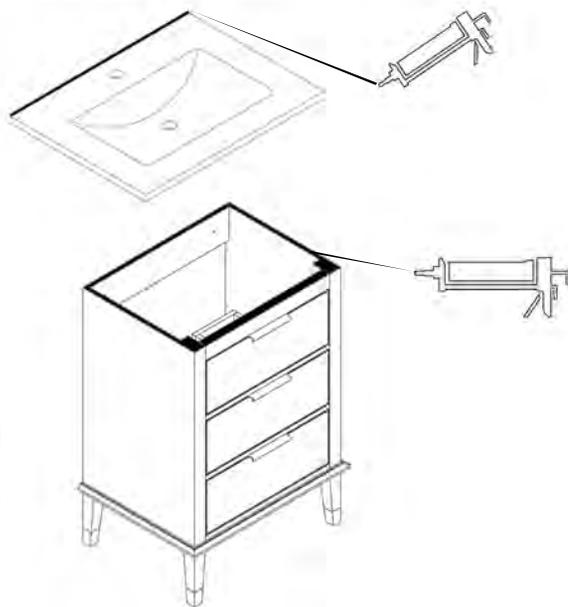

Wait 24 hours before use.



ONE YEAR LIMITED WARRANTY

Swiss Madison® products are made with quality materials and excellent craftsmanship to provide our customers with beautiful, durable, long-lasting products. Should there be any defects in materials or craftsmanship under regular use that are discovered within the first year of installation, Swiss Madison® will provide replacement parts at no charge, or at its discretion, replace any product or part of the product that is deemed defective, under normal installation, use, service or maintenance. This warranty applies only to the original purchaser. Proof of purchase will be required in the instance of a claim.

Swiss Madison® recommends all installations of Swiss Madison® products to be conducted by a licensed, professional plumber or contractor. Swiss Madison® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to utilize a licensed professional for installation. Swiss Madison® is not responsible for any installation or removal costs.

This One Year Limited Warranty Will Be Voided If:

- The installation recommendations were not followed by the installer
- The product has been moved from its initial place of installation
- The product has in any way been modified from its packaged state
- The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accidents, or other damages, etc.

Swiss Madison® makes no implication that its products comply with any local building or plumbing codes. It is the consumer's responsibility and obligation to determine local code compliance prior to and during installation. This warranty extends only to the original purchaser and first consumer.

Swiss Madison® is not responsible for any special, incidental or consequential damages associated with the installation, replacement, return or use of the original purchaser's product. This includes, but is not limited to: freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with 'professionals' or 'experts', investigations, audits, analyses, attorneys and any other professional/hired services).

The Swiss Madison® warranty is a comprehensive and explicit limit of liability. All items not disclosed within the warranty are not addressable within the responsibility of Swiss Madison®. Certain states have variances regarding implied warranties; in those situations, we remain fully compliant.

**If you have any questions or concerns, please contact us directly at
1-434-MADISON (623-4766)**

 **WARNING:** Contents of your order may contain sharp and possibly other harmful pieces and may cause hazard to children and adults. Swiss Madison® is not responsible in any way for personal damages.