

# WOLVERINE BRASS, INC.


## ESSENCE SINGLE LEVER KITCHEN FAUCETS




LESS SPRAY  
85060



WITH SPRAY  
85061  
85064

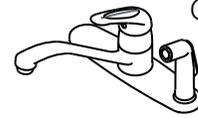


ON-BOARD SPRAY  
85062

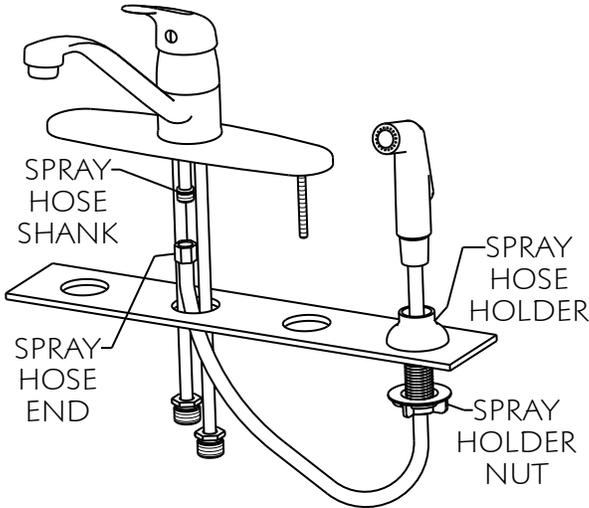

### INSTALLATION INSTRUCTIONS:

- 1.) MOUNT SPRAY HOSE HOLDER ONTO SINK AND SECURE.
- 2.) INSERT SPRAY HOSE INTO SPRAY HOSE HOLDER.
- 3.) INSERT FAUCET SUPPLY CONNECTION ADAPTERS THROUGH CENTER MOUNTING HOLE OF SINK.
- 4.) FROM BOTTOM SIDE OF SINK, INSERT END OF SPRAY HOSE THROUGH CENTER SINK HOLE IN FRONT OF SUPPLY CONNECTION ADAPTERS.
- 5.) ASSEMBLE SPRAY HOSE END TO FAUCET SPRAY HOSE SHANK AND TIGHTEN.

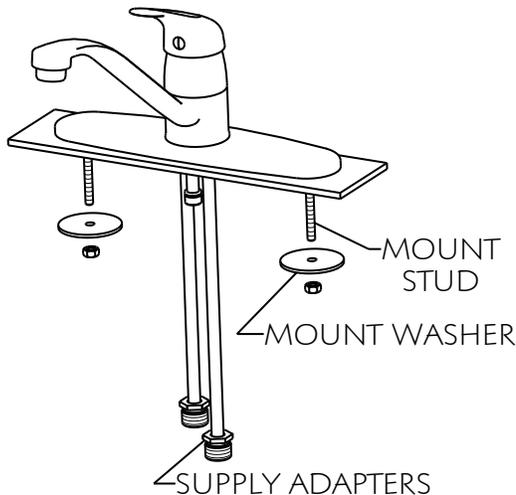

(MUST HOLD EACH ADAPTER HEX WITH WRENCH WHILE CONNECTING SUPPLIES.)

- 6.) POSITION FAUCET IN SINK. ASSEMBLE MOUNT WASHERS AND NUTS ONTO FAUCET MOUNT STUDS AND TIGHTEN.
- 7.) CONNECT SUPPLY LINES TO FAUCET ADAPTERS AND TIGHTEN. CAUTION: A WRENCH OR PLIERS MUST BE USED TO HOLD HEX ON EACH SUPPLY ADAPTER WHILE TIGHTENING SUPPLY LINE NUTS TO PREVENT DAMAGING THE BRAZED JOINTS OR TUBING.
- 8.) REMOVE SPOUT AERATOR AND FLUSH UNIT THOROUGHLY TO REMOVE ANY LINE TRASH.
- 9.) CHECK ALL CONNECTIONS FOR LEAKS.

### HOT LIMIT STOP ADJUSTMENTS:

THE HOT LIMIT STOP IS A DEVICE THAT IS USED TO LIMIT THE CARTRIDGE TRAVEL TO EXTREME HOT POSITION.

- 1.) REMOVE HANDLE USING 3/32" HEX WRENCH.
- 2.) REMOVE (GRAY) HOT LIMIT ADJUSTMENT RING FROM VALVE CARTRIDGE.
- 3.) TURN VALVE ON AND ADJUST TO MAXIMUM DESIRED WATER TEMPERATURE.
- 4.) REPOSITION GRAY HOT LIMIT RING SO THAT THE RING STOP TOUCHES THE CARTRIDGE STOP. THIS WILL PREVENT THE VALVE STEM FROM ROTATING ANY FURTHER TOWARDS THE FULL HOT POSITION.
- 5.) RE-ASSEMBLE HANDLE.

