

FOR SFM3 FLANGELESS ADAPTER FOR WOOD, STONE, TILE, AND OTHER SOLID CEILINGS

Aculux flangeless adapters are intended to be used only with 3-1/4" Aculux new construction housings and corresponding flangeless trims.

Note: Refer to Chart below to determine the right adapter for a given ceiling thickness.

Catalog Number	Ceiling Thickness
SFM3/087(B,W)	1/2" - 7/8"
SFM3/125(B,W)	7/8" - 1-1/4"
SFM3/163(B,W)	1-1/4" - 1-5/8"

Specify Finish:

B = Black

W = White (may be field painted)

Installation Steps

Step 1. Install Aculux new construction housing per the instruction sheet shipped with the recessed housing. Install ceiling with a precise cutout measuring exactly 4.145" diameter (The bottom surface of flangeless adapter can be used as a template).

Step 2. Slide adapter into the opening until it is flush with the ceiling. Secure it to housing by tightening three set-screws, as shown in Figure 1.

Step 3. For SFM3/087 skip to Step.7. For SFM3/125 and SFM3/163, on the trim, remove screws and torsion spring brackets from trim as shown in Figures 2-A or 2-B.

Step 4. Remove black torsion springs from brackets. Discard black torsion springs.

Step 5. Attach spring extension assemblies to the torsion spring brackets as shown in Figures 3-A or 3-B.

Step 6. Reattach torsion spring brackets to trim using the screws removed in step 2.

Step 7. Aim fixture, and install trim.

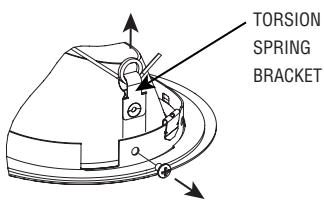
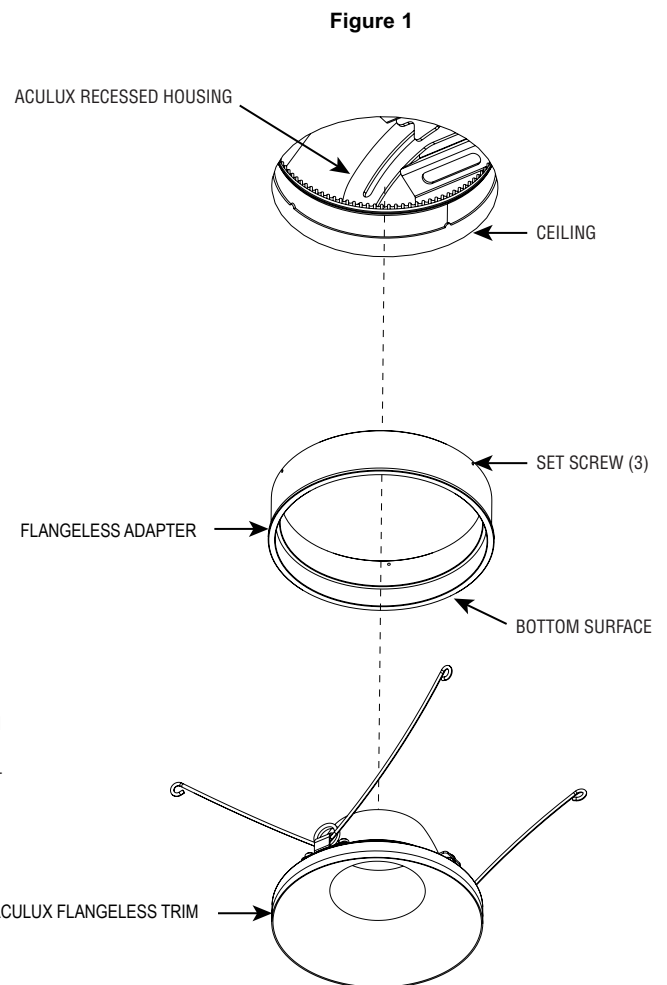


Figure 2-A

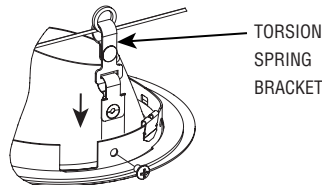


Figure 3-A

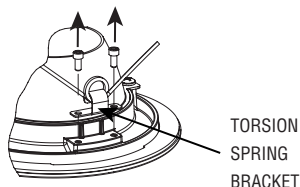


Figure 2-B

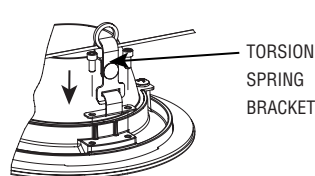


Figure 3-B

Product Services Phone (888) 387-2212