


38套 1608016B ATLANTIS + 3079套9230316补件包装柜图


Top view




Side view

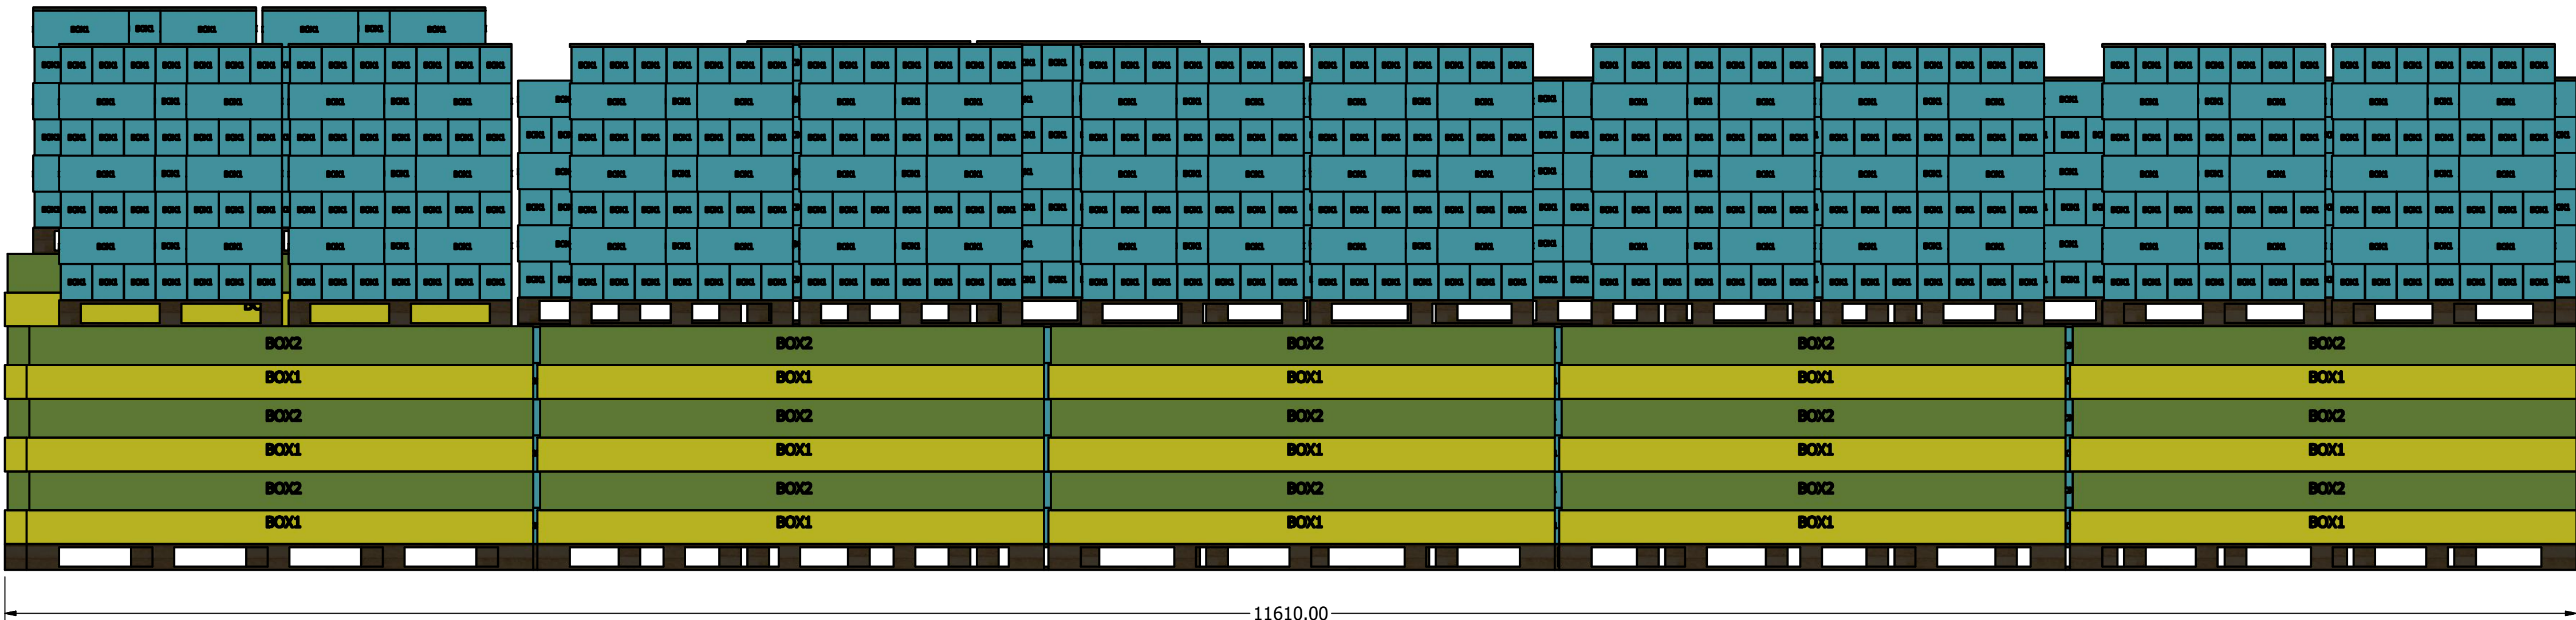

End view

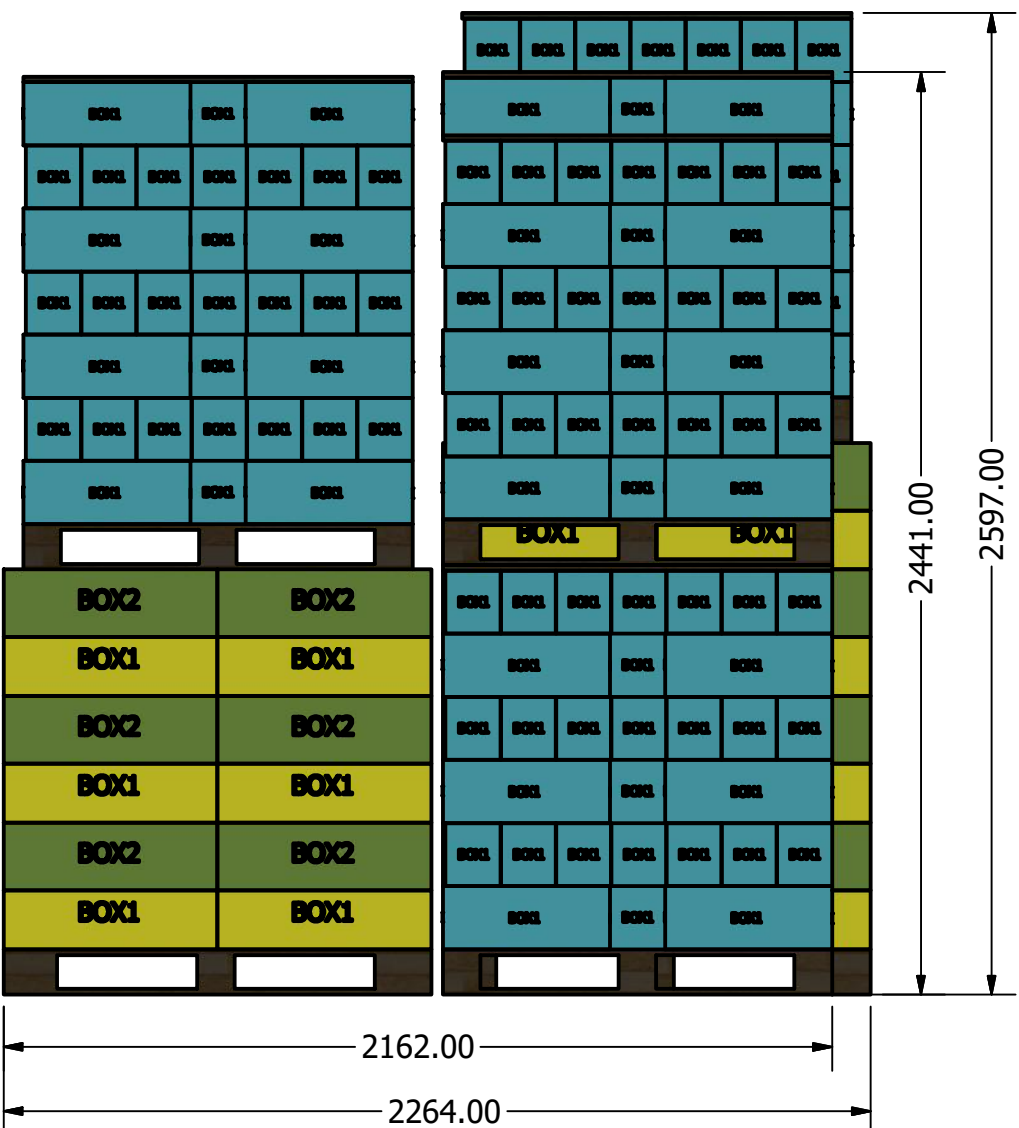


DRAWN Rudy		TITLE		
CHECKED				
QA				
MFG				
APPROVED				
		SIZE D	DWG NO	REV
		SCALE 1 : 50	SHEET 1 OF 1	

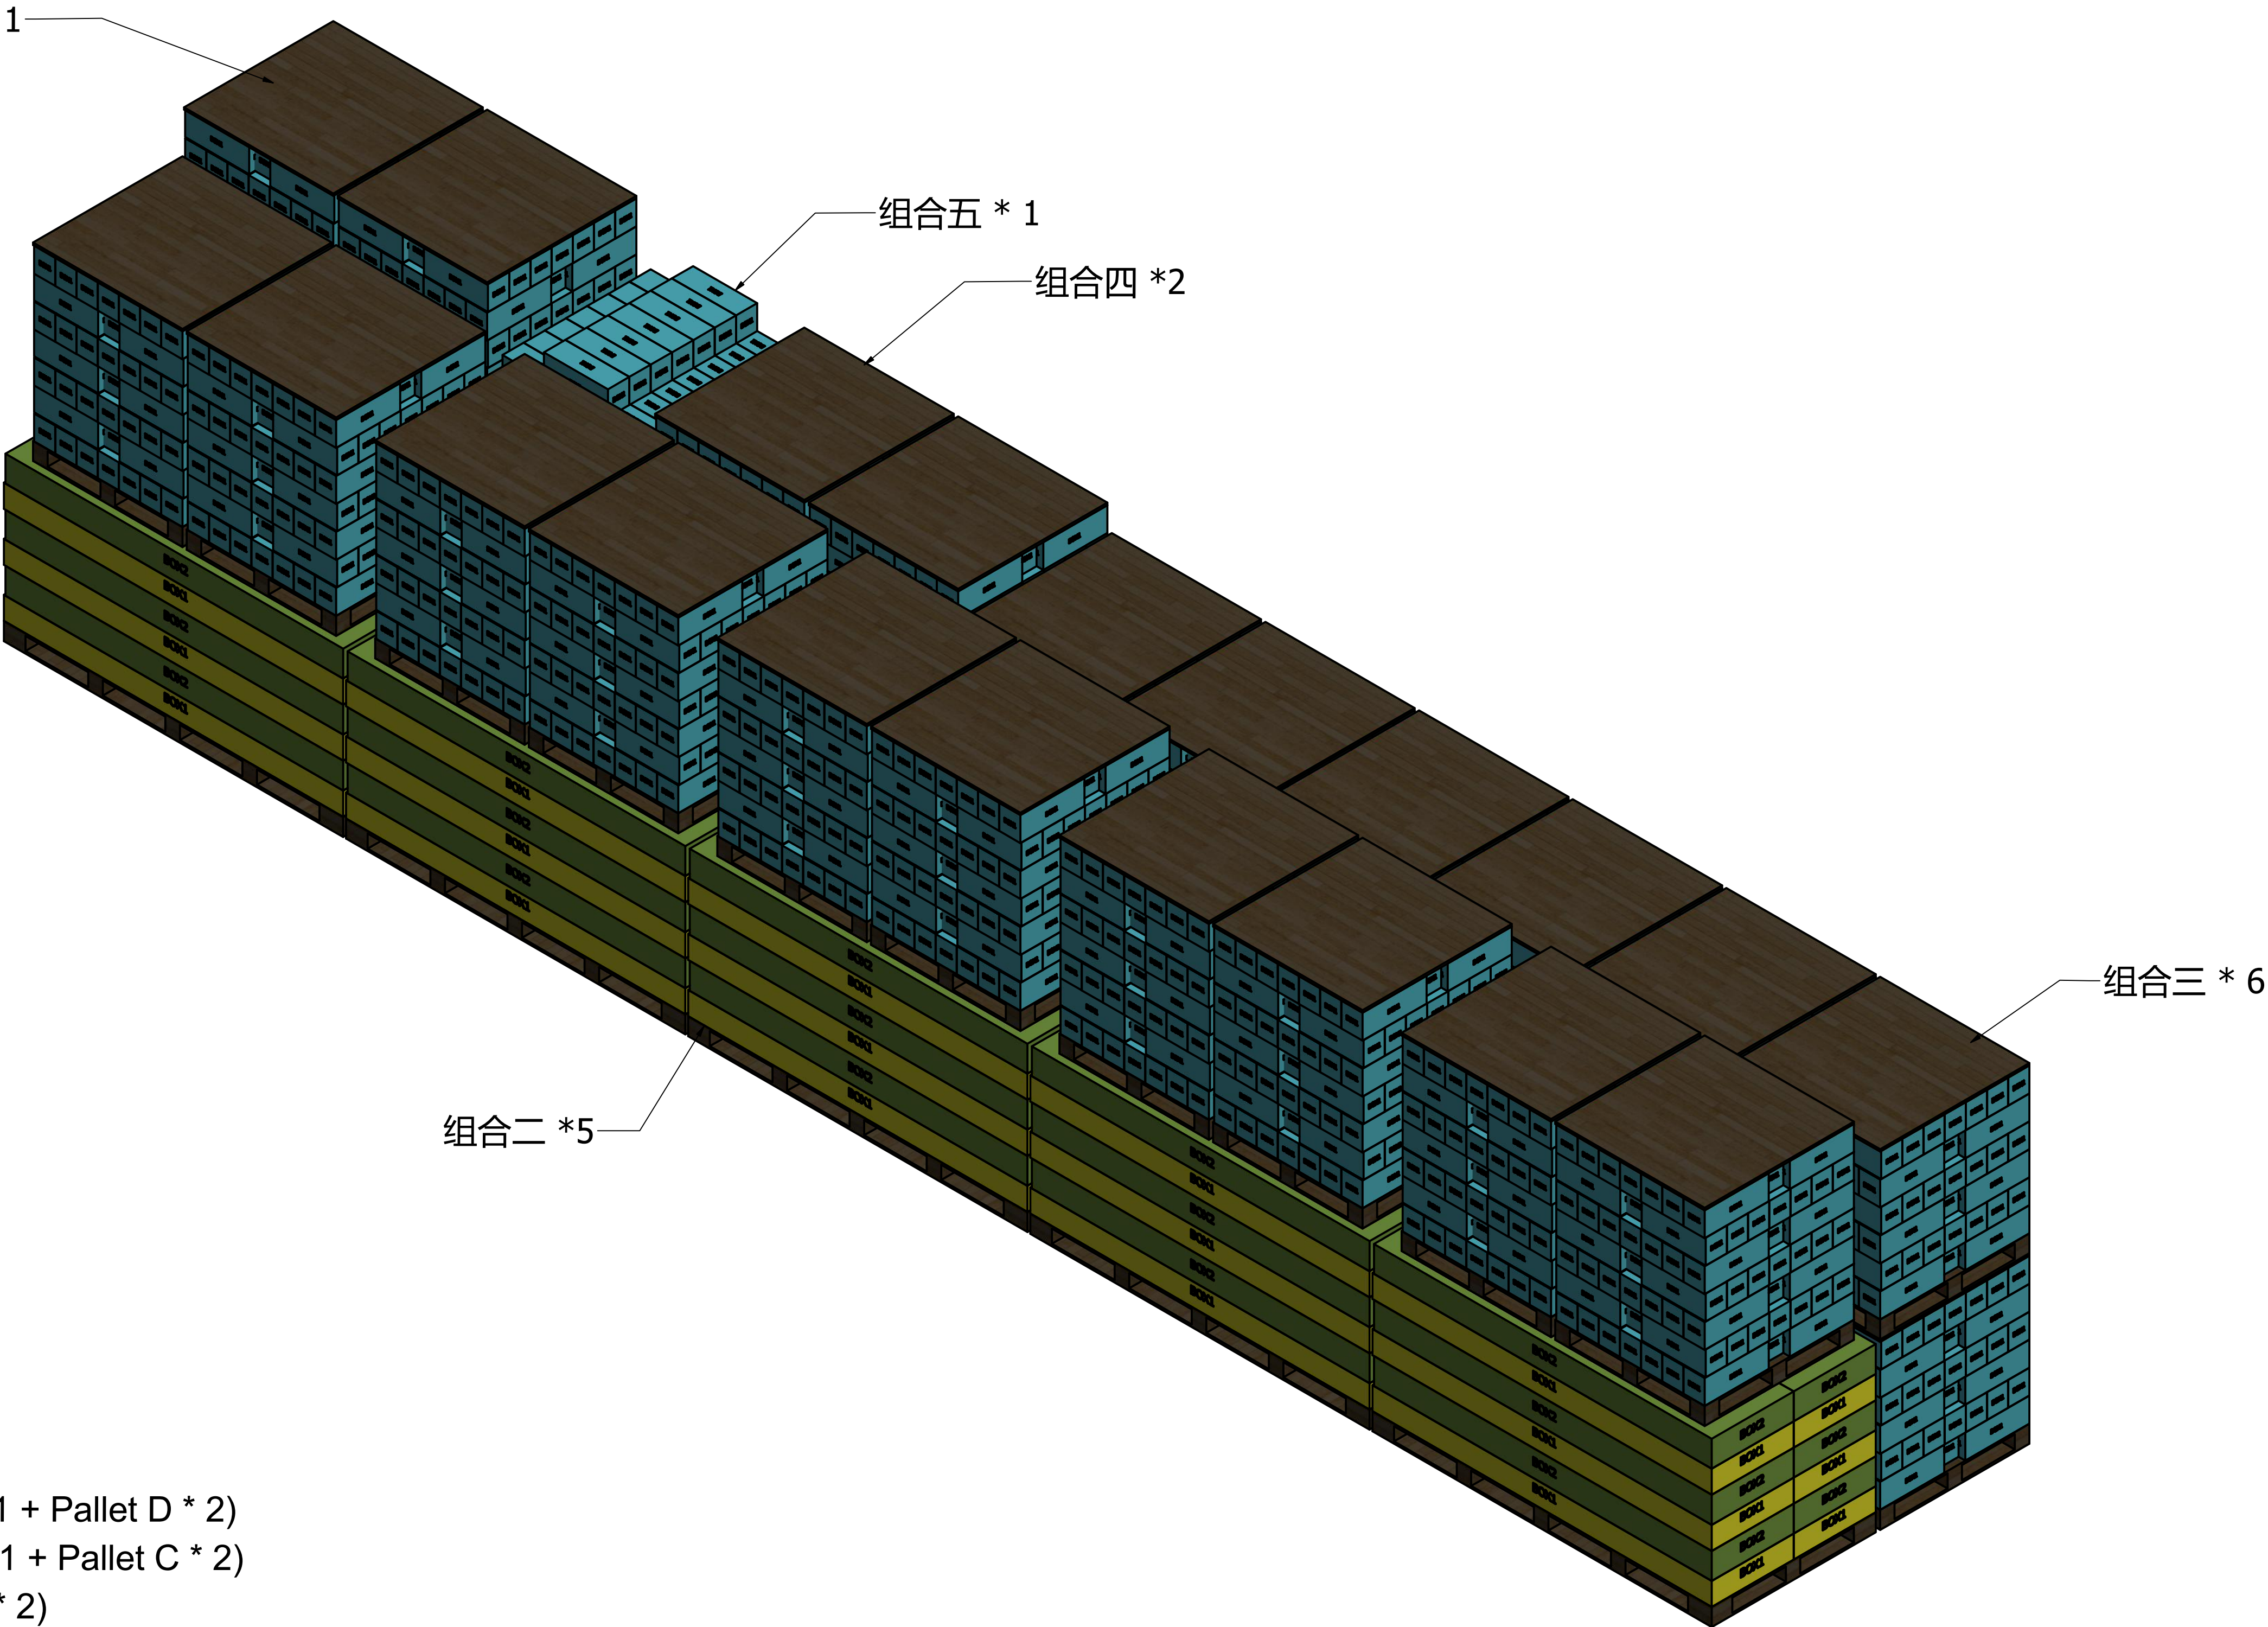


- 组合一 * 1 (组合一= pallet A * 1 + Pallet D * 2)
- 组合二 * 5 (组合二 = pallet B * 1 + Pallet C * 2)
- 组合三 * 6 (组合三 = Pallet D * 2)
- 组合四 * 2 (组合四 = pallet C * 1 + Pallet D * 1)
- 组合五 * 1 (组合五 = pallet D * 1 + Pallet E * 1)
- Pallet A * 1
- Pallet B * 5
- Pallet C * 12
- Pallet D * 17
- Pallet E * 1

DRAWN Rudy		TITLE		
CHECKED				
QA				
MFG				
APPROVED				
		SIZE D	DWG NO	REV
		SCALE 1 : 20	SHEET 1 OF 1	

为避免倒托，上下托堆叠好之后，上下托之间必须使用塑钢带进行固定。

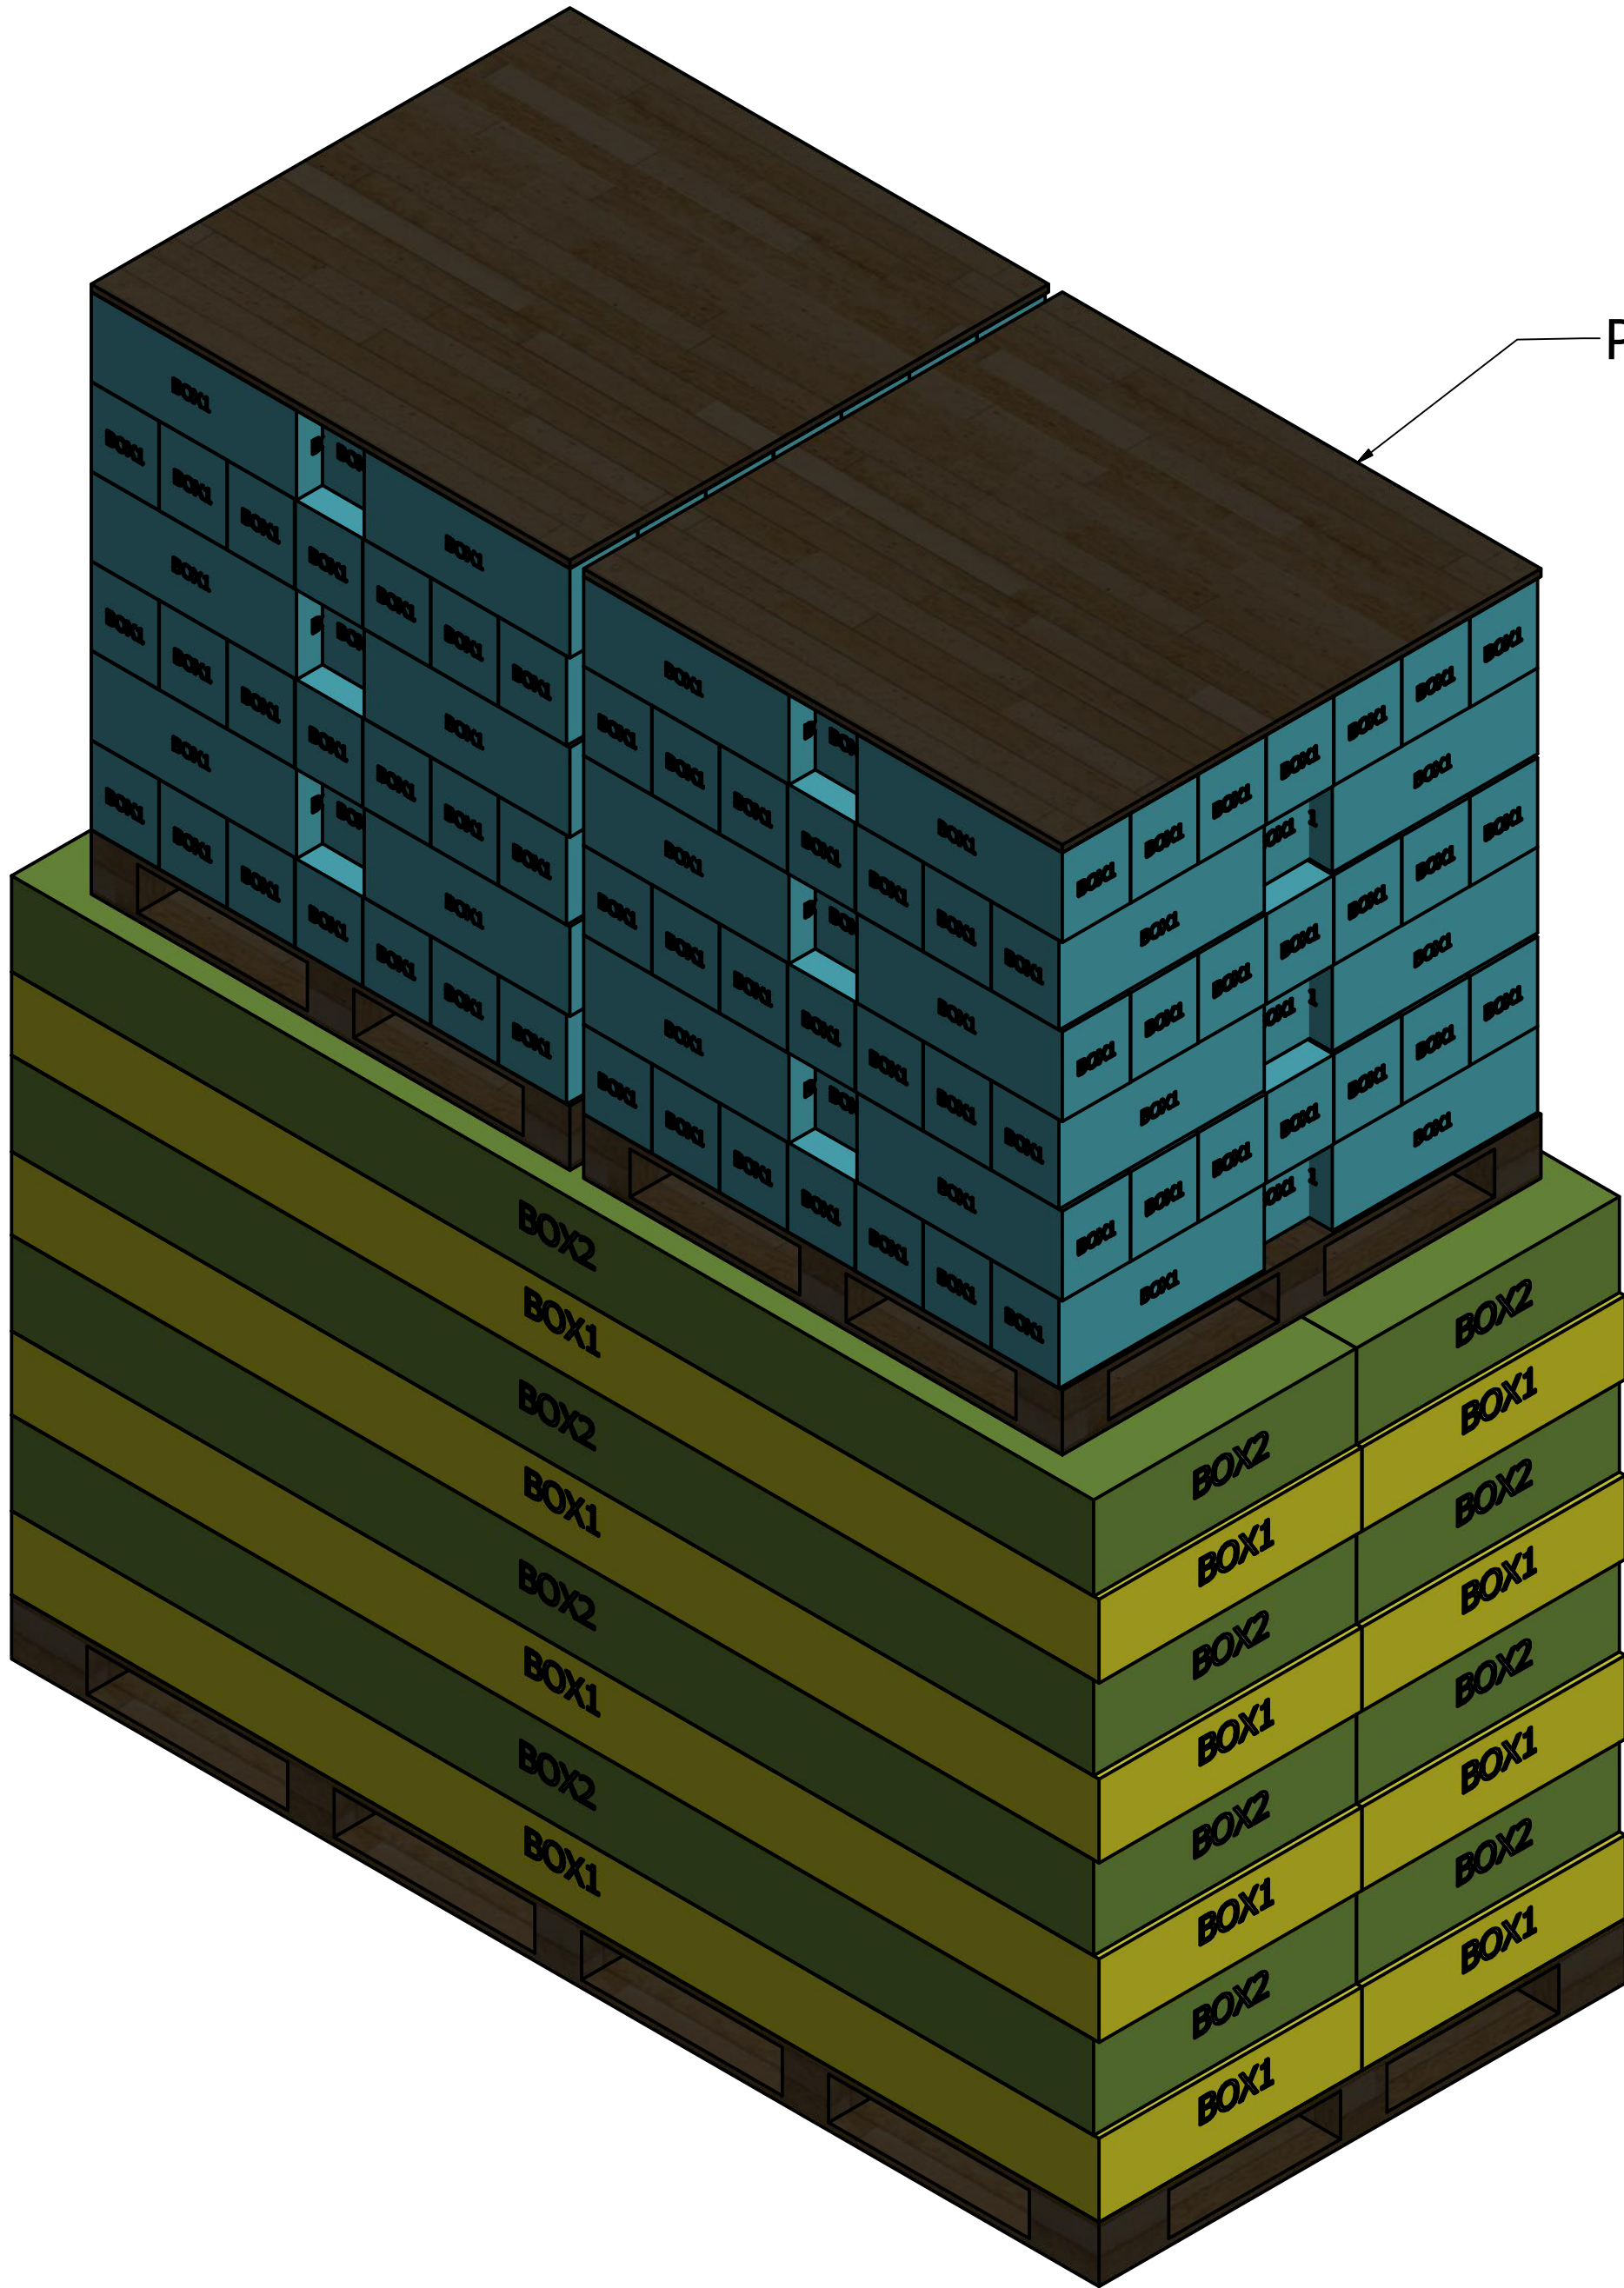


组合一 (Pallet A *1 + Pallet D *2)

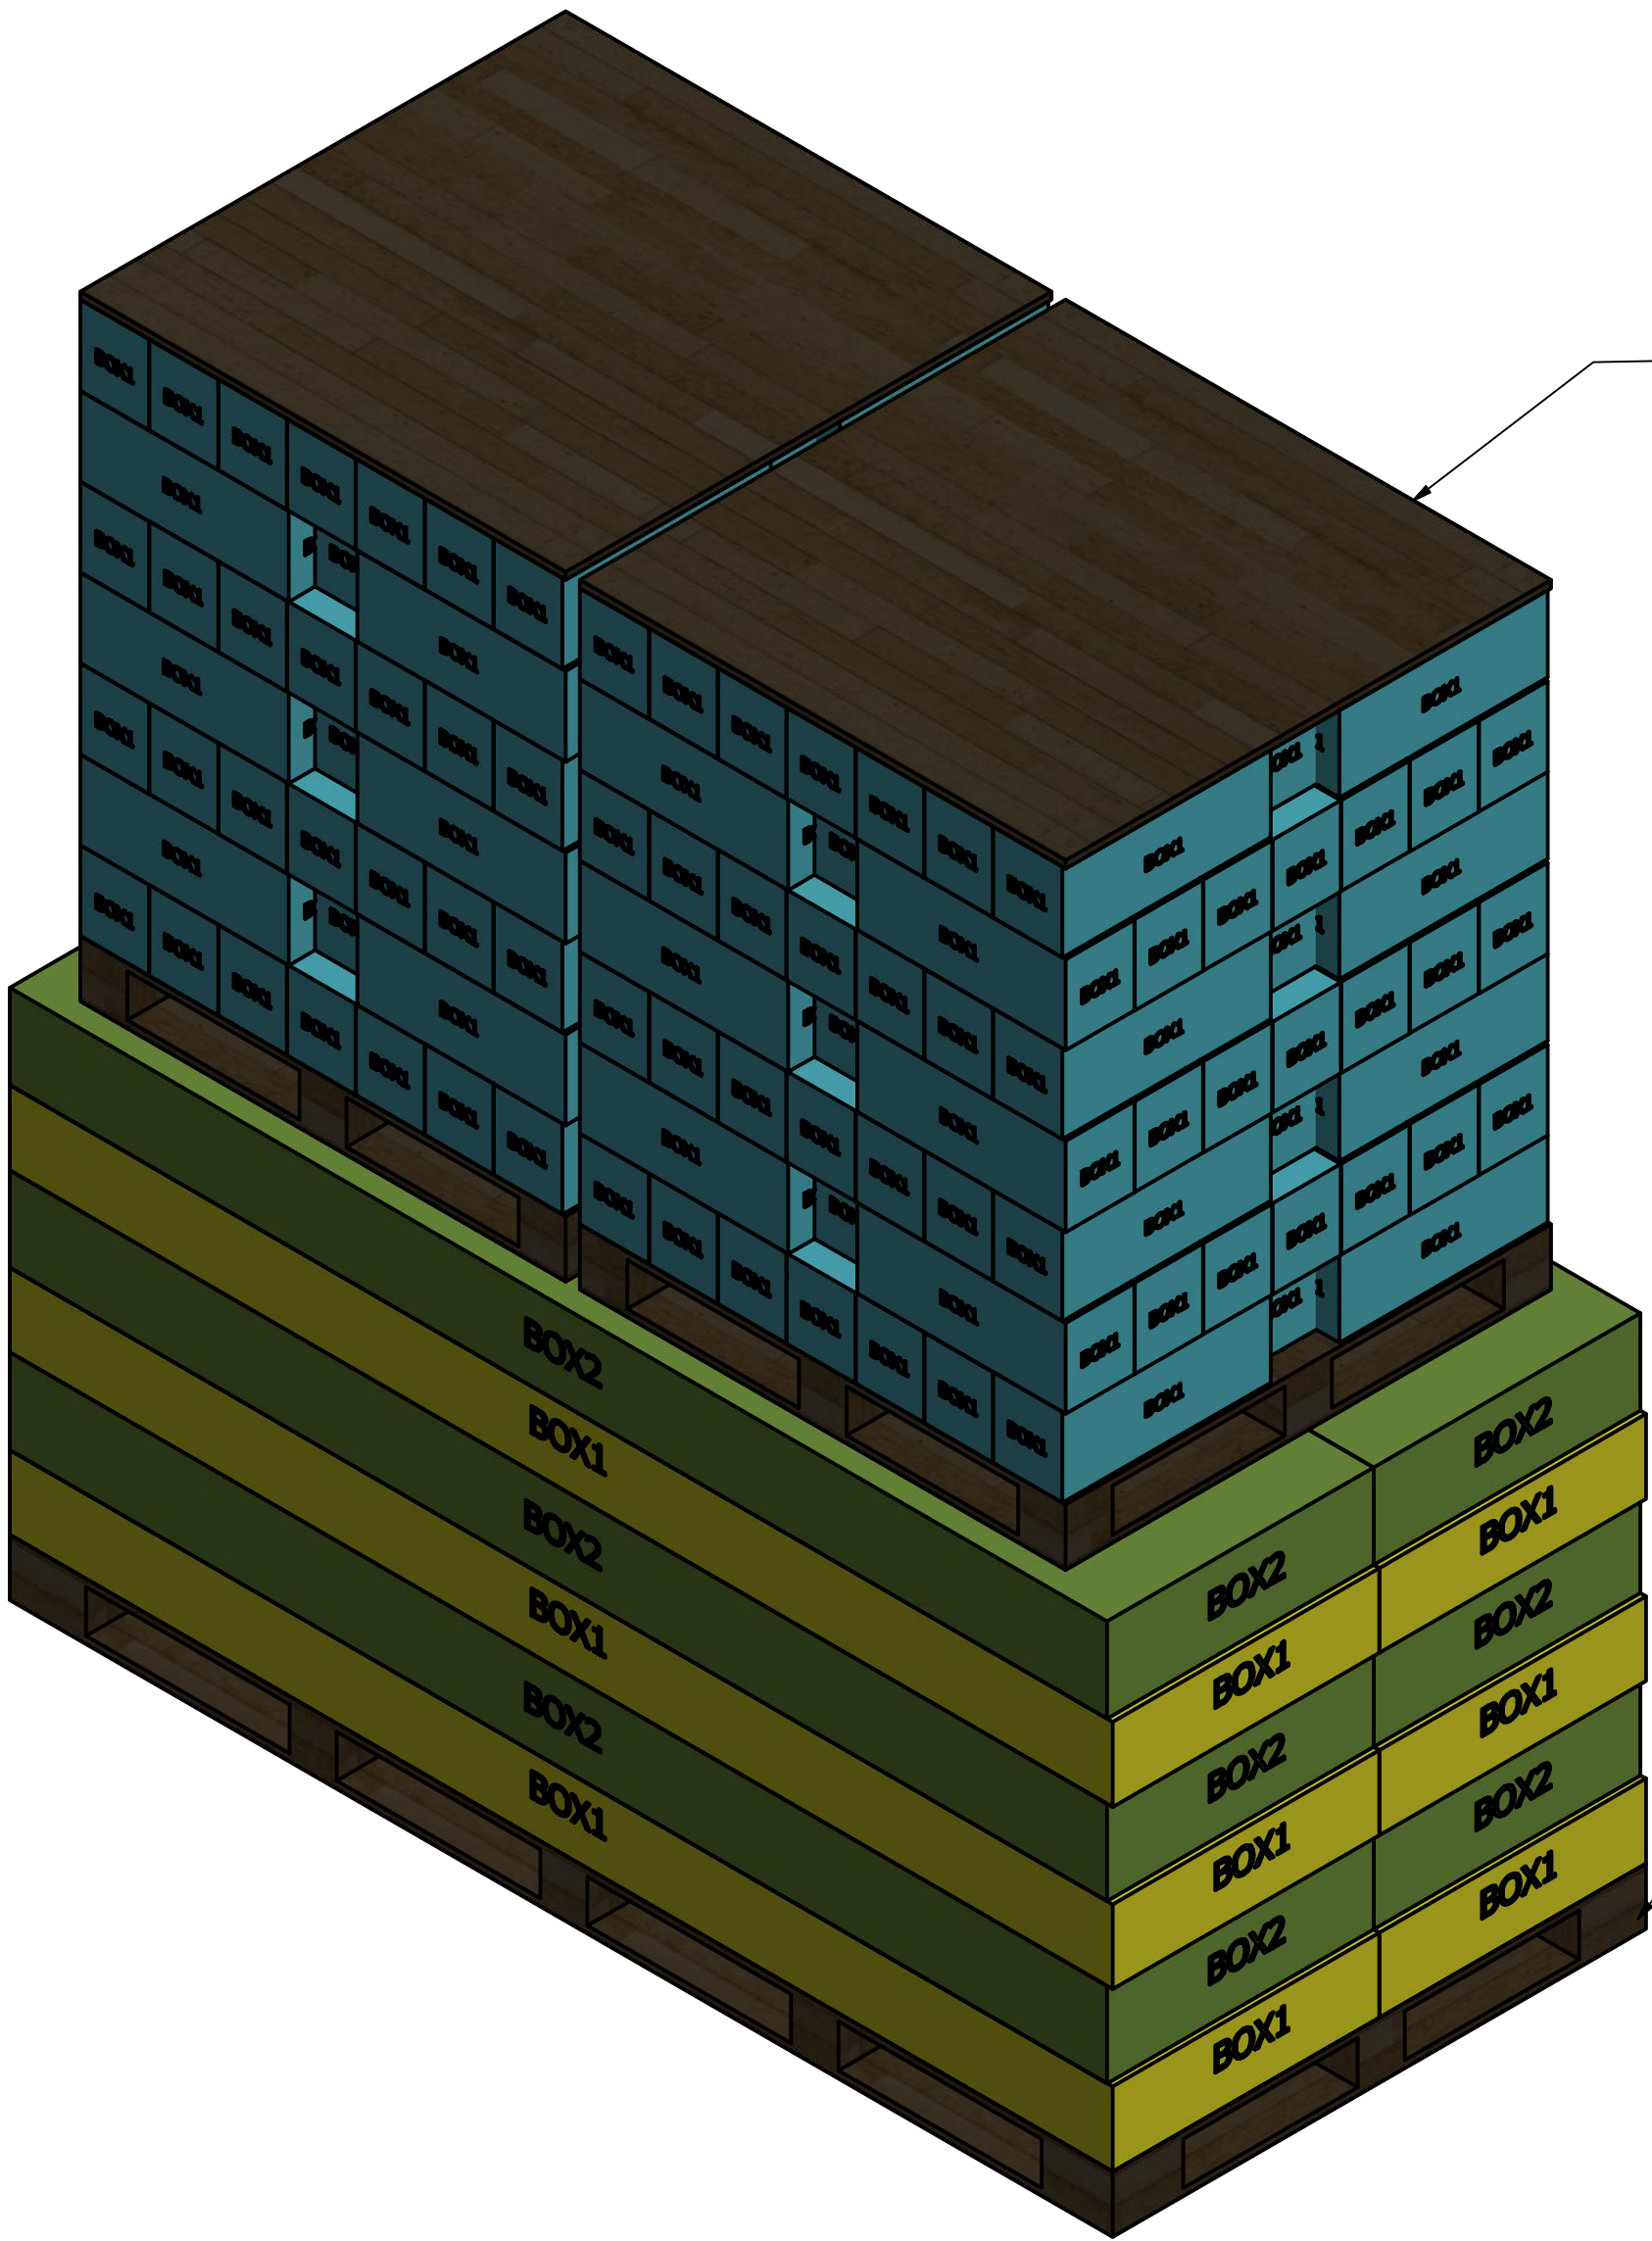


组合二 (Pallet B *1 + Pallet C *2)

DRAWN Rudy		TITLE		
CHECKED				
QA				
MFG				
APPROVED		SIZE D	DWG NO	REV
		SCALE 0.09 : 1	SHEET 1 OF 1	


为避免倒托，上下托堆叠好之后，这三种组合上下托之间必须使用塑钢带进行固定。

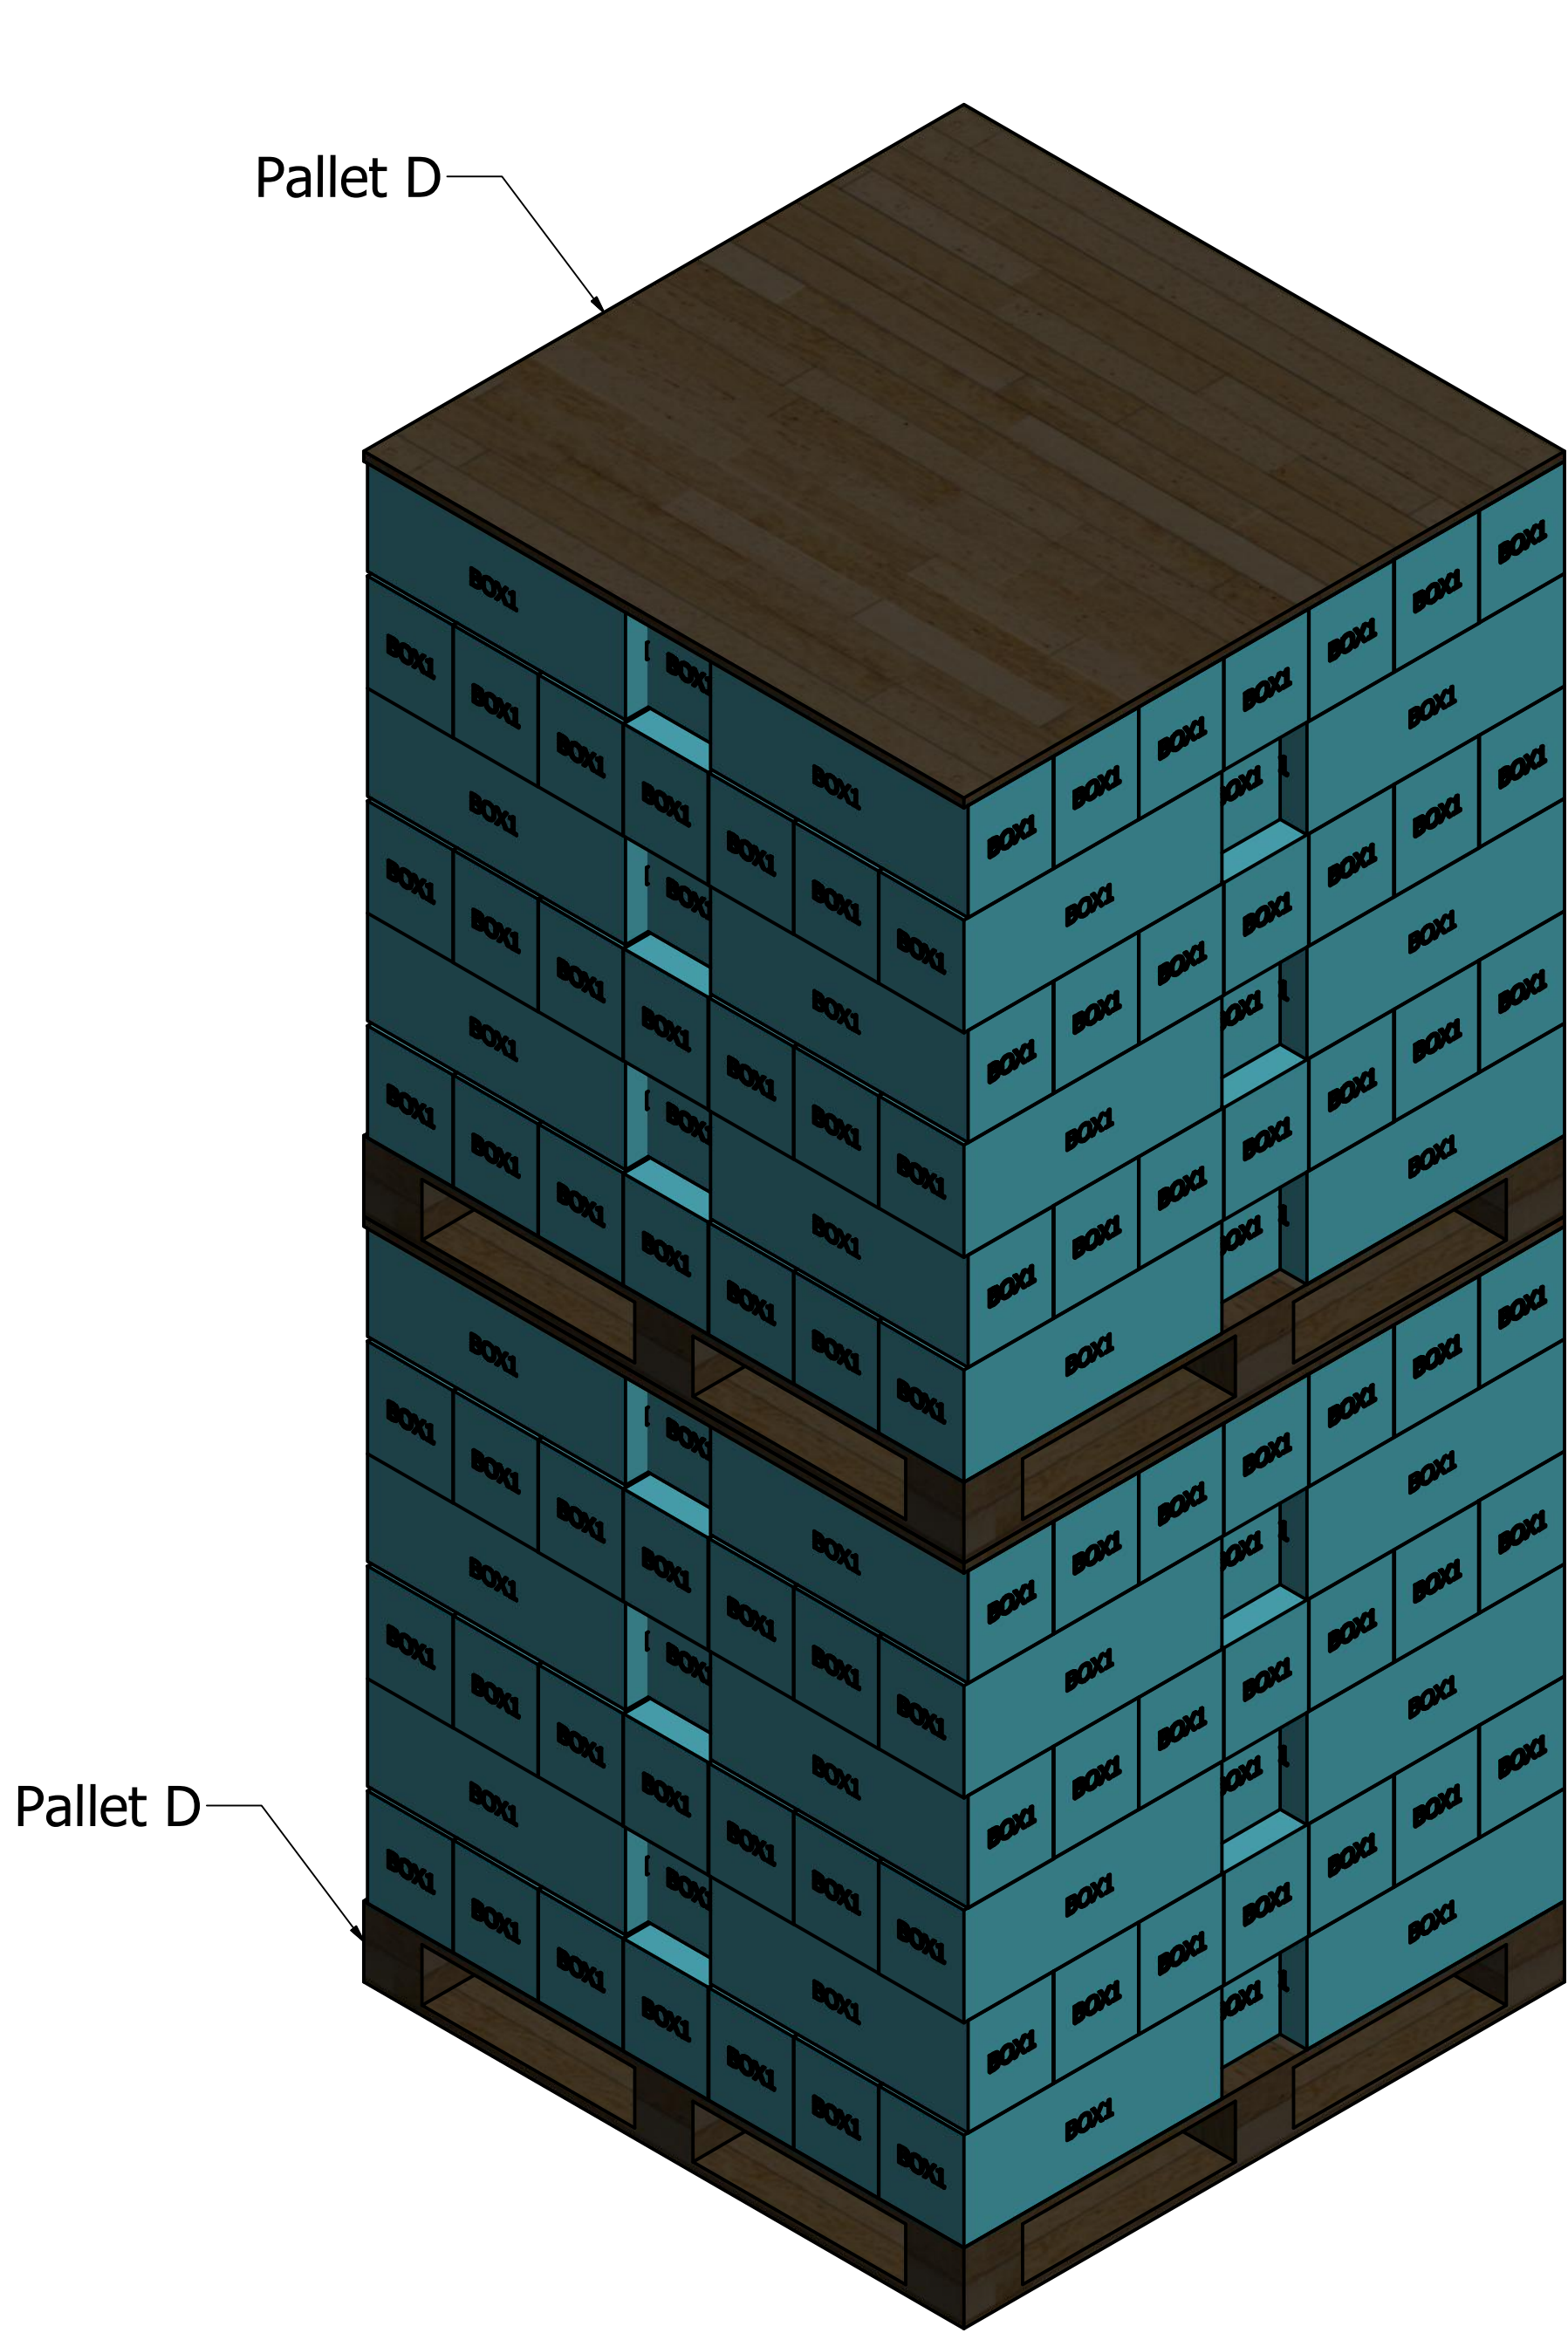

组合三 (Pallet D *2)

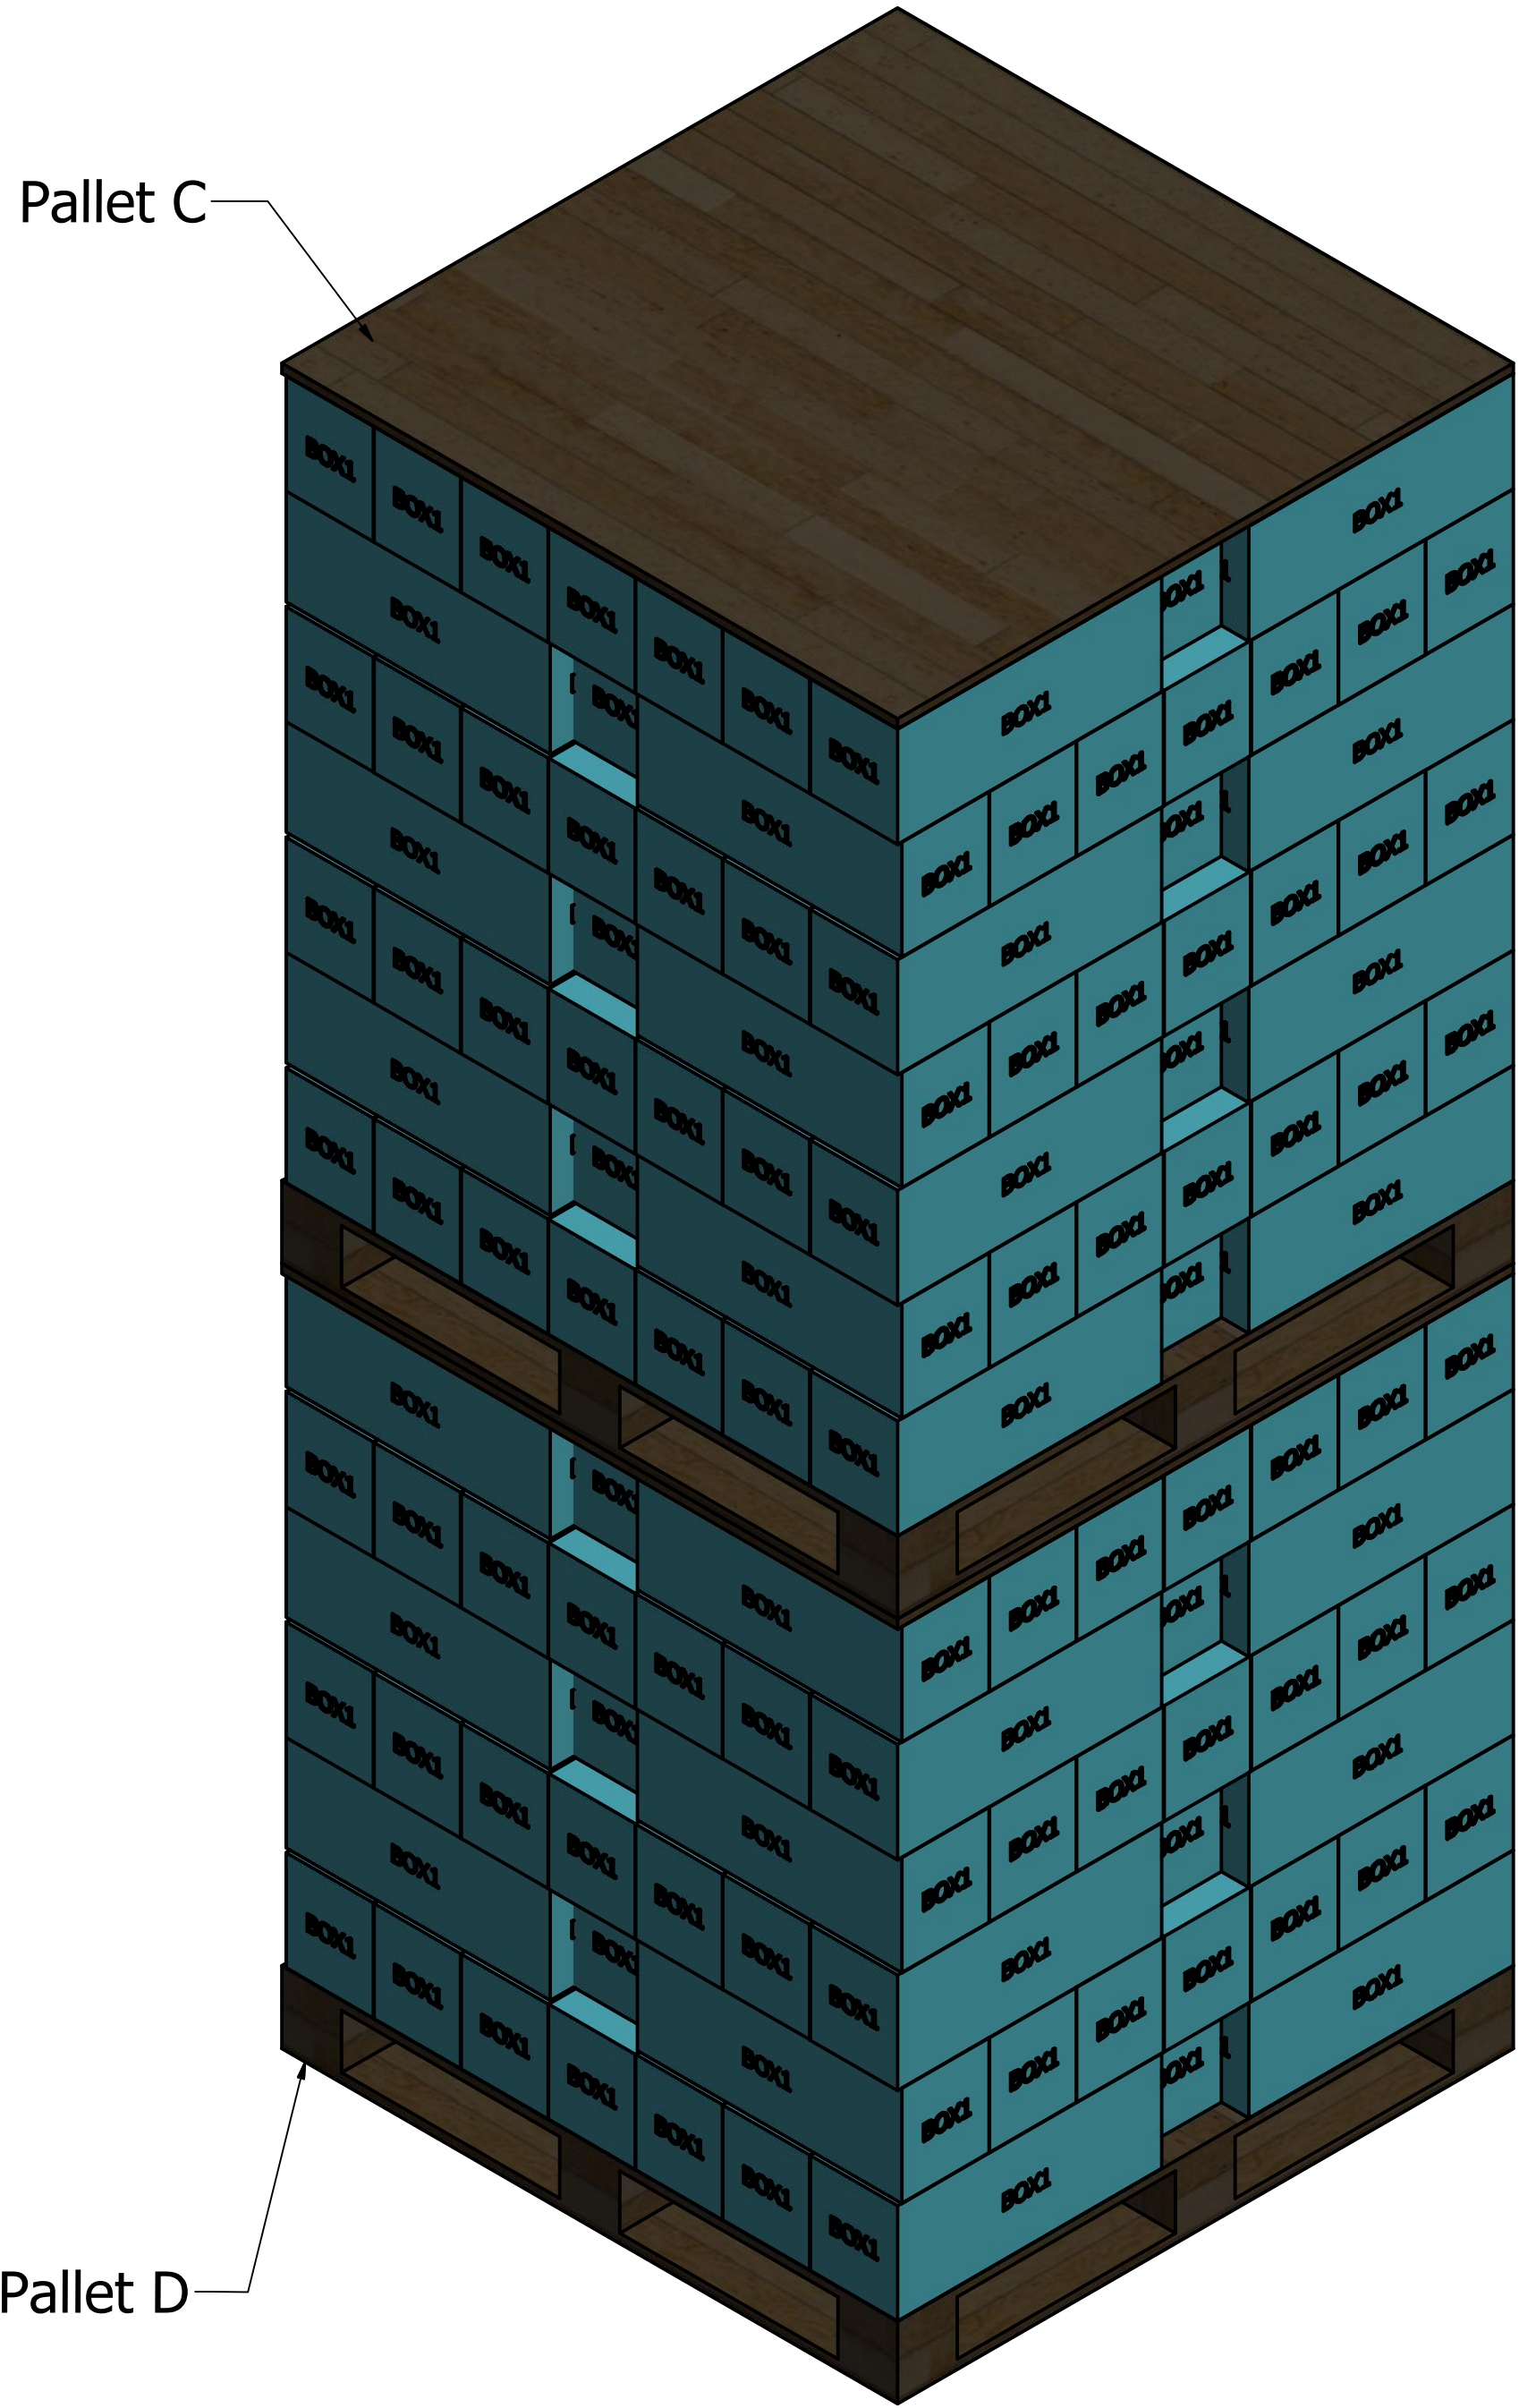


组合四 (Pallet C *1 + Pallet D *1)

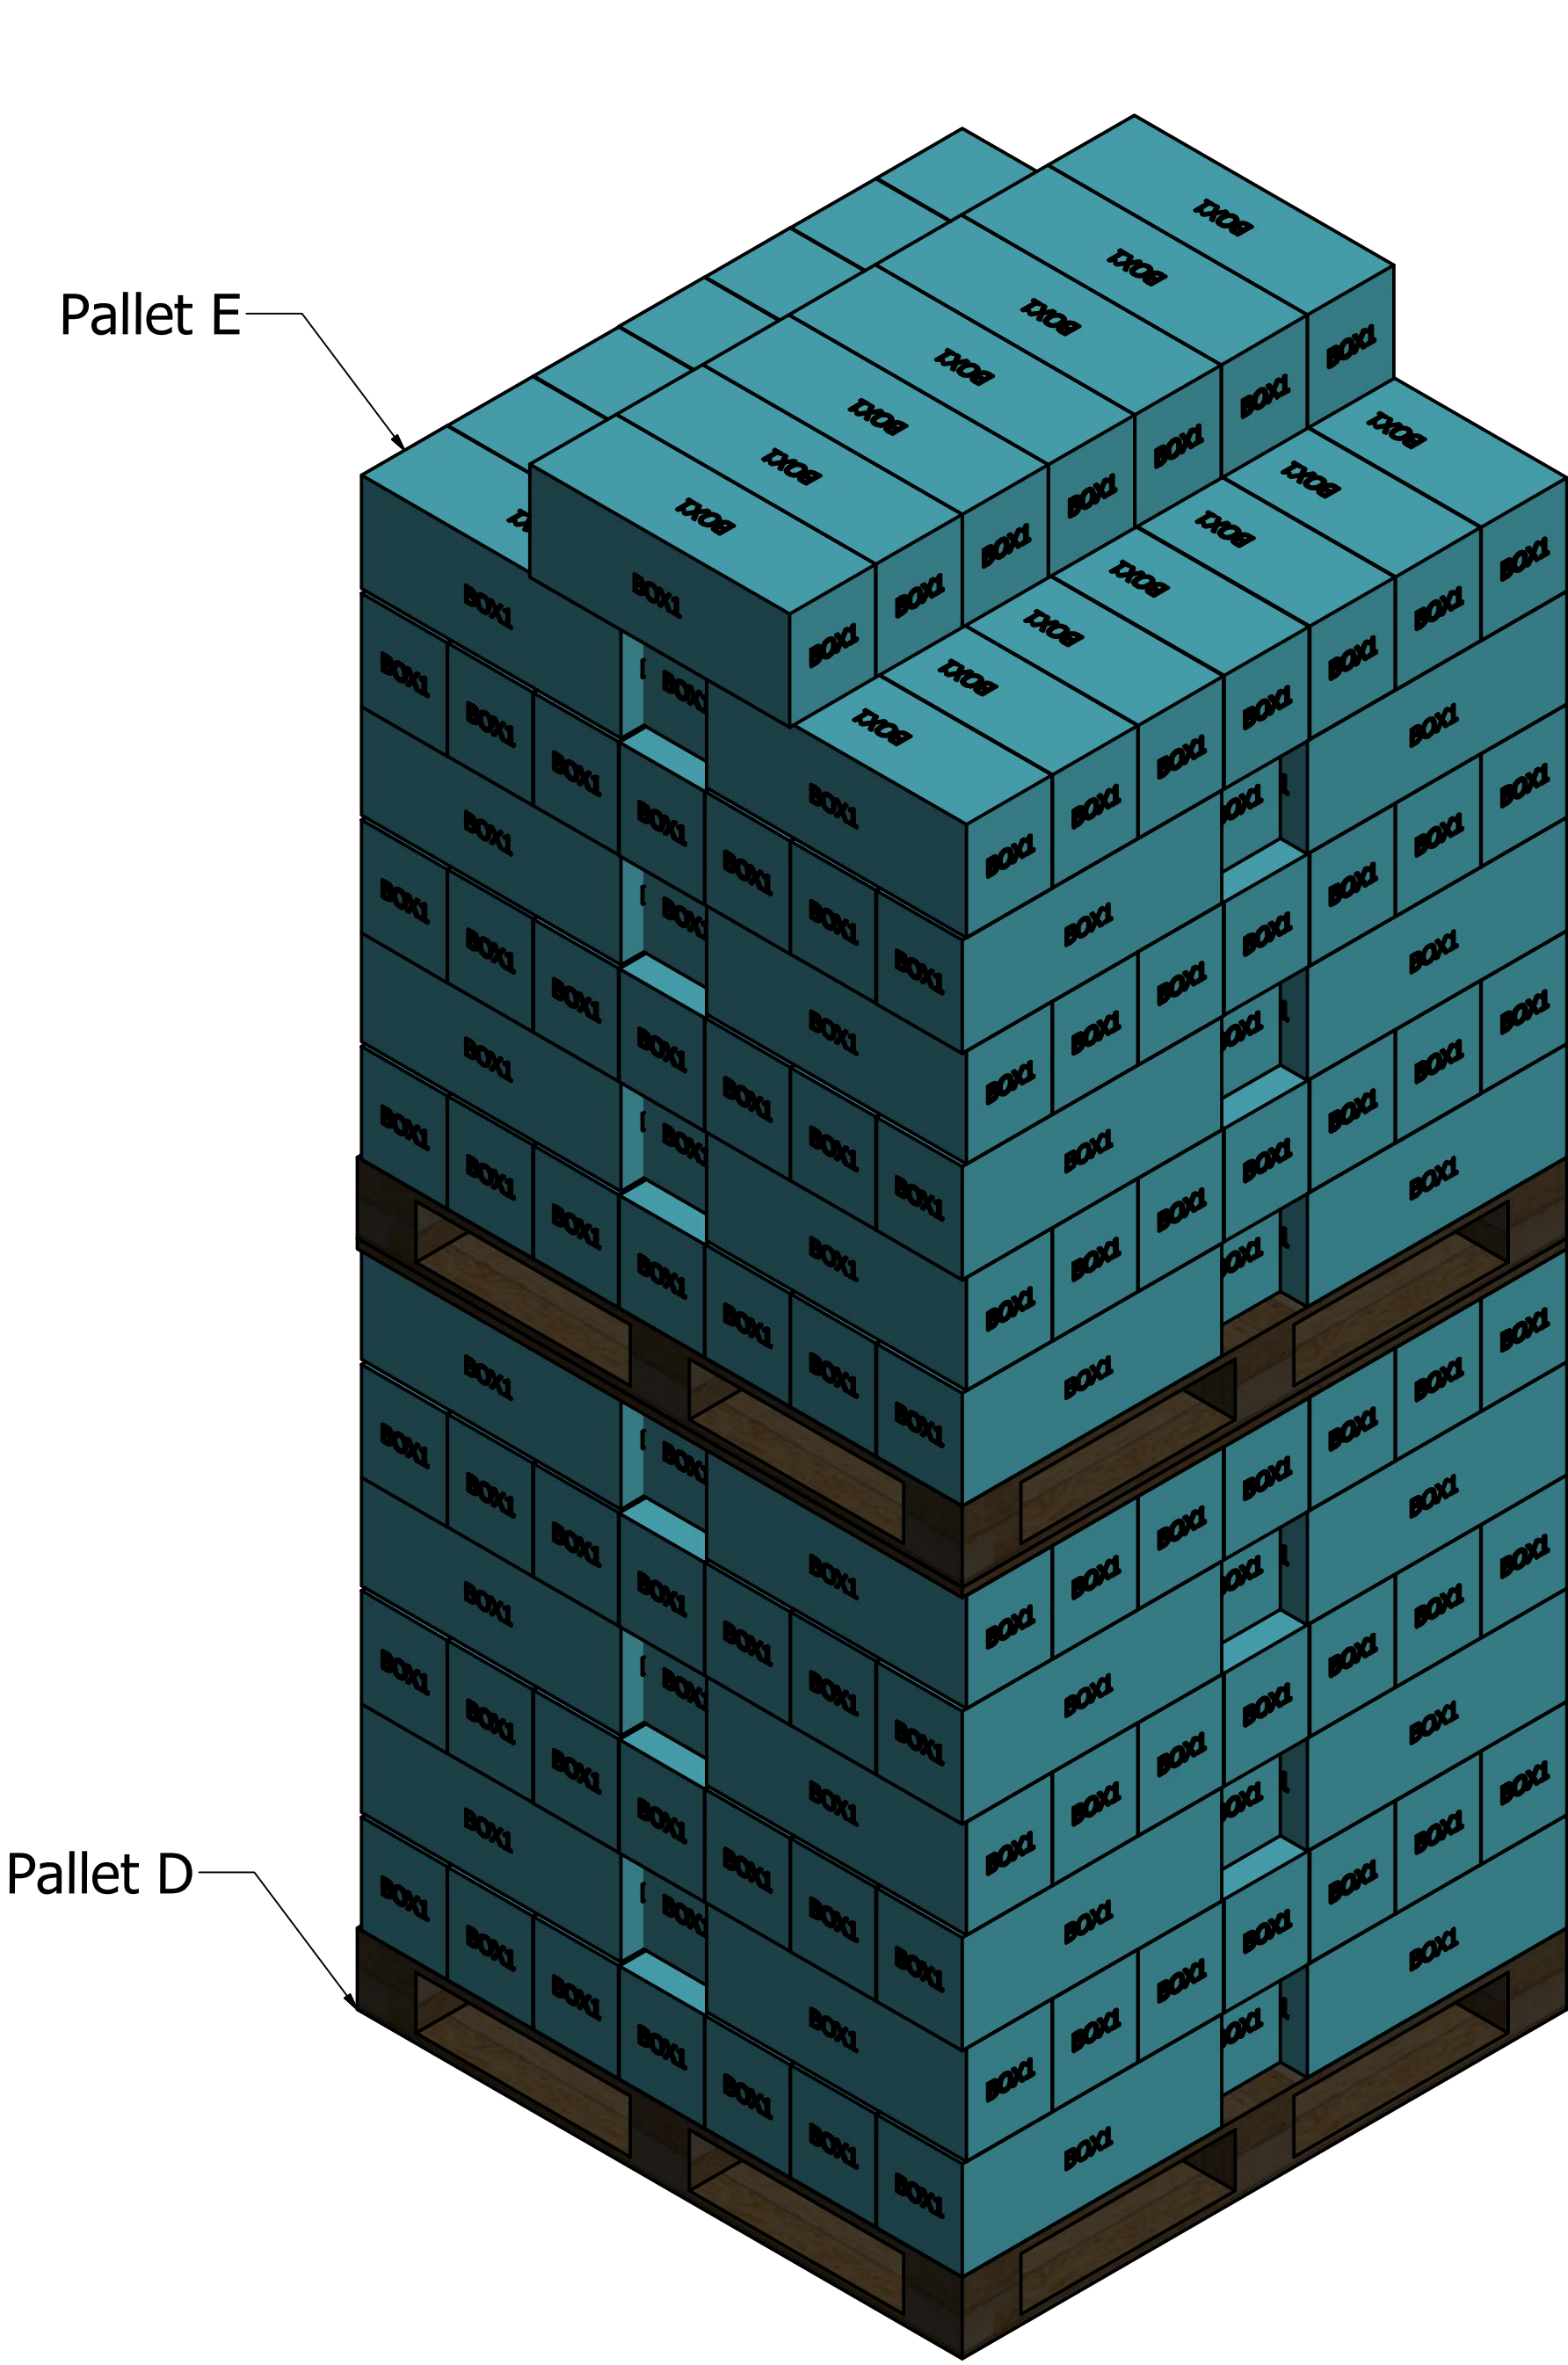



组合五 (Pallet D *1 + Pallet E *1)

DRAWN	lenovo	2023/10/8	TITLE		
CHECKED					
QA					
MFG					
APPROVED			SIZE		
			SCALE	DWG NO	REV
			1 / 8	Pallet C	
					SHEET 1 OF 1

Pallet A (1608016B * 8套)

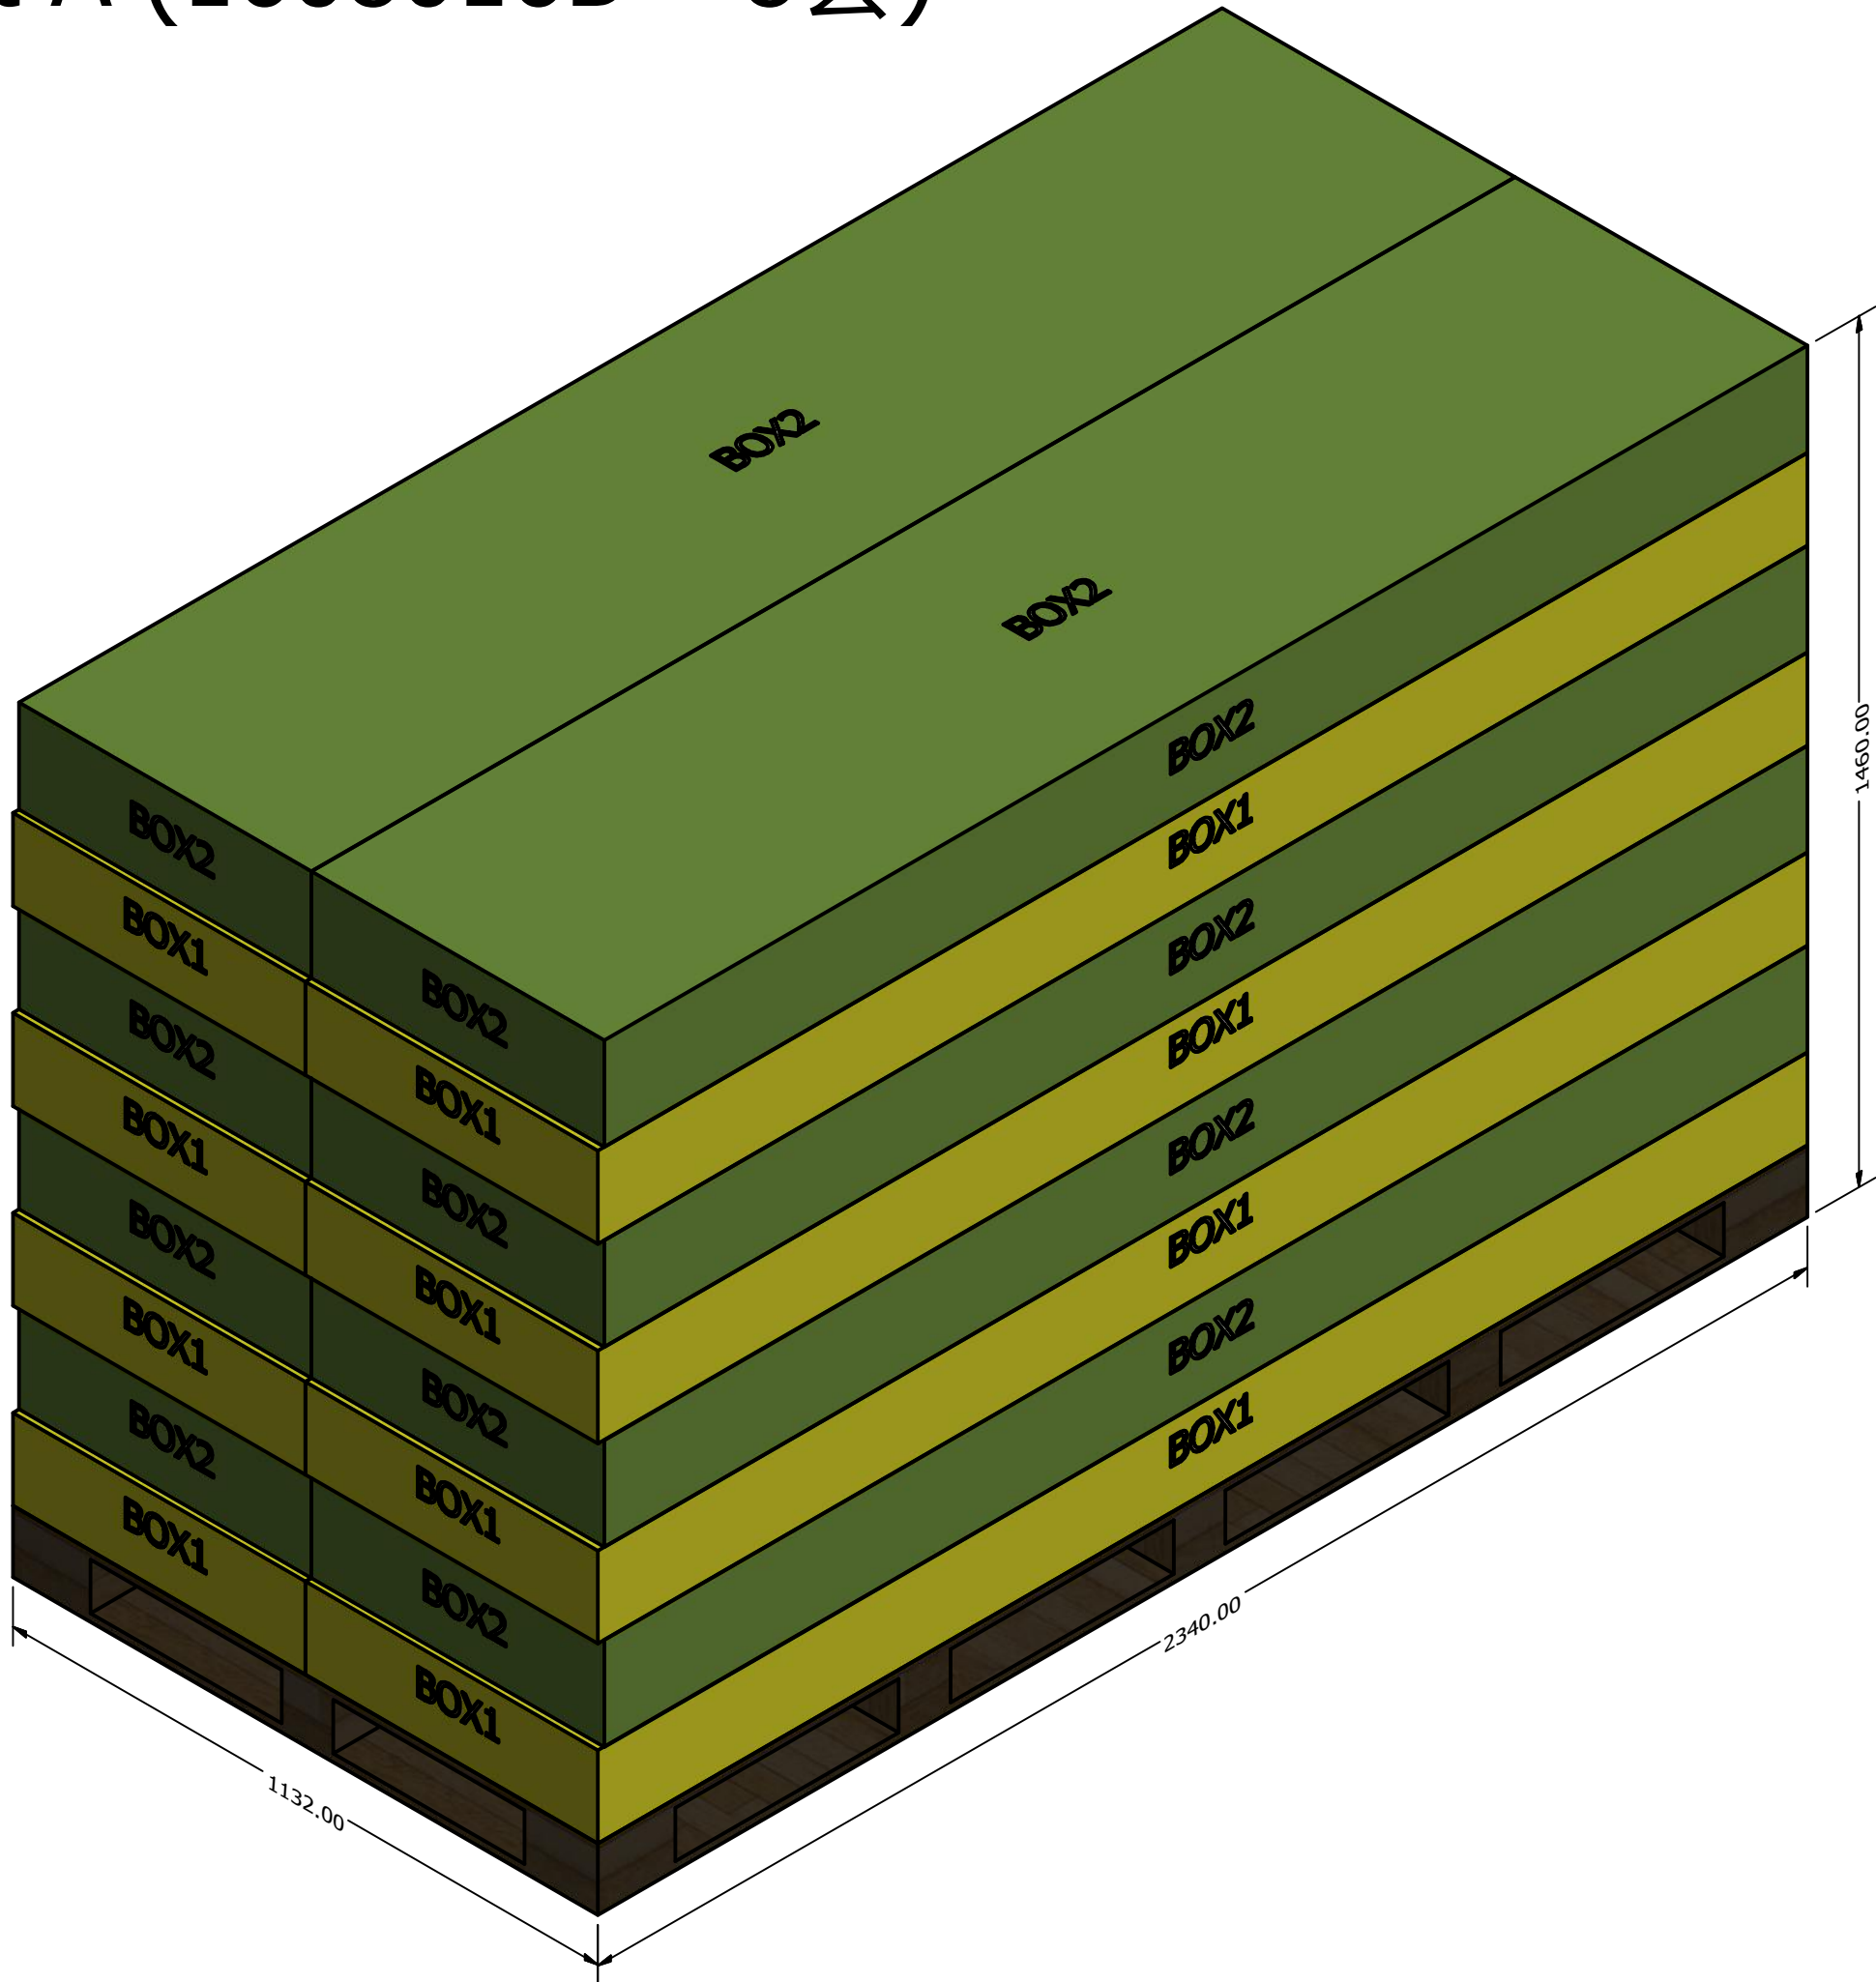


Pallet B (1608016B * 6套)

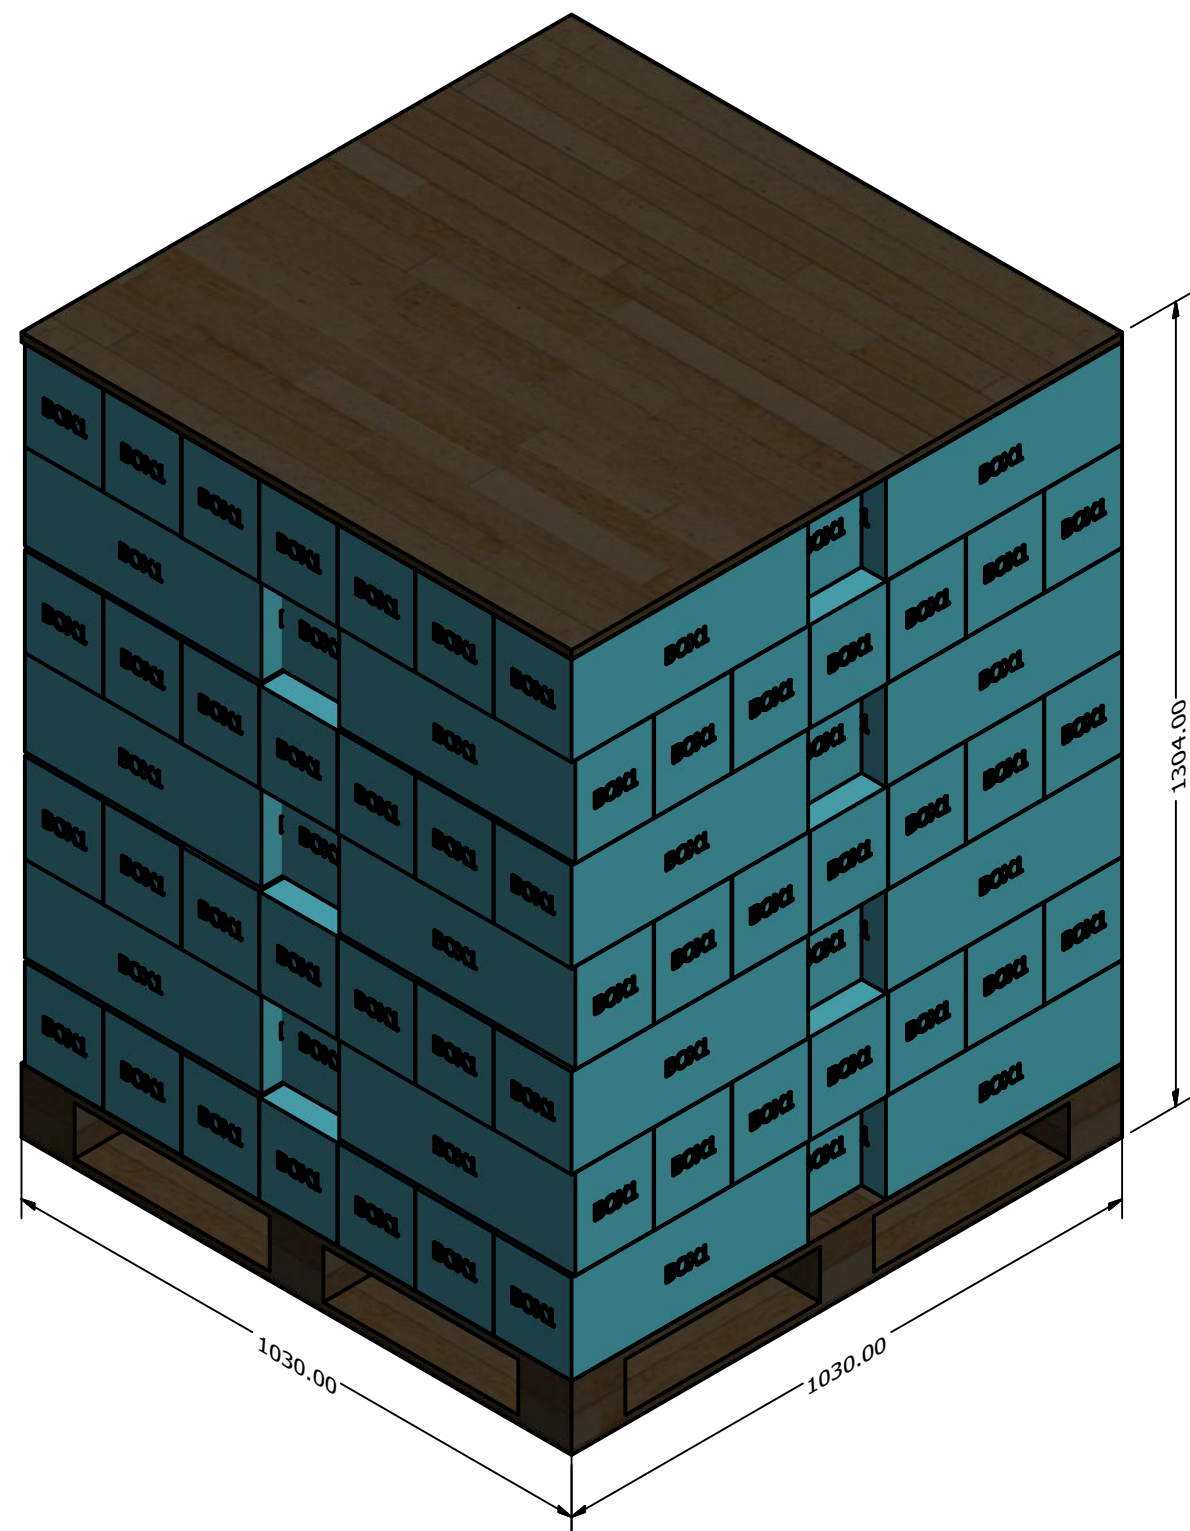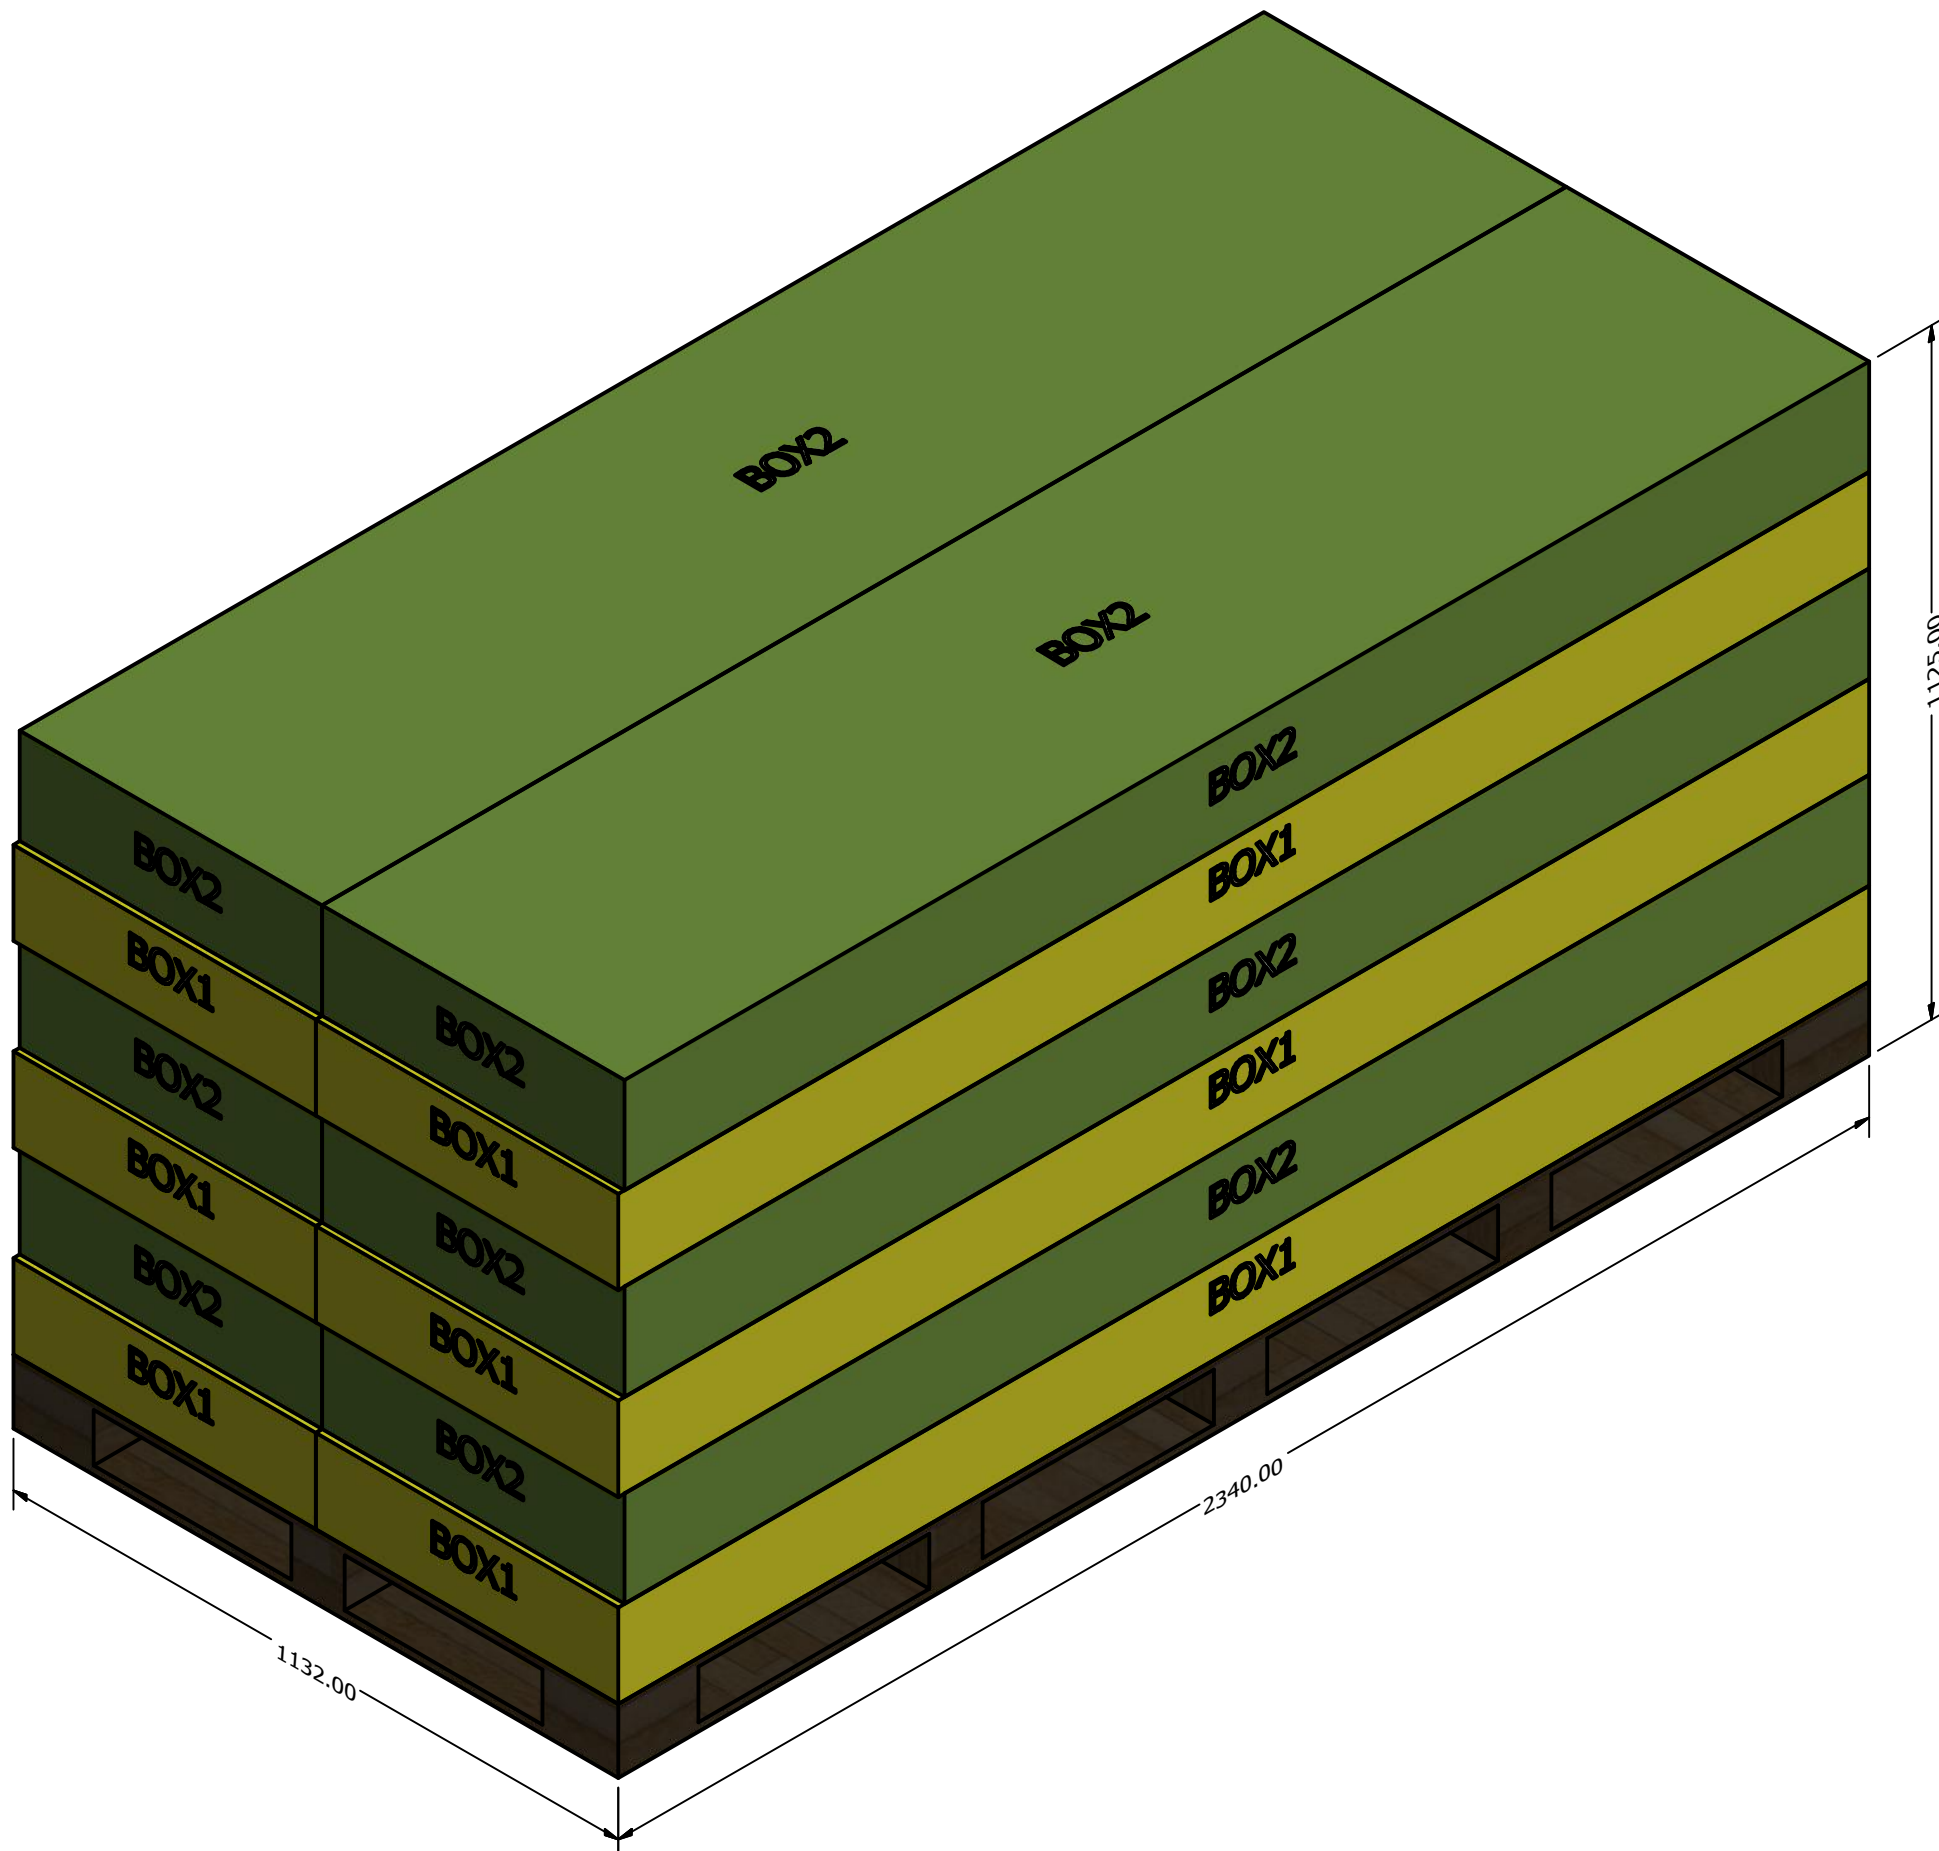


Pallet C (补件包* 112盒)

Pallet D (补件包* 96盒)

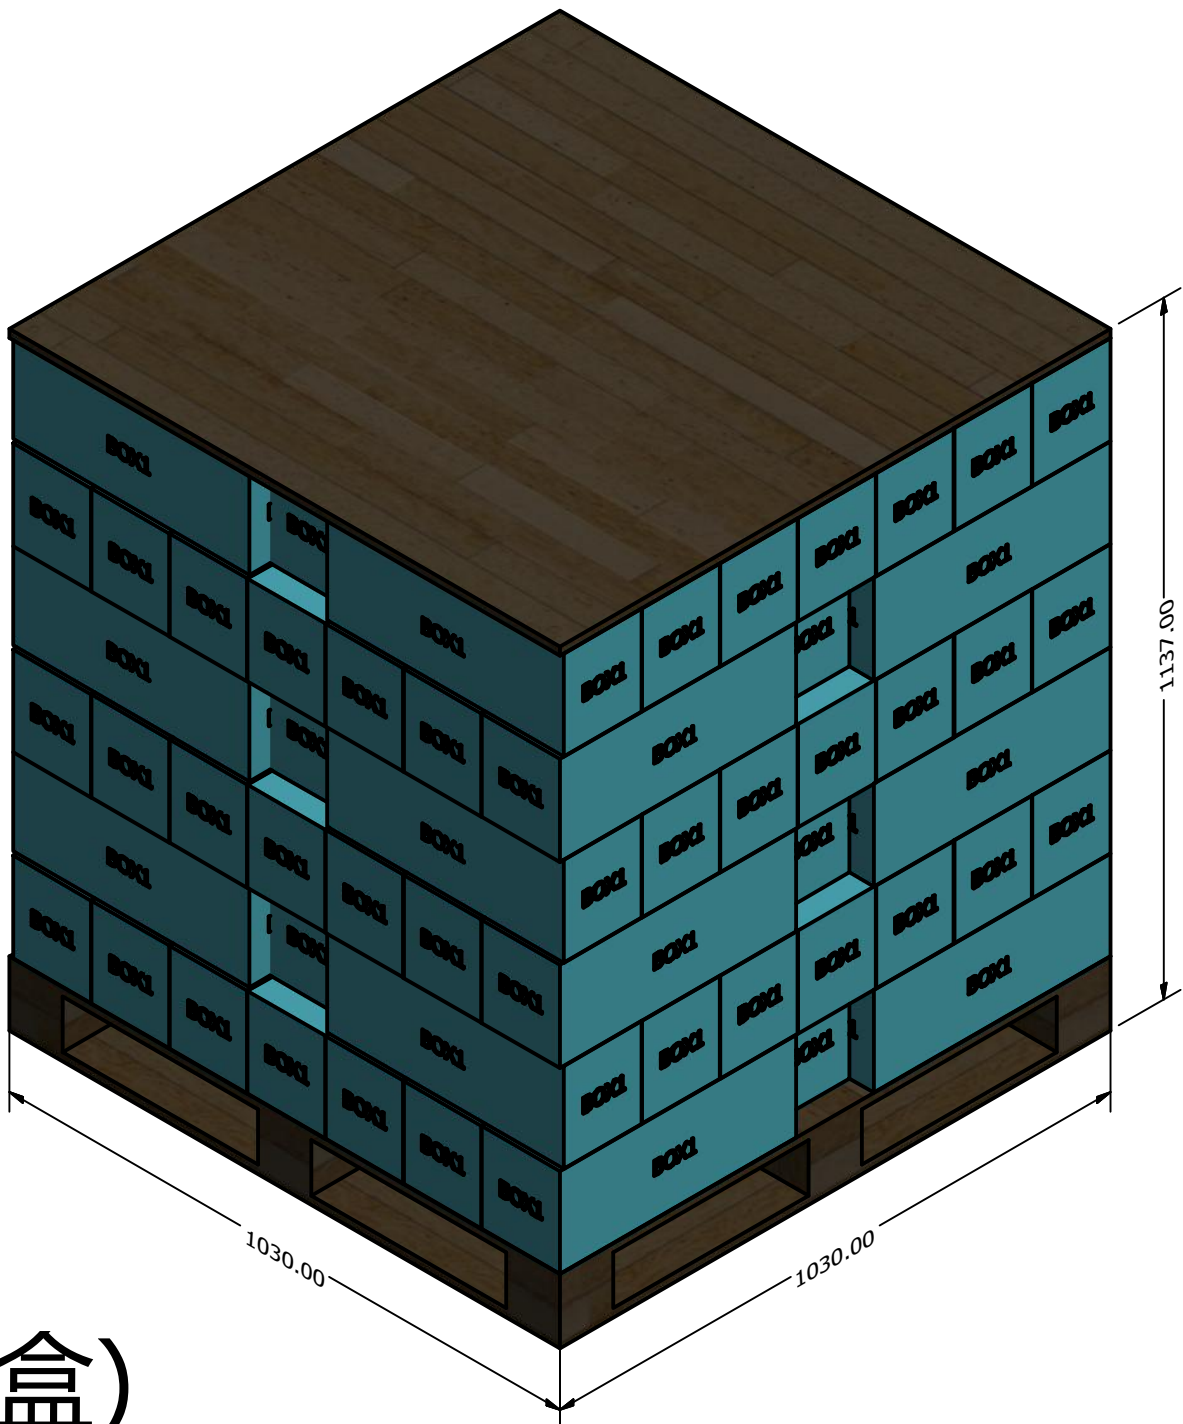



Pallet F (补件包* 103盒)

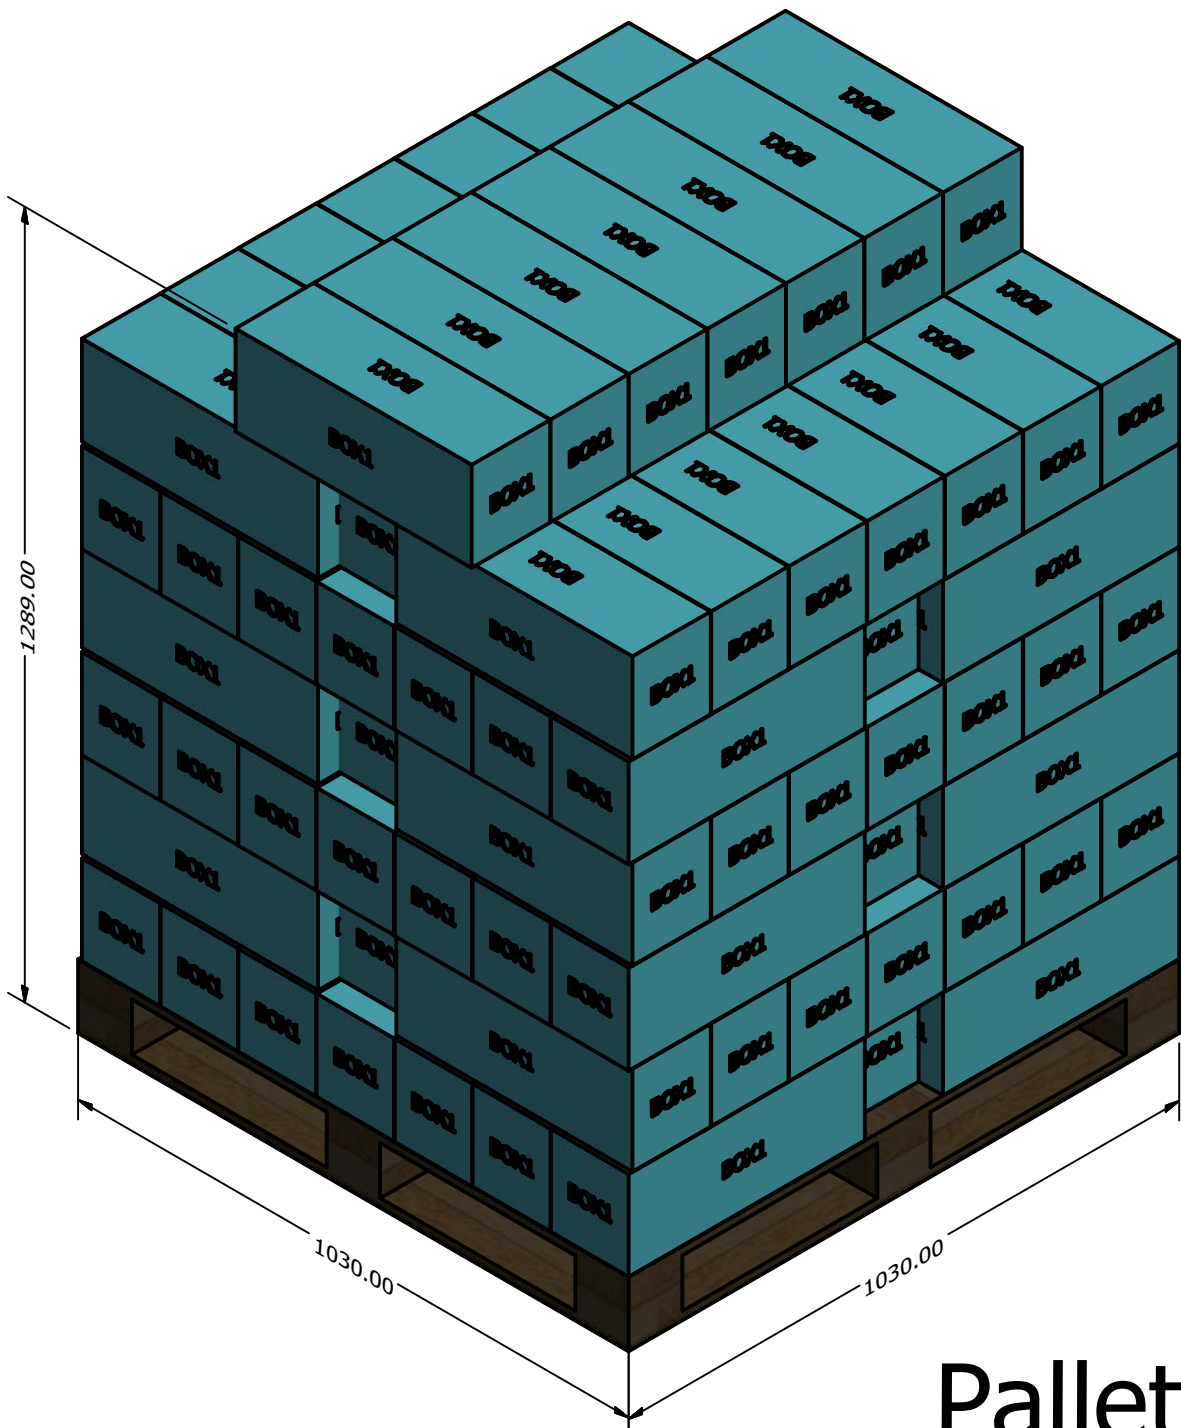

DRAWN		TITLE		
Rudy				
CHECKED				
QA				
MFG				
APPROVED				
		SIZE	DWG NO	REV
		D	Pallet A	
		SCALE	0.1 : 1	SHEET 1 OF 1

补件包打托方式：

- 1.叠好顶上加一片胶合板，以便打塑钢带固定,同时下托受力时可以均匀受力.
- 2.托盘四边角使用纸护角护住，并使用缠绕膜进行固定.
- 3.补件包用的托盘的顶面需要使用整面胶合板.
- 4.塑钢带两个方向都要打，形成井字型.

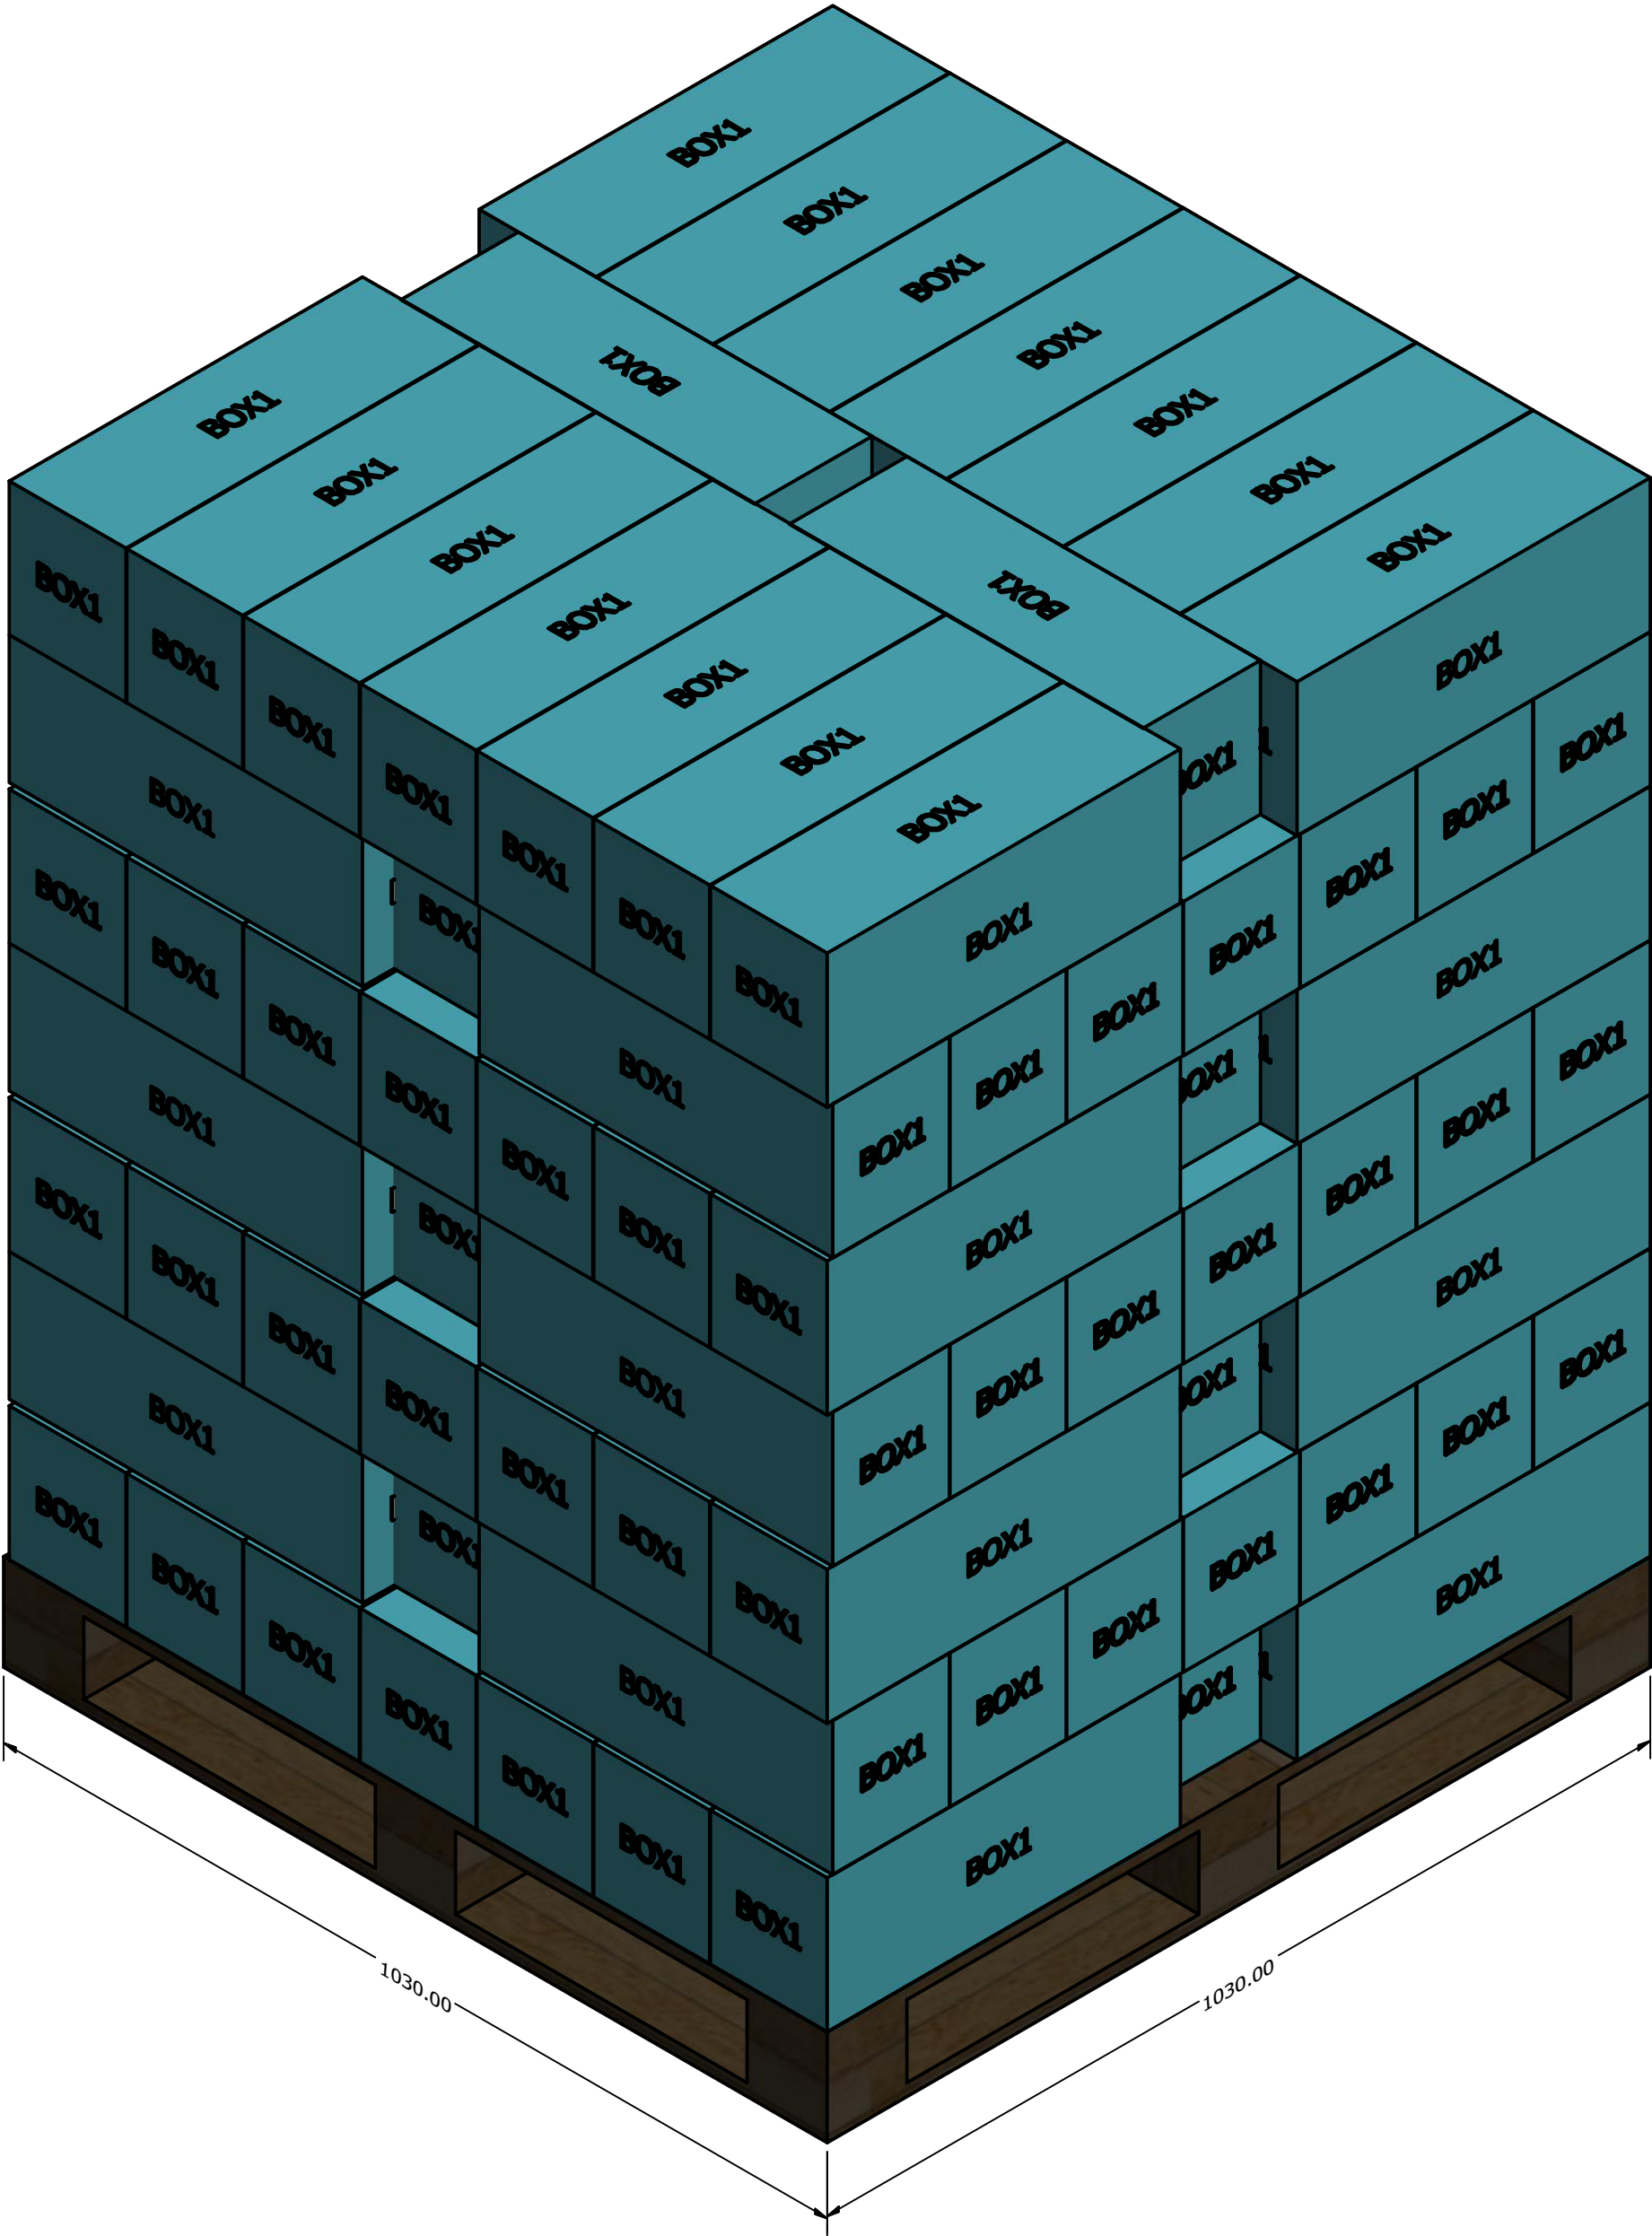

DRAWN	lenovo	2023/10/8	TITLE		
CHECKED					
QA			DWG NO		
MFG					
APPROVED			Pallet C		
SIZE		D	SCALE		1 : 6
			SHEET 1		OF 1